Pioneer sound.vision.soul

Service Manual

ORDER NO.
ARP3321

PLASMA DISPLAY SYSTEM

PDP-506HDG
PDP-436HDG

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PDP-506HDG	—	AC110 - 240V	
PDP-436HDG	—	AC110 - 240V	

● PDP-506HDG is combination of the following components.

Component	System	Service Manual	Remarks
PLASMA DISPLAY SYSTEM	PDP-506HDG	ARP3321	This manual.
PLASMA DISPLAY	PDP-506PG/TLDPFT	ARP3309 (ARP3267, ARP3268)	
MEDIA RECEIVER	PDP-R06G/TLDFXJ	ARP3281, ARP3282	
SPEAKER SYSTEM	PDP-S38/XIN/E5	RRV3221	

● PDP-436HDG is combination of the following components.

Component	System	Service Manual	Remarks
PLASMA DISPLAY SYSTEM	PDP-436HDG	ARP3321	This manual.
PLASMA DISPLAY	PDP-436PG/TLDPFT	ARP3308 (ARP327)	
MEDIA RECEIVER	PDP-R06G/TLDFXJ	ARP3281, ARP3282	
SPEAKER SYSTEM	PDP-S37/XTW/E5	RRV3231	

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2005
T – ZZR NOV. 2005 Printed in Japan

Pioneer sound.vision.soul

Service Manual

ORDER NO.
ARP3321

PLASMA DISPLAY SYSTEM

PDP-506HDG
PDP-436HDG

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PDP-506HDG	—	AC110 - 240V	
PDP-436HDG	—	AC110 - 240V	

● PDP-506HDG is combination of the following components.

Component	System	Service Manual	Remarks
PLASMA DISPLAY SYSTEM	PDP-506HDG	ARP3321	This manual.
PLASMA DISPLAY	PDP-506PG/TLDPFT	ARP3309 (ARP3267, ARP3268)	
MEDIA RECEIVER	PDP-R06G/TLDFXJ	ARP3281, ARP3282	
SPEAKER SYSTEM	PDP-S38/XIN/E5	RRV3221	

● PDP-436HDG is combination of the following components.

Component	System	Service Manual	Remarks
PLASMA DISPLAY SYSTEM	PDP-436HDG	ARP3321	This manual.
PLASMA DISPLAY	PDP-436PG/TLDPFT	ARP3308 (ARP3271, ARP3272)	
MEDIA RECEIVER	PDP-R06G/TLDFXJ	ARP3281, ARP3282	
SPEAKER SYSTEM	PDP-S37/XTW/E5	RRV3231	

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2005
T – ZZR NOV. 2005 Printed in Japan

Pioneer sound.vision.soul

Service Manual

ORDER NO.
ARP3308

PLASMA DISPLAY

PDP-436PE
PDP-436PG
PRO-436PU

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PDP-436PE	WYVIXK	AC220 - 240V	
PDP-436PG	TLDPFT	AC110 - 240V	
PRO-436PU	KUCXC	AC120V	

● This service manual should be used together with the following manual(s):

Model No.	Order No.	Remarks
PDP-436PE/WYVI	ARP3271	SAFETY INFORMATION, EXPLODED VIEWS AND PARTS LIST, BLOCK DIAGRAM, PCB PARTS LIST, ADJUSTMENT, IC INFORMATION etc.
	ARP3272	SCHEMATIC DIAGRAM and PCB CONNECTION DIAGRAM

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2005

T – ZZY SEPT. 2005 Printed in Japan

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *Reference Nos. indicate the pages and Nos. in the service manual for the base model.*
- *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 → 56 x 10^1 → 561 ..... RD1/4PU 5 6 1 J
47k → 47 x 10^3 → 473 ..... RD1/4PU 4 7 3 J
0.5 → R50 ..... RN2H R 5 0 K
1 → 1R0 ..... RS1P 1 R 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k → 562 x 10^1 → 5621 ..... RN1/4PC 5 6 2 1 F


■ CONTRAST TABLE

PDP-436PE/WYVIXK, PDP-436PG/TLDPFT, PRO-436PU/KUCXC and PDP-436PE/WYVI are constructed the same except for the following :

Ref. No.	Mark	Symbol and Description	Part No.				Remarks
			PDP-436PE WYVI	PDP-436PE WYVIXK	PDP-436PG TLDPFT	PRO-436PU KUCXC	
		PACKING					
P9 - 1	⚠	Power Cord	ADG1214	ADG1214	Not used	ADG1215	
P9 - 4		Polyethlene Bag-S	AHG1338	AHG1326	AHG1338	AHG1348	
P9 - 5	NSP	Catalogue Bag	AHG1340	Not used	Not used	AHG1347	
P9 - 6	NSP	Warranty card	ARY1114	ARY1114	Not used	ARY1123	
P9 - 7		Ferrite Core	ATX1039	ATX-1039	ATX-1039	Not used	
P9 - 8		Pad (43T-L)	AHA2431	AHA2455	AHA2431	AHA2463	
P9 - 9		Pad (43T-R)	AHA2432	AHA2456	AHA2432	AHA2464	
P9 - 10		Pad (43B-L)	AHA2433	AHA2457	AHA2433	AHA2465	
P9 - 11		Pad (43B-R)	AHA2434	AHA2458	AHA2434	AHA2466	
P9 - 12		Power Cord Case	AHC1073	AHC1067	AHC1073	Not used	
P9 - 13		Under Carton (436)	AHD3346	AHD3377	AHD3346	Not used	
P9 - 13		Under Carton (436PU)	No used	Not used	Not used	AHD3380	
P9 - 14		Upper Carton (436PE)	AHD3368	AHD3378	Not used	Not used	
P9 - 14		Upper Carton (436PG)	Not used	Not used	AHD3425	Not used	
P9 - 14		Upper Carton (436EL)	Not used	Not used	Not used	AHD3382	
P9 - 15		Mirror Mat	AHG1284	AHG1327	AHG1284	AHG1352	
P9 - 16		Caution Card	ARM1232	ARM1232	ARM1232	ARM1239	
		REAR SECTION					
P11 - 6	NSP	Name Label (436PE)	AAL2670	AAL2676	Not used	Not used	
P11 - 6	NSP	Name Label (436PG)	Not used	Not used	AAL2713	Not used	
P11 - 6	NSP	Name Label (436PG)	Not used	Not used	Not used	AAL2678	
P11 - 7		Bolt Caution Label	AAX3117	AAX3005	AAX3117	AAX3075	
P11 - 8		AC Label PE	AAX3194	AAX3194	Not used	Not used	
		FRONT SECTION					
P13 - 1		Front Case Assy (436PE)	AMB2855	AMB2855	AMB2855	Not used	
P13 - 1		Front Case Assy (436EL)	Not used	Not used	Not used	AMB2871	
P13 - 3		Badge	AAM1096	AAM1096	AAM1096	Not used	
P13 - 3		Elite Badge	Not used	Not used	Not used	AAM1102	

Pioneer sound.vision.soul

Service Manual

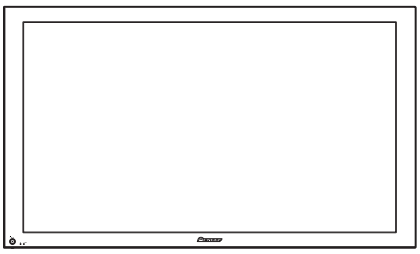

PDP-506PE

ORDER NO.
ARP3267

PLASMA DISPLAY

PDP-506PE
PDP-506PU

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PDP-506PE	WYVI	AC220 - 240V	
PDP-506PU	KUCXC	AC120V	

This service manual should be used together with the following manual(s).

Model No.	Order No.	Remarks
PDP-506PE, PDP-506PU	ARP3268	SCHEMATIC DIAGRAM, PCB CONNECTION DIAGRAM

Note:
Media Receivers up to Generation 5 (G5) cannot be connected with this unit.
Be sure to use a Media Receiver of Generation 6 (G6) (ex.: PDP-R06∗∗, etc.).



For details, refer to "Important Check Points for good servicing".

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
ⓒ**PIONEER CORPORATION 2005**

T-IZY SEPT. 2005 printed in Japan

SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING
This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65

NOTICE
(FOR CANADIAN MODEL ONLY)
Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE
(POUR MODÈLE CANADIEN SEULEMENT)
Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.

SAFETY PRECAUTIONS

NOTICE : Comply with all cautions and safety related notes located on or inside the cabinet and on the chassis.

The following precautions should be observed :


1. When service is required, even though the PDP UNIT an isolation transformer should be inserted between the power line and the set in safety before any service is performed.
2. When replacing a chassis in the set, all the protective devices must be put back in place, such as barriers, nonmetallic knobs, adjustment and compartment covershields, isolation resistor-capacitor, etc.
3. When service is required, observe the original lead dress. Extra precaution should be taken to assure correct lead dress in the high voltage circuitry area.
4. Always use the manufacture's replacement components. Especially critical components as indicated on the circuit diagram should not be replaced by other manufacture's. Furthermore where a short circuit has occurred, replace those components that indicate evidence of overheating.
5. Before returning a serviced set to the customer, the service technician must thoroughly test the unit to be certain that it is completely safe to operate without danger of electrical shock, and be sure that no protective device built into the set by the manufacture has become defective, or inadvertently defeated during servicing. Therefore, the following checks should be performed for the continued protection of the customer and servicetechnician.
6. Perform the following precautions against unwanted radiation and rise in internal temperature.
   - Always return the internal wiring to the original styling.
   - Attach parts (Gascket, Ferrite Core, Ground, Rear Cover, Shield Case etc.) surely after disassembly.
7. Perform the following precautions for the PDP panel.
   - When the front case is removed, make sure nothing hits the panel face, panel corner, and panel edge (so that the glass does not break).
   - Make sure that the panel vent does not break. (Check that the cover is attached.)
   - Handle the FPC connected to the panel carefully. Twisting or pulling the FPC when connecting it to the connector will cause it to peel off from the panel.
8. Pay attention to the following.
   - Pay extreme caution when the front case and rear panel are removed because this may cause a high risk of disturbance to TVs and radios in the surrounding.

Leakage Current Cold Check

With the AC plug removed from an AC power source, place a jumper across the two plug prongs. Turn the AC power switch on. Using an insulation tester (DC 500V), connect one lead to the jumpered AC plug and touch the other lead to each exposed metal part (input/output terminals, screwheads, metal overlays, control shafts, etc.), particularly any exposed metal part having a return path to the chassis. Exposed metal parts having a return path to the chassis should have a minimum resistor reading of 0.3MΩ and a maximum resistor reading of 5MΩ. Any resistor value below or above this range indicates an abnormality which requires corrective action. Exposed metal parts not having a return path to the chassis will indicate an open circuit.

Leakage Current Hot Check

Plug the AC line cord directly into an AC power source (do not use an isolation transformer for this check).
Turn the AC power switch on.
Using a "Leakage Current Tester (Simpson Model 229 equivalent)", measure for current from all exposed metal parts of the cabinet (input/output terminals, screwheads, metal overlays, control shaft, etc.), particularly any exposed metal part having a return path to the chassis, to a known earth ground (water pipe, conduit, etc.). Any current measured must not exceed 0.5mA.

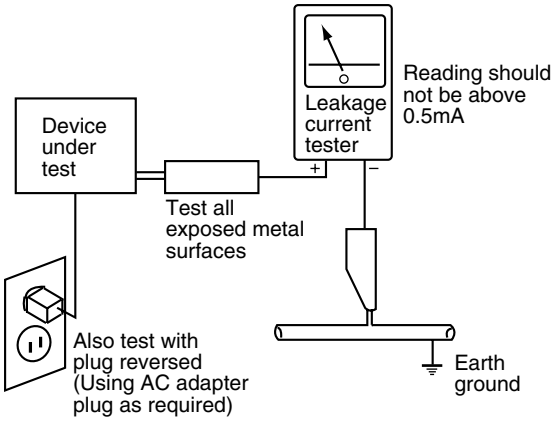

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE SET TO THE CUSTOMER.

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in PIONEER set have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.
Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.
The use of a substitute replacement component which dose not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire or other hazards.
Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

■Charged Section

The places where the commercial AC power is used without passing through the power supply transformer.
If the places are touched, there is a risk of electric shock. In addition, the measuring equipment can be damaged if it is connected to the GND of the charged section and the GND of the non-charged section while connecting the set directly to the commercial AC power supply. Therefore, be sure to connect the set via an insulated transformer and supply the current.

1. Power Cord
2. AC Inlet
3. Power Switch (S1)
4. Fuse (In the POWER SUPPLY Unit)
5. STB Transformer and Converter Transformer (In the POWER SUPPLY Unit)
6. Other primary side of the POWER SUPPLY Unit

■High Voltage Generating Point

The places where voltage is 100V or more except for the charged places described above. If the places are touched, there is a risk of electric shock.

If the procedures described in "7.1.5 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM" are performed before the power is turned off, the voltage will be discharged in about 30 seconds.

1. POWER SUPPLY Unit.....(205V)
2. 50 X DRIVE Assy ..... (–180V to 205V)
3. 50 Y DRIVE Assy ..... (500V)
4. 50 SCAN A Assy ..... (500V)
5. 50 SCAN B Assy ..... (500V)
6. SUS CLAMP 1 Assy .....(–180V to 205V)
7. SUS CLAMP 2 Assy .....(–180V to 205V)

: Part is Charged Section.
: Part is the High Voltage Generating Points other than the Charged Section.

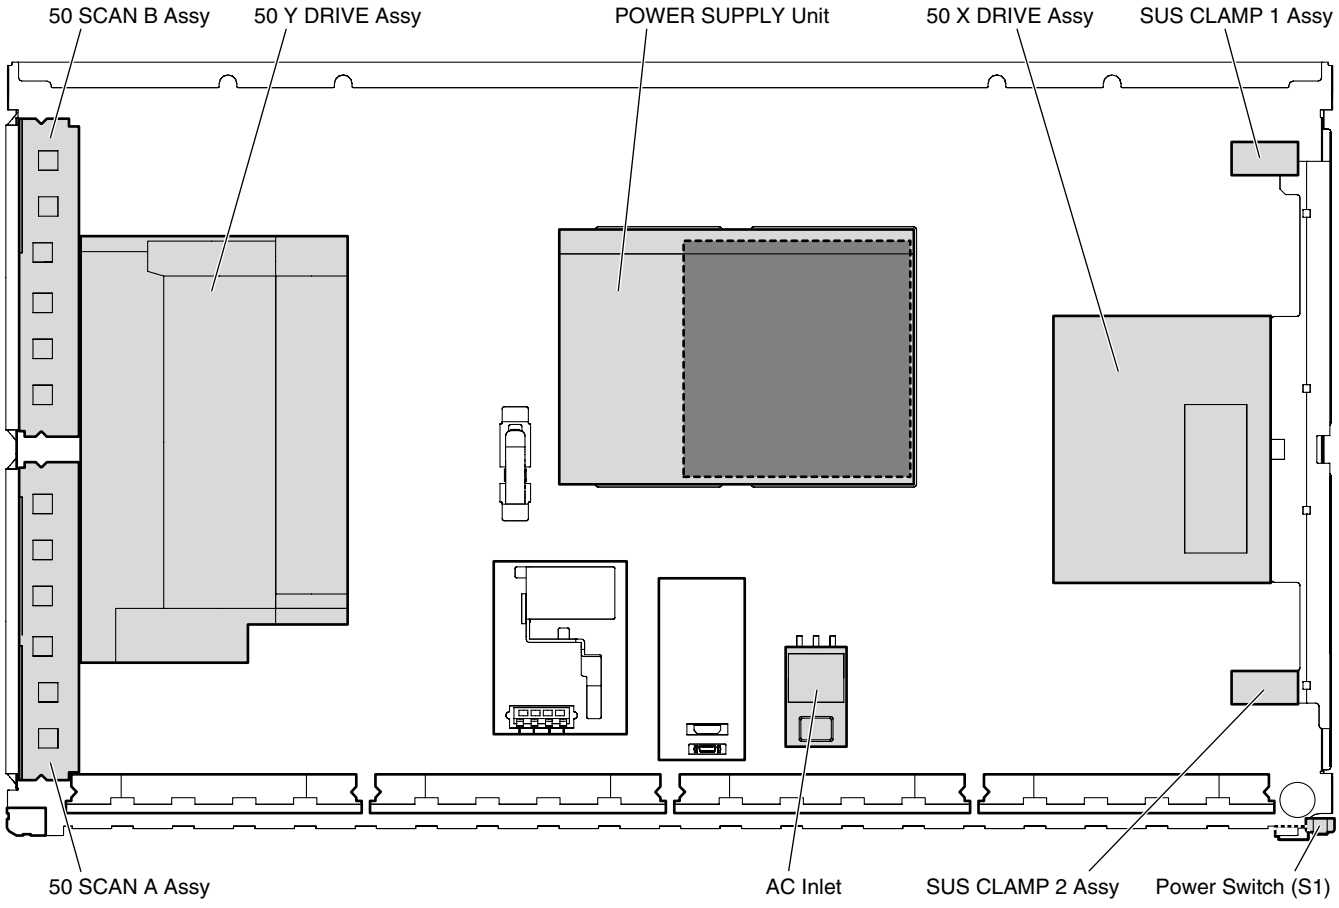


Fig.1 Charged Section and High Voltage Generating Point (Rear View)

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification(addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

1. SPECIFICATIONS 7
2. EXPLODED VIEWS AND PARTS LIST 8
2.1 PACKING SECTION 8
2.2 REAR SECTION 10
2.3 FRONT SECTION 12
2.4 CHASSIS SECTION (1/2) 14
2.5 CHASSIS SECTION (2/2) 16
2.6 PDP SERVICE ASSY 506P (AWU1134) 18
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM 20
3.1 OVERALL CONNECTION DIAGRAM 20
3.2 OVERALL BLOCK DIAGRAM 22
3.3 50 ADDRESS ASSY 24
3.4 50 SCAN A and B ASSYS 25
3.5 50 X DRIVE, SUS CLAMP 1 and SUS CLAMP 2 ASSYS 26
3.6 50 Y DRIVE ASSY 27
3.7 HD DIGITAL ASSY 28
3.8 HD AUDIO ASSY 29
3.9 POWER SUPPLY UNIT 30
3.10 WAVEFORMS 31
5. PCB PARTS LIST 33
6. ADJUSTMENT 41
6.1 ADJUSTMENT REQUIRED WHEN THE SET IS REPAIRED OR REPLACED 41
6.2 RS-232C COMMAND 42
6.3 METHOD FOR REPLACING THE SERVICE PANEL ASSY 58
7. GENERAL INFORMATION 62
7.1 DIAGNOSIS 62
7.1.1 PCB LOCATION 62
7.1.2 DIAGNOSIS OF SHUTDOWN/POWER-DOWN INDICATED BY LEDS 63
7.1.3 OVERVIEW OF PANEL FACTORY MODE 66
7.1.4 OPERATION WHEN THE MEDIA RECEIVER IS NOT CONNECTED 75
7.1.5 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM 76
7.1.6 BACKUP WHEN THE MAIN UNIT IS ADJUSTED 77
7.1.7 HOW TO CLEAR HISTORY DATA 79
7.1.8 DISASSEMBLY 81
7.2 IC 85
8. PANEL FACILITIES 94

1. SPECIFICATIONS

Item	50" Plasma Display, Model: PDP-506PE	50" Plasma Display, Model: PDP-506PU
Number of Pixels	1280 × 768 pixels	1280 × 768 pixels
Audio Amplifier	13 W + 13 W (1 kHz, 10 %, 8Ω)	13 W + 13 W (1 kHz, 10 %, 8Ω)
Surround System	SRS/FOCUS/TruBass	SRS/FOCUS/TruBass
Power Requirement	220 - 240 V AC, 50/60 Hz, 344 W (0.4 W Standby)	120 V AC, 60 Hz, 355 W (0.2 W Standby)
Dimensions	1224 (W) × 717 (H) × 92 (D) mm	1224 (W) × 717 (H) × 92 (D) mm (48 3/16 (W) × 28 1/4 (H) × 3 5/8 (D) inches)
Weight	31.8 kg (70.1 lbs.)	31.8 kg (70.1 lbs.)

• Design and specifications are subject to change without notice.


Trademarks

• FOCUS, WOW, SRS and **(●)**® symbol are trademarks of SRS Labs, Inc.
FOCUS and SRS technologies are incorporated under license from SRS Labs, Inc.
• This product includes FontAvenue® fonts licensed by NEC Corporation.
FontAvenue is a registered trademark of NEC Corporation.
• HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
• The names of companies or institutions are trademarks or registered trademarks of the respective companies or institutions.

Accessories


Power cord (2 m)

For PDP-506PE

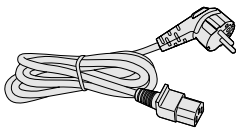


(ADG1214)

For PDP-506PU

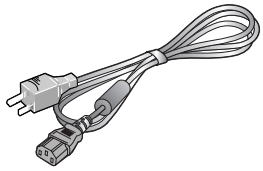


(ADG1215)

Only the power cord that is appropriate in your country or region is supplied.




Warranty card

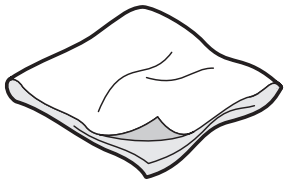


Cleaning cloth
(AED1285)

Binder Assy (AEC1908)

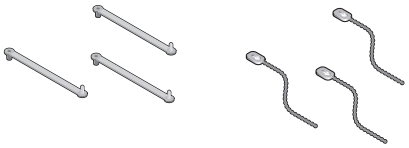

Speed clamp x 3 Bead band x 3

Ferrite Core (ATX1039)(PDP-506PE only)

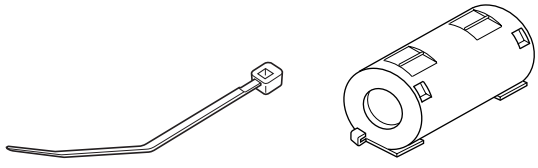


Cable tie Ferrite core

2. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

2.1 PACKING SECTION

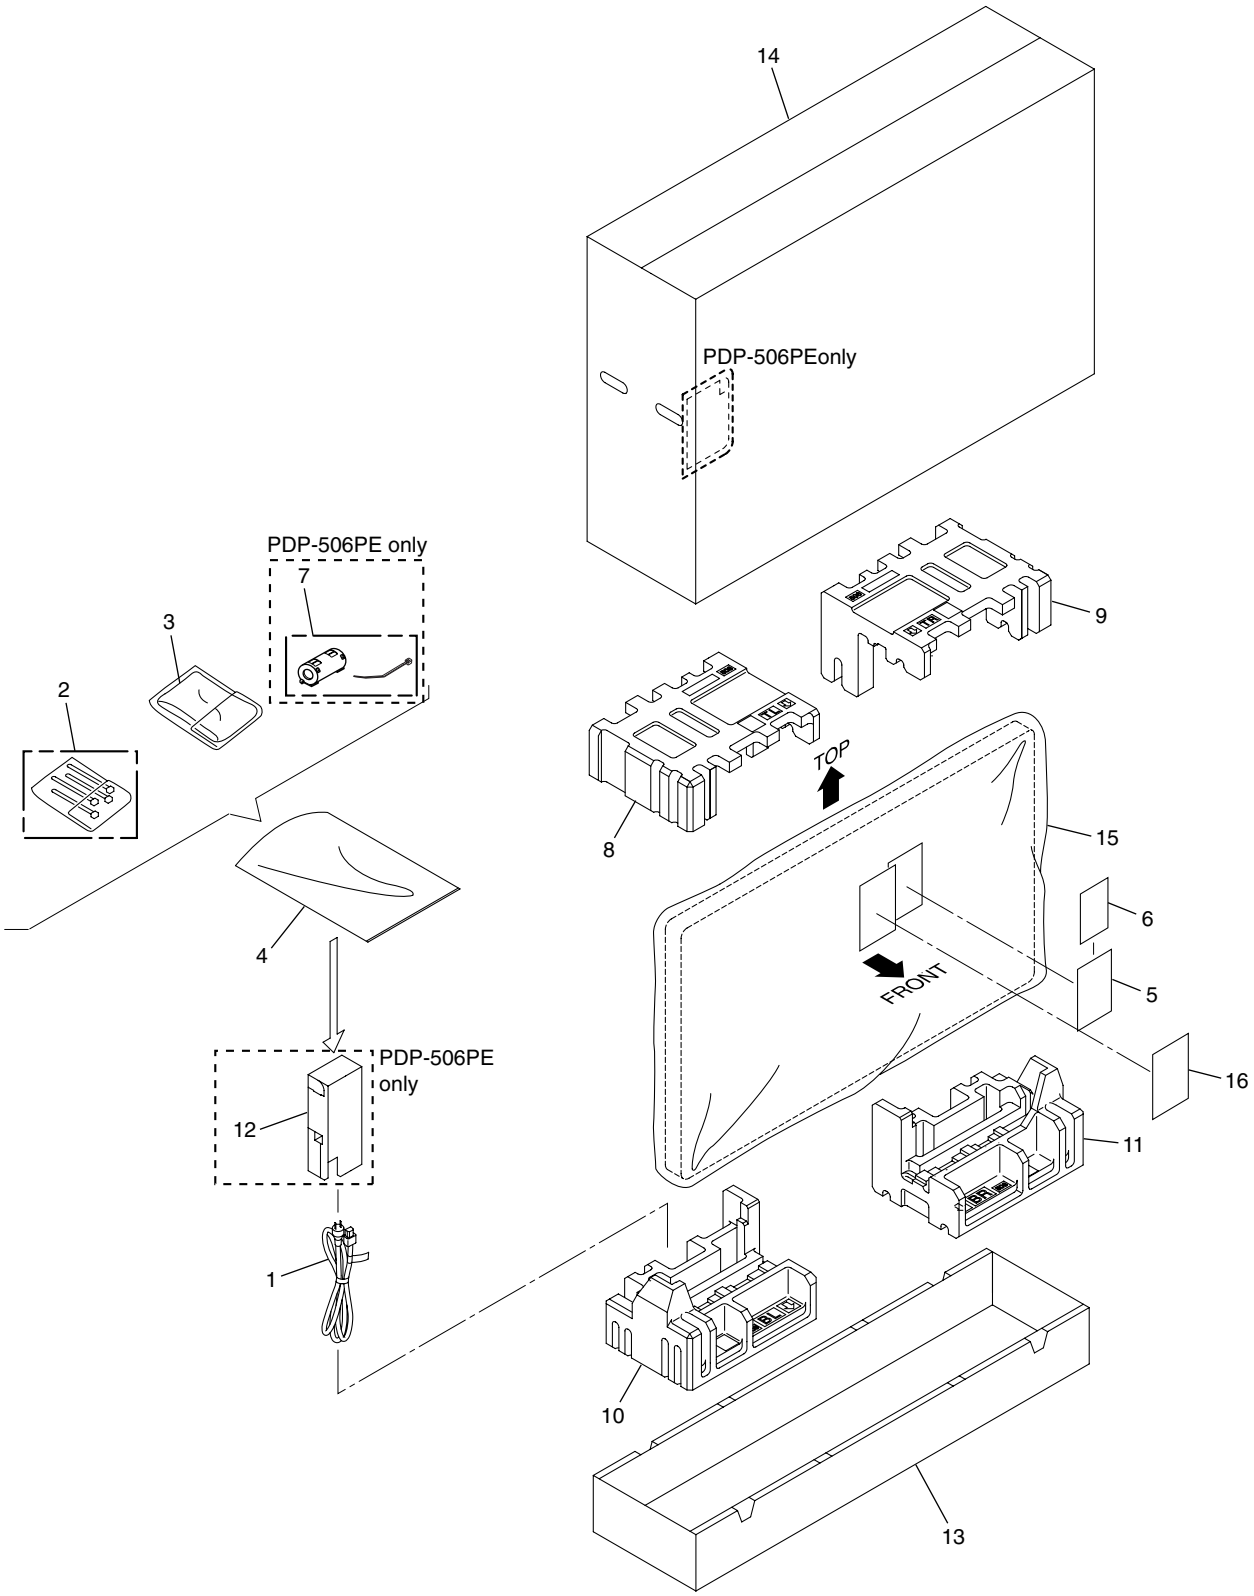

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
⚠	1	Power Cord	See Contrast table (2)
	2	Binder Assy	AEC1908
	3	Cleaning Cloth	AED1285
	4	Polyethylene Bag S	See Contrast table (2)
NSP	5	Catalogue Bag	See Contrast table (2)
NSP	6	Warranty card	See Contrast table (2)
⚠	7	Ferrite Core	See Contrast table (2)
	8	Pad (50T-L)	See Contrast table (2)
	9	Pad (50T-R)	See Contrast table (2)
	10	Pad (50B-L)	See Contrast table (2)
	11	Pad (50B-R)	See Contrast table (2)
	12	Power Cord Case	See Contrast table (2)
	13	Under Carton	See Contrast table (2)
	14	Upper Carton	See Contrast table (2)
	15	Mirror Mat	See Contrast table (2)
	16	Caution Card	See Contrast table (2)

(2) CONTRAST TABLE

PDP-506PE/WYVI and PDP-506PU/KUCXC are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-506PE/WYVI	PDP-506PU/KUCXC
⚠	1	Power Cord	ADG1214	ADG1215
	4	Polyethylene Bag S	AHG1338	AHG1348
NSP	5	Catalogue Bag	AHG1340	AHG1347
NSP	6	Warranty Card	ARY1114	ARY1145
⚠	7	Ferrite Core	ATX1039	Not used
	8	Pad (50T-L)	AHA2427	AHA2459
	9	Pad (50T-R)	AHA2428	AHA2460
	10	Pad (50B-L)	AHA2429	AHA2461
	11	Pad (50B-R)	AHA2430	AHA2462
	12	Power Cord Case	AHC1073	Not used
	13	Under Carton (50)	AHD3344	Not used
	13	Under Carton (506PU)	Not used	AHD3379
	14	Upper Carton (506PE)	AHD3345	Not used
	14	Upper Carton (506PU)	Not used	AHD3383
	15	Mirror Mat	AHG1284	AHG1352
	16	Caution Card	ARM1232	ARM1239

2.2 REAR SECTION

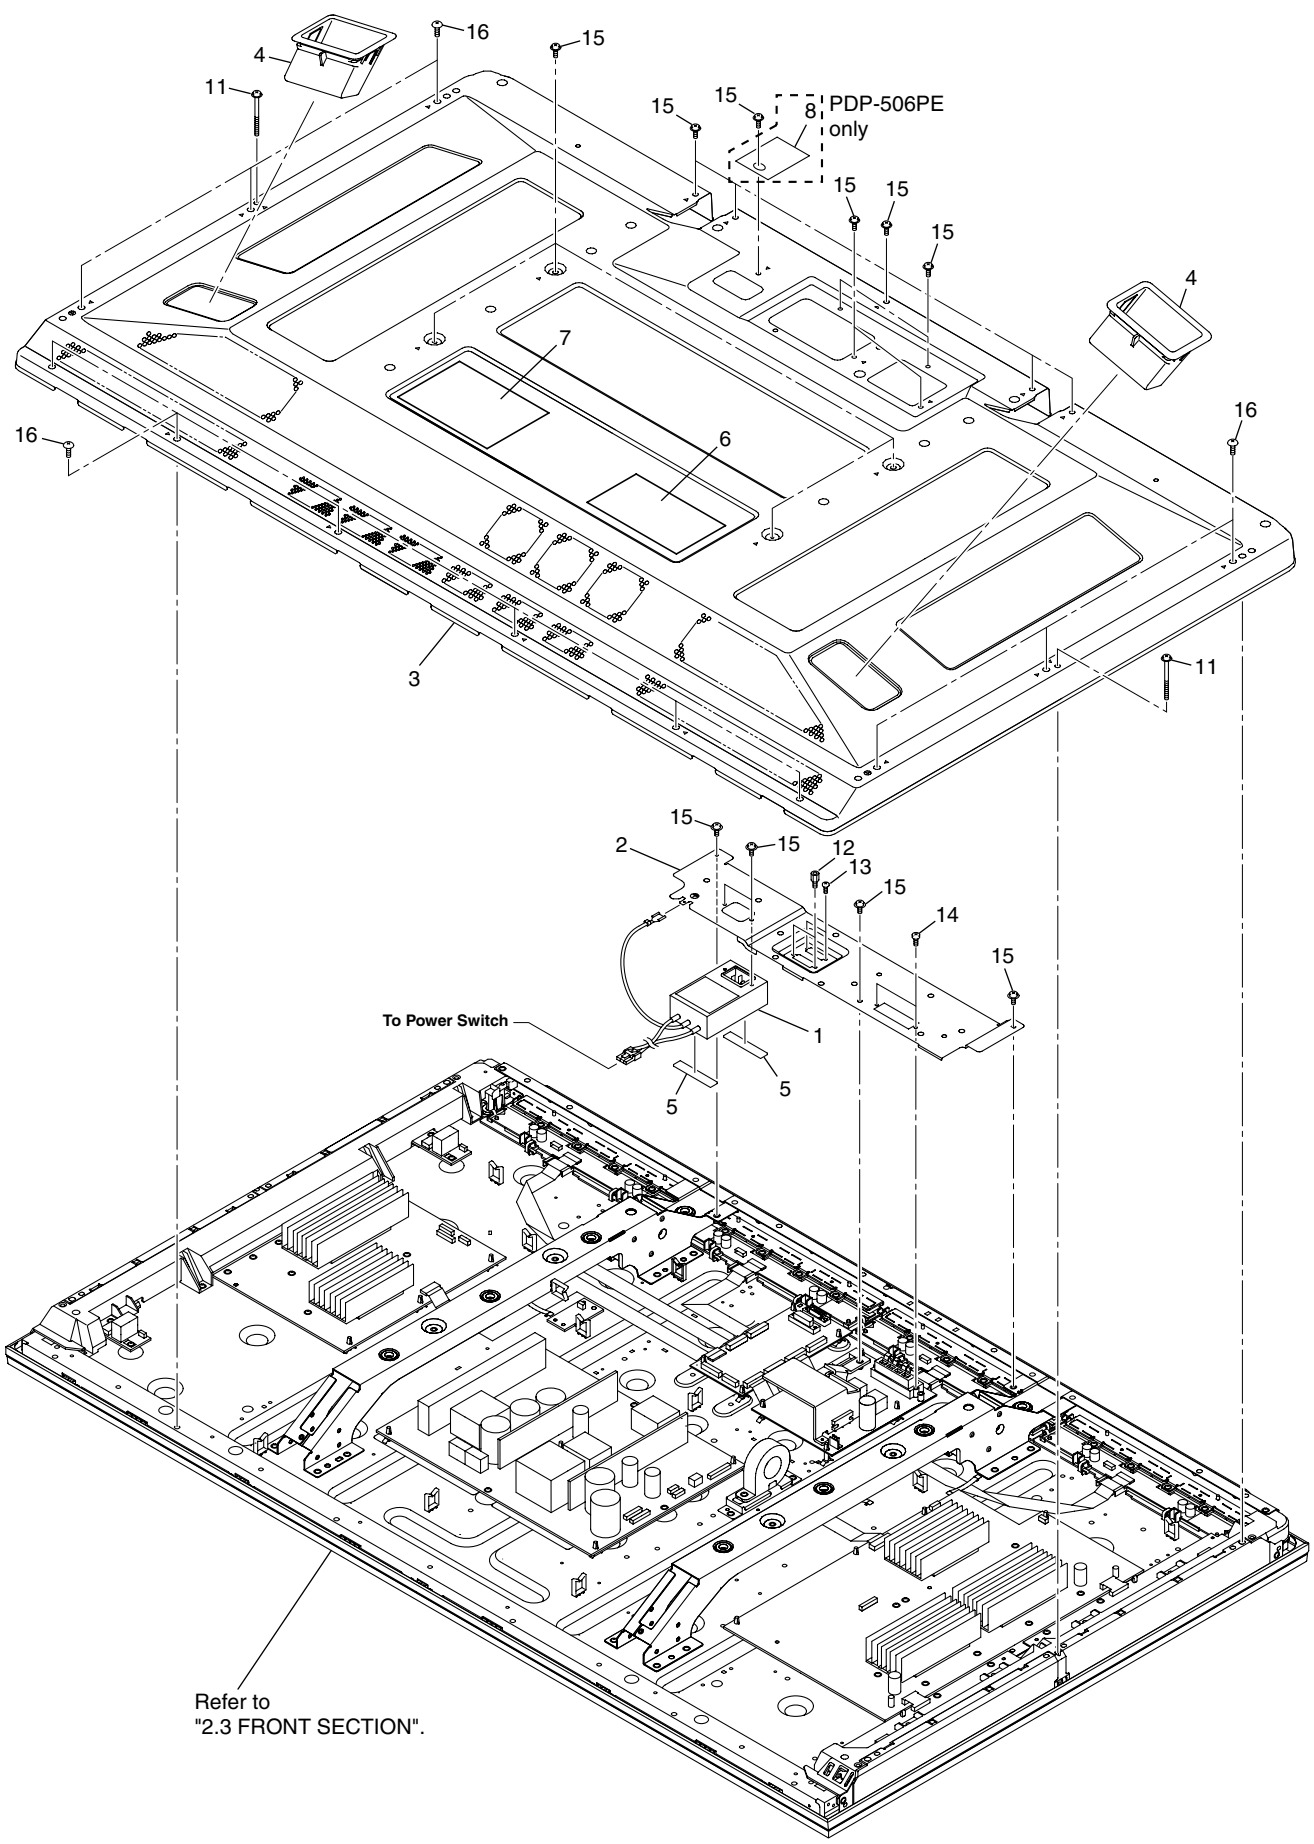

(1) REAR SECTION PARTS LIST


Mark	No.	Description	Part No.
⚠	1	AC Inlet	AKP1274
	2	Control Plate	AND1185
	3	Rear Case (506)	ANE1639
	4	Inner Grip Assy	AMR3434
	5	AC Cushion	AEC2035
NSP	6	Model Label	See Contrast table (2)
	7	Caution Label	See Contrast table (2)
	8	AC Label PE	See Contrast table (2)
	9	•••••	
	10	•••••	
	11	Screw (3 x 40P)	ABA1332
	12	Hexagon Head Screw	BBA1051
	13	Screw	PMZ26P060FTB
	14	Screw	BPZ30P080FTB
	15	Screw	AMZ30P060FTB
	16	Screw	TBZ40P080FTB

(2) CONTRAST TABLE

PDP-506PE/WYVI and PDP-506PU/KUCXC are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-506PE/WYVI	PDP-506PU/KUCXC
NSP	6	Model Label (506PE)	AAL2661	Not used
NSP	6	Model Label (506PU)	Not used	AAL2679
	7	Caution Label	AAX3117	AAX3075
	8	AC Label PE	AAX3194	Not used

2.3 FRONT SECTION

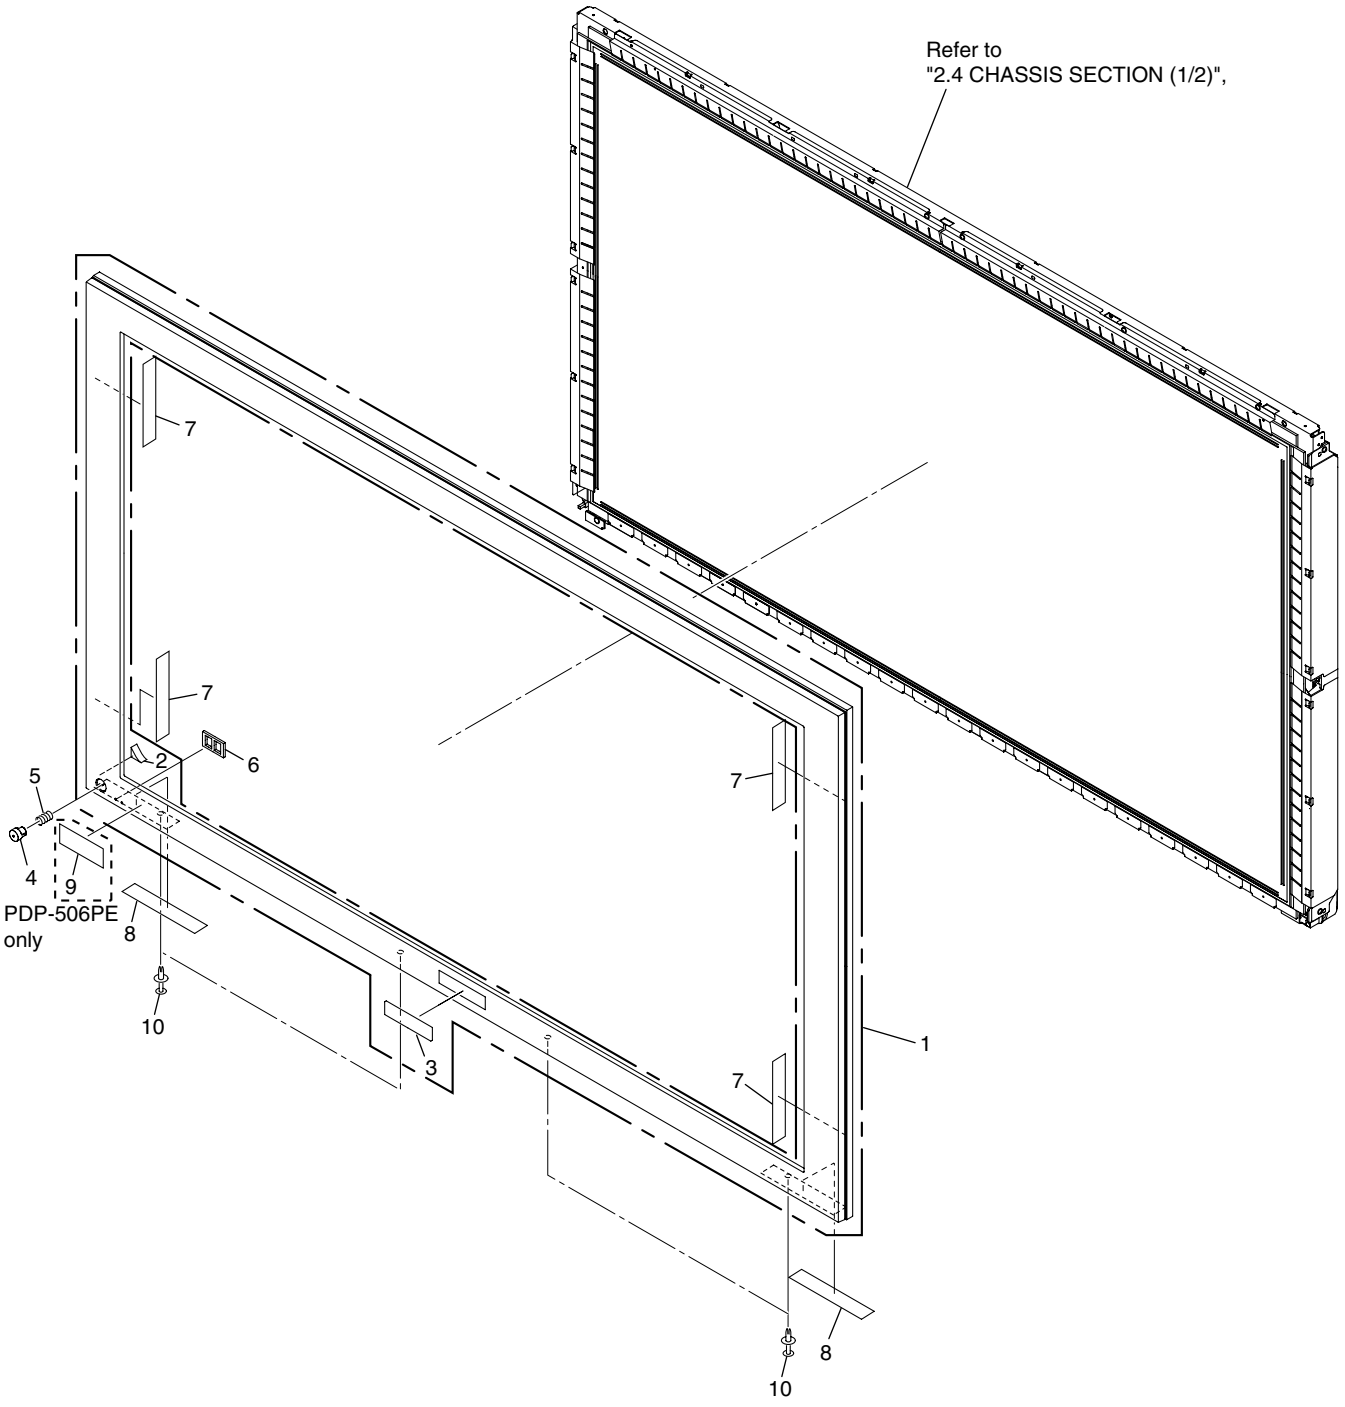

(1) FRONT SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Front Case Assy (506PE)	AMB2861
	2	Corner Cushion	AEB1416
	3	Pioneer Name Plate	AAM1098
	4	Power Button	AAD4133
	5	Coil Spring	ABH1120
	6	Blind Cushion	AEB1415
	7	Insulation Sheet A	AED1283
	8	Insulation Sheet B	AED1284
	9	Power Display Label (506)	See Contrast table (2)
	10	Screw Rivet	AEC1877

(2) CONTRAST TABLE

PDP-506PE/WYVI and PDP-506PU/KUCXC are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-506PE/WYVI	PDP-506PU/KUCXC
	9	Power Display Label (506)	AAX3217	Not used


2.4 CHASSIS SECTION (1/2)

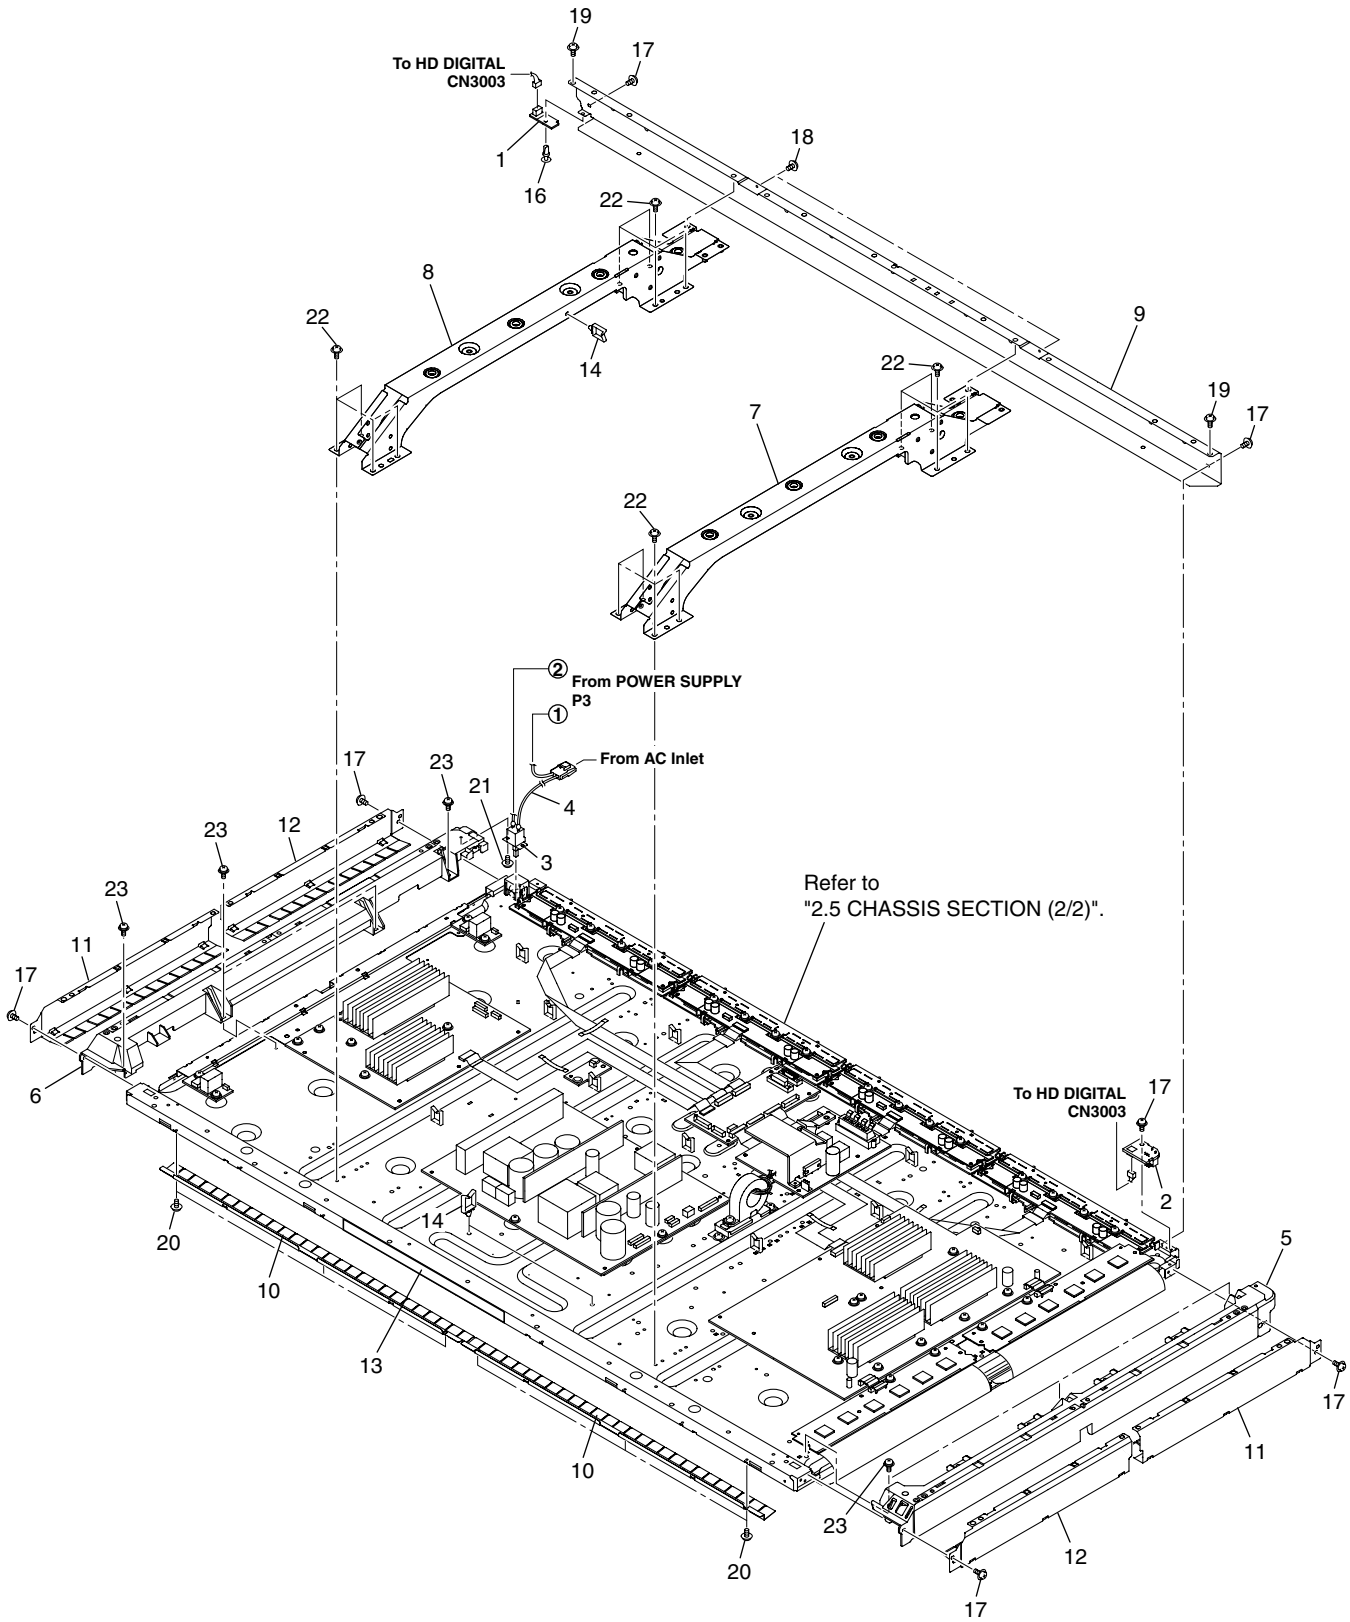

CHASSIS SECTION (1/2) PARTS LIST

Mark	No.	Description	Part No.
	1	HD LED Assy	AWW1029
	2	HD IR Assy	AWW1030
⚠	3	Power Switch (S1)	ASG1092
	4	Housing Wire (50)(J103)	ADX3112
	5	Front Chassis VL (50)	AMA1014
	6	Front Chassis VR (50)	AMA1015
	7	Sub Frame L Assy (506)	ANA1860
	8	Sub Frame R Assy (506)	ANA1861
	9	Front Chassis H Assy (50)	ANA1883
	10	Panel Holder H (50)	ANG2769
	11	Panel Holder V1 (50)	ANG2770
	12	Panel Holder V2 (50)	ANG2771
	13	Cushion	AEB1424
	14	Wire Saddle	AEC1745
	15	•••••	
	16	Nyron Rivet	AEC1671
	17	Screw	ABZ30P080FTC
	18	Screw	AMZ30P060FTB
	19	Screw	APZ30P080FTB
	20	Screw	BBZ30P060FTC
	21	Screw	BPZ30P080FTB
	22	Screw	TBZ40P080FTB
	23	Screw	VBB30P080FNI

2.5 CHASSIS SECTION (2/2)

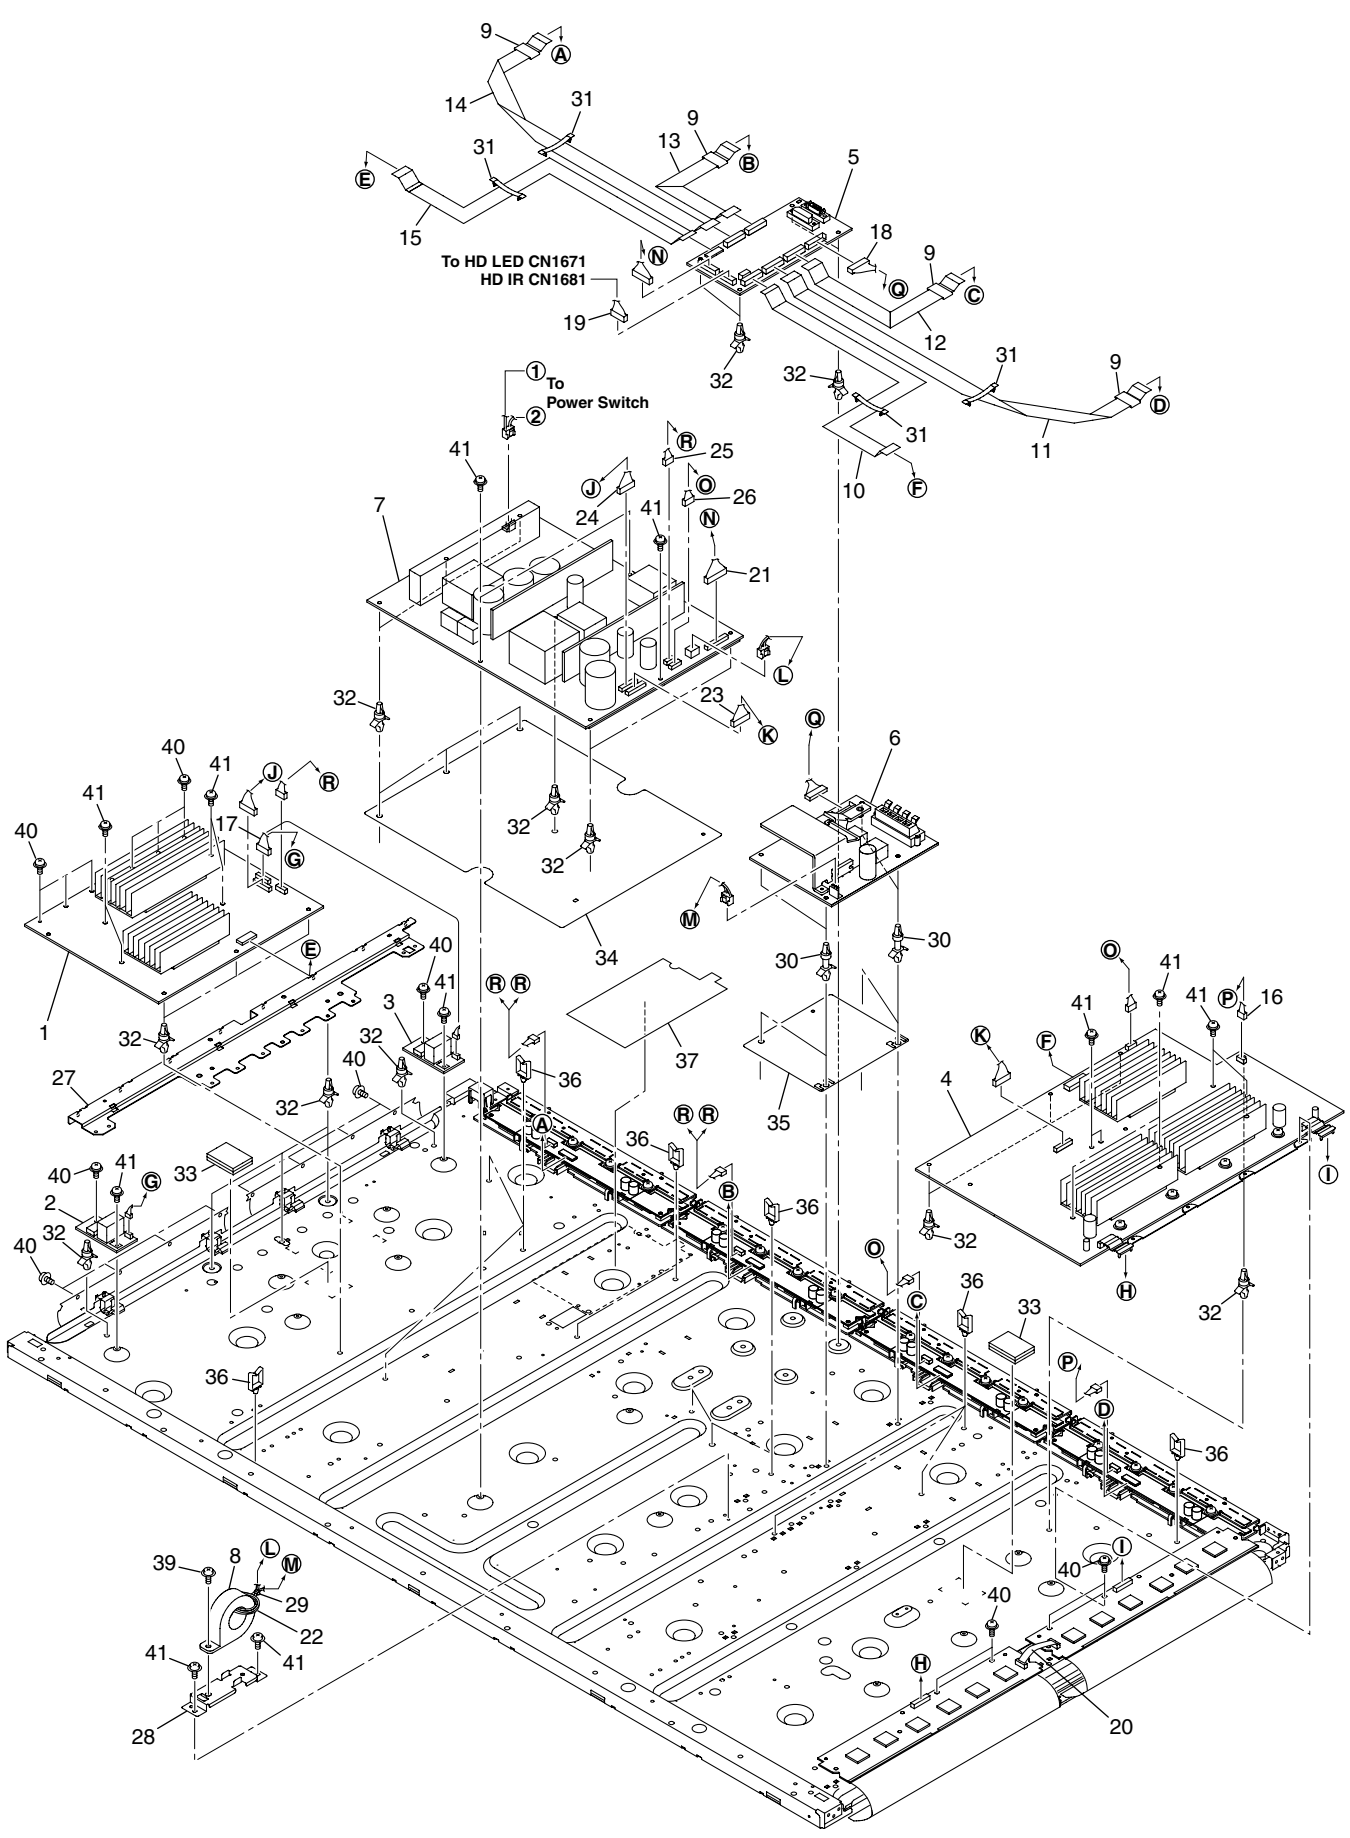

(1) CHASSIS SECTION (2/2) PARTS LIST


Mark	No.	Description	Part No.
	1	50 X DRIVE Assy	See Contrast table (2)
	2	SUS CLAMP 1 Assy	AWW1022
	3	SUS CLAMP 2 Assy	AWW1023
	4	50 Y DRIVE Assy	See Contrast table (2)
	5	HD DIGITAL Assy	AWW1028
	6	HD AUDIO Assy	AWV2203
⚠	7	POWER SUPPLY Unit	AXY1112
	8	Ring Core with Case	ATX1042
	9	Ferrite Core	ATX1048
	10	Flexible Cable (J201)	ADD1293
	11	Flexible Cable (J202)	ADD1294
	12	Flexible Cable (J203)	ADD1295
	13	Flexible Cable (J204)	ADD1296
	14	Flexible Cable (J205)	ADD1297
	15	Flexible Cable (J206)	ADD1298
	16	4P Housing Wire (J108)	ADX3117
	17	6P Housing Wire (J109)	See Contrast table (2)
	18	12P Housing Wire (J110)	See Contrast table (2)
	19	6P Housing Wire (J111)	ADX3120
	20	3P Housing Wire (J113)	See Contrast table (2)
	21	14P Housing Wire (J104)	ADX3158
	22	3P Housing Wire (J105)	ADX3159
	23	9P Housing Wire (J101)	ADX3186
	24	8P Housing Wire (J102)	ADX3187
	25	5P Housing Wire (J106)	ADX3188
	26	6P Housing Wire (J107)	ADX3189
	27	Conductive Plate XA	ANG2776
	28	FC Stay	ANG2815
	29	Binder	AEC-093
NSP	30	PCB Spacer	AEC1188
	31	Flat Clamp	AEC1879
	32	PCB Spacer	AEC1941
	33	Drive Silicone Sheet	AEH1095
	34	Power Supply Insulation Sheet	AMR3447
	35	Audio Insulation Sheet	AMR3469
	36	Wire Saddle	AEC1745
NSP	37	Address Sheet	AMR3491
	38	•••••	
	39	Screw	ABA1324
	40	Screw	PMB30P060FTC
	41	Screw	VBB30P080FNI

(2) CONTRAST TABLE


PDP-506PE/WYVI and PDP-506PU/KUCXC are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-506PE/WYVI	PDP-506PU/KUCXC
	1	50 X DRIVE Assy	AWW1075	AWW1020 or AWW1075
	4	50 Y DRIVE Assy	AWV2258	AWV2210 or AWV2258
	17	6P Housing Wire (J109)	ADX3118	ADX3132
	18	12P Housing Wire (J110)	ADX3119	ADX3133
	20	3P Housing Wire (J113)	ADX3122	ADX3136


2.6 PDP SERVICE ASSY 506P (AWU1134)

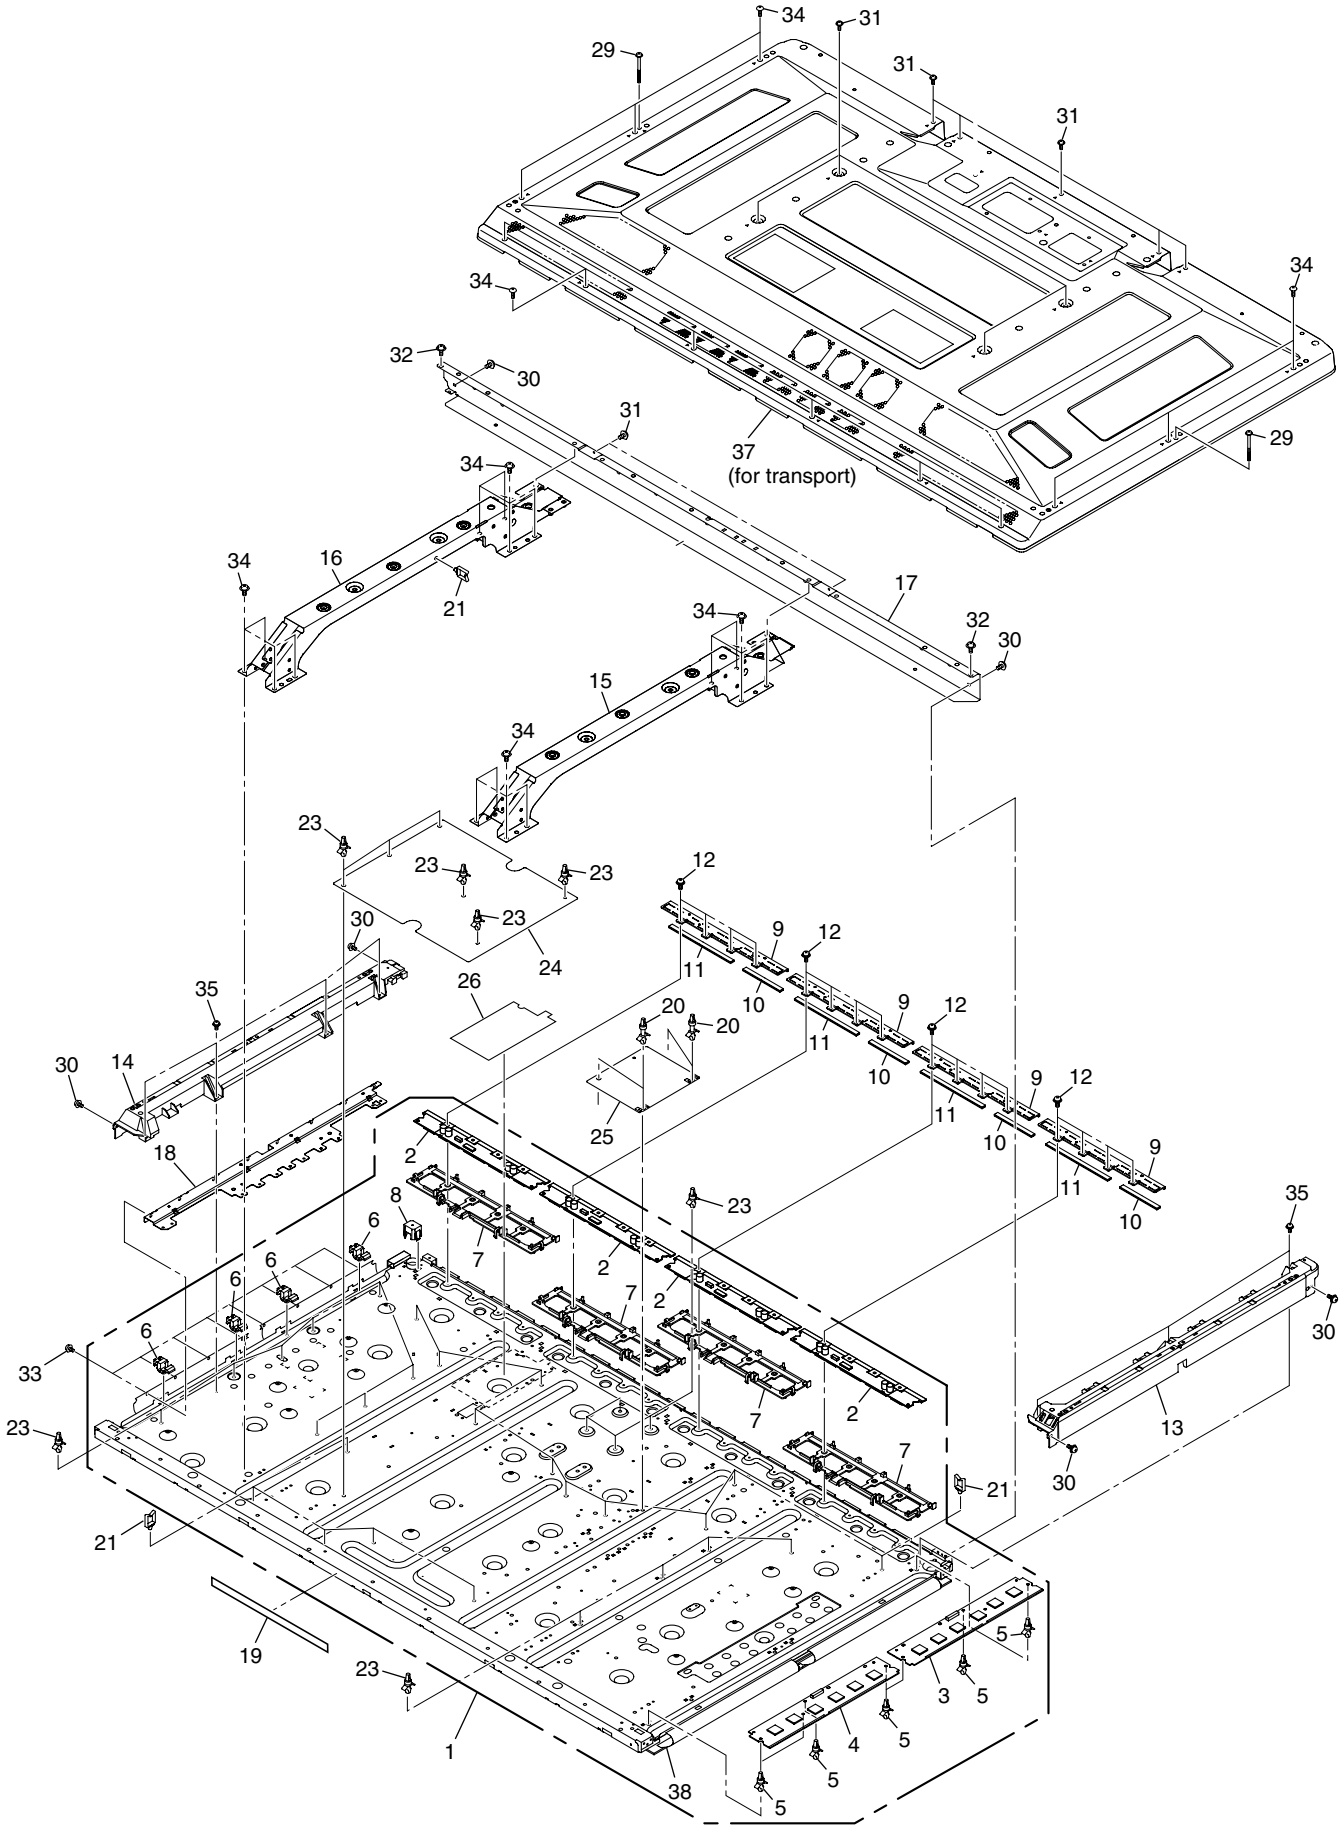

• **Front Section**

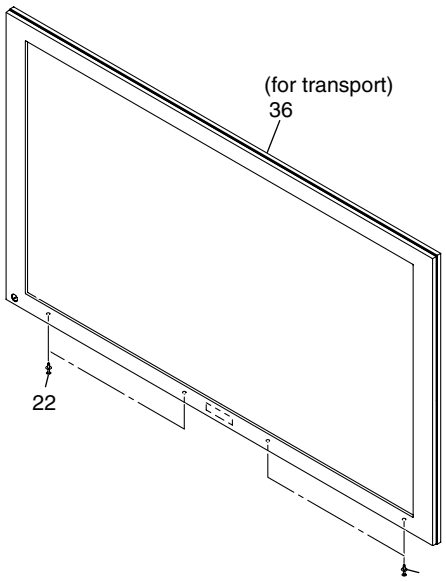

• **Packing Section**

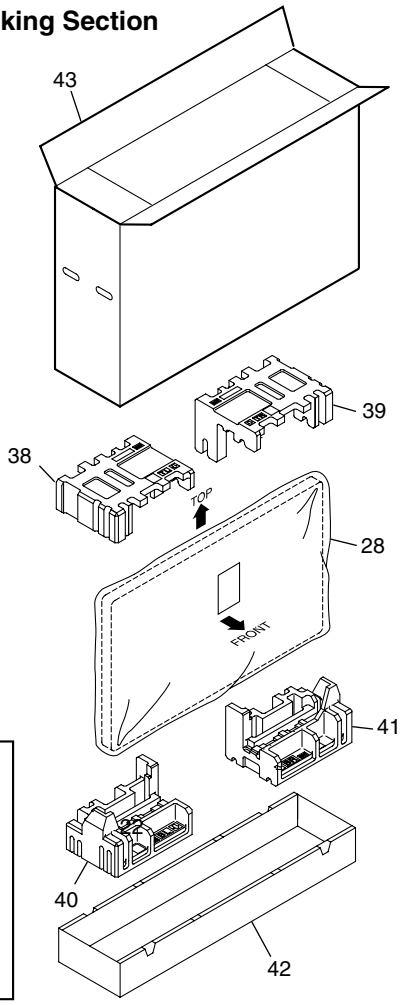

Note when replacing with the PDP Service Assy 506P


The Power Switch (S1), HD LED Assy, and HD IR Assy are not included in the PDP Service Assy 506P. Before replacement with the PDP Service Assy 506P, the following components of the Service Assy must be temporarily detached to attach the above-mentioned parts (parts from the original unit or newly purchased):
- Front Chassis H Assy (50) (ANA1883)
- Front Chassis VL (50) (AMA1014)
- Front Chassis VR (50) (AMA1015)

PDP SERVICE ASSY 506P (AWU1134) PARTS LIST

Mark	No.	Description	Part No.
NSP	1	Panel Chassis (506) Assy	AWU1143
NSP	2	50 ADDRESS Assy	AWV2208
NSP	3	50 SCAN A Assy	AWW1026
NSP	4	50 SCAN B Assy	AWW1027
	5	PCB Spacer	AEC1944
	6	Conductive Plate Holder	AMR3446
	7	ADDRESS Holder Assy (50)	AMR3454
	8	Tube Cover	AMR3445
	9	Address Heatsink (50)	ANH1635
	10	Address Silicone A	AEH1093
	11	Address Silicone B	AEH1094
	12	Screw	BBB30P120FNI
	13	Front Chassis VL (50)	AMA1014
	14	Front Chassis VR (50)	AMA1015
	15	Sub Frame L Assy (506)	ANA1860
	16	Sub Frame R Assy (506)	ANA1861
	17	Front Chassis H Assy (50)	ANA1883
	18	Conductive Plate XA	ANG2776
	19	Cushion	AEB1424
NSP	20	PCB Spacer	AEC1188
	21	Wire Saddle	AEC1745
	22	Screw Rivet	AEC1877
	23	PCB Spacer	AEC1941
	24	Power Supply Insulation Sheet	AMR3447
	25	Audio Insulation Sheet	AMR3469
NSP	26	Address Sheet	AMR3491
NSP	27	Chassis Assy (50)	ANA1830
	28	Protect Sheet	AHG1331
	29	Screw (3 x 40P)	ABA1332
	30	Screw	ABZ30P080FTC
	31	Screw	AMZ30P060FTB
	32	Screw	APZ30P080FTB
	33	Screw	PMB30P060FTC
	34	Screw	TBZ40P080FTB
	35	Screw	VBB30P080FNI
NSP	36	Front Case Assy (506 serivice) (for transport)	AMB2889
NSP	37	Rear Case (506) (for transport)	ANE1639
	38	Pad (50T-L)	AHA2427
	39	Pad (50T-R)	AHA2428
	40	Pad (50B-L)	AHA2429
	41	Pad (50B-R)	AHA2430
	42	Under Carton	AHA3344
	43	Upper Carton (506 S.V.C)	AHA3430

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 OVERALL CONNECTION DIAGRAM

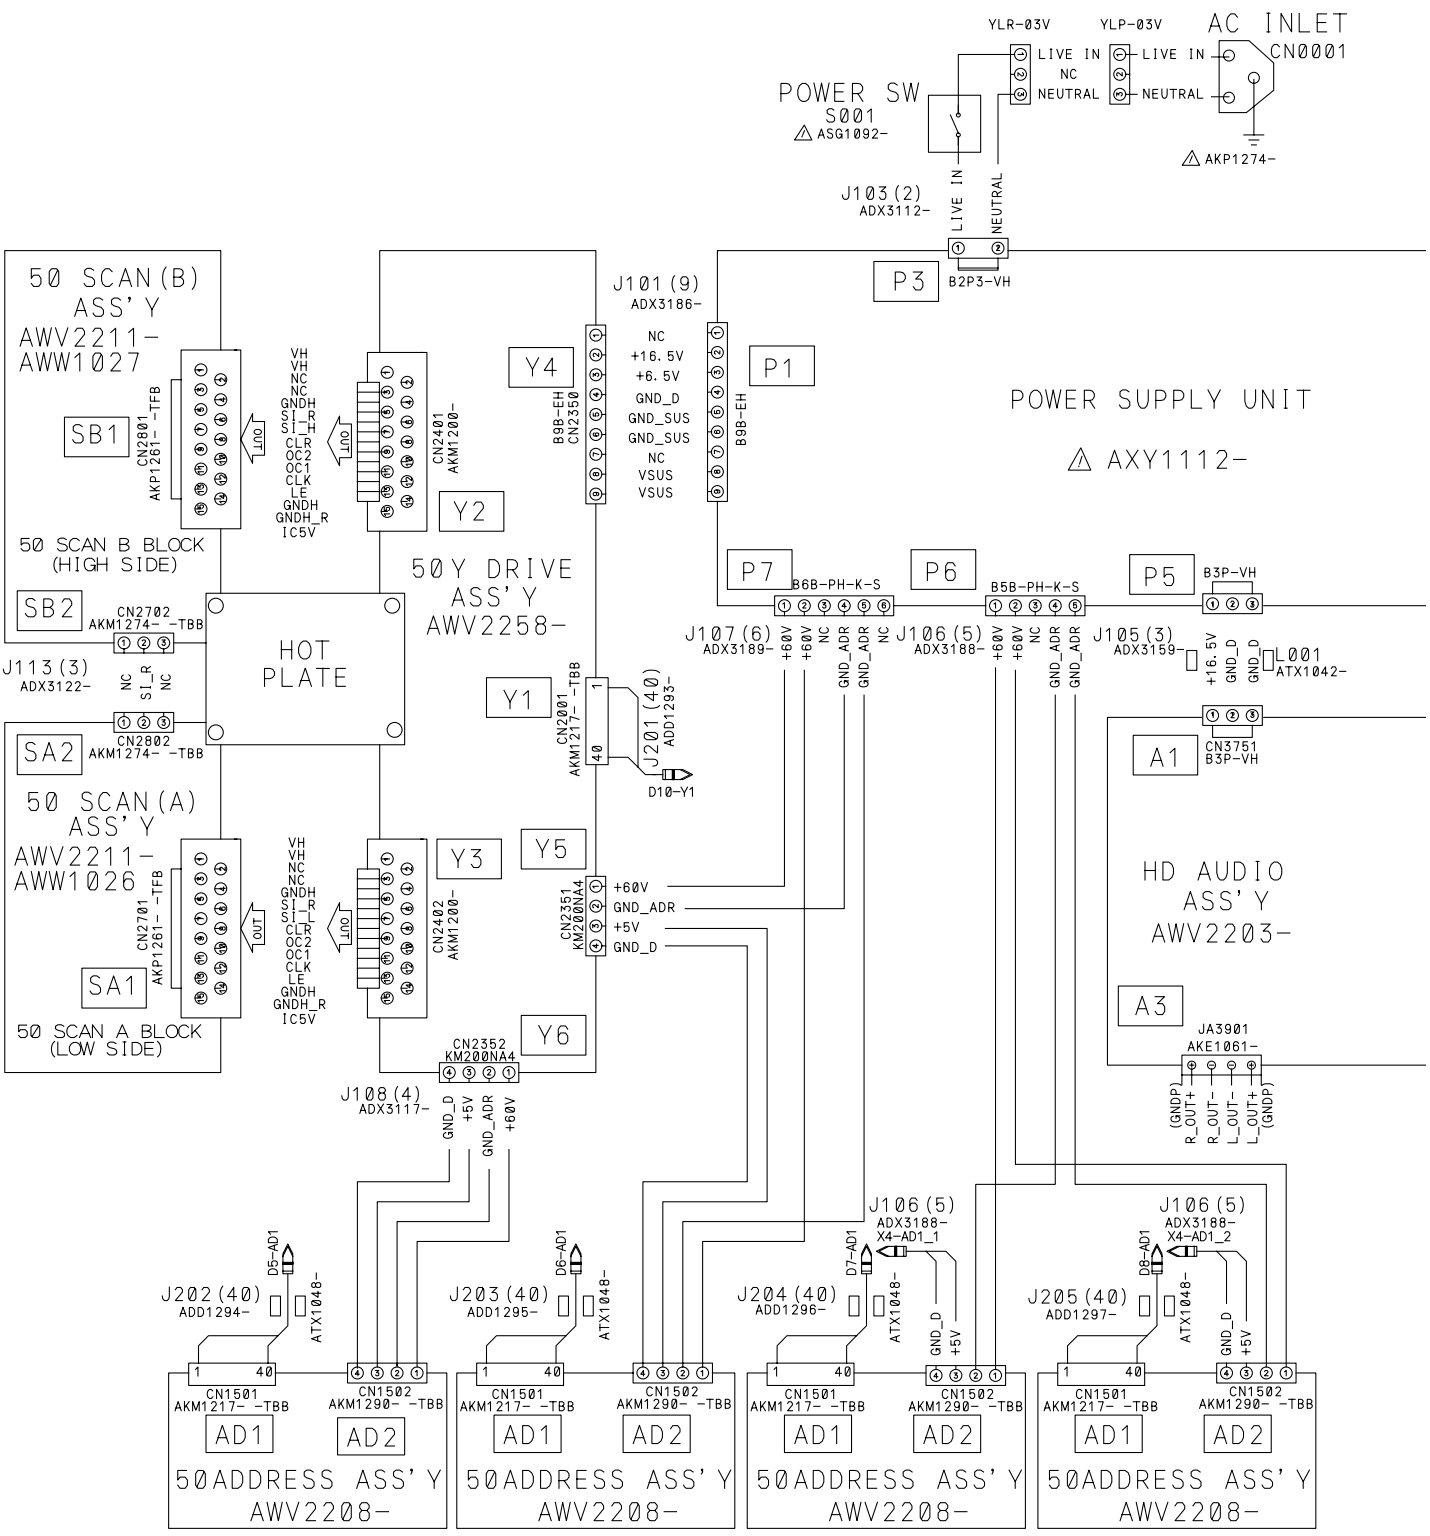

CONNECTOR PIN ASIGN

SYSTEM CABLE

CN1501 AD1	→CN3501 D5	CN1501 AD1	→CN3503 D7
CN1501 AD1	→CN3502 D6	CN1501 AD1	→CN3504 D8

1 →40. GND_D	21→20. CN
2 →39. DIV0	22→19. NC
3 →38. DIV1	23→18. GND_D
4 →37. GND_D	24→17. NC
5 →36. +3.3V	25→16. BP
6 →35. +3.3V	26→15. BN
7 →34. GND_D	27→14. NC
8 →33. GND_D	28→13. GND_D
9 →32. NC	29→12. NC
10→31. DP	30→11. AP
11→30. DN	31→10. AN
12→29. NC	32→9. NC
13→28. GND_D	33→8. GND_D
14→27. NC	34→7. GND_D
15→26. CLKP	35→6. +8V
16→25. CLKN	36→5. +8V
17→24. NC	37→4. GND_D
18→23. GND_D	38→3. GND_D
19→22. NC	(CN3504のPSIZE)
20→21. CP	39→2. ADR_PD
	40→1. NC

CN3506 D10 →CN2001 Y1

1→40. GND_D	21→20. GND_D
2→39. SCN5V_PD	22→19. YSUS-MSK
3→38. SI_L	23→18. YNRST
4→37. SI_H	24→17. YRsv2
5→36. GND_D	25→16. GND_D
6→35. CLR	26→15. YNOFS
7→34. CLK	27→14. YRsv3
8→33. GND_D	28→13. YSOFT-D
9→32. LE	29→12. GND_D
10→31. OC2	30→11. VOFS_ADJ
11→30. OC1 (-1)	31→10. VYPRST_ADJ
12→29. GND_D	32→ 9. GND_D
13→28. YSUS-B	33→ 8. GND_D
14→27. YSUS-U	34→ 7. NC
15→26. GND_D	35→ 6. GND_D
16→25. YSUS-D	36→ 5. YDD_PD
17→24. YSUS-G	37→ 4. YSUS_PD
18→23. GND_D	38→ 3. SCAN_PD
19→22. YPR-U	39→ 2. YDRV_PD
20→21. YRsv1	40→ 1. PSW

CN3505 D9 →CN1001 X1

1→18. PSW	
2→17. XSUS_PD	
3→16. XDD_PD	
4→15. XDRV_PD	
5→14. GND_D	
6→13. XRsv1	
7→12. XSUS_MSK	
8→11. GND_D	
9→10. XNR-D	
10→ 9. GND_D	
11→ 8. XSUS-Q	
12→ 7. GND_D	
13→ 6. XSUS-D	
14→ 5. GND_D	
15→ 4. XSUS-U	
16→ 3. GND_D	
17→ 2. XSUS-B	
18→ 1. GND_D	


JA3001 AKP1276-

1. RX2-	
2. RX2+	
3. GND_D	
4. NC	
5. NC	
6. DDC_SCL	
7. DDC_SDA	
8. NC	
9. RX1-	
10. RX1+	
11. GND_D	
12. NC	
13. NC	
14. DDC_+5V	
15. GND_D	
16. HPD	
17. RX0-	
18. RX0+	
19. GND_D	
20. NC	
21. NC	
22. GND_D	
23. RXC+	
24. RXC-	


JA3002 AKP1277-


1. MR_ST_B	
2. MRXD	
3. P_ST_B	
4. STA3.3V	
5. AC_OFF	
6. GND_D	
7. REQ	
8. STP3.3V	
9. KEY_B	
10. MR_ST_B	
11. MTXD	
12. GND_D	
13. AUDIO_R	
14. REM_B	
15. STB_MT	
16. GND_D	
17. VIS	
18. FIELD	
19. GND_D	
20. AUDIO_L	

- When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".
- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

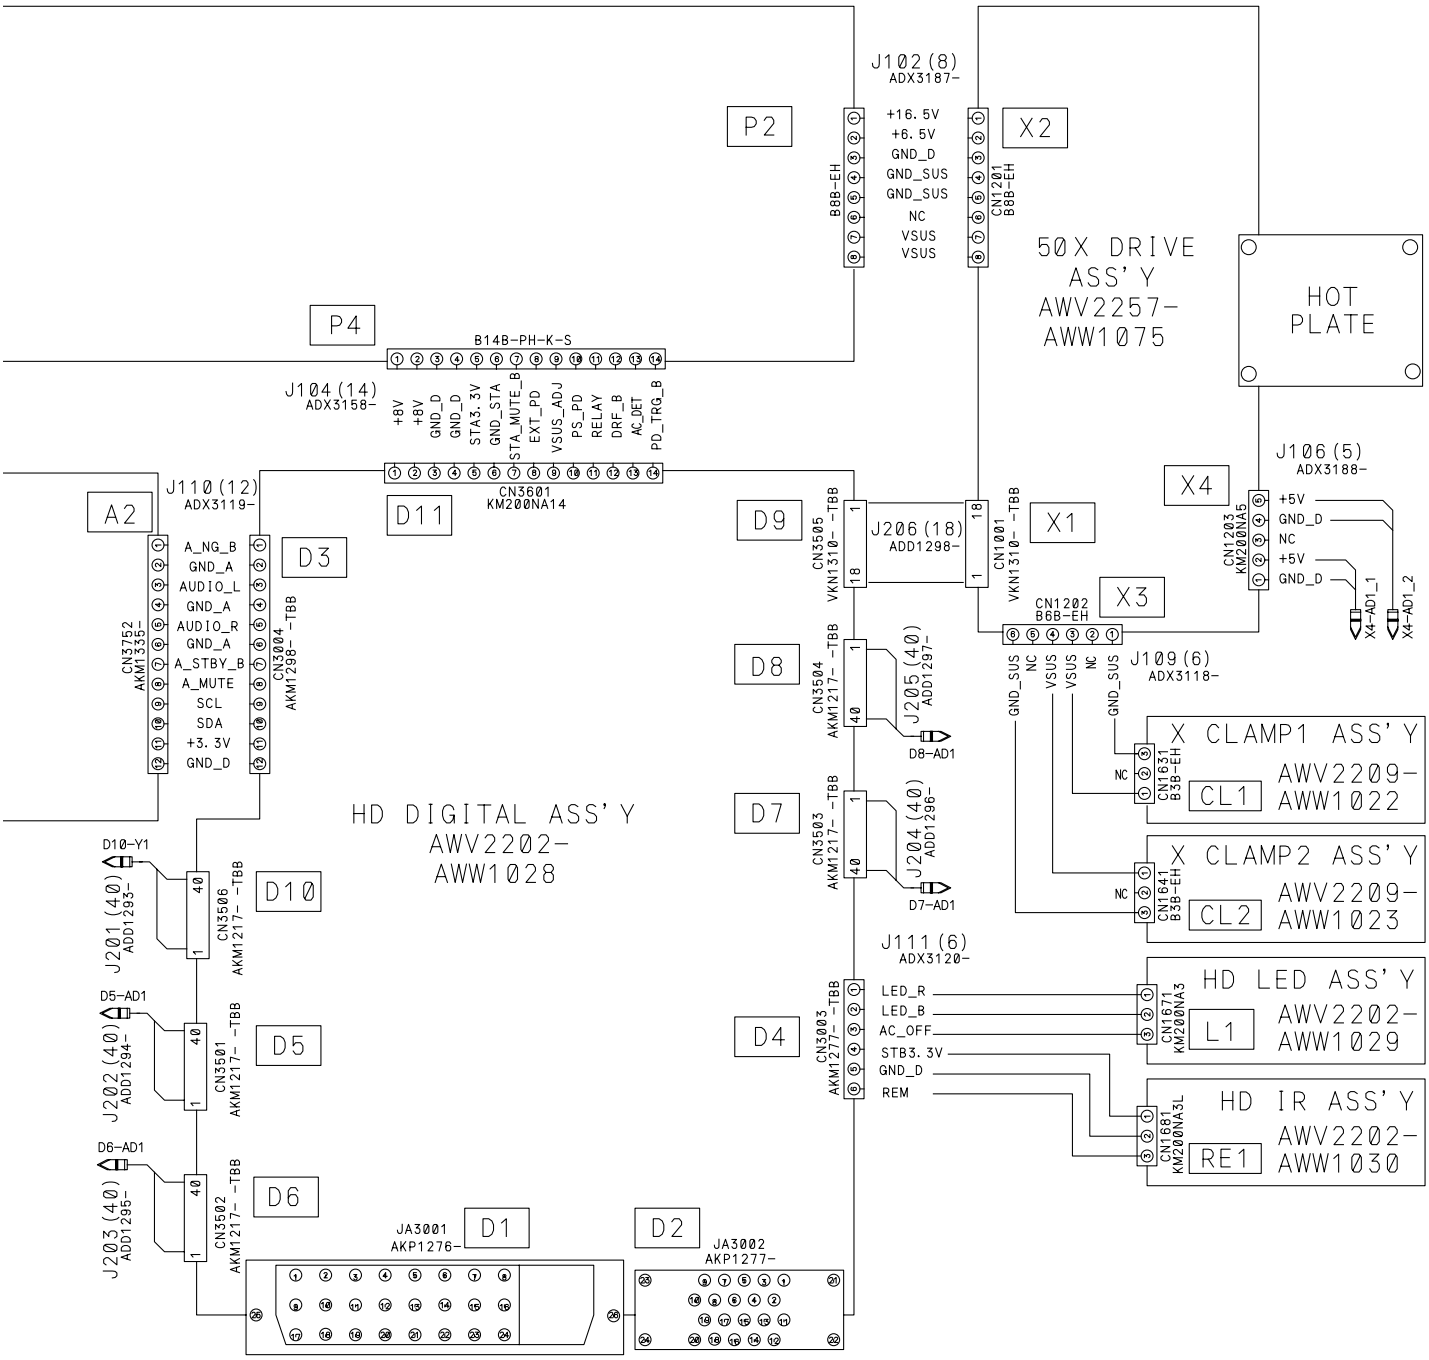


3.2 OVERALL BLOCK DIAGRAM

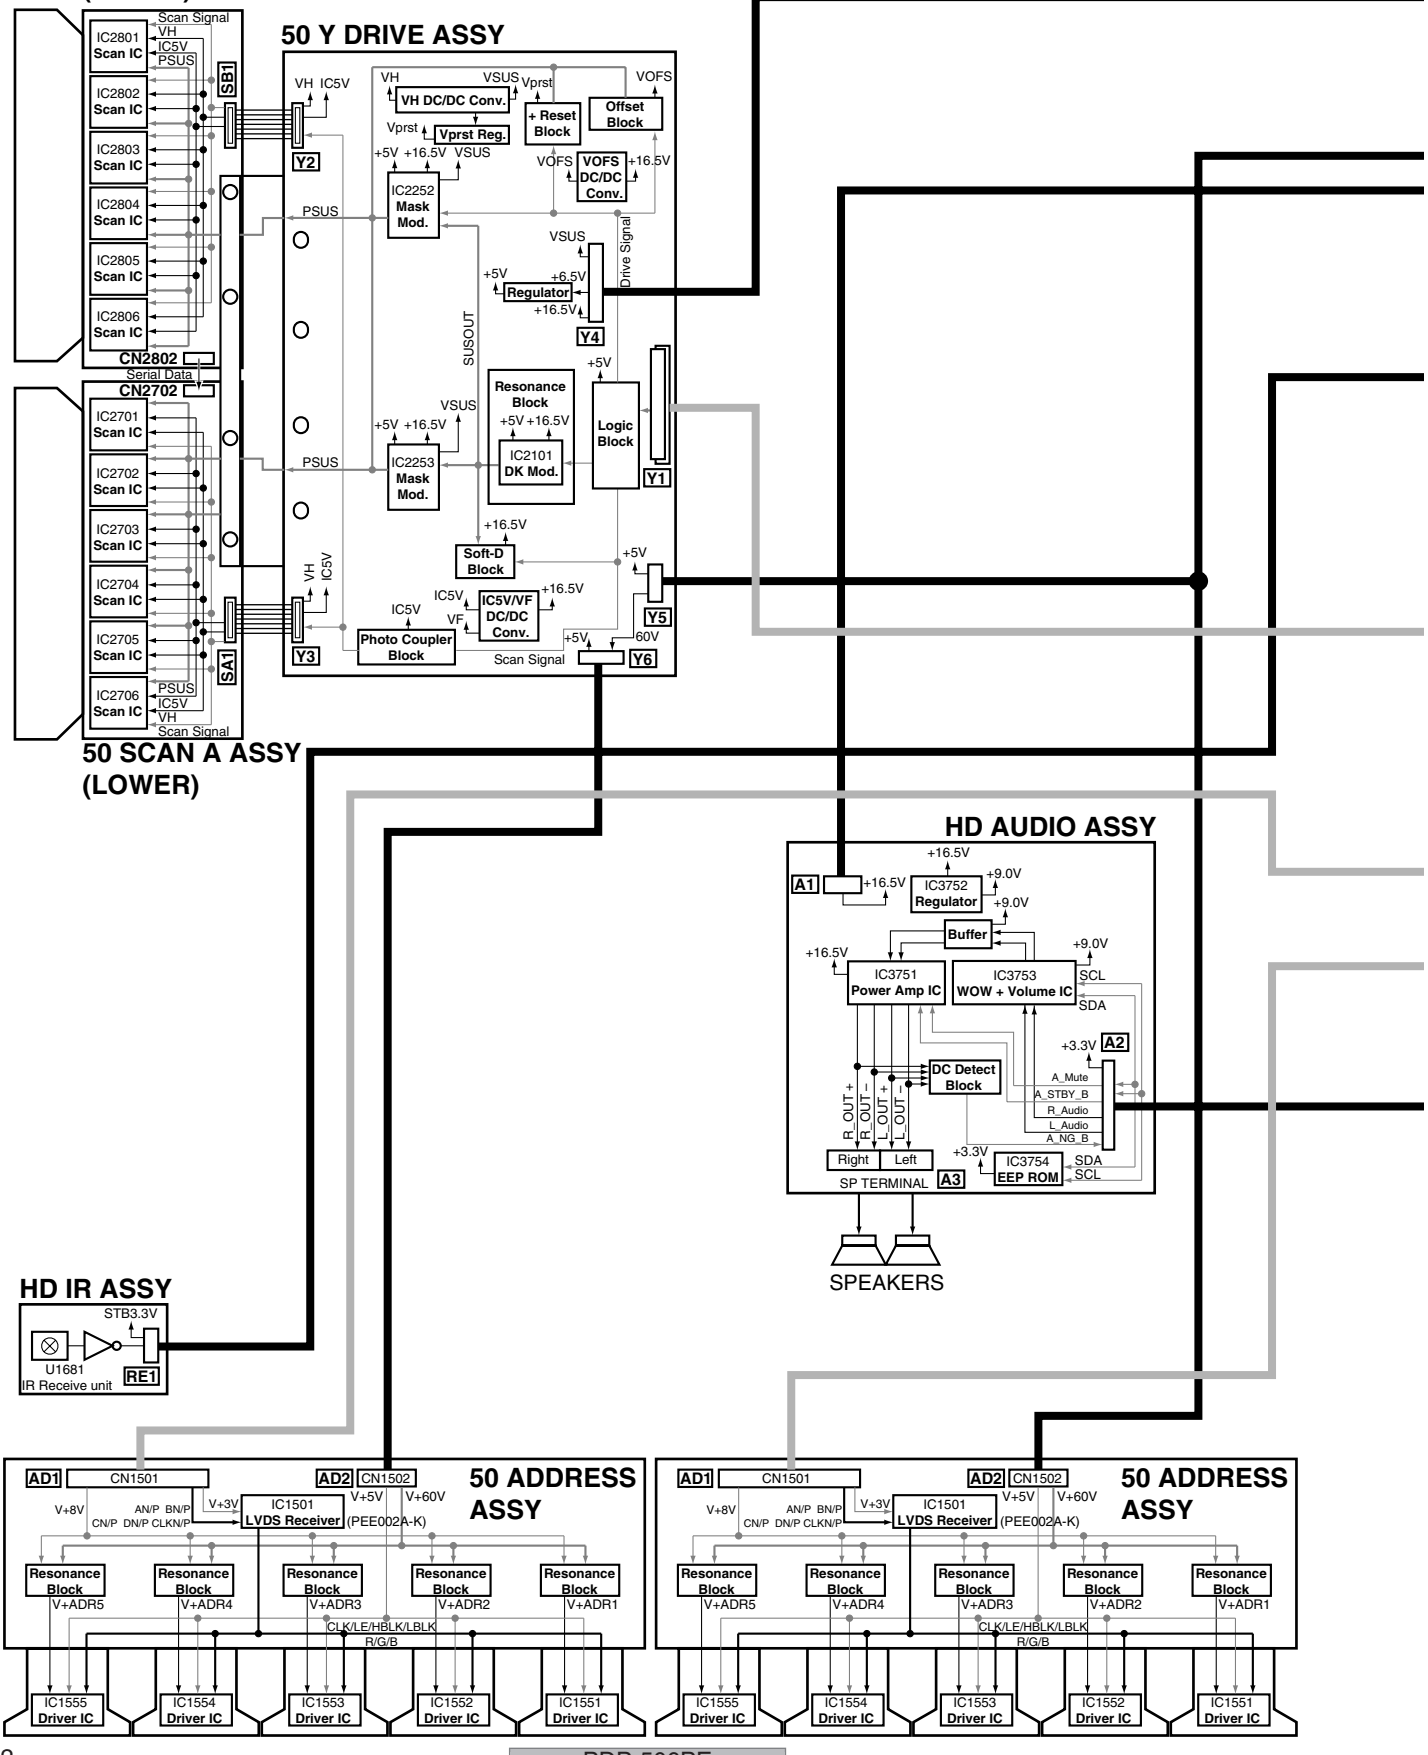


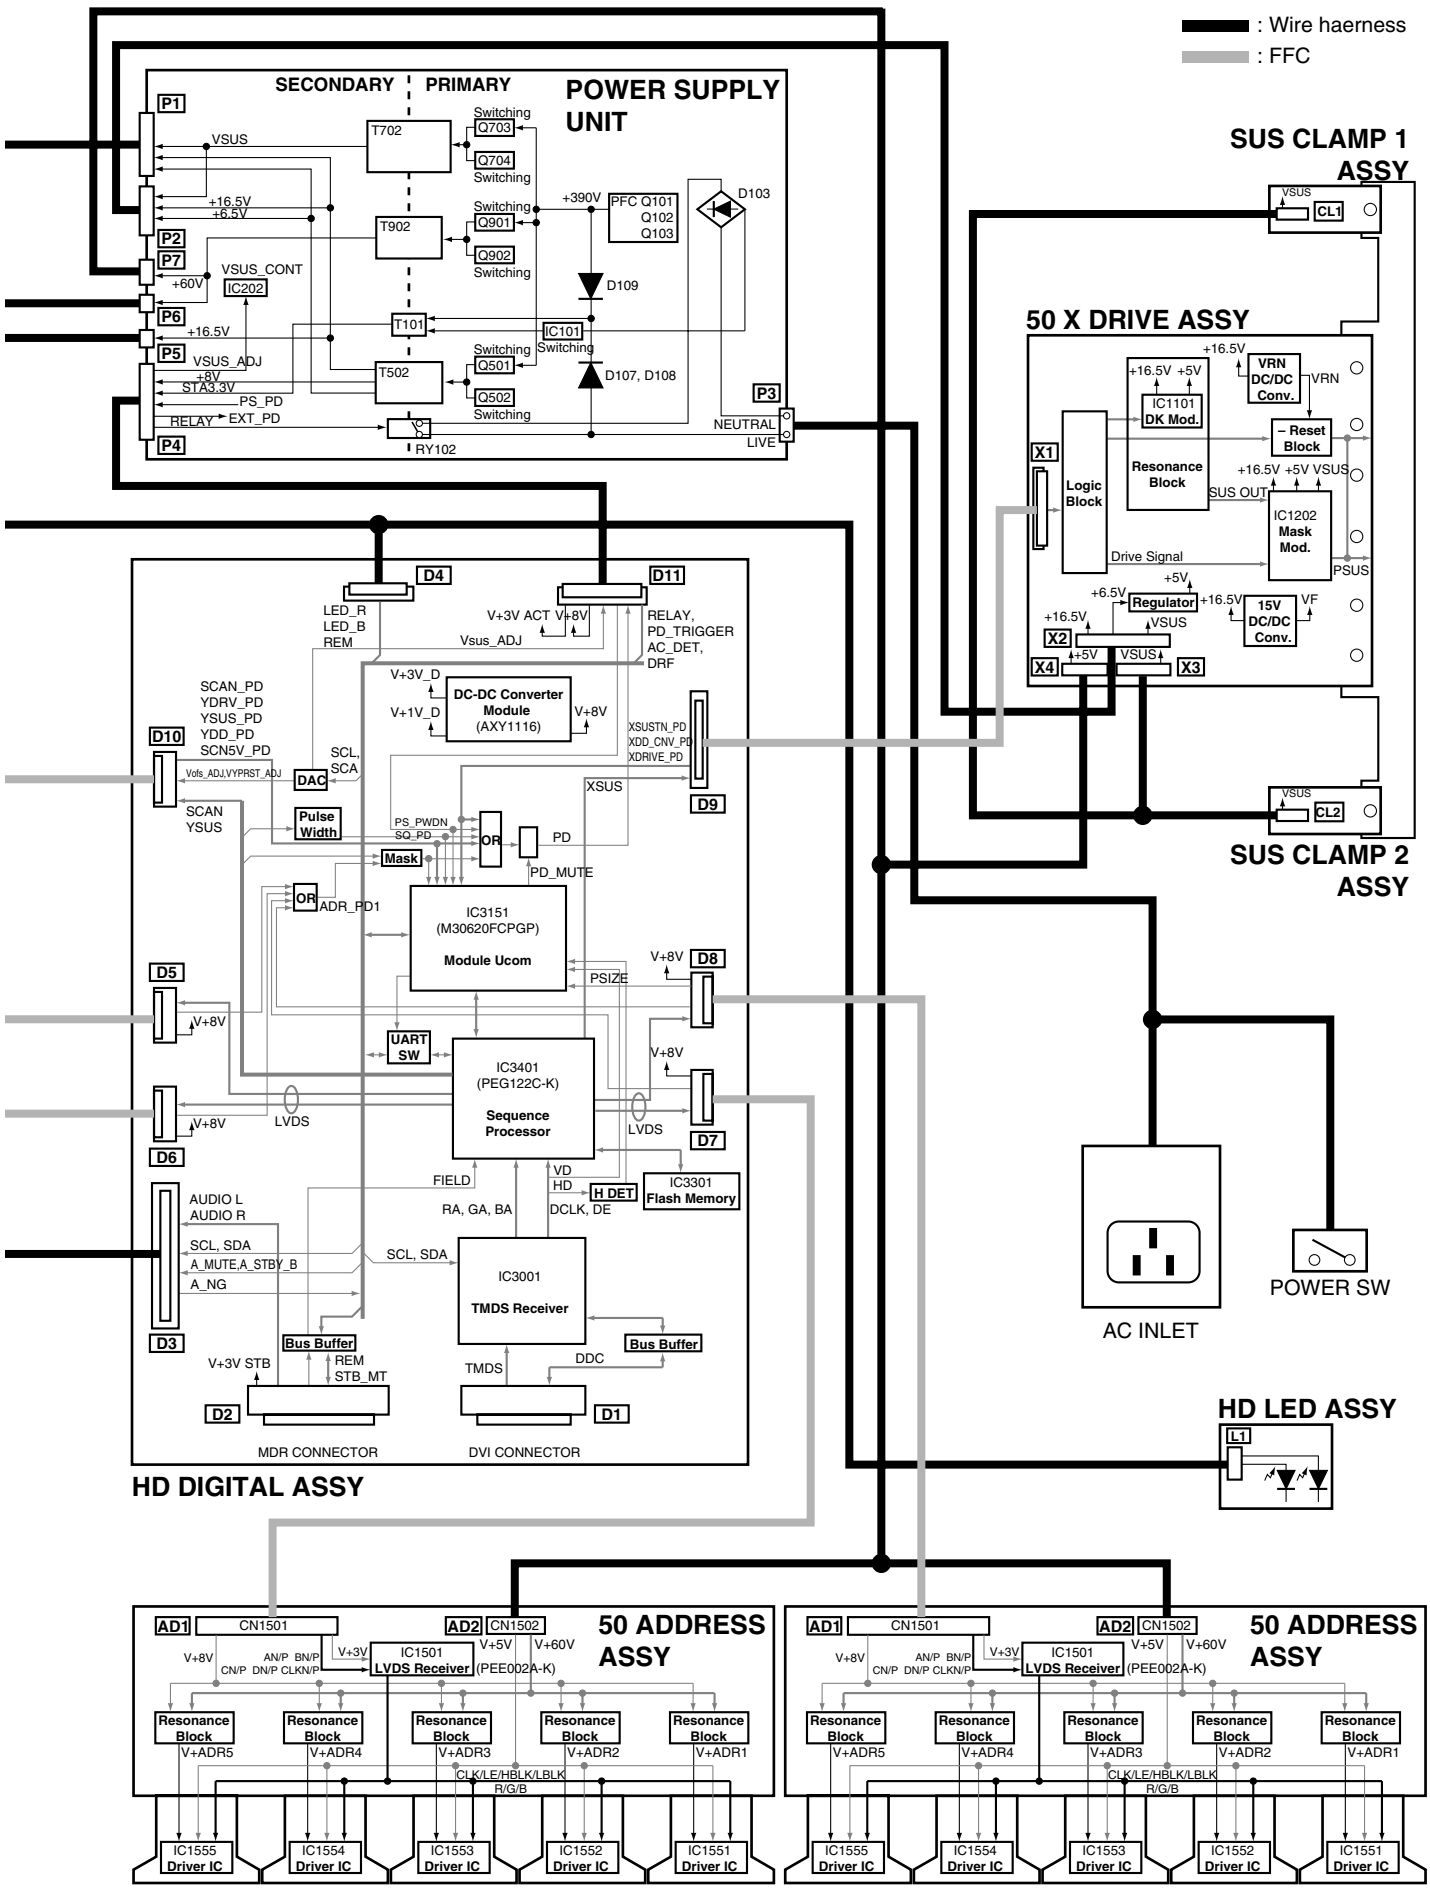
: Wire haerness
: FFC
POWER SUPPLY UNIT
SECONDARY
PRIMARY
P1
P2
P3
P4
P5
P6
P7
VSUS
+16.5V
+6.5V
+60V
VSUS_CONT
IC202
+16.5V
VSUS_ADJ
+8V
STA3.3V
PS_PD
RELAY
EXT_PD
RY102
T702
T902
T101
T502
Switching
Q703
Q704
Q901
Q902
Q501
Q502
+390V
PFC Q101
Q102
Q103
D103
D109
IC101
D107, D108
NEUTRAL
LIVE
SUS CLAMP 1 ASSY
CL1
50 X DRIVE ASSY
VRN DC/DC Conv.
VRN
IC1101 DK Mod.
– Reset Block
Resonance Block
Logic Block
X1
SUS OUT
IC1202 Mask Mod.
Drive Signal
PSUS
Regulator
15V DC/DC Conv.
VF
X2
X3
X4
SUS CLAMP 2 ASSY
CL2
D4
D11
LED_R
LED_B
REM
V+3V ACT
V+8V
Vsus_ADJ
RELAY,
PD_TRIGGER
AC_DET,
DRF
V+3V_D
V+1V_D
DC-DC Converter Module (AXY1116)
SCAN_PD
YDRV_PD
YSUS_PD
YDD_PD
SCN5V_PD
D10
Vofs_ADJ,VYPRST_ADJ
DAC
SCL,
SCA
SCAN
YSUS
Pulse Width
Mask
PS_PWDN
SQ_PD
OR
PD
PD_MUTE
ADR_PD1
XSUSTN_PD
XDD_CNV_PD
XDRIVE_PD
D9
XSUS
IC3151 (M30620FCPGP)
Module Ucom
D5
D8
PSIZE
UART SW
IC3401 (PEG122C-K)
Sequence Processor
D6
D7
LVDS
FIELD
VD
HD
H DET
IC3301 Flash Memory
RA, GA, BA
DCLK, DE
AUDIO L
AUDIO R
SCL, SDA
A_MUTE,A_STBY_B
A_NG
IC3001
TMDS Receiver
D3
Bus Buffer
V+3V STB
REM
STB_MT
TMDS
DDC
D2
D1
MDR CONNECTOR
DVI CONNECTOR
HD DIGITAL ASSY
AC INLET
POWER SW
HD LED ASSY
L1
AD1
CN1501
AD2
CN1502
50 ADDRESS ASSY
AN/P BN/P
CN/P DN/P CLKN/P
IC1501 LVDS Receiver (PEE002A-K)
V+3V
V+5V
V+60V
Resonance Block
V+ADR5
V+ADR4
V+ADR3
V+ADR2
V+ADR1
CLK/LE/HBLK/LBLK
R/G/B
IC1555 Driver IC
IC1554 Driver IC
IC1553 Driver IC
IC1552 Driver IC
IC1551 Driver IC


3.3 50 ADDRESS ASSY

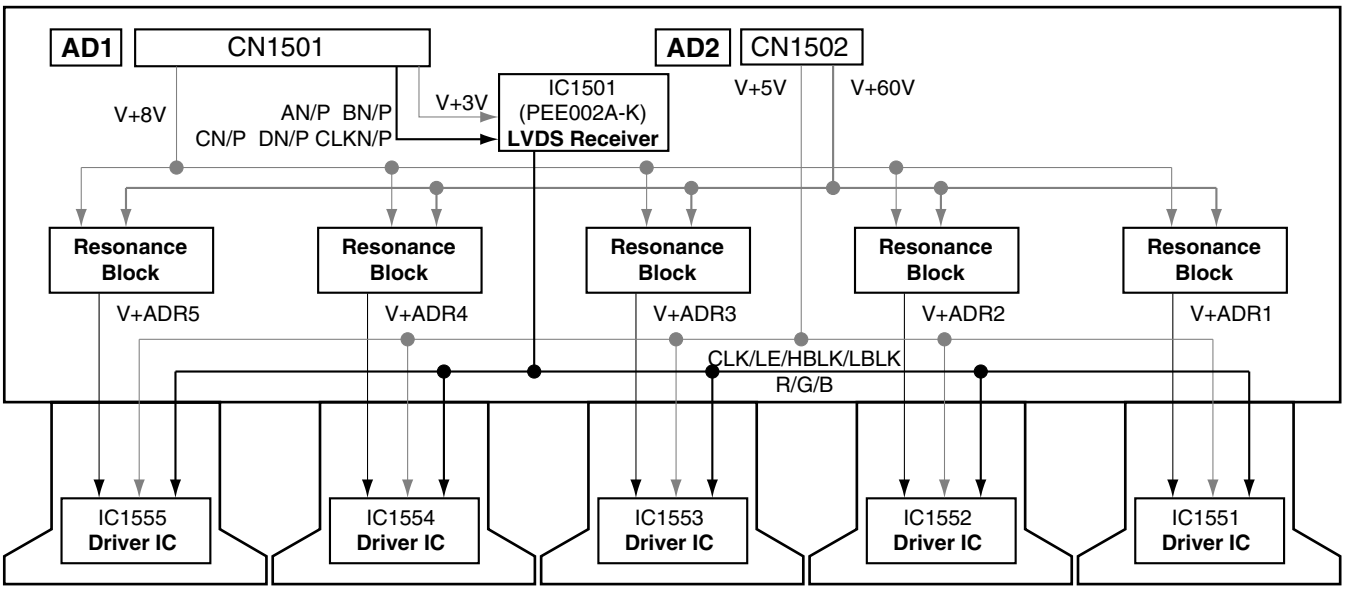


3.4 50 SCAN A and B ASSYS

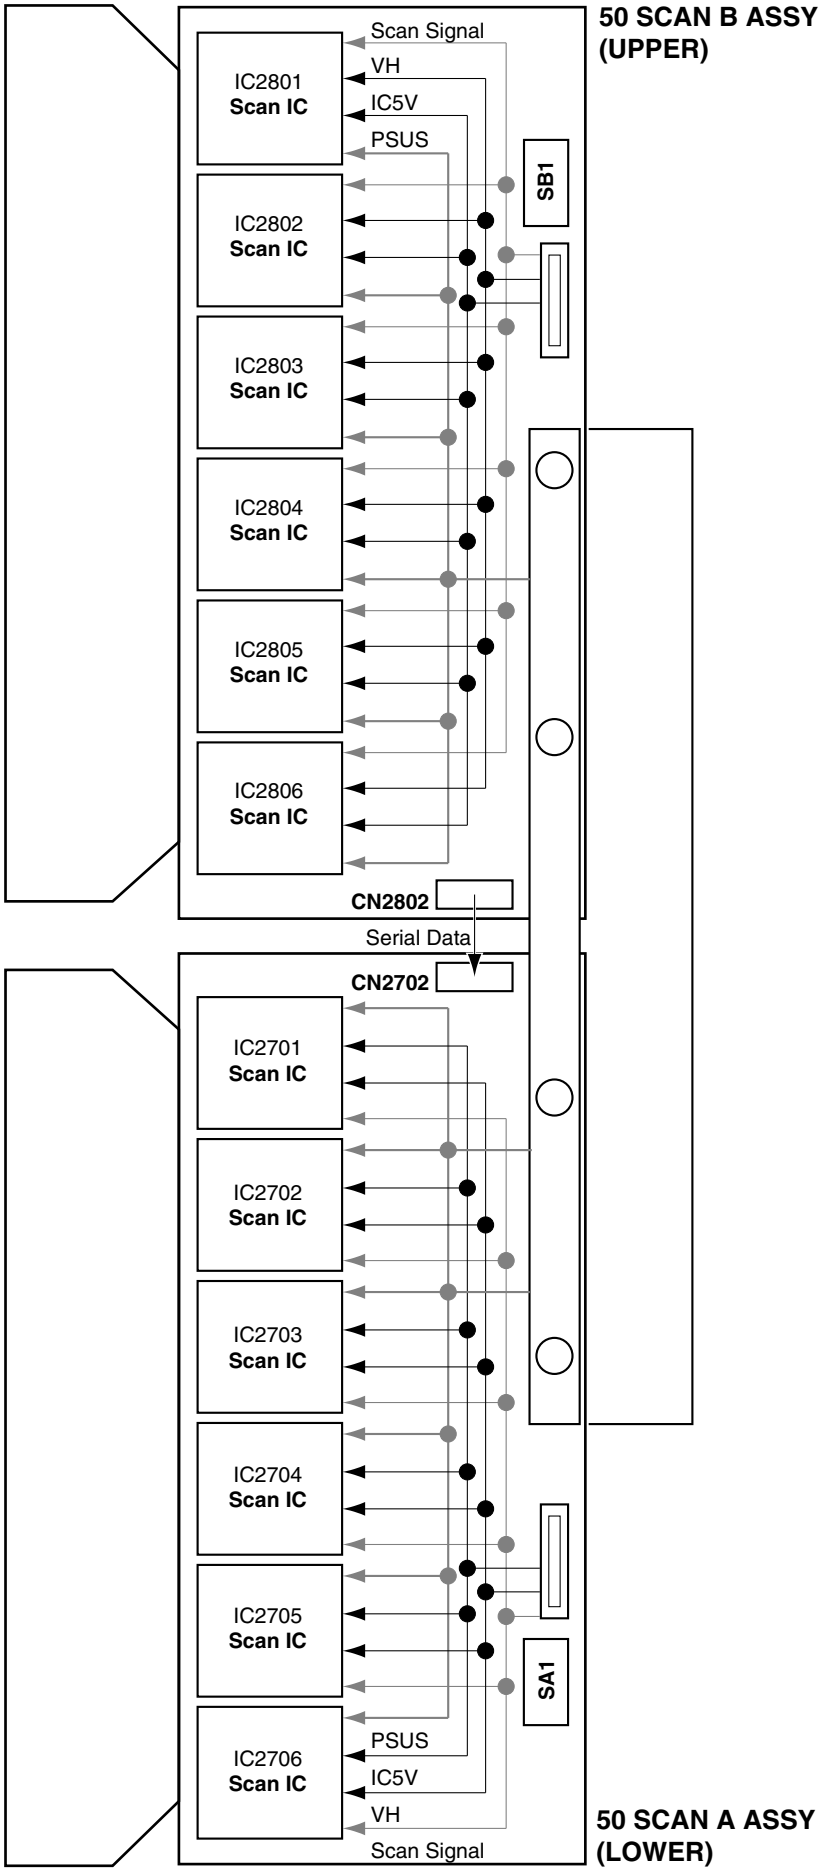


3.5 50 X DRIVE, SUS CLAMP 1 and SUS CLAMP 2 ASSYS

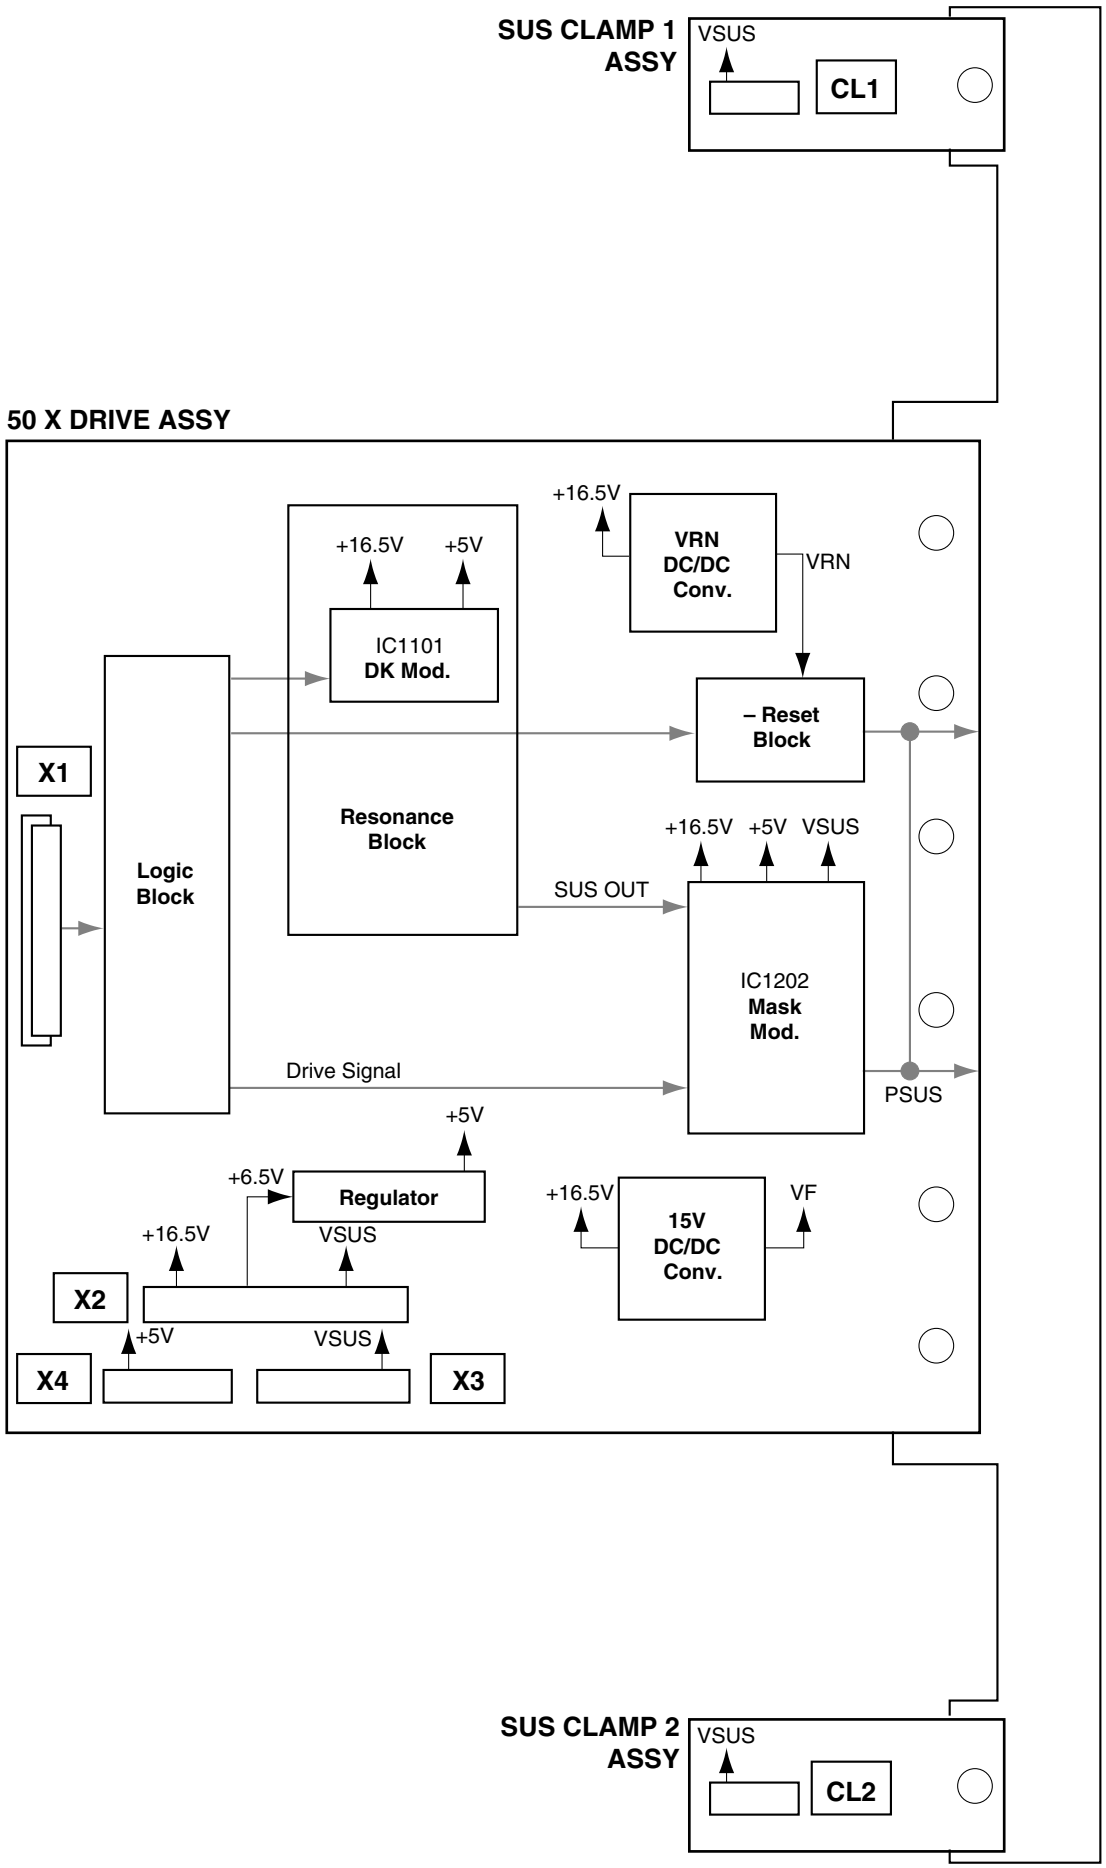


3.6 50 Y DRIVE ASSY

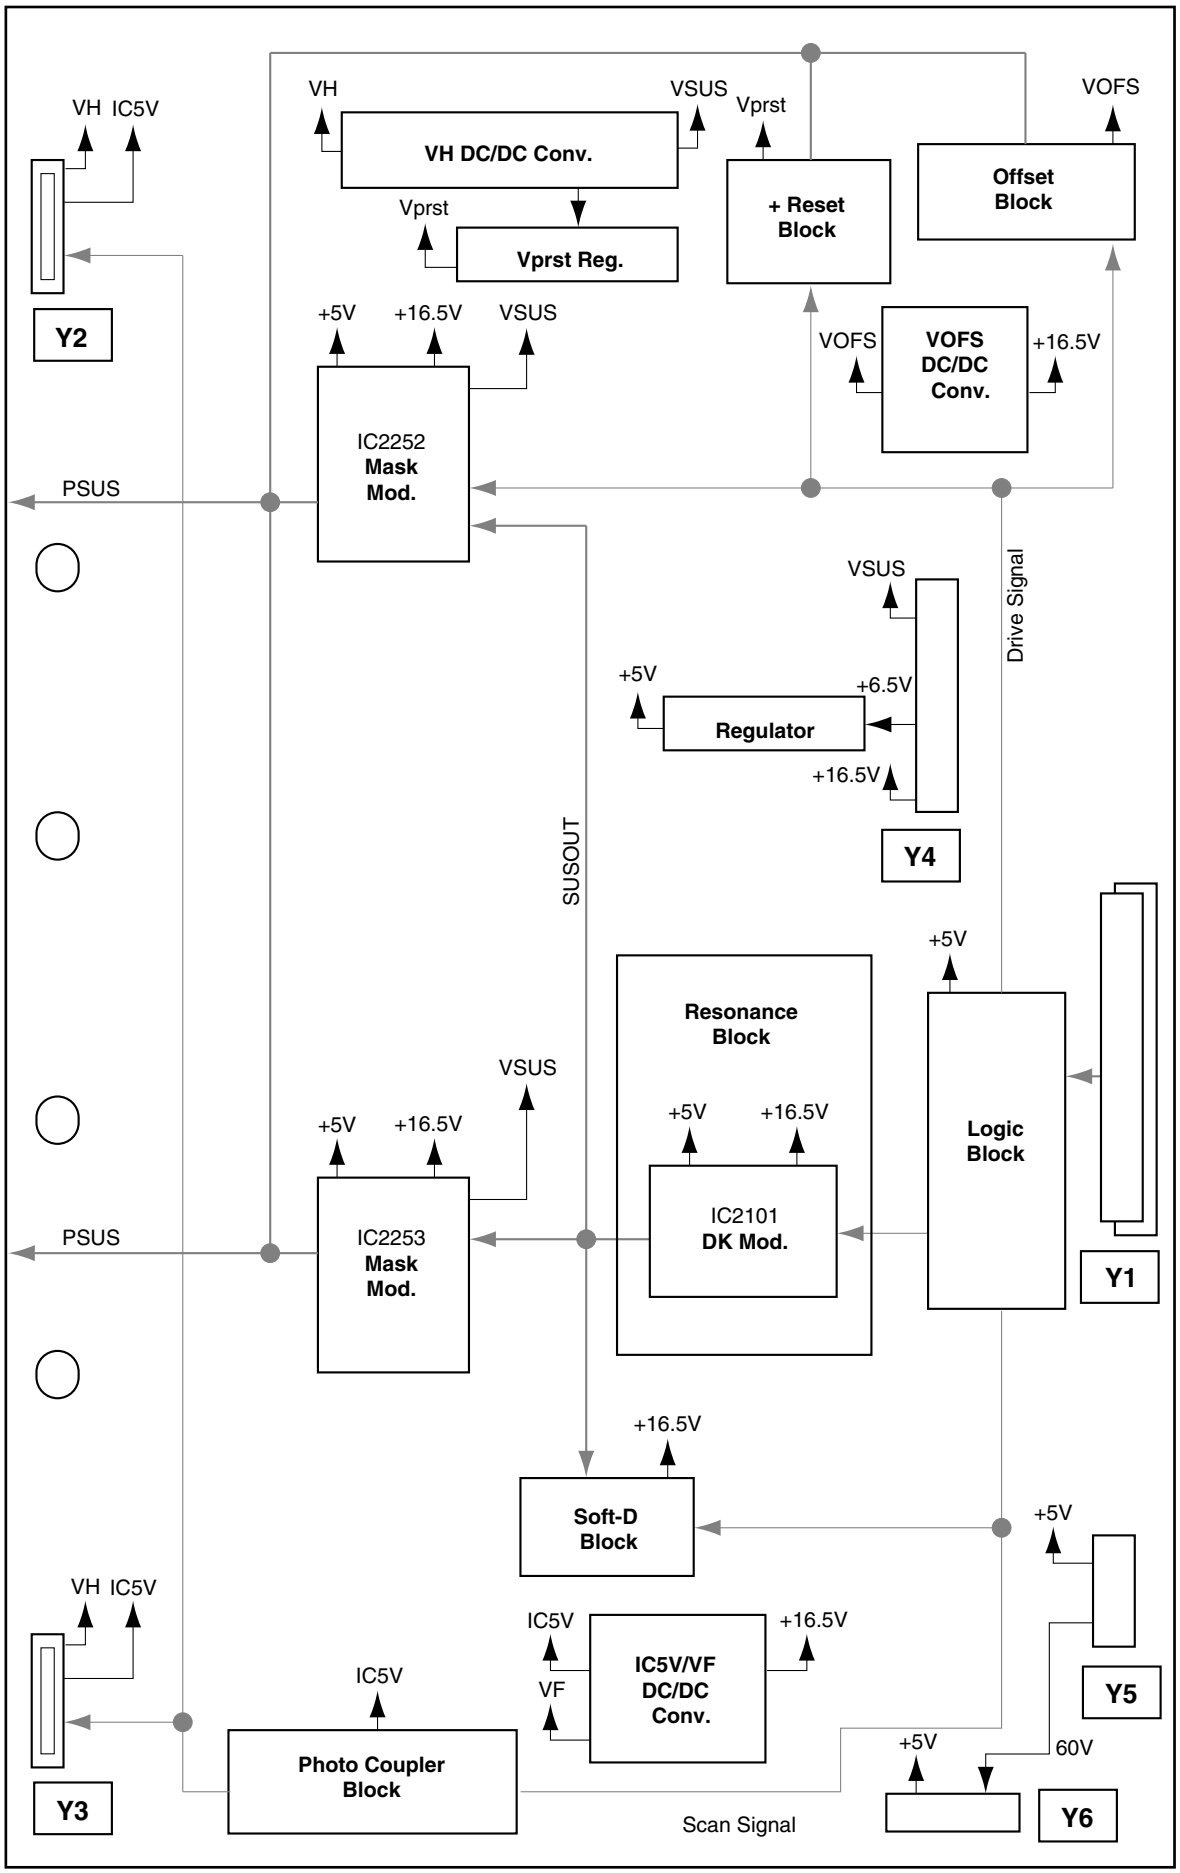


3.7 HD DIGITAL ASSY

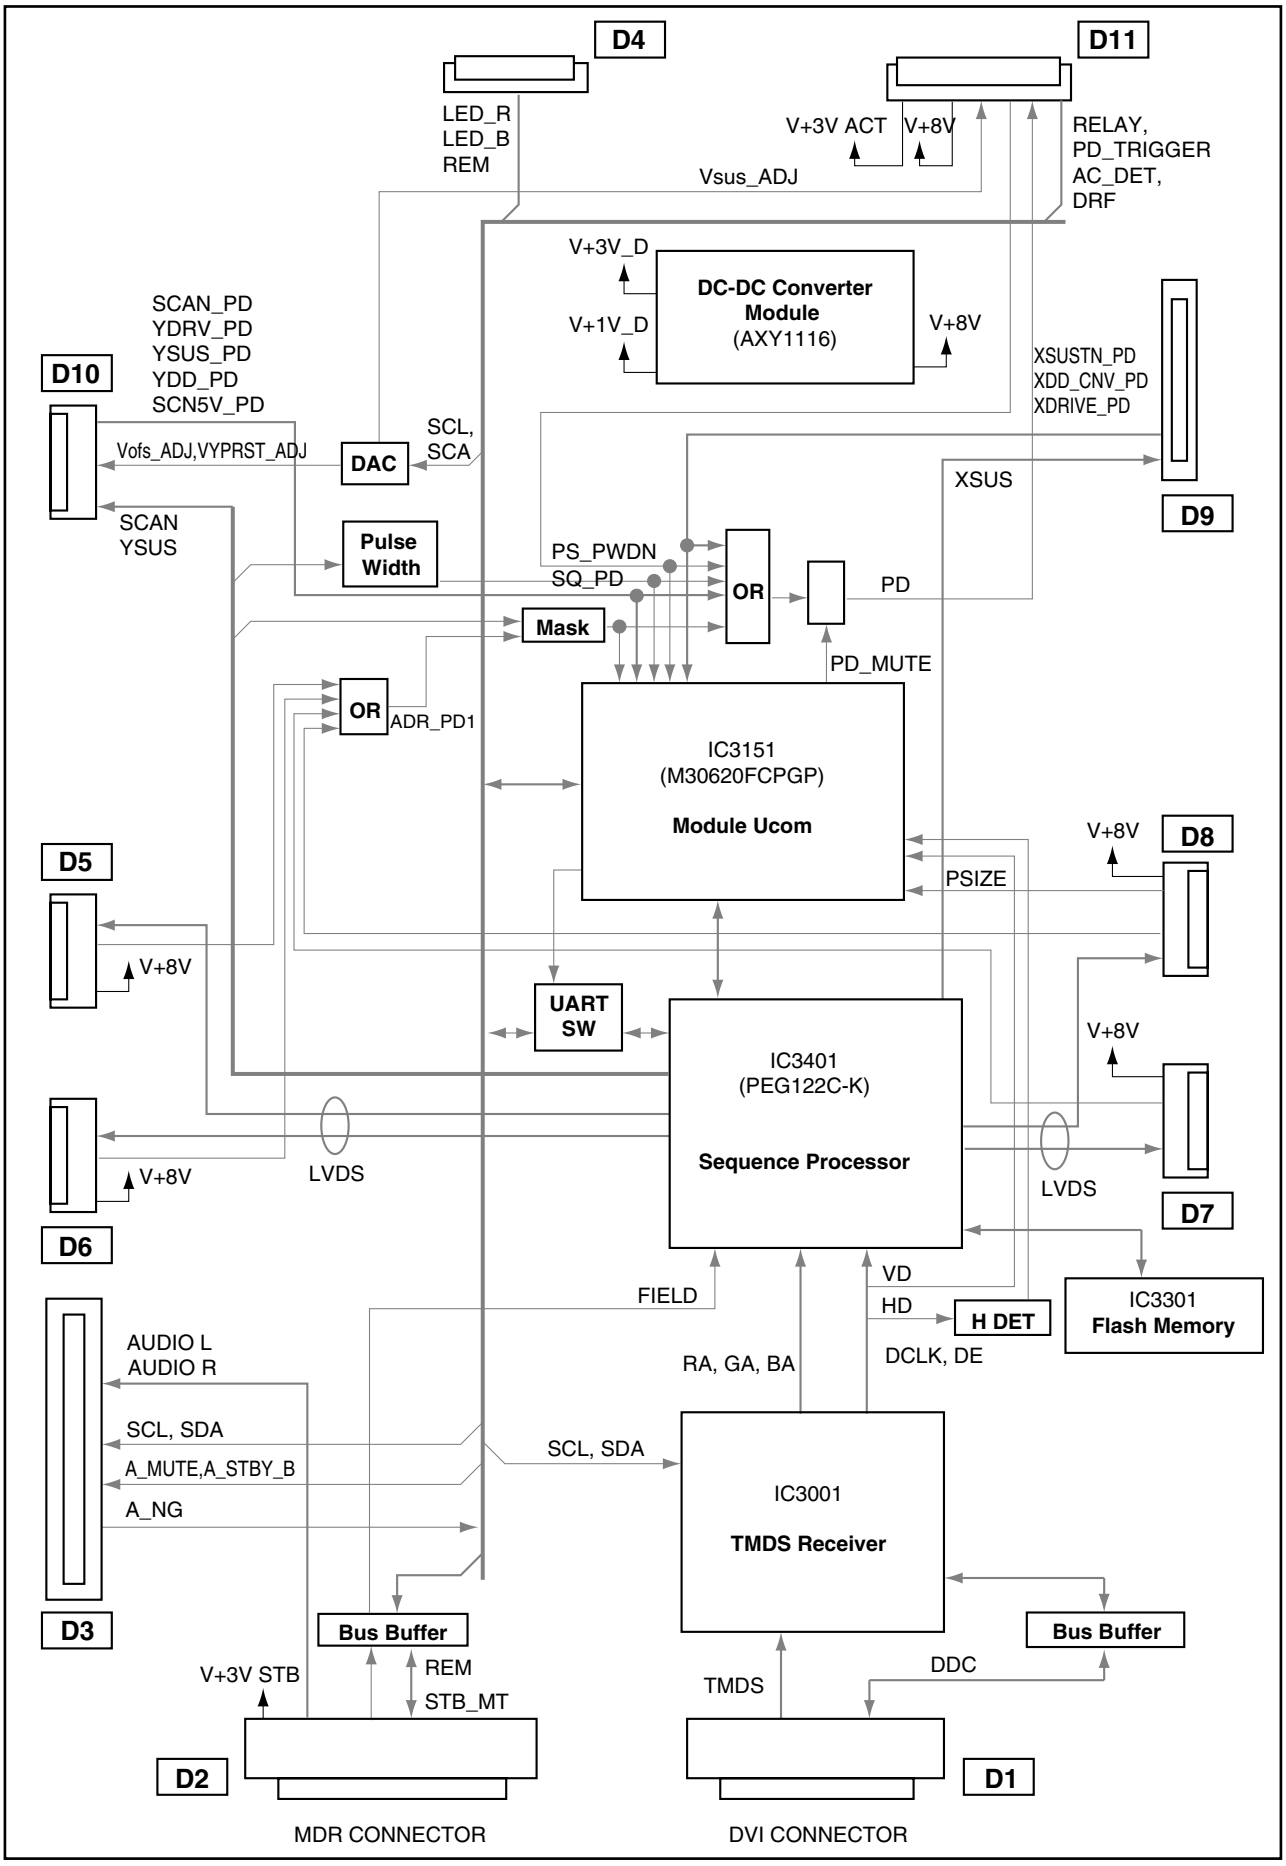

3.8 HD AUDIO ASSY

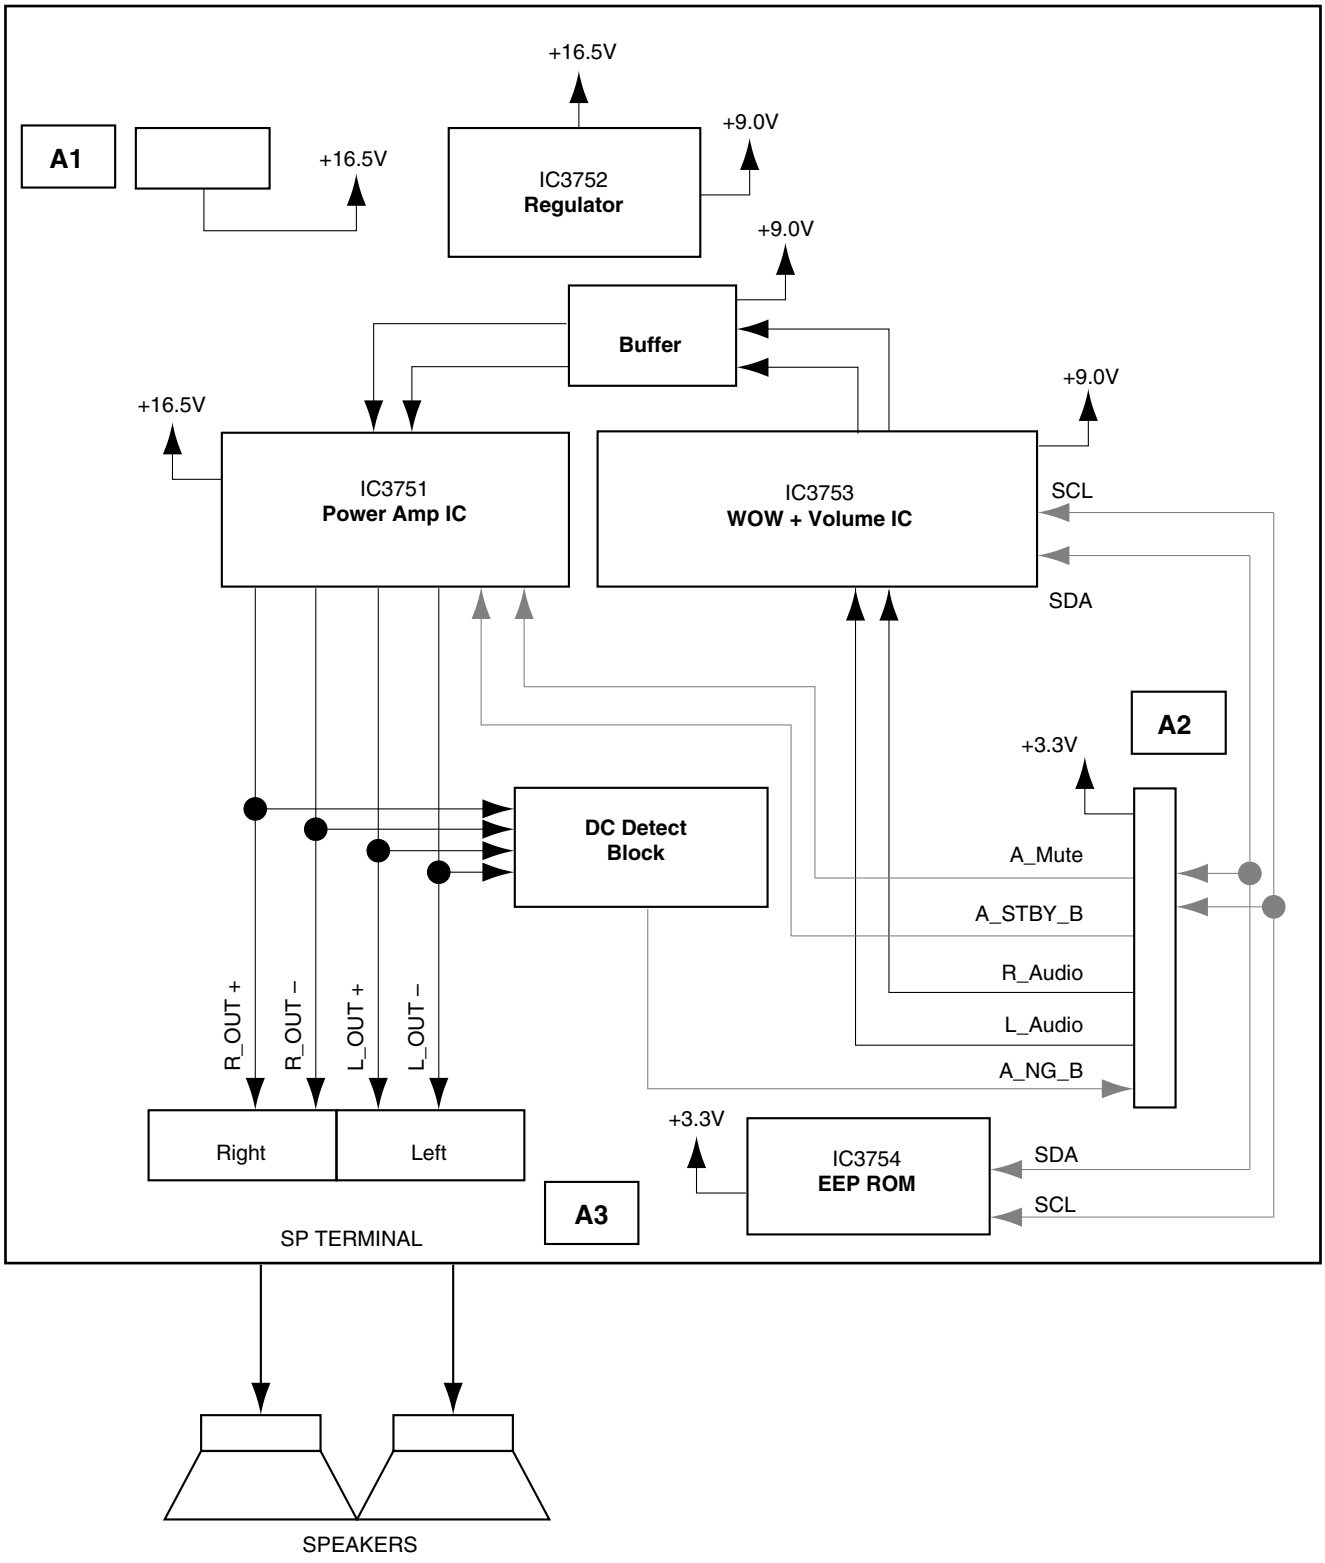

3.9 POWER SUPPLY UNIT

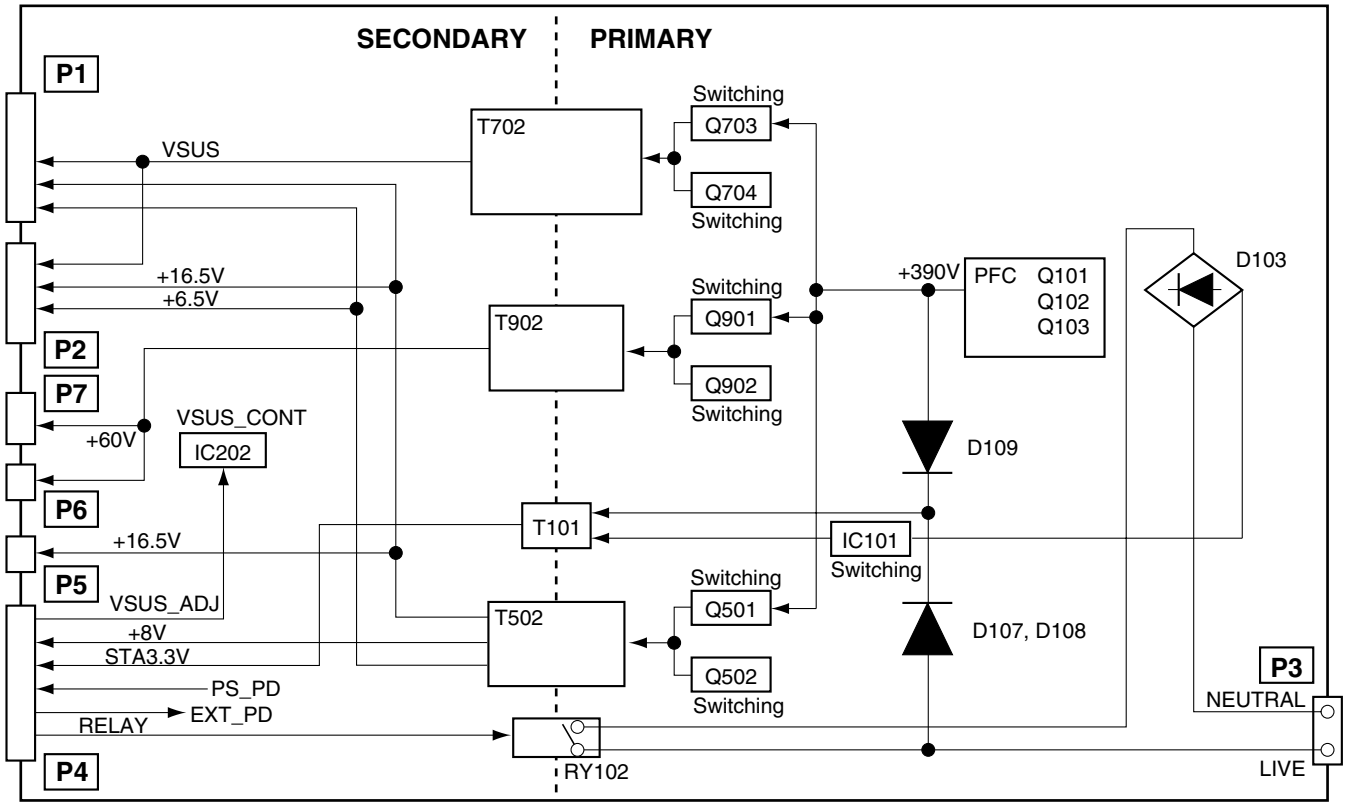


3.10 WAVEFORMS

Note : The encircled numbers denote measuring point in the schematic diagram.
Refer to service manual (ARP3268).


50 ADDRESS ASSY

50 ADDRESS RESONANCE BLOCK

① Control signal of resonance circuit (1 field)
Input : VIDEO 60Hz
Signal : Color-bar (MKSS17)
①-1 CH1 : ADR_B2
V : 1V/div H : 2msec/div
①-2 CH2 : ADR_U2
V : 1V/div H : 2msec/div
①-3 CH3 : ADR_D2
V : 1V/div H : 2msec/div

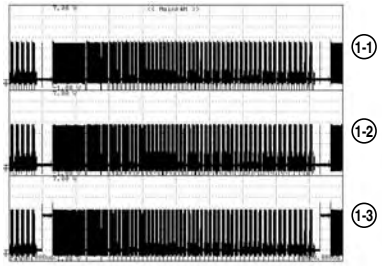


① Control signal of resonance circuit (2 FS)
Input : VIDEO 60Hz
Signal : Color-bar (MKSS17)
①-1 CH1 : ADR_B2
V : 1V/div H : 2msec/div
①-2 CH2 : ADR_U2
V : 1V/div H : 2msec/div
①-3 CH3 : ADR_D2
V : 1V/div H : 2msec/div

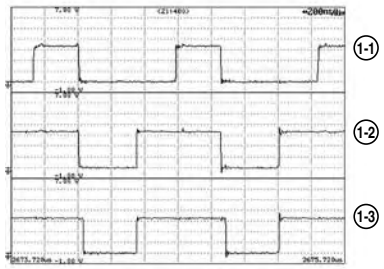


50 ADDRESS LOGIC BLOCK


② VADR (1 field)
Input : VIDEO 60Hz
Signal : Color-bar (MKSS17)
CH2 : IC1555-pin 3 (VDD2)
V : 10V/div H : 2msec/div

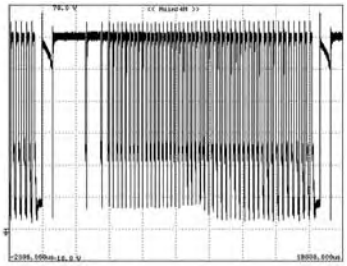

② VADR (1 field)
Input : VIDEO 60Hz
Signal : Checkered pattern of Black-White (MKSS13)
CH2 : IC1555-pin 3 (VDD2)
V : 10V/div H : 2msec/div

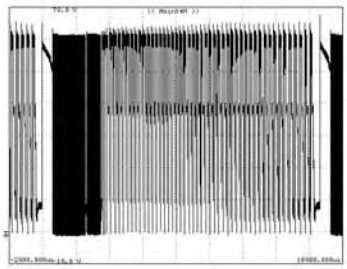


② VADR (2 FS)
Input : VIDEO 60Hz
Signal : Checkered pattern of Black-White (MKSS13)
CH2 : IC1555-pin 3 (VDD2)
V : 10V/div H : 200nsec/div

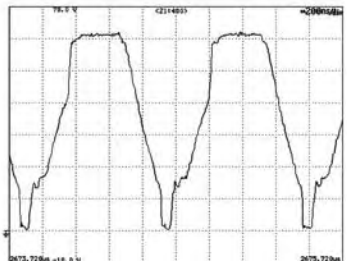


TCP LOGIC


③ Incoming signal of TCP (1 field)
Input : VIDEO 60Hz
Signal : Color-bar (MKSS17)
③-1 CH1 : IC1555-pin 3 (VDD2)
V : 10V/div H : 2msec/div
③-2 CH2 : IC1555-pin 9 (A3)
V : 1V/div H : 2msec/div
③-3 CH3 : IC1555-pin 16 (CLK)
V : 1V/div H : 2msec/div
③-4 CH4 : IC1555-pin 14 (LE)
V : 1V/div H : 2msec/div
③-5 CH5 : IC1555-pin 19 (HBLK)
V : 1V/div H : 2msec/div
③-6 CH6 : IC1555-pin 17 (LBLK)
V : 1V/div H : 2msec/div

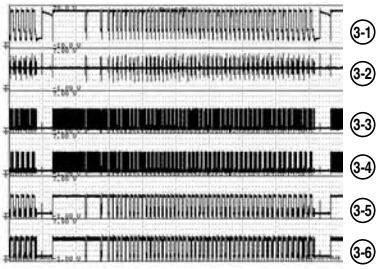

③ Incoming signal of TCP (1 field)
Input : VIDEO 60Hz
Signal : Checkered pattern of Black-White (MKSS13)
③-1 CH1 : IC1555-pin 3 (VDD2)
V : 10V/div H : 2msec/div
③-2 CH2 : IC1555-pin 9 (A3)
V : 1V/div H : 2msec/div
③-3 CH3 : IC1555-pin 16 (CLK)
V : 1V/div H : 2msec/div
③-4 CH4 : IC1555-pin 14 (LE)
V : 1V/div H : 2msec/div
③-5 CH5 : IC1555-pin 19 (HBLK)
V : 1V/div H : 2msec/div
③-6 CH6 : IC1555-pin 17 (LBLK)
V : 1V/div H : 2msec/div

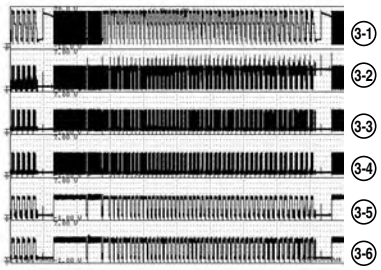


③ Incoming signal of TCP (Resonance part)
Input : VIDEO
Signal : Checkered pattern of Black-White (MKSS13)
③-1 CH1 : IC1555-pin 3 (VDD2)
V : 10V/div H : 200nsec/div
③-2 CH2 : IC1555-pin 9 (A3)
V : 1V/div H : 200nsec/div
③-3 CH3 : IC1555-pin 16 (CLK)
V : 1V/div H : 200nsec/div
③-4 CH4 : IC1555-pin 14 (LE)
V : 1V/div H : 200nsec/div
③-5 CH5 : IC1555-pin 19 (HBLK)
V : 1V/div H : 200nsec/div
③-6 CH6 : IC1555-pin 17 (LBLK)
V : 1V/div H : 200nsec/div

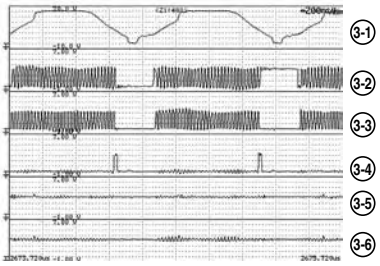

50 X DRIVE, 50 Y DRIVE ASSY


1 Drive output signal (1 field, Color-bar)

1-1 **CH1 : R1277 (XPSUS) - K1203 (SUSGND)**
V : 100V/div H : 2msec/div (X DRIVE Assy)
1-2 **CH2 : K2701 (SCANOUT) - K2330 (SUSGND)**
V : 100V/div H : 2msec/div (SCAN A Assy)
1-3 **CH3 : F2301 (YPSUS) - K2330 (SUSGND)**
V : 100V/div H : 2msec/div (Y DRIVE Assy)

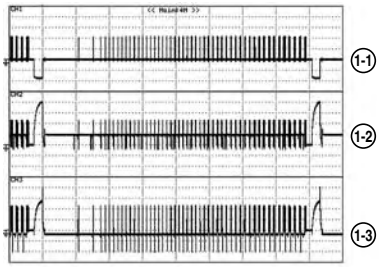


2 X Drive pulse control signal (Color-bar)

2-1 **CH1 : K1009 (XSUS-MSK) - K1001 (DGND)**
V : 1V/div H : 2msec/div (X DRIVE Assy)
2-2 **CH2 : K1005 (XNR-D) - K1001 (DGND)**
V : 1V/div H : 2msec/div (X DRIVE Assy)

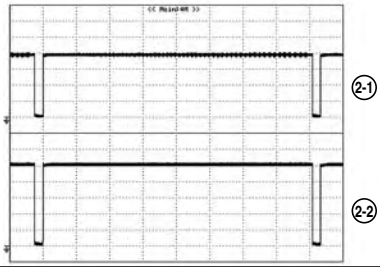


3 Y Drive pulse control signal (Color-bar)

3-1 **CH1 : K2007 (YNOFS) - K2002 (GND_D)**
V : 1V/div H : 2msec/div (Y DRIVE Assy)
3-2 **CH2 : K2005 (YSUS-MSK) - K2002 (GND_D)**
V : 1V/div H : 2msec/div (Y DRIVE Assy)
3-3 **CH3 : K2008 (YNRST) - K2002 (GND_D)**
V : 1V/div H : 2msec/div (Y DRIVE Assy)
3-4 **CH4 : K2006 (SOFT-D) - K2002 (GND_D)**
V : 1V/div H : 2msec/div (Y DRIVE Assy)
3-5 **CH5 : K2023 (YPR-U) - K2002 (GND_D)**
V : 1V/div H : 2msec/div (Y DRIVE Assy)

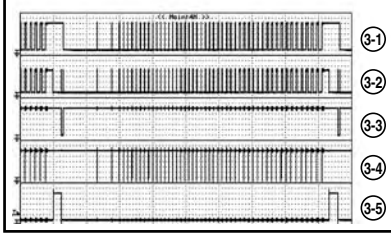


4 Scan control signal (1 field, Color-bar)

4-1 **CH1 : TP2001 (LE) - K2002 (GND-D)**
V : 1V/div H : 2msec/div (X DRIVE Assy)
4-2 **CH2 : TP2008 (CLK) - K2002 (GND-D)**
V : 1V/div H : 2msec/div (X DRIVE Assy)
4-3 **CH3 : TP2003 (SI-H) - K2002 (GND-D)**
V : 1V/div H : 2msec/div (X DRIVE Assy)
4-4 **CH4 : TP2004 (CLR) - K2002 (GND-D)**
V : 1V/div H : 2msec/div (X DRIVE Assy)
4-5 **CH5 : TP2005 (OC2) - K2002 (GND-D)**
V : 1V/div H : 2msec/div (X DRIVE Assy)
4-6 **CH6 : TP2006 (OC1) - K2002 (GND-D)**
V : 1V/div H : 2msec/div (X DRIVE Assy)

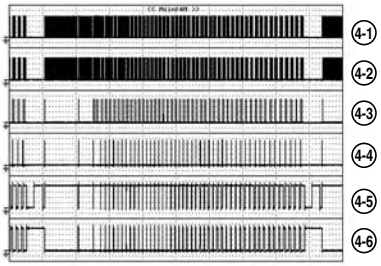


5 Reset pulse signal

5-1 **CH1 : R1277 (XPSUS) - K1203 (SUSGND)**
V : 100V/div H : 100µsec/div (X DRIVE Assy)
5-2 **CH2 : K2701 (SCANOUT) - K2330 (SUSGND)**
V : 100V/div H : 100µsec/div (SCAN A Assy)
5-3 **CH3 : F2301 (YPSUS) - K2330 (SUSGND)**
V : 100V/div H : 100µsec/div (Y DRIVE Assy)

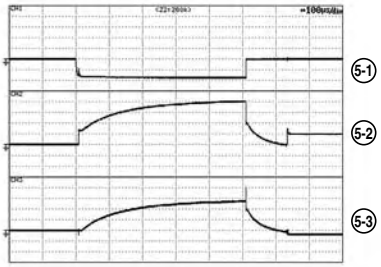


6 Sustain pulse signal (1 sub, sub field)

6-1 **CH1 : R1277 (XPSUS) - K1203 (SUSGND)**
V : 50V/div H : 5µsec/div (X DRIVE Assy)
6-2 **CH2 : K2701 (SCANOUT) - K2330 (SUSGND)**
V : 50V/div H : 5µsec/div (SCAN A Assy)
6-3 **CH3 : F2301 (YPSUS) - K2330 (SUSGND)**
V : 50V/div H : 5µsec/div (Y DRIVE Assy)

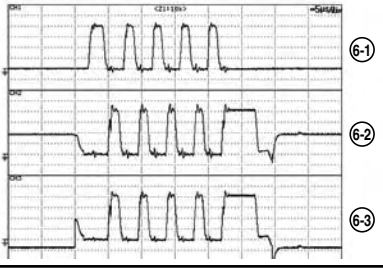

7 Sustain signal

7-1 **CH1 : F2301 (YPSUS) - K2330 (SUSGND)**
V : 50V/div H : 500nsec/div (Y DRIVE Assy)
7-2 **CH2 : K2004 (YSUS-G) - K2002 (DGND)**
V : 5V/div H : 500nsec/div (Y DRIVE Assy)
7-3 **CH3 : K2011 (YSUS-U) - K2002 (DGND)**
V : 5V/div H : 500nsec/div (Y DRIVE Assy)
7-4 **CH4 : K2009 (YSUS-B) - K2002 (DGND)**
V : 5V/div H : 500nsec/div (Y DRIVE Assy)
7-5 **CH5 : K2010 (YSUS-D) - K2002 (DGND)**
V : 5V/div H : 500nsec/div (Y DRIVE Assy)

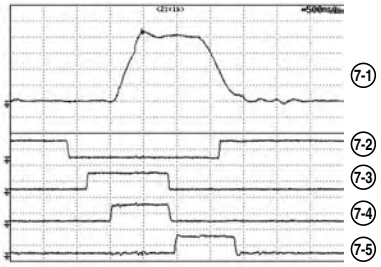

5. PCB PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω → 56 x 10^1 → 561 ..... RD1/4PU 5 6 1 J
47k Ω → 47 x 10^3 → 473 ..... RD1/4PU 4 7 3 J
0.5 Ω → R50 ..... RN2H R 5 0 K
1 Ω → 1R0 ..... RS1P 1 R 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω → 562 x 10^1 → 5621 ..... RN1/4PC 5 6 2 1 F

■ LIST OF WHOLE PCB ASSEMBLIES

Mark	Symbol and Description	PDP-506PE /WYVI	PDP-506PU /KUCXC
NSP	1..PANEL CHASSIS (506) ASSY	AWU1143	AWU1143
NSP	2..50 ADDRESS ASSY	AWV2208	AWV2208
NSP	2..50 SCAN ASSY	AWV2211	AWV2211
NSP	3..50 SCAN A ASSY	AWW1026	AWW1026
NSP	3..50 SCAN B ASSY	AWW1027	AWW1027
NSP	1..50 X DRIVE ASSY	AWV2257	AWV2209 or AWV2257
	2..50 X DRIVE ASSY	AWW1075	AWW1020 or AWW1075
	2..SUS CLAMP 1 ASSY	AWW1022	AWW1022
	2..SUS CLAMP 2 ASSY	AWW1023	AWW1023
	1..50 Y DRIVE ASSY	AWV2258	AWV2210 or AWV2258
NSP	1..HD DIGITAL ASSY	AWV2202	AWV2202
	2..HD DIGITAL ASSY	AWW1028	AWW1028
	2..HD LED ASSY	AWW1029	AWW1029
	2..HD IR ASSY	AWW1030	AWW1030
	1..HD AUDIO ASSY	AWV2203	AWV2203
⚠	1..POWER SUPPLY UNIT	AXY1112	AXY1112

50 X DRIVE ASSY

AWW1075 and AWW1020 are constructed the same except for the following :

Mark	Symbol and Description	AWW1075	AWW1020
	IC1101	AXF1142	AXF1155
	C1101	ACG1112 (0.22U/250V)	ACG1088 (0.1U/250V)
	C1106-C1110	Not used	ACE1178
	C1112, C1113 (0.22U/250V)	ACG1112	Not used
	C1161-C1164, C1166	ACE1168	Not used
	C1297, C1298 (3300p/630V)	ACG1129	Not used

50 Y DRIVE ASSY

AWV2258 and AWV2210 are constructed the same except for the following :

Mark	Symbol and Description	AWV2258	AWV2210
	IC2101	AXF1142	AXF1155
	C2103	ACG1112 (0.22U/250V)	ACG1088 (0.1U/250V)
	C2107, C2108 (0.22U/250V)	ACG1112	Not used
	C2131-C2134, C2136	ACE1168	ACE1178
	C2271	ACG1124 (0.1U/100V)	ACG1118 (0.33U/100V)
	C2272 (0.1U/100V)	ACG1124	Not used

■ PCB PARTS LIST FOR PDP-506PE/WYVI UNLESS OTHER WISE NOTED

Mark	No.	Description	Part No.
		50 ADDRESS ASSY	
		[50 ADR LOGIC BLOCK]	
		SEMICONDUCTORS	
	IC1501		PEE002A
		COILS AND FILTERS	
	L1504	CHIP SOLID INDUCTOR	QTL1013
		CAPACITORS	
	C1501,C1502		CKSRYB105K6R3
	C1509,C1510		CKSSYB102K50
	C1503-C1507,C1551-C1555		CKSSYF104Z16
		RESISTORS	
	R1530,R1531		RS1/16S0R0J
	R1505-R1509		RS1/16SS1000F
	Other Resistors		RS1/16SS###J
		OTHERS	
	CN1501	40P CONNECTOR	AKM1217
	CN1502	PH CONNECTOR 4P	AKM1290
		[50 ADR RESONANCE BLOCK]	
		SEMICONDUCTORS	
	IC1601,IC1602		TND307TD
	Q1613		2SA1163
	Q1614-Q1616		HAT1110R
	Q1606,Q1608,Q1611		QSZ2
	Q1612		RN1901
	Q1601-Q1605		SP8M41
	D1612		1SS302
	D1625-D1629		1SS355
	D1631-D1650		EP05FA20
	D1601,D1605,D1607,D1610,D1613		UDZS15(B)
	D1616,D1620,D1622		UDZS15(B)
		COILS AND FILTERS	
	L1601-L1605	SMD COIL	ATH1163
		CAPACITORS	
	C1609 (0.1U/100V)		ACG1098
	C1601,C1606,C1610 (0.068U/100V)		ACG1123
	C1611,C1614 (0.068U/100V)		ACG1123
	C1602-C1605 (56UF/80V)		ACH1405
	C1613		CKSRYB104K25
	C1619		CKSYB105K16
		RESISTORS	
	R1606,R1611,R1613,R1621		RS1/16SS###J
	Other Resistors		RS1/16S###J
		50 SCAN A ASSY	
		SEMICONDUCTORS	
	IC2701-IC2706		AN16025A
	D2701-D2707		1SS355
		CAPACITORS	
	C2701,C2711,C2721 (0.1U/250V)		ACG1088
	C2731,C2741,C2751 (0.1U/250V)		ACG1088
	C2710,C2720,C2730,C2740,C2750		CCSRCH181J50
	C2760		CCSRCH181J50
	C2708,C2709,C2718,C2719		CCSRCH331J50
	C2728,C2729,C2738,C2739		CCSRCH331J50
	C2748,C2749,C2758,C2759		CCSRCH331J50
	C2705-C2707,C2715-C2717		CCSRCH390J50
	C2725-C2727,C2735-C2737		CCSRCH390J50
	C2745-C2747,C2755-C2757		CCSRCH390J50
	C2703,C2713,C2723,C2733,C2743		CKSRYB105K6R3
	C2753		CKSRYB105K6R3
		RESISTORS	
	R2705,R2710,R2713,R2716,R2719		RAB4C221J
	R2722		RAB4C221J
	Other Resistors		RS1/16S###J
		OTHERS	
	CN2702	PH CONNECTOR 3P	AKM1274
	CN2701	13P BRIDGE CONNECTOR	AKP1261
		50 SCAN B ASSY	
		SEMICONDUCTORS	
	IC2801-IC2806		AN16025A
	IC2807		TC7SH08FUS1
	D2801-D2807		1SS355
		CAPACITORS	
	C2801,C2811,C2821 (0.1U/250V)		ACG1088
	C2831,C2841,C2851 (0.1U/250V)		ACG1088
	C2810,C2820,C2830,C2840,C2850		CCSRCH181J50
	C2860		CCSRCH181J50
	C2808,C2809,C2818,C2819		CCSRCH331J50
	C2828,C2829,C2838,C2839		CCSRCH331J50
	C2848,C2849,C2858,C2859		CCSRCH331J50
	C2805-C2807,C2815-C2817		CCSRCH390J50
	C2825-C2827,C2835-C2837		CCSRCH390J50
	C2845-C2847,C2855-C2857		CCSRCH390J50
	C2803,C2813,C2823,C2833,C2843		CKSRYB105K6R3
	C2853,C2861		CKSRYB105K6R3
		RESISTORS	
	R2803,R2808,R2811,R2814,R2817		RAB4C221J
	R2820		RAB4C221J
	Other Resistors		RS1/16S###J
		OTHERS	
	CN2802	PH CONNECTOR 3P	AKM1274
	CN2801	13P BRIDGE CONNECTOR	AKP1261
		50 X DRIVE ASSY	
		[50X LOGIC BLOCK]	
		SEMICONDUCTORS	
	IC1001		TC74ACT541FT
	IC1002		TC74VHC00FTS1

Mark No.	Description	Part No.
CAPACITORS		
C1003		CEHAT470M16
C1001,C1002		CKSRYB104K16
RESISTORS		
R1001,R1003		RAB4C470J
R1008,R1009		RAB4C472J
Other Resistors		RS1/16S###J
OTHERS		
CN1001	18P FFC CONNECTOR	VKN1310
[50X RESONANCE BLOCK]		
SEMICONDUCTORS		
IC1101		AXF1142
IC1141		BA10393F
Q1141		2SC4116
D1101-D1105		D1FL40
COILS AND FILTERS		
L1103,L1104	CHOKE COIL	ATH1119
L1101,L1102	CHOKE COIL	ATH1187
L1105,L1106	CHOKE COIL	ATH1187
CAPACITORS		
C1161-C1164,C1116 (3.3U/250V)		ACE1168
C1101,C1112,C1113 (0.22U/250V)		ACG1112
C1121 (470p/630V)		ACG1126
C1105		CCG1186
C1141,C1142,C1144,C1145		CKSRYB104K16
C1102,C1146		CKSRYB105K6R3
C1103		CKSYB105K25
RESISTORS		
R1101		ACN1168
R1142,R1146		RS1/10S1003F
R1122,R1123		RS1/10S104J
R1148,R1150		RS1/16S5601F
R1151,R1155		RS1/16S6801F
R1106,R1121		RS2MMF100J
Other Resistors		RS1/16S###J
[50X SUS BLOCK]		
SEMICONDUCTORS		
IC1202		AXF1140
IC1201		MM1565AF
IC1252		PS9117
IC1251		TND301S
IC1271		TND307TD
Q1251		2SC2412K
Q1272		2SK3325-Z
D1281		1SS302
D1201		1SS355
D1252		CRH01
D1282		UDZS16(B)
D1251		UDZS5R6(B)
COILS AND FILTERS		
L1204,L1211	INDUCTOR	ATH1186
F1201	INDUCTOR	CTF1449
L1201,L1205,L1231		LFEA100J

Mark No.	Description	Part No.
CAPACITORS		
C1214-C1217		ACE1178
C1212,C1213		ACH1423
C1231		CEHAT101M10
C1206		CEHAT101M25
C1283		CEHAT2R2M2E
C1208		CEHAT470M16
C1222,C1272		CEHAT470M25
C1221		CKSRYB105K6R3
C1204,C1207,C1223,C1251,C1253		CKSRYF104Z50
C1273		CKSRYF104Z50
C1220		CKSYB105K25
RESISTORS		
R1204		ACN1166
R1213		ACN1168
R1276,R1277		RS3LMF470J
Other Resistors		RS1/16S###J
OTHERS		
KN1201-KN1206	GROUND PLATE	ANK-142
KN1208-KN1211	GROUND PLATE	ANK-142
CN1202	6P TOP POST	B6B-EH
CN1201	8P TOP POST	B8B-EH
[50X D-D CON BLOCK]		
SEMICONDUCTORS		
IC1321		PS2701A-1(L)
IC1326		TA76431FR
Q1324		2SA1037K
Q1302		2SC4081
Q1301,Q1323		2SD1898
Q1321,Q1325,Q1351		HN1C01FU
D1303,D1324		1SS301
D1304,D1307,D1325,D1328		1SS355
D1301,D1302,D1326,D1327		CRH01
D1321		D1FK60
D1329,D1330		UDZS4R7(B)
D1306,D1323,D1331		UDZS5R1(B)
COILS AND FILTERS		
⚠T1301	SWITCHING TRANS.	ATK1159
⚠T1321	SWITCHING TRANS.	ATK1160
CAPACITORS		
C1325		ACH1428
C1326		CEHAT100M50
C1302,C1321		CEHAT101M25
C1301,C1303,C1323		CKSRYB103K50
C1304,C1306,C1327		CKSRYB104K16
C1307,C1324		CKSYB105K25
RESISTORS		
R1337		RAB4C472J
R1321,R1322,R1326,R1339		RS1/10S224J
VR1321		CCP1392
Other Resistors		RS1/16S###J

Mark No.	Description	Part No.
SUS CLAMP 1 ASSY		
SEMICONDUCTORS		
D1631		DF20L60U
CAPACITORS		
C1632		ACE1179
OTHERS		
KN1632	GROUND PLATE	ANK-142
CN1631	3P TOP POST	B3B-EH
KN1631	WRAPPING TERMINAL	VNF1084
SUS CLAMP 2 ASSY		
SEMICONDUCTORS		
D1641		DF20L60U
CAPACITORS		
C1642		ACE1179
OTHERS		
KN1642	GROUND PLATE	ANK-142
CN1641	3P TOP POST	B3B-EH
KN1641	WRAPPING TERMINAL	VNF1084
50 Y DRIVE ASSY		
[50Y LOGIC BLOCK]		
SEMICONDUCTORS		
IC2002		TC74ACT540FT
IC2001,IC2004		TC74ACT541FT
IC2003,IC2005		TC74VHC08FTS1
CAPACITORS		
C2003		CEHAT470M16
C2001,C2002,C2004-C2006		CKSSYB104K10
RESISTORS		
R2003,R2006		RAB4C101J
R2001,R2002,R2017,R2021		RAB4C470J
R2004,R2005,R2019,R2020		RAB4C472J
Other Resistors		RS1/16S###J
OTHERS		
CN2001	40P CONNECTOR	AKM1217
[50Y RESONANCE BLOCK]		
SEMICONDUCTORS		
IC2101		AXF1142
IC2141		BA10393F
Q2141		2SC4081
D2101-D2105		D1FL40
COILS AND FILTERS		
L2103,L2104	CHOKE COIL	ATH1119
L2101,L2102	CHOKE COIL	ATH1187
L2105,L2106	CHOKE COIL	ATH1187
CAPACITORS		
C2131-C2134,C2136 (3.3U/250V)		ACE1168
C2103,C2107,C2108 (0.22U/250V)		ACG1112
C2104 (470p/630V)		ACG1126
C2106		CCG1186
C2101,C2145		CKSRYB105K6R3
C2141,C2143,C2144		CKSSYB104K10
C2102		CKSYB105K25
RESISTORS		
R2101		ACN1174
R2142,R2143		RS1/10S1003F
R2103,R2107		RS1/10S104J
R2146,R2149		RS1/16S5601F
R2147,R2151		RS1/16S6801F
R2102		RS2MMF100J
R2108		RS3LMF100J
Other Resistors		RS1/16S###J
[50Y SUS BLOCK]		
SEMICONDUCTORS		
IC2252,IC2253		AXF1141
IC2350		MM1565AF
IC2250		PS9117
IC2231,IC2251		TND301S
IC2203,IC2221		TND307TD
Q2202		2SA2142
Q2250		2SC4081
Q2290		2SK3050
Q2221		2SK3325-Z
Q2280,Q2281		2SK3399
D2233		1SS301
D2213		1SS302
D2203,D2212,D2351		1SS355
D2202,D2204,D2205,D2234		CRH01
D2251,D2252,D2272		CRH01
D2211		D1FK60
D2232,D2271		UDZS16(B)
D2250		UDZS5R6(B)
COILS AND FILTERS		
L2353	INDUCTOR	ATH1186
F2301-F2320	FERRITE BEAD	ATX1055
F2352	INDUCTOR	CTF1449
L2350,L2351,L2354		LFEA100J
CAPACITORS		
C2330,C2335,C2341,C2342		ACE1178
C2231 (0.33U/100V)		ACG1118
C2271,C2272 (0.1U/100V)		ACG1124
C2336,C2337		ACH1423
C2270		ACH1426
C2226		ACH1427
C2207		CCSRCH102J50
C2355,C2369		CEHAT101M10
C2357		CEHAT470M16
C2208,C2221,C2339,C2364		CEHAT470M25
C2356		CKSRYB104K16
C2353,C2358,C2359		CKSRYB105K6R3
C2363		CKSRYB473K16
C2209,C2222,C2230,C2252		CKSRYF104Z50
C2250		CKSSYB104K10
C2354,C2360		CKSYB105K25

Mark No.	Description	Part No.
RESISTORS		
R2352		ACN1166
R2304		ACN1174
R2360,R2362		ACN1178
R2277-R2279,R2281		ACN1241
R2210,R2211		RS1/10S151J
R2290		RS1MMF331J
R2222,R2224		RS2MMF5R6J
R2203		RS3LMF821J
Other Resistors		RS1/16S###J
OTHERS		
KN2350,KN2352	GROUND PLATE	ANK-142
KN2354	GROUND PLATE	ANK-142
KN2356,KN2357	GROUND PLATE	ANK-142
KN2359-KN2363	GROUND PLATE	ANK-142
CN2351,CN2352	KR CONNECTOR	B4B-PH-K
CN2350	9P TOP POST	B9B-EH
[50Y SCAN BLOCK]		
SEMICONDUCTORS		
IC2403,IC2405,IC2406,IC2408		PS9117
IC2401		PS9851-2(P)
IC2402,IC2407		TC74ACT540FT
COILS AND FILTERS		
L2401-L2403		LFEA100J
CAPACITORS		
C2404,C2411		ACH1413
C2401,C2407,C2414		CEHAT101M10
C2402,C2403,C2405,C2408-C2410		CKSSYB104K10
C2412		CKSSYB104K10
RESISTORS		
R2407,R2421		RAB4C220J
R2402,R2409		RS1/10S0R0J
Other Resistors		RS1/16S###J
OTHERS		
CN2401	15P BRIDGE CONNECTOR	AKM1200
CN2402	15P BRIDGE CONNECTOR	AKM1200
[50Y VH D-D CON BLOCK]		
SEMICONDUCTORS		
IC2531		BA10358F
IC2502		MIP2E3DMC
IC2503		PS2701A-1(L)
IC2534,IC2535		TA76431FR
Q2533		2SC2412K
Q2531		2SC3425
Q2532		2SD2568
Q2511		HN1C01FU
D2534		1SS355
D2522,D2524		CRH01
D2523,D2532		D1FK60
D2533		UDZS33(B)
D2536		UDZS4R7(B)
D2530,D2531		UDZS8R2(B)
COILS AND FILTERS		
⚠T2503	CONVERTER TRANS.	ATK1158
L2501		LFEA101J

Mark No.	Description	Part No.
CAPACITORS		
C2531		ACE1177
C2516		ACH1360
C2532		ACH1425
C2513		ACH1428
C2520		CEHAT101M16
C2515		CEHAT101M25
C2528		CEHAT221M16
C2514,C2525,C2534		CKSRYB104K16
C2521,C2533,C2535		CKSRYB104K25
RESISTORS		
R2553		RAB4C472J
R2558		RS1/10S0R0J
R2533,R2556		RS1/10S104J
R2534,R2535,R2541		RS1/10S2203F
R2548		RS1/16S1003F
R2550		RS1/16S1802F
R2549,R2557		RS1/16S4702F
R2542,R2545		RS1/16S5601F
VR2503		CCP1390
VR2531		CCP1392
Other Resistors		RS1/16S###J
[50Y D-D CON BLOCK]		
SEMICONDUCTORS		
IC2602		BA10358F
IC2601,IC2603,IC2606		PS2701A-1(L)
IC2605,IC2614		TA76431FR
Q2610		2SA1163
Q2601,Q2609		2SA1576A
Q2608		2SA2005
Q2607		2SC2713
Q2612		2SC4081
Q2605,Q2606		2SD1898
Q2603,Q2604,Q2611		DTC143EUA
Q2602,Q2613,Q2641		HN1C01FU
D2611		1SS226
D2604,D2612		1SS301
D2602,D2613-D2615		1SS355
D2601,D2603,D2609,D2618		CRH01
D2610		D1FL40
D2617		UDZS15(B)
D2607,D2608		UDZS4R7(B)
D2605		UDZS5R1(B)
D2616		UDZS5R6(B)
COILS AND FILTERS		
⚠T2602	CONVERTER TRANS.	ATK1156
⚠T2601	SWITCHING TRANS.	ATK1161
CAPACITORS		
C2608,C2610		CEHAT101M25
C2613		CEHAT221M25
C2606		CEHAT221M6R3
C2607		CKSRYB102K50
C2605,C2612,C2614		CKSRYB103K50
C2601,C2604,C2609		CKSRYB104K16
C2602,C2615		CKSRYB105K6R3
C2603		CKSRYF104Z50
C2611		CKSSYB104K10

Mark No.	Description	Part No.
	RESISTORS	
	R2613	RAB4C472J
	R2641,R2642	RS1/10S224J
A	R2629	RS1/16S1002F
	R2625,R2626	RS1/16S1501F
	R2608,R2612,R2630,R2632,R2635	RS1/16S4701F
	R2618	RS1/16S4702F
	R2636	RS1/16S5601F
	R2652	RS1/16S6801F
	R2627	RS3LMF151J
	VR2601	CCP1390
	Other Resistors	RS1/16S###J
B		
	HD DIGITAL ASSY	
	OTHERS	
	DD CON UNIT	AXY1116
	REMOTE RECEIVER UNIT	RPM7240-H4
	HD DIGITAL ASSY	
	[TMDS RX BLOCK]	
	SEMICONDUCTORS	
	IC3002	BA8274F
C	IC3001	SII1169CTU
	IC3004	SN74AHC32PW
	Q3009	2SC4081
	Q3007	DTA143EUA
	Q3004	DTC124EUA
	Q3005	DTC143EUA
	Q3002,Q3006,Q3008	RN1901
	Q3003	RN2901
	D3001,D3002	1SS355
	D3012	DA204U
	D3007-D3011	RB751V-40
D	D3003	UDZS6R8(B)
	COILS AND FILTERS	
	F3005 CHIP SOLID INDUCTOR	QTL1011
	L3003 CHIP SOLID INDUCTOR	QTL1013
	CAPACITORS	
	C3030	ACH1357
	C3034,C3036,C3038,C3040,C3042	ACH1396
	C3003,C3005,C3009,C3014,C3019	CCSRCH331J50
	C3046	CCSRCH470J50
	C3044,C3045	CCSSCH101J50
E	C3001,C3008,C3011,C3020,C3022	CCSSCH820J50
	C3025-C3027	CCSSCH820J50
	C3018,C3021,C3023,C3024	CKSRYF105Z10
	C3015-C3017,C3028,C3029	CKSSYF104Z16
	C3031,C3032,C3035,C3037,C3039	CKSSYF104Z16
	C3041,C3043	CKSSYF104Z16
	RESISTORS	
	R3007	RAB4C220J
	R3008-R3013	RAB4C470J
	R3018	RAB4C472J
F	R3021	RS1/16S3900F
	Other Resistors	RS1/16S###J

Mark No.	Description	Part No.
	OTHERS	
	CN3003 PH CONNECTOR 6P	AKM1277
	CN3004 PH CONNECTOR 12P	AKM1298
	JA3001 DVI CONNECTOR	AKP1276
	JA3002 MDR CONNECTOR	AKP1277
	[MODULE UCOM BLOCK]	
	SEMICONDUCTORS	
	IC3156	BR24L04FJ-W
	IC3151	M30620FCPGP-U5C
	IC3157	M62334FP
	IC3158	MM1522XU
	IC3155	SN74AHC08PW
	IC3152,IC3153	SN74AHC541PW
	IC3160	TC74VHC123AFTS1
	IC3159	TC7W126FU
	Q3151	2SJ461A
	D3156,D3159,D3161-D3163	1SS355
	D3151,D3152,D3154,D3155,D3158	DAN202U
	CAPACITORS	
	C3151	ACH1357
	C3164	CCSSCH101J50
	C3171,C3172,C3180	CKSRYB105K6R3
	C3154	CKSSYB102K50
	C3152,C3153,C3155-C3158	CKSSYF104Z16
	C3160-C3163,C3165,C3166,C3170	CKSSYF104Z16
	RESISTORS	
	R3160,R3171,R3176	RAB4C101J
	R3174	RAB4C103J
	Other Resistors	RS1/16S###J
	OTHERS	
	⚠X3151 CERAMIC RESONATOR	ASS1178
	[PANEL FLASH BLOCK]	
	SEMICONDUCTORS	
	IC3301	MBM29PL160TD75TN
	IC3304	PST3610UR
	IC3302,IC3305	PST3628UR
	IC3303	SN74AHC08PW
	Q3302	HN1C01FU
	Q3301	RN1901
	CAPACITORS	
	C3311	CCSRCH470J50
	C3317	CCSRCH471J50
	C3304,C3307,C3309	CKSRYB472K50
	C3305,C3310	CKSSYB102K50
	C3315	CKSSYB104K10
	C3301-C3303,C3306,C3308,C3316	CKSSYF104Z16
	RESISTORS	
	All Resistors	RS1/16S###J
	OTHERS	
	⚠X3302 CRYSTAL OSCILLATOR	ASS1188

Mark No.	Description	Part No.
[SQ ASIC BLOCK]		
SEMICONDUCTORS		
IC3401		PEG122C
COILS AND FILTERS		
F3401,F3402	EMI FILTER	CCG1162
L3401-L3403	CHIP SOLID INDUCTOR	QTL1013
CAPACITORS		
C3402,C3419 (100UF/6.3V)		ACH1396
C3425,C3441 (100UF/6.3V)		ACH1396
C3414-C3416,C3426-C3438		CKSRYF105Z10
C3403-C3410,C3412,C3413		CKSSYF104Z16
C3417,C3418,C3420-C3424		CKSSYF104Z16
C3439,C3440,C3442-C3449		CKSSYF104Z16
RESISTORS		
R3402,R3412		RAB4C101J
R3405-R3407,R3409,R3410		RAB4C220J
R3416,R3417		RAB4C220J
R3425		RS1/16S5601F
Other Resistors		RS1/16S###J
[ADDRESS BLOCK]		
SEMICONDUCTORS		
D3501,D3502		DAN202U
CAPACITORS		
C3501-C3504		CKSSYB102K50
RESISTORS		
R3521,R3522,R3525		RAB4C101J
R3524		RAB4C222J
R3519,R3520		RAB4C472J
Other Resistors		RS1/16S###J
OTHERS		
CN3501-CN3504	40P CONNECTOR	AKM1217
CN3506	40P CONNECTOR	AKM1217
CN3505		VKN1310
[DIGITAL DD CON BLOCK]		
CAPACITORS		
C3609		CKSSYF104Z16
RESISTORS		
R3611		RAB4C101J
Other Resistors		RS1/16S###J

HD LED ASSY

SEMICONDUCTORS		
D1671		SML-311UT
D1672		SML512BC4T
COILS AND FILTERS		
⚠F1671-F1673	CHIP SOLID INDUCTOR	QTL1011

HD IR ASSY

SEMICONDUCTORS		
Q1681		2SC4116
D1681		DA204U
CAPACITORS		
C1681		CEVW470M6R3
C1682		CKSRYB103K50
C1683		CKSSYB102K50
C1684		CKSSYF104Z16
RESISTORS		
All Resistors		RS1/16S###J
OTHERS		
CN1681	3P L TYPE PLUG	KM200NA3L
V1681	REMOTE RECEIVER UNIT	RPM7240-H4

HD AUDIO ASSY

OTHERS		
J3901	1P BOARD IN WIRE	ADX3123
[AUDIO AMP BLOCK]		
SEMICONDUCTORS		
IC3754		BR24L02FJ-W
IC3751		LA4625
IC3752		NJM7809FA
IC3753		NJW1183L
Q3751,Q3754,Q3755,Q3757		2SA1576A
Q3756,Q3759		2SC4081
Q3758,Q3760		DTC124EUA
CAPACITORS		
C3797,C3808,C3812,C3814		CEAT1R0M50
C3775,C3777,C3788,C3790,C3791		CEHAT100M50
C3799		CEHAT100M50
C3761,C3764,C3786,C3798		CEHAT101M16
C3766,C3780,C3783-C3785		CEHAT1R0M50
C3762		CEHAT220M50
C3752,C3753,C3819,C3820		CEHAT2R2M50
C3759		CEHAT331M16
C3757		CEHAT471M25
C3755		CEHAT472M25
C3763		CEHATR47M50
C3754,C3805		CFTLA103J50
C3767,C3770,C3772-C3774		CFTLA104J50
C3781,C3782,C3789,C3792-C3795		CFTLA104J50
C3806,C3807,C3813		CFTLA104J50
C3810		CFTLA223J50
C3778		CFTLA334J50
C3758,C3760,C3796		CKSRYB103K50
C3769,C3815		CKSRYB222K50
C3779		CKSRYB822K50
C3816		CKSRYF104Z16
RESISTORS		
R3768-R3770,R3782		RD1/2MMF2R2J
R3752		RD1/2MMF4R7J
Other Resistors		RS1/16S###J

Mark	No.	Description	Part No.
		OTHERS	
	CN3752	12P PH CONNECTOR	AKM1335
	3771	AUDIO HEATSINK	ANH1636
A	CN3751	3P TOP POST (VH)	B3P-VH
	3772-3775	SCREW	VBB30P100FNI
	KN3751	WRAPPING TERMINAL	VNF1084
	KN3752	WRAPPING TERMINAL	VNF1084
		[ST TERMINAL BLOCK]	
		COILS AND FILTERS	
	⚠L3901,L3902	LINE FILTER	ATF1206
		CAPACITORS	
B	⚠C3906,C3908,C3914,C3916		CCSRCH101J50
	C3903,C3911		CKSRYB332K50
	C3904,C3912		CKSRYF473Z50
		RESISTORS	
	R3901-R3904		RD1/2MMF100J
		OTHERS	
	JA3901	SPEAKER TERMINAL	AKE1061

C

POWER SUPPLY UNIT

POWER SUPPLY Unit has no service part.

D

E

F

6. ADJUSTMENT

1. At shipment, the unit is adjusted to its best conditions. Normally, it is not necessary to readjust even if an assembly is replaced. If the adjustment is shifted or if it becomes necessary to readjust because of part replacement, etc., perform the adjustment as described below.
2. Any value changed in Service/Factory mode will be stored in memory as soon as it is changed. Before readjustment, take note of the original values for reference in case you need to restore the original settings.
3. Use a stable AC power supply.

6.1 ADJUSTMENT REQUIRED WHEN THE SET IS REPAIRED OR REPLACED

■ When any of the following assemblies is replaced

POWER SUPPLY Unit	(Clear the history data on the number of power-ons.) Refer to "7.1.7 HOW TO CLEAR HISTORY DATA."
HD DIGITAL Assy	Writing of backup data is required. Refer to the "7.1.6 BACKUP WHEN THE MAIN UNIT IS ADJUSTED. "
50 X DRIVE Assy	No adjustment required
50 Y DRIVE Assy	No adjustment required
Service Panel	Refer to the "6.3 METHOD FOR REPLACING THE SERVICE PANEL ASSY."
Other assemblies	No adjustment required

■ When any part in the following assemblies is replaced


POWER SUPPLY Unit	The assembly must be replaced as a unit, and no part replacement is allowed.
HD DIGITAL Assy	No adjustment required
50 X DRIVE Assy	No adjustment required
50 Y DRIVE Assy	No adjustment required
Other assemblies	No adjustment required

6.2 RS-232C COMMAND


- The panel control items for the PDP-506PE, PU / PDP-436PE, PU systems can be controlled with the RS-232C commands by connecting a PC through the GGF1475 special communication device when the Media Receiver is not connected with the PDP.

Note: The special communication device for the PDP-503P cannot be used with this unit, because the control lines within the MDR cable are different.

1. Connection

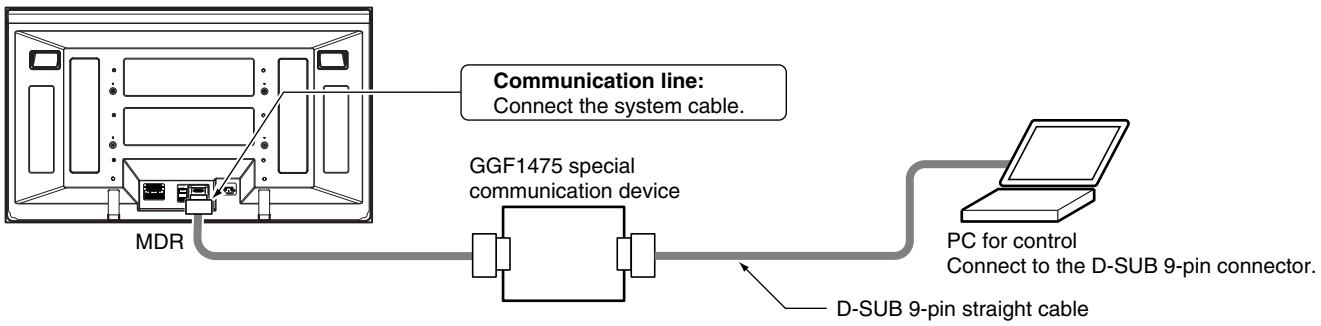

• Schematic diagram of the special communication device

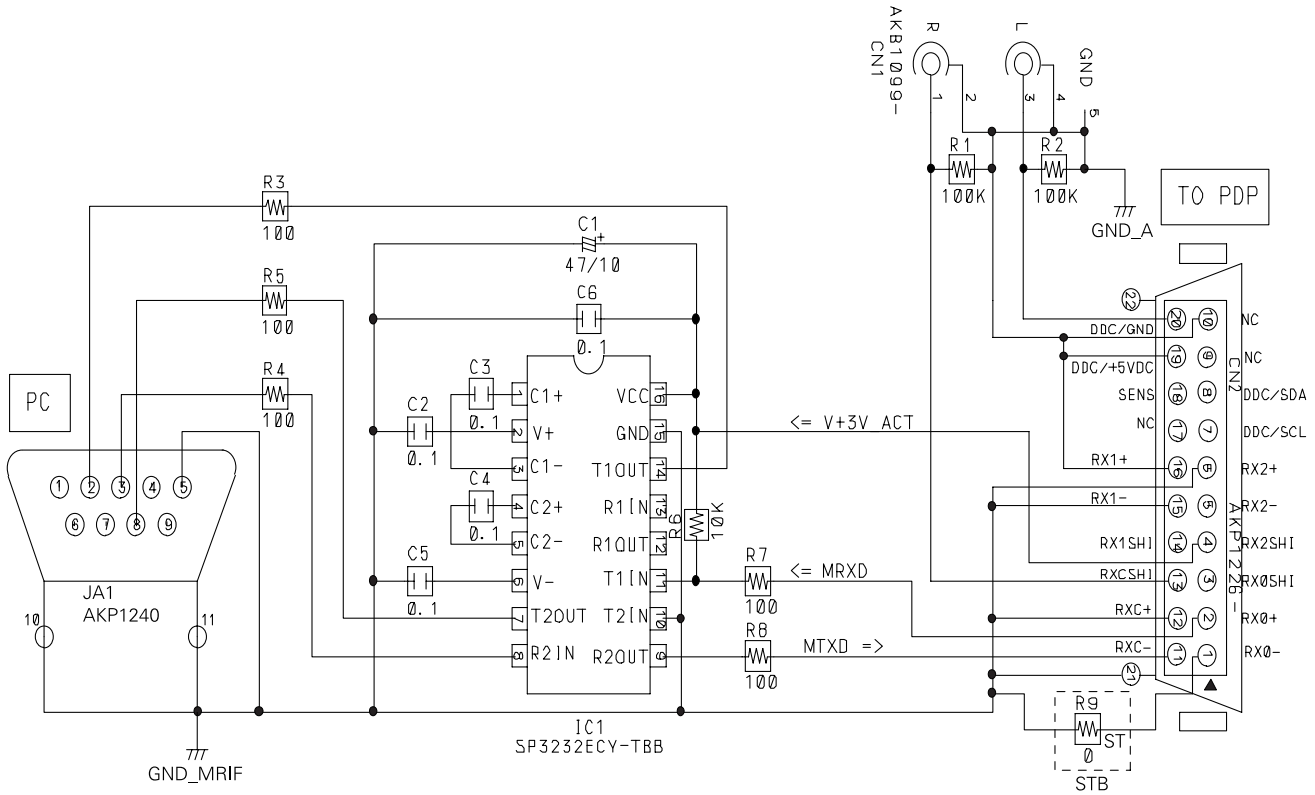

2. Command format

■ Communication protocol

Start bit : 1bit
Data : 8bit
Parity : 0 (none)
Stop bit : 1bit
Baud rate : 38400bps

■ Start and stop conditions

STX (start condition): 0x02
ETX (stop condition): 0x03

■ ID setting

No ID setting (corresponding to all ASCII codes)

■ Acknowledgement (ACK)

- Acknowledgement (ACK) will be sent back when the unit returns to Standby mode for the next command after the process of the received command is finished.
- The return data will be a received command in capital letters, but without an ID.

Example of communication: For a command listed on the command list

MR / External PC

STX	ID	Command	ETX
0x02	**	CBU	0x03

Returns from the PDP

STX	Command	ETX
0x02	CBU	0x03

- If a received command is not one listed on the command list, "ERR" (3 characters) will be sent back.

Example of communication: For a command that is not listed on the command list

MR / External PC

STX	ID	Command	ETX
0x02	**	AAA	0x03

Returns from the PDP

STX	Command	ETX
0x02	ERR	0x03

- If the operation of a received command is not possible in a certain status, "XXX" (3 characters) will be sent back.

Example of communication: If an adjustment command that gives an adjustment value out of the adjustable range is sent

MR / External PC

STX	ID	Adjustment Command	Adjustment Value	ETX
0x02	**	VOL	128	0x03

Returns from the PDP

STX	Command	ETX
0x02	XXX	0x03

■ Error process

If an error is generated between STX and ETX, a return signal will not be issued.

3. Definition of various commands

■ Simple-function command

A simple-function command orders an operation that will conclude by itself, and it consists of 3 characters.

Example of communication:

MR / External PC

STX	ID	Command	ETX
0x02	**	CPD	0x03

Returns from the PDP

STX	Command	ETX
0x02	CPD	0x03

■ Adjustment command and adjustment value

An adjustment command is accompanied by an adjustment value and orders a change in the adjustment value, such as for the contrast adjustment.

- Adjustment command + adjustment value => The attached parameter will be the adjustment value.
- The adjustment value to be attached to an adjustment command consists of 3 characters in decimal, in the range of 000 to 999.

Example of communication:

MR / External PC

STX	ID	Adjustment Command	Adjustment Value	ETX
0x02	**	CNT	128	0x03

Returns from the PDP

STX	Adjustment Command	Adjustment Value	ETX
0x02	CNT	128	0x03

- If the adjustment value of the received command is out of the adjustable range, "XXX" will be sent back, and the adjustment value will not be changed.
- If the adjustment value of the received command is the same as the current adjustment value, the adjustment value will be overwritten, and "XXX" will not be sent back.

■ Setup command and setup value

A setup command is accompanied by a setup value and orders a change in the setup value, such as for the mask setup.

- Setup command + setup value => The attached parameter will be the setup value.
- The setup value to be attached to a setup command consists of 3 characters in decimal, in the range of S00 to S99.

Example of communication:

MR / External PC

STX	ID	Adjustment Command	Adjustment Value	ETX
0x02	**	MKS	S02	0x03

Returns from the PDP

STX	Adjustment Command	Adjustment Value	ETX
0x02	MKS	S02	0x03

- If the setup value of the received command is out of the range, "XXX" will be sent back, and the setup value will not be changed.
- If the setup value of the received command is the same as the current setup value, the setup value will be overwritten, and "XXX" will not be sent back.

■ QUEST (acquiring status) command

If a QUEST command is received from the main unit's microcomputer, data for various adjustment values will be read from memory and sent back. The return data consist of the received command as an echo back, return data, and a checksum.

- Return data: A string of characters defined for each QUEST command is converted into ASCII codes and transmitted.
- The configuration and the data length of return data are defined for individual QUEST commands.

Example of communication:

MR / External PC

STX	ID	QST Command	ETX
0x02	**	QS1	0x03

Returns from the PDP

STX	QST Command	Return Data	Checksum	ETX
0x02	QS1	54AHM2**	7B	0x03

- Checksum (CS): A checksum is used for judging if any error exists in the data sent back from the panel. If an error is detected, it is possible to resend the QUEST command from the MR / External PC to try to acquire data again.

4. RS-232C command for module microcomputer

Command Name		Function		Effective only in Factory mode	Remarks
A					
ABL	***	ABL ADJUSTMENT	Adjusting the upper limit of the power	○	
AMT	S00	AUDIO MUTE OFF	Turning off the audio muting		
	S01	AUDIO MUTE ON	Turning on the audio muting		
APW	S00	APL WB FUNCTION:OFF	WB correction interlocked with APL: OFF	○	
	S01	APL WB FUNCTION:ON	WB correction interlocked with APL: ON	○	
B					
BAL	***	BALANCE ADJUSTMENT	Audio balance adjustment		
BAS	***	BASS ADJUSTMENT	Audio bass adjustment		
BCP		BACKUP COPY	Copying the backup data in the EEPROM	○	
C					
CBU		CLEAR BACKUP	Clearing backup data	○	
CHM		CLEAR HOUR METER	Clearing data of the hour meter	○	Used only when the panel is replaced
CPC		CLEAR POWER ON COUNT	Clearing power-on count data	○	Used only when the power unit is replaced
CPD		CLEAR POWER DOWN	Clearing power-down information	○	Used only when the panel is replaced
CPM		CLEAR PLUSE METER	Clearing data of the pulse meter	○	Used only when the panel is replaced
CSD		CLEAR SHUT DOWN	Clearing shutdown information	○	Used only when the panel is replaced
D					
DRV	S00	DRIVE OFF	Main power off		
	S01	DRIVE ON	Main power on		
E					
ESV	S00	POWER CONTROL NORMAL	Setting Power Consumption mode to 4-split normal curve		
	S01	POWER CONTROL MODE1	Setting Power Consumption mode to 2-split normal curve		
	S02	POWER CONTROL MODE2	Setting Power Consumption mode to 2-split power-saving curve		
	S10	POWER CONTROL NORMAL	Setting Power Consumption mode to 4-split normal curve (domestic)		
	S11	POWER CONTROL MODE1	Setting Power Consumption mode to 2-split normal curve (domestic)		
	S12	POWER CONTROL MODE2	Setting Power Consumption mode to 2-split power-saving curve (domestic)		
F					
FAJ		FINISH ADJUSTMENT	Determining the flag of the HD DIGITAL Assy adjustment in "adjustment is completed"	○	
FAN		FACTRY NO		○	
FAY		FACTRY YES	Entering Factory mode		Turning the mask setting off
FCS	S00	FOCUS OFF	Turning the FOCUS function off		
	S01	FOCUS ON	Turning the FOCUS function on		
M					
MKC	S00	MASK COMBINATION OFF	MASK off		
	S01	MASK COMBINATION 01	H ramp (slant 1) M	○	
	S02	MASK COMBINATION 02	H ramp (slant 4) M	○	
	S03	MASK COMBINATION 03	Slanting ramp M	○	
	S04	MASK COMBINATION 04	30 for aging	○	
	S05	MASK COMBINATION 05	05 for aging	○	
	S06	MASK COMBINATION 06	Erasing afterimage 1	○	
	S07	MASK COMBINATION 07	Erasing afterimage 2 (RGB: zigzag, V: reverse)	○	
	S08	MASK COMBINATION 08	White (change in luminance level)	○	
	S09	MASK COMBINATION 09	PEAK SEEK RASTER	○	
MKS	S00	MASK SINGLE OFF	MASK OFF		
	S01	MASK SINGLE 1	H ramp (slant 1)	○	
	S02	MASK SINGLE 2	H ramp (slant 4)	○	
	S03	MASK SINGLE 3	V ramp (slant 1)	○	
	S04	MASK SINGLE 4	Slanting ramp	○	

Command Name		Function		Effective only in Factory mode	Remarks
MKS	S05	MASK SINGLE 5	Window(Hi=870Lo=102)	O	
	S06	MASK SINGLE 6	Window(Hi=1023Lo=102)	O	
	S07	MASK SINGLE 7	Window(Hi=1023)	O	
	S08	MASK SINGLE 8	Window(Hi=1023)4%	O	
	S09	MASK SINGLE 9	Window(Hi=1023)1.25%	O	
	S10	MASK SINGLE 10	Window(1/7LINE)	O	
	S11	MASK SINGLE 11	STRIPE(MGT/GRN)	O	
	S12	MASK SINGLE 12	STRIPE(GRN/MGT)	O	
	S13	MASK SINGLE 13	B & W, checker (1 line)	O	
	S14	MASK SINGLE 14	B & W, checker (2 lines)	O	
	S15	MASK SINGLE 15	B & W, checker (4 lines)	O	
	S16	MASK SINGLE 16	B & W, checker (8 lines)	O	
	S17	MASK SINGLE 17	COLOR BAR	O	
	S18	MASK SINGLE 18	Slanting lines	O	
	S19	MASK SINGLE 19	Red & black, checker (1 line)	O	
	S20	MASK SINGLE 20	Red & black, checker (2 lines)	O	
	S21	MASK SINGLE 21	Red & black, checker (4 ines)	O	
	S22	MASK SINGLE 22	Red & black, checker (8 lines)	O	
	S23	MASK SINGLE 23	RGB zigzag, V reverse	O	
	S24	MASK SINGLE 24	SUS 2000 pulses (black raster)	O	
	S25	MASK SINGLE 25	Window(Hi=870Lo=102) PATTAN3	O	
	S26	MASK SINGLE 26	Window(Hi=1023Lo=102) PATTAN3	O	
	S27	MASK SINGLE 27	Window(Hi=1023) Pattern 3	O	
	S28	MASK SINGLE 28	Window(Hi=1023)4% Pattern 3	O	
	S29	MASK SINGLE 29	Window(Hi=1023)1.25% Pattern 3	O	
	S30	MASK SINGLE 30	Window(1/7LINE) Pattern 3	O	
	S51	MASK SINGLE 51	Raster - White	O	
	S52	MASK SINGLE 52	Raster - Red	O	
	S53	MASK SINGLE 53	Raster - Green	O	
	S54	MASK SINGLE 54	Raster - Blue	O	
	S55	MASK SINGLE 55	Raster - Black	O	
	S56	MASK SINGLE 56	Raster - Cyan	O	
	S57	MASK SINGLE 57	Raster - Magenta	O	
	S58	MASK SINGLE 58	Raster - Yellow	O	
	S59	MASK SINGLE 59	Raster - Cyan 460 :W	O	
	S60	MASK SINGLE 60	Raster - Green 774 :W	O	
	S61	MASK SINGLE 61	Raster - Gray 912 :W	O	
	S62	MASK SINGLE 62	Raster - Yellow egg color: W	O	
	S63	MASK SINGLE 63	Raster - Beige: W	O	
	S64	MASK SINGLE 64	Raster - Sky color: W	O	
	S65	MASK SINGLE 65	Raster - Pale purple: W	O	
	S66	MASK SINGLE 66	Raster - Magenta 54 :W	O	
	S67	MASK SINGLE 67	Raster - Red 588	O	
	S68	MASK SINGLE 68	Red 1023 + α	O	
	S69	MASK SINGLE 69	Green 1023 + α	O	
	S70	MASK SINGLE 70	Blue 1023 + α	O	
	S71	MASK SINGLE 71	Red 588 + α	O	
	S72	MASK SINGLE 72	Green 588 + α	O	
	S73	MASK SINGLE 73	Blue 588 + α	O	

Command Name		Function		Effective only in Factory mode	Remarks
MKS	S74	MASK SINGLE 74	Raster -Gray 512 (reservation)	○	
P					
PAV	S**	PANEL AV MODE	Switching panel functions interlocked with the AV selection		
PBH	***	PANEL BLUE HIGH	Panel white balance adjustment - Blue highlight	○	
PBL	***	PANEL BLUE LOW	Panel white balance adjustment - Blue low light	○	
PDM	S00	PD MUTE OFF	Passing PD signals to the Power SUPPLY Unit => Power-down		
	S01	PD MUTE ON	Not passing PD signals to the Power SUPPLY Unit => No power-down		
PFN		FACTORY NO	Factory mode: off	○	
PFS		PANEL FINAL SETUP	Setup at shipment	○	
PFY		FACTORY YES	Factory mode: on		
PGH	***	PANEL GREEN HIGH	Panel white balance adjustment - Green highlight	○	
PGL	***	PANEL GREEN LOW	Panel white balance adjustment - Green low light	○	
PGM	S**	PANEL GAMMA	Setting of the gamma table		
PMT	S00	MUTE OFF	Canceling panel muting		
	S01	MUTE ON	Panel muting		
POF		POWER OFF	Power off		
PON		POWER ON	Power on		
PPT	S00	PANEL PROTECT OFF	Panel protection: off	○	
	S01	PANEL PROTECT ON	Panel protection: on	○	
PUC	S00	PUER CINEMA:OFF	Pure cinema: off		
	S01	PUER CINEMA:STD	Pure cinema: standard		
	S02	PUER CINEMA:ADV	Pure cinema: advanced		
Q					
QAJ		QUEST ADJUSTMENT	Acquiring various adjustment values		
QIP		QUEST PANEL INFORMATION	Acquiring various input signal data		
QPD		QUEST POWER-DOWN	Acquiring logs of power-down points		
QPM		QUEST PULSE METER	Acquiring data of the pulse meter		
QPW		QUEST PANEL WHITE BALANCE	Acquiring panel white balance adjustment values		
QS1		QUEST STATUS 1	Acquiring data on the unit, such as the version of the program		
QS2		QUEST STATUS 2	Acquiring data on the status of the unit, such as temperature		
QSD		QUEST SHUT DOWN	Acquiring data on shutdown		
QSI		QUEST SIGNAL INFORMATION	Acquiring data related with signals		
R					
RBL	S**	PANEL REVISE BLUE LEVEL	Setting of blue level for panel degradation correction	○	
RGL	S**	PANEL REVISE GREEN LEVEL	Setting of green level for panel degradation correction	○	
RHI	***	RED HIGH	User white balance - Red highlight		
RLW	***	RED LOW	User white balance - Red low light		
RRL	S**	PANEL REVISE RED LEVEL	Setting of red level for panel degradation correction	○	
RSW	***	XY-RST-W ADJ	Adjustment of the width of XY reset pulse	○	
S					
SDM	S00	SD MUTE OFF	Shutdown enabled		
	S01	SD MUTE ON	Shutdown prohibited		
SFR	S01	SUS FREQUENCY MODE1	Measures against AM radio noise - Pattern 1	○	
	S02	SUS FREQUENCY MODE2	Measures against AM radio noise - Pattern 2	○	
	S03	SUS FREQUENCY MODE3	Measures against AM radio noise - Pattern 3	○	
	S04	SUS FREQUENCY MODE4	Measures against AM radio noise - Pattern 4	○	
	S05	SUS FREQUENCY MODE5	Measures against AM radio noise - Pattern 5	○	
	S06	SUS FREQUENCY MODE6	Measures against AM radio noise - Pattern 6	○	
	S07	SUS FREQUENCY MODE7	Measures against AM radio noise - Pattern 7	○	

Command Name		Function		Effective only in Factory mode	Remarks
SFR	S08	SUS FREQUENCY MODE8	Measures against AM radio noise - Pattern 8	○	
SMM	S**	SIDE MASK MODE	Setting of the effective area during streaking correction	○	
SN0	***	SERIAL NO 0	Setting of the serial No. 0 (panel)	○	
SN1	***	SERIAL NO 1	Setting of the serial No. 1 (panel)	○	
SN2	***	SERIAL NO 2	Setting of the serial No. 2 (panel)	○	
SN3	***	SERIAL NO 3	Setting of the serial No. 3 (panel)	○	
SN4	***	SERIAL NO 4	Setting of the serial No. 4 (panel)	○	
SRS	S00	SRS OFF	SRS function: off		
	S01	SRS ON	SRS function: on		
SYS	S00	SYSTEM CABLE NO	Prohibiting monitoring of cable disconnection detection		
	S01	SYSTEM CABLE YES	Permitting monitoring of cable disconnection detection		
T					
TBS	S00	TRUBASS OFF	TruBass function: off		
	S01	TRUBASS ON	TruBass function: on		
TRE	***	TREBLE ADJUSTMENT	Audio treble adjustment		
U					
UAJ		UN-ADJUSTMENT	Determining the flag for the HD DIGITAL Assy adjustment in "not adjusted"	○	
V					
VFQ	S01	FREQENCY VIDEO 48Hz	Setting the frequency in Mask mode to VD-48 Hz	○	
	S02	FREQENCY VIDEO 50Hz	Setting the frequency in Mask mode to VD-50 Hz	○	
	S03	FREQENCY VIDEO 60Hz	Setting the frequency in Mask mode to VD-60 Hz	○	
	S05	FREQENCY THEATER 72Hz	Setting the frequency in Mask mode to VD-72 Hz	○	
	S06	FREQENCY 75Hz	Setting the frequency in Mask mode to VD-75 Hz	○	
	S13	FREQENCY PC 60Hz	Setting the frequency in Mask mode to PC-60 Hz	○	
	S14	FREQENCY PC 70Hz	Setting the frequency in Mask mode to PC-70 Hz	○	
	S22	FREQENCY VIDEO 50Hz NONSTD	Setting the frequency in Mask mode to VD-50 Hz (nonstandard)	○	
	S23	FREQENCY VIDEO 60Hz NONSTD	Setting the frequency in Mask mode to VD-60 Hz (nonstandard)	○	
	S25	FREQENCY VIDEO 72Hz NONSTD	Setting the frequency in Mask mode to VD-72 Hz (nonstandard)	○	
	S26	FREQENCY VIDEO 75Hz NONSTD	Setting the frequency in Mask mode to VD-75 Hz (nonstandard)	○	
VOF	***	Vofs ADJUSTMENT	Adjustment of the reference value of Vofs voltage	○	
VOL	***	VOLUME	Audio volume adjustment		
VRP	***	Vrp ADJUSTMENT	Adjustment of the reference value of Vrst-p voltage	○	
VSU	***	Vsus ADJUSTMENT	Adjustment of the reference value of Vsus voltage	○	
W					
WBI	S00	WB INITIALIZE NO	Panel WB standard output mode: off	○	
WBI	S01	WB INITIALIZE YES	Panel WB standard output mode: on	○	
X					
XSB	***	X-SUS-B ADJ	X-SUS-B ADJ	○	
Y					
YSB	***	Y-SUS-B ADJ	Y-SUS-B ADJ	○	
YTG	***	Y-SUSTAIL ADJ	Y-SUSTAIL ADJ	○	
YTW	***	Y-SUSTAIL W AJD	Y-SUSTAIL W AJD	○	

5. QUEST commands (for acquiring status)

With a QUEST command, data on STBY/ON, PD, and SD can be obtained while the unit is on.

■ Acquisition of panel statuses • • • [QS1]

The command QS1 is for acquiring data necessary for authentication of both the main unit's microcomputer and the module's microcomputer.

Command Format	Effective Operation Modes	Function	Remarks
[QS1]	All operations	To acquire data on product status	Return data: 3 (ECO)+43(DATA)+2(CS)=48Byte

Data Arrangement		Data Length	Output Example
ECO		3Byte	QS1
1	Resolution/size	1Byte	5
2	Generation	1Byte	6
3	Destination	1Byte	*
4	Grade	1Byte	*
5	Product type	1Byte	S
6	MDUcom-Boot	3Byte	01A
7	MDUcom-PRG	8Byte	001SM "space × 3"
8	SEQUENCE PROCESSOR-Boot	3Byte	01A
9	SEQUENCE PROCESSOR-Boot	8Byte	001AM "space × 3"
10	SQ-VIDEO(43/42)	4Byte	001X
11	SQ-PC(43/42)	4Byte	001X
12	SQ-VIDEO(50/61)	4Byte	001W
13	SQ-PC(50/61)	4Byte	001W
CS		2Byte	7B

● Resolution/size	
4	1024*768-43
5	1280*768-50

● Generation	
6	G6

● Destination	
*	Common

● Grade	
*	Common

● MDUcom/SEQUENCE PROCESSOR-Boot • • • 3Byte		
1st character		Representing the boot version in 2-digit decimal
2nd character		
3rd character	A	When the boot version is common to 43/50
	X	When the boot version is only for 43
	W	When the boot version is only for 50

● Product type	
S	System model

● MDUcom/SEQUENCE PROCESSOR-PRG • • • 8Byte		
1st character	–	For a mass-production product
2nd character		For representing the version in 2-digit decimal
3rd character		
4th character	A	When the program is common to 43/50 (for SEQUENCE PROCESSOR)
	S	When the program is only for another unit (for MDUcom)
5th character	M	Fixed
6th character		Reservation
7th character		Reservation
8th character		Reservation

● SEQUENCE-Data • • • 8Byte		
1st - 3rd characters	Num	For representing the version in 3-digit decimal
4th character	W	When the sequence data are only for 50
	X	When the sequence data are only for 43

• For the version indication, the bytes reserved for special use must be replaced with spaces if they are not used.

■ Acquisition of panel operation data • • • [QS2]

The command QS2 is for acquiring data on the panel's operations. Basically, this command is used for the module's microcomputer to inform the main unit's microcomputer of changes in panel operation.

Command Format	Effective Operation Modes	Function	Remarks
[QS2]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO)+23(DATA)+2(CS)=28Byte

Data Arrangement		Data Length	Output Example
ECO		3Byte	QS2
1	Notification of mode shifting to STB	1Byte	1
2	Flag for adjustment of the main unit	1Byte	0
3	Flag for adjustment-data backup	1Byte	0
4	"1st PD" data	1Byte	0
5	"2nd PD" data	1Byte	0
6	Reservation	3Byte	***
7	Temperature data (TEMP 1)	3Byte	128
8	SD main data	1Byte	0
9	SD subdata	1Byte	0
10	Operation status induced by SD	1Byte	0
11	Data from the hour meter	8Byte	00000259
12	MASK indication	1Byte	0
CS		2Byte	4A

Note : "00000259" of "Data from the hour meter" means 2 hours 59 minuts.

● Notification of mode shifting to Standby	
0	Entering Standby mode failed
1	Entering Standby mode succeeded

● Adjustment of the main unit	
0	Adjustment completed
1	Adjustment not completed

● Adjustment-data backup	
0	With backup data
1	No data

● PD data	
0	No PD data
1	Not used
2	POWER
3	SCAN
4	SCN-5V
5	Not used
6	Y-DCDC
7	Y-SUS
8	ADRS
9	X-DRV
A	X-DCDC
B	X-SUS
C	Not used
D	SQ-IC
E	Not used
F	Specification inability

● SD main data	
0	No SD
1	SQ-IC
2	MDU-IIC
3	RST2
4	Panel having high temperature
5	Short-circuited speaker

● SD subdata (IIC)	
0	No SD subdata
1	EEPROM
2	BACKUP
3	DAC
4	VOL IC
5	DVI

● Operation status induced by SD	
0	Normal
1	Relay-off completed
2	During warning indication

● MASK indication	
0	MASK-OFF
1	MASK-ON

■ Acquisition of other data on the panel • • • [QIP]

The command QIP is for acquiring data other than those available with QS1 (data necessary before turning the power on) and QS2 (data to inform of operational status change).

Command Format	Effective Operation Modes	Function	Remarks
[QIP]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO)+39(DATA)+2(CS)=44Byte

Data Arrangement		Data Length	Output Example
ECO		3Byte	QIP
1	SERIAL	15Byte	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _
2	HOUR METER	8Byte	00000000
3	BACKUP HR MTR	8Byte	00000000
4	PON COUNTER	8Byte	00000000
CS		2Byte	94

Note : The real product serial number is displayed in "SERIAL".

■ Acquisition of panel adjustment data (common data) • • • [QAJ]

The command QAJ is for acquiring data on the panel's factory-preset items that are common to the main unit and that share the same memory.

Command Format	Effective Operation Modes	Function	Remarks
[QAJ]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO)+27(DATA)+2(CS)=32Byte

Data Arrangement		Data Length	Output Example
ECO		3Byte	QAJ
1	V-SUS adjustment value	3Byte	128
2	V-OFT adjustment value	3Byte	128
3	V-RST-P adjustment value	3Byte	128
4	XSB adjustment value	3Byte	128
5	YSB adjustment value	3Byte	128
6	YTG adjustment value	3Byte	128
7	YTW adjustment value	3Byte	128
8	RSW adjustment value	3Byte	128
9	R-RIVISE setting value	1Byte	0
10	G-RIVISE setting value	1Byte	0
11	B-RIVISE setting value	1Byte	0
CS		2Byte	B7

■ Acquisition of ABL/WB adjustment data • • • [QPW]

The command QPW is for acquiring data on the panel's factory-preset items whose memory tables are changed in sequence.

Command Format	Effective Operation Modes	Function	Remarks
[QPW]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO)+35(DATA)+2(CS)=40Byte

Data Arrangement		Data Length	Output Example
ECO		3Byte	QPW
1	Drive sequence	3Byte	60V
2	Standard/nonstandard	1Byte	S
3	Type of ABL/WB tables	2Byte	T2
4	ABL adjustment value	3Byte	128
5	R-HIGH adjustment value	3Byte	256
6	G-HIGH adjustment value	3Byte	256
7	B-HIGH adjustment value	3Byte	256
8	R-LOW adjustment value	3Byte	512
9	G-LOW adjustment value	3Byte	512
10	B-LOW adjustment value	3Byte	512
11	Gamma setting	1Byte	A
12	Streaking correction	1Byte	1
13	Peripheral luminance correction	1Byte	0
14	Reservation	1Byte	*
15	WB interlocked with APL	1Byte	0
16	Transition of protective operations	1Byte	0
17	Reservation	2Byte	**
CS		2Byte	37

● Drive sequence

48V	Video48 Hz
50V	Video50 Hz
60V	Video60 Hz
72V	Video72 Hz
75V	Video75 Hz
60P	PC60Hz
70P	PC70Hz

● Standard/ nonstandard

S	Standard
N	Nonstandard

● Gamma setting

n	0 to F

● Setting for Items 12 and 15

0	OFF
1	ON

● Peripheral luminance correction

0	OFF
2	ON (interlocked with APL)

● Transition of brightness by protective operations

0	Upper limit state for brightness
1	Brightness being reduced
2	Lower limit state for brightness
3	Brightness being increased

● Type of ABL/WB tables

Tn	n: 1 to 4

■ Acquisition of parameters • • • [QPM]

The command QPM is for acquiring the accumulated number of pulses for each of 5 blocks from the EEPROM.

Command Format	Effective Operation Modes	Function	Remarks
[QPM]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO)+40(DATA)+2(CS)=45Byte

Data Arrangement		Data Length	Output Example
ECO		3Byte	QPM
1	Pulse meter B 1	8Byte	00000000
2	Pulse meter B 2	8Byte	00000000
3	Pulse meter B 3	8Byte	00000000
4	Pulse meter B 4	8Byte	00000000
5	Pulse meter B 5	8Byte	00000000
CS		2Byte	E7

• The output data on the accumulated number of pulses for each block are calculated in the following way: the high-order 4 bytes of the accumulated number of pulses for each block are converted into a decimal number, and the high-order 8 digits are transmitted. The unit of each block is M_pulse (mega).

■ Acquisition of PD logs • • • [QPD]

The command QPD is for acquiring data from the 8 latest power-down (PD) logs.

Command Format	Effective Operation Modes	Function	Remarks
[QPD]	All operations	To acquire data on the power-down logs	Return data: 3 (ECO)+80(DATA)+2(CS)=85Byte

Data Arrangement		Data Length	Output Example
ECO		3Byte	QPD
1	Latest "1st PD" data	1byte	A
2	Latest "2nd PD" data	1byte	2
3	Data from the hour meter for the latest PD	8byte	00010020
4	Second latest "1st PD" data	1byte	E
5	Second latest "2nd PD" data	1byte	9
6	Data from the hour meter for the second latest PD	8byte	00008523
7	Third latest "1st PD" data	1byte	4
8	Third latest "2nd PD" data	1byte	3
9	Data from the hour meter for the third latest PD	8byte	00004335
10	Fourth latest "1st PD" data	1byte	2
11	Fourth latest "2nd PD" data	1byte	0
12	Data from the hour meter for the fourth latest PD	8byte	00000945
13	Fifth latest "1st PD" data	1byte	4
14	Fifth latest "2nd PD" data	1byte	0
15	Data from the hour meter for the fifth latest PD	8byte	00000715
16	Sixth latest "1st PD" data	1byte	A
17	Sixth latest "2nd PD" data	1byte	2
18	Data from the hour meter for the sixth latest PD	8byte	00000552
19	Seventh latest "1st PD" data	1byte	A
20	Seventh latest "2nd PD" data	1byte	0
21	Data from the hour meter for the seventh latest PD	8byte	00000213
22	Eighth latest "1st PD" data	1byte	D
23	Eighth latest "2nd PD" data	1byte	0
24	Data from the hour meter for the eighth latest PD	8byte	000001A7
CS		2Byte	27

● PD data	
0	No PD
1	Not used
2	P-POWER
3	SCAN
4	SCN-5V
5	Not used
6	Y-DCDC
7	Y-SUS
8	Address
9	X-DRIVE
A	X-DCDC
B	X-SUS
C	DIG-DCDC
D	QS (driving stopped)
E	Not used
F	Specification inability

■ Acquisition of SD logs • • • [QSD]

The command QSD is for acquiring the data from the 8 latest shutdown (SD) logs.

Command Format	Effective Operation Modes	Function	Remarks
[QSD]	All operations	To acquire data on the shutdown logs	Return data: 3 (ECO)+80(DATA)+2(CS)=85Byte

Data Arrangement		Data Length	Output Example
ECO		3Byte	QSD
1	Latest SD data	1byte	1
2	Latest SD subcategory data	1byte	0
3	Data from the hour meter for the latest SD	8byte	00752013
4	Second latest SD data	1byte	5
5	Second latest SD subcategory data	1byte	0
6	Data from the hour meter for the second latest SD	8byte	00495204
7	Third latest SD data	1byte	2
8	Third latest SD subcategory data	1byte	3
9	Data from the hour meter for the third latest SD	8byte	00100355
10	Fourth latest SD data	1byte	2
11	Fourth latest SD subcategory data	1byte	5
12	Data from the hour meter for the fourth latest SD	8byte	00075620
13	Fifth latest SD data	1byte	1
14	Fifth latest SD subcategory data	1byte	0
15	Data from the hour meter for the fifth latest SD	8byte	00000852
16	Sixth latest SD data	1byte	2
17	Sixth latest SD subcategory data	1byte	5
18	Data from the hour meter for the sixth latest SD	8byte	000000451
19	Seventh latest SD data	1byte	0
20	Seventh latest SD subcategory data	1byte	0
21	Data from the hour meter for the seventh latest SD	8byte	00000000
22	Eighth latest SD data	1byte	0
23	Eighth latest SD subcategory data	1byte	0
24	Data from the hour meter for the eighth latest SD	8byte	00000000
CS		2Byte	7D

● SD data	
0	No SD
1	SQ-IC
2	MDU-IIC
3	RST2
4	Panel having high temperature
5	Short-circuited speaker

● SD subcategory	
0	No SD subcategory
1	EEPROM
2	BACKUP
3	DAC
4	VOL-IC
5	DVI
6	Not used

■ Acquisition of input signal data • • • [QSI]

The command QSI is for acquiring all data on input video signals.

Command Format	Effective Operation Modes	Function	Remarks
[QSI]	All operations	To acquire all data on input video signals	Return data: 3 (ECO)+66(DATA)+2(CS)=71Byte

Data Arrangement		Data Length	Output Example
ECO		3Byte	QSI
1	Type of drive sequence	3byte	60V
2	Standard/nonstandard	1byte	S
3	Type of ABL/WB tables	2byte	T1
4	Total value of PCN	4byte	0256
5	Total value of PRH	4byte	0256
6	Total value of PGH	4byte	0256
7	Total value of PBH	4byte	0256
8	Total value of PBR	4byte	0512
9	Total value of PRL	4byte	0512
10	Total value of PGL	4byte	0512
11	Total value of PBL	4byte	0512
12	Reservation	2byte	**
13	Detection of existence of H	1byte	Y
14	Detection of V frequency	4byte	6002
15	Reservation	4byte	****
16	Obtained APL data	4byte	1023
17	Number of SUS pulses	4byte	0457
18	Result of detection of still picture	1byte	1
19	Result of detection of cracking in the panel	1byte	1
20	Result of detection for scanning protection	1byte	1
21	Result of detection for external protection	1byte	1
22	Transition of protection operation	1byte	0
23	Reservation	4byte	****
CS		2Byte	27

● Detection of existence of H	
N	No H
Y	H detected

● Transition of brightness by protection operation	
0	Upper limit state for brightness
1	Brightness being reduced
2	Lower limit state for brightness
3	Brightness being increased

- If data for an item cannot be obtained during Standby mode, the return data for that item will be "*."
- The types of data for Items 1-3 in the table (drive sequence, standard/nonstandard, and type of ABL/WB tables) are the same as with the command QPW.
- Each total value for Items 4-11 represents that of panel WB, user WB, and degradation correction, and the actual data being sent to the ASTRA are output.
- Detection of V frequency: The V signal input to the panel is measured in the range of 30.51 to 99.99 Hz. The measured value is multiplied by 100 and then output.
- Number of SUS pulses : The number is calculated from data from APL and the drive sequence. The output value must be between 0174 and 2752.
- APL value: The APL value for the input video signal (or mask indication) will be output in the range of 0000 to 1023.

■ Setting for Factory mode permission/prohibition • • • [FAY/FAN] [PFY/PFN]

The commands FAY/FAN and PFY/PFN are for prohibiting/permitting panel-adjustment commands during normal operation and are to be used to avoid accidental change of panel adjustment values.

Command Format	Operation		Remarks
	Effective Operation Modes	Control (by the microcomputer itself)	
[FAY]	Normal operation mode while the power is on	Adjustment mode: ON	Mask indications will be forcibly turned off.
[PFY]			With a PFY command, the mask does not change.
[FAN]	During FAY	Adjustment mode: OFF	
[PFN]			

• Commands that are effective during normal operation will also be effective during FAY (PFY) mode.

Note:

• The functions shown below will be forcibly switched when Mask ON/OFF is switched. (Even if the panel is off, changed settings will be retained.)
While the status of Mask ON or OFF is maintained, if settings for the individual functions shown in ① and ② are changed, those settings are retained (even if the drive frequency is changed).

① Functions related to picture quality

Function	Setting while Mask is ON	Setting while Mask is OFF	Remarks
Peripheral luminance correction	OFF	ON	
WB correction interlocked with APL	OFF	ON	
Streaking correction	OFF	ON	

② Functions related to panel protection

Function	Setting while Mask is ON	Setting while Mask is OFF	Remarks
Detection of still picture	OFF	ON	
Detection of cracking in the panel	OFF	ON	
Scanning protection	OFF	ON	

• Depending on the type of mask displayed, phosphor burn of the panel may occur. As the panel-protection function is forcibly turned off with this model, care must be taken when color-bar signals are to be displayed for an extended period.

■ Backup function for adjustment values for the main unit • • • [FAJ/UAJ/CBU/BCP]


When the HD DIGITAL Assy is to be replaced, adjustment values can be copied from the backup EEPROM to the EEPROM of the Assy for service.

Command Format	Operation			Remarks
	Effective Operation Modes	Control (by the microcomputer itself)		
[FAJ]	During FAY	To make the flag setting that indicating that adjustment of the main unit has been completed	Writing 00 to the 4-kbyte ROM and copying to the 2-kbyte ROM	This takes at least 350 ms.
[UAJ]		To make the flag setting that indicating that adjustment of the main unit has not been completed	Writing F0 to the 4-kbyte ROM	
[CBU]		To make the flag setting that indicating that backup data have not been copied	Writing F0 to the 2-kbyte ROM	The backup ROM is initialized.
[BCP]		To make the flag setting that indicating that backup data have been copied	Copying backup data	

When the flag indicating that the line adjustments (SUS waveform, voltage margin, and panel WB) for the main unit have been completed is set to on, data stored from Addresses 0x0000 to 0X00FF in the digital EEPROM are copied to the same addresses of the backup EEPROM. Copying will be executed immediately before the relay of normal operation is off.

- When the command BCP is received while a warning indicating that backup copying has not been completed is displayed (conditions: main EEPROM = not adjusted, and backup EEPROM = adjusted), backed-up data will be copied to the main EEPROM, and various adjustment values related to Factory mode will be readjusted. Then LED warning indication will be shut off, and normal LED indication will be restored.

- If the backup EEPROM has not been adjusted when the command BCP is received (0x0063 is not written to all three addresses of the key data), copying of the backup data is not possible, and "XXX" is returned.

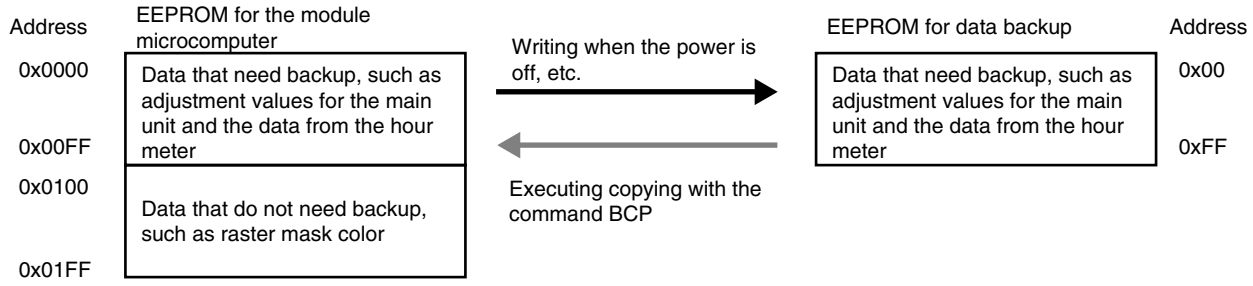

Note:
- When the command FAJ, UAJ, or CBU is executed, only high-order one-byte (0x00 or 0xF0) key data will be written to the EEPROM, and lower-order one-byte (0x63) data will not be changed.
- It takes at least 350 ms from reception of the command FAJ until an echo is sent back, because data are copied to the backup EEPROM.

■ Factory presetting • • • [PFS]

Command Format	Operation			Remarks
	Effective Operation Modes	Control (by the microcomputer itself)		
[PFS]	During FAY	Initialized to factory-preset values		

- When this command is executed, the values not stored in the EEPROM are initialized, mask indication is set to OFF, control of the power for line aging is set to OFF, and detection of the system cable is set to ON.


6.3 METHOD FOR REPLACING THE SERVICE PANEL ASSY

When the Panel Assy is replaced with one for service, the following adjustments are required:

■ Adjustments of Vofs voltage and Vyprst voltage

Enter the reference adjustment values for the Vofs voltage and Vyprst voltage that are written on the label attached to the panel for service.

Note: Enter the values, using an RS-232C command or the Factory Menu.

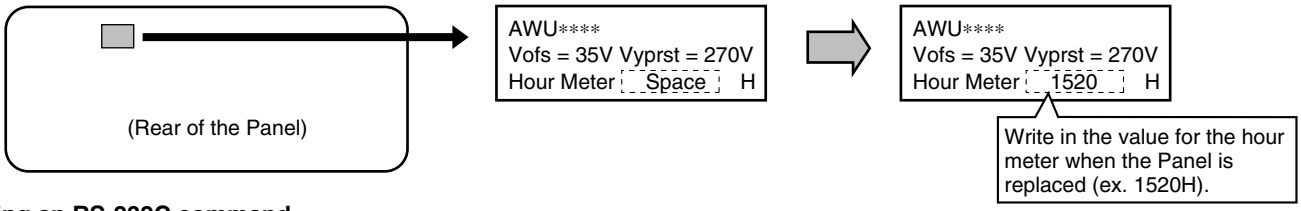


Using an RS-232C command

Enter a "PFY" command with Factory mode ON.

Convert the adjustment voltage values written on the label attached at the rear of the Panel to an input command, referring to the conversion chart. (See the next page.)

- Reference adjustment of the Vofs voltage: Ex. "Vofs = 35" → (Check the conversion chart.) Enter "VOF112."
- Reference adjustment of the Vyprst voltage: Ex. 50-inch "Vyprst = 270 V" → (Check the conversion chart.) Enter "VRP055." (Note that the conversion charts for 50-inch and 43-inch Panels are different.)

Using the Factory Menu

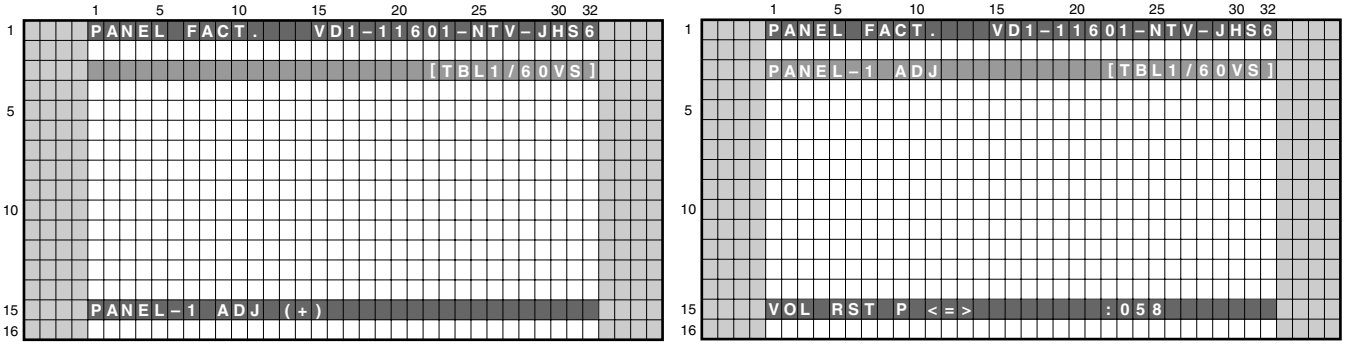

Select the main item "PANEL FACT." by pressing the MUTE key then enter Panel Factory mode by pressing the SET key.
Using the ▲/▼ keys, select "PANEL-1 ADJ" then press the SET key to enter the next lower nested layer.
Select "VOL-OFFSET" or "VOL RST P" then enter a command value converted from the voltage value, using the ◄/► keys.

■ Clearing data on various histories of the Panel, such as those on the hour meter

- It is necessary to clear the data on the hour meter, etc. to match them to the actual driving hours of the Panel.
- It is also necessary to clear the data on SD and PD, because the accumulated power-on time when a shutdown or power-down occurred is recorded.

Note: Clear the values, using an RS-232C command or the Factory Menu.
There are two types of hour meters. Do not take the MR hour meter for the hour meter.

Using an RS-232C command

To acquire the accumulated power-on time of the product itself, use the "GS2" RS-232C command.

1 To clear the data on the hour meter (for the Panel) : CHM
2 To clear the data on the pulse meter : CPM
3 To clear the data on the SD history : CSD
4 To clear the data on the PD history : CPD

Using the Factory Menu

See "7.1.7 HOW TO CLEAR HISTORY DATA."

■ Conversion charts for electronic VRs: Conversion chart for the Vofs

Conversion chart for the Vofs (Commands vs. Common voltage values for the 50-inch and 43-inch models)

Command	Voltage value [V] for common sizes	Command	Voltage value [V] for common sizes	Command	Voltage value [V] for common sizes	Command	Voltage value [V] for common sizes	Command	Voltage value [V] for common sizes
VOF000	14.09	VOF056	24.55	VOF112	35.01	VOF168	45.47	VOF224	55.93
VOF001	14.28	VOF057	24.74	VOF113	35.20	VOF169	45.66	VOF225	56.12
VOF002	14.46	VOF058	24.92	VOF114	35.38	VOF170	45.85	VOF226	56.31
VOF003	14.65	VOF059	25.11	VOF115	35.57	VOF171	46.03	VOF227	56.49
VOF004	14.84	VOF060	25.30	VOF116	35.76	VOF172	46.22	VOF228	56.68
VOF005	15.02	VOF061	25.48	VOF117	35.95	VOF173	46.41	VOF229	56.87
VOF006	15.21	VOF062	25.67	VOF118	36.13	VOF174	46.59	VOF230	57.05
VOF007	15.40	VOF063	25.86	VOF119	36.32	VOF175	46.78	VOF231	57.24
VOF008	15.58	VOF064	26.04	VOF120	36.51	VOF176	46.97	VOF232	57.43
VOF009	15.77	VOF065	26.23	VOF121	36.69	VOF177	47.15	VOF233	57.61
VOF010	15.96	VOF066	26.42	VOF122	36.88	VOF178	47.34	VOF234	57.80
VOF011	16.14	VOF067	26.61	VOF123	37.07	VOF179	47.53	VOF235	57.99
VOF012	16.33	VOF068	26.79	VOF124	37.25	VOF180	47.71	VOF236	58.17
VOF013	16.52	VOF069	26.98	VOF125	37.44	VOF181	47.90	VOF237	58.36
VOF014	16.70	VOF070	27.17	VOF126	37.63	VOF182	48.09	VOF238	58.55
VOF015	16.89	VOF071	27.35	VOF127	37.81	VOF183	48.27	VOF239	58.73
VOF016	17.08	VOF072	27.54	VOF128	38.00	VOF184	48.46	VOF240	58.92
VOF017	17.27	VOF073	27.73	VOF129	38.19	VOF185	48.65	VOF241	59.11
VOF018	17.45	VOF074	27.91	VOF130	38.37	VOF186	48.83	VOF242	59.30
VOF019	17.64	VOF075	28.10	VOF131	38.56	VOF187	49.02	VOF243	59.48
VOF020	17.83	VOF076	28.29	VOF132	38.75	VOF188	49.21	VOF244	59.67
VOF021	18.01	VOF077	28.47	VOF133	38.93	VOF189	49.39	VOF245	59.86
VOF022	18.20	VOF078	28.66	VOF134	39.12	VOF190	49.58	VOF246	60.04
VOF023	18.39	VOF079	28.85	VOF135	39.31	VOF191	49.77	VOF247	60.23
VOF024	18.57	VOF080	29.03	VOF136	39.49	VOF192	49.96	VOF248	60.42
VOF025	18.76	VOF081	29.22	VOF137	39.68	VOF193	50.14	VOF249	60.60
VOF026	18.95	VOF082	29.41	VOF138	39.87	VOF194	50.33	VOF250	60.79
VOF027	19.13	VOF083	29.59	VOF139	40.05	VOF195	50.52	VOF251	60.98
VOF028	19.32	VOF084	29.78	VOF140	40.24	VOF196	50.70	VOF252	61.16
VOF029	19.51	VOF085	29.97	VOF141	40.43	VOF197	50.89	VOF253	61.35
VOF030	19.69	VOF086	30.15	VOF142	40.62	VOF198	51.08	VOF254	61.54
VOF031	19.88	VOF087	30.34	VOF143	40.80	VOF199	51.26	VOF255	61.72
VOF032	20.07	VOF088	30.53	VOF144	40.99	VOF200	51.45		
VOF033	20.25	VOF089	30.71	VOF145	41.18	VOF201	51.64		
VOF034	20.44	VOF090	30.90	VOF146	41.36	VOF202	51.82		
VOF035	20.63	VOF091	31.09	VOF147	41.55	VOF203	52.01		
VOF036	20.81	VOF092	31.28	VOF148	41.74	VOF204	52.20		
VOF037	21.00	VOF093	31.46	VOF149	41.92	VOF205	52.38		
VOF038	21.19	VOF094	31.65	VOF150	42.11	VOF206	52.57		
VOF039	21.37	VOF095	31.84	VOF151	42.30	VOF207	52.76		
VOF040	21.56	VOF096	32.02	VOF152	42.48	VOF208	52.94		
VOF041	21.75	VOF097	32.21	VOF153	42.67	VOF209	53.13		
VOF042	21.94	VOF098	32.40	VOF154	42.86	VOF210	53.32		
VOF043	22.12	VOF099	32.58	VOF155	43.04	VOF211	53.50		
VOF044	22.31	VOF100	32.77	VOF156	43.23	VOF212	53.69		
VOF045	22.50	VOF101	32.96	VOF157	43.42	VOF213	53.88		
VOF046	22.68	VOF102	33.14	VOF158	43.60	VOF214	54.06		
VOF047	22.87	VOF103	33.33	VOF159	43.79	VOF215	54.25		
VOF048	23.06	VOF104	33.52	VOF160	43.98	VOF216	54.44		
VOF049	23.24	VOF105	33.70	VOF161	44.16	VOF217	54.63		
VOF050	23.43	VOF106	33.89	VOF162	44.35	VOF218	54.81		
VOF051	23.62	VOF107	34.08	VOF163	44.54	VOF219	55.00		
VOF052	23.80	VOF108	34.26	VOF164	44.72	VOF220	55.19		
VOF053	23.99	VOF109	34.45	VOF165	44.91	VOF221	55.37		
VOF054	24.18	VOF110	34.64	VOF166	45.10	VOF222	55.56		
VOF055	24.36	VOF111	34.82	VOF167	45.29	VOF223	55.75		

■ Conversion charts for electronic VRs: Conversion chart for the Vyprst (1/2)

Conversion chart for the Vyprst (Commands vs. Voltage values for the 50-inch and 43-inch models)


Command	Voltage [V]		Command	Voltage [V]		Command	Voltage [V]	
	50-inch Model	43-inch Model		50-inch Model	43-inch Model		50-inch Model	43-inch Model
VRP000	246.3	236.3	VRP056	270.6	260.6	VRP112	294.9	284.9
VRP001	246.7	236.7	VRP057	271.0	261.0	VRP113	295.4	285.4
VRP002	247.1	237.1	VRP058	271.5	261.5	VRP114	295.8	285.8
VRP003	247.6	237.6	VRP059	271.9	261.9	VRP115	296.2	286.2
VRP004	248.0	238.0	VRP060	272.3	262.3	VRP116	296.7	286.7
VRP005	248.4	238.4	VRP061	272.8	262.8	VRP117	297.1	287.1
VRP006	248.9	238.9	VRP062	273.2	263.2	VRP118	297.5	287.5
VRP007	249.3	239.3	VRP063	273.6	263.6	VRP119	298.0	288.0
VRP008	249.7	239.7	VRP064	274.1	264.1	VRP120	298.4	288.4
VRP009	250.2	240.2	VRP065	274.5	264.5	VRP121	298.8	288.8
VRP010	250.6	240.6	VRP066	274.9	264.9	VRP122	299.3	289.3
VRP011	251.0	241.0	VRP067	275.4	265.4	VRP123	299.7	289.7
VRP012	251.5	241.5	VRP068	275.8	265.8	VRP124	300.1	290.1
VRP013	251.9	241.9	VRP069	276.2	266.2	VRP125	300.6	290.6
VRP014	252.4	242.4	VRP070	276.7	266.7	VRP126	301.0	291.0
VRP015	252.8	242.8	VRP071	277.1	267.1	VRP127	301.4	291.4
VRP016	253.2	243.2	VRP072	277.5	267.5	VRP128	301.9	291.9
VRP017	253.7	243.7	VRP073	278.0	268.0	VRP129	302.3	292.3
VRP018	254.1	244.1	VRP074	278.4	268.4	VRP130	302.7	292.7
VRP019	254.5	244.5	VRP075	278.9	268.9	VRP131	303.2	293.2
VRP020	255.0	245.0	VRP076	279.3	269.3	VRP132	303.6	293.6
VRP021	255.4	245.4	VRP077	279.7	269.7	VRP133	304.0	294.0
VRP022	255.8	245.8	VRP078	280.2	270.2	VRP134	304.5	294.5
VRP023	256.3	246.3	VRP079	280.6	270.6	VRP135	304.9	294.9
VRP024	256.7	246.7	VRP080	281.0	271.0	VRP136	305.3	295.3
VRP025	257.1	247.1	VRP081	281.5	271.5	VRP137	305.8	295.8
VRP026	257.6	247.6	VRP082	281.9	271.9	VRP138	306.2	296.2
VRP027	258.0	248.0	VRP083	282.3	272.3	VRP139	306.7	296.7
VRP028	258.4	248.4	VRP084	282.8	272.8	VRP140	307.1	297.1
VRP029	258.9	248.9	VRP085	283.2	273.2	VRP141	307.5	297.5
VRP030	259.3	249.3	VRP086	283.6	273.6	VRP142	308.0	298.0
VRP031	259.7	249.7	VRP087	284.1	274.1	VRP143	308.4	298.4
VRP032	260.2	250.2	VRP088	284.5	274.5	VRP144	308.8	298.8
VRP033	260.6	250.6	VRP089	284.9	274.9	VRP145	309.3	299.3
VRP034	261.0	251.0	VRP090	285.4	275.4	VRP146	309.7	299.7
VRP035	261.5	251.5	VRP091	285.8	275.8	VRP147	310.1	300.1
VRP036	261.9	251.9	VRP092	286.2	276.2	VRP148	310.6	300.6
VRP037	262.3	252.3	VRP093	286.7	276.7	VRP149	311.0	301.0
VRP038	262.8	252.8	VRP094	287.1	277.1	VRP150	311.4	301.4
VRP039	263.2	253.2	VRP095	287.5	277.5	VRP151	311.9	301.9
VRP040	263.6	253.6	VRP096	288.0	278.0	VRP152	312.3	302.3
VRP041	264.1	254.1	VRP097	288.4	278.4	VRP153	312.7	302.7
VRP042	264.5	254.5	VRP098	288.8	278.8	VRP154	313.2	303.2
VRP043	264.9	254.9	VRP099	289.3	279.3	VRP155	313.6	303.6
VRP044	265.4	255.4	VRP100	289.7	279.7	VRP156	314.0	304.0
VRP045	265.8	255.8	VRP101	290.1	280.1	VRP157	314.5	304.5
VRP046	266.3	256.3	VRP102	290.6	280.6	VRP158	314.9	304.9
VRP047	266.7	256.7	VRP103	291.0	281.0	VRP159	315.3	305.3
VRP048	267.1	257.1	VRP104	291.4	281.4	VRP160	315.8	305.8
VRP049	267.6	257.6	VRP105	291.9	281.9	VRP161	316.2	306.2
VRP050	268.0	258.0	VRP106	292.3	282.3	VRP162	316.6	306.6
VRP051	268.4	258.4	VRP107	292.8	282.8	VRP163	317.1	307.1
VRP052	268.9	258.9	VRP108	293.2	283.2	VRP164	317.5	307.5
VRP053	269.3	259.3	VRP109	293.6	283.6	VRP165	317.9	307.9
VRP054	269.7	259.7	VRP110	294.1	284.1	VRP166	318.4	308.4
VRP055	270.2	260.2	VRP111	294.5	284.5	VRP167	318.8	308.8

■ Conversion charts for electronic VRs: Conversion chart for the Vyprst (2/2)

Conversion chart for the Vyprst (Commands vs. Voltage values for the 50-inch and 43-inch models)

Command	Voltage [V]		Command	Voltage [V]	
	50-inch Model	43-inch Model		50-inch Model	43-inch Model
VRP168	319.2	309.2	VRP224	343.6	333.6
VRP169	319.7	309.7	VRP225	344.0	334.0
VRP170	320.1	310.1	VRP226	344.4	334.4
VRP171	320.6	310.6	VRP227	344.9	334.9
VRP172	321.0	311.0	VRP228	345.3	335.3
VRP173	321.4	311.4	VRP229	345.7	335.7
VRP174	321.9	311.9	VRP230	346.2	336.2
VRP175	322.3	312.3	VRP231	346.6	336.6
VRP176	322.7	312.7	VRP232	347.1	337.1
VRP177	323.2	313.2	VRP233	347.5	337.5
VRP178	323.6	313.6	VRP234	347.9	337.9
VRP179	324.0	314.0	VRP235	348.4	338.4
VRP180	324.5	314.5	VRP236	348.8	338.8
VRP181	324.9	314.9	VRP237	349.2	339.2
VRP182	325.3	315.3	VRP238	349.7	339.7
VRP183	325.8	315.8	VRP239	350.1	340.1
VRP184	326.2	316.2	VRP240	350.5	340.5
VRP185	326.6	316.6	VRP241	351.0	341.0
VRP186	327.1	317.1	VRP242	351.4	341.4
VRP187	327.5	317.5	VRP243	351.8	341.8
VRP188	327.9	317.9	VRP244	352.3	342.3
VRP189	328.4	318.4	VRP245	352.7	342.7
VRP190	328.8	318.8	VRP246	353.1	343.1
VRP191	329.2	319.2	VRP247	353.6	343.6
VRP192	329.7	319.7	VRP248	354.0	344.0
VRP193	330.1	320.1	VRP249	354.4	344.4
VRP194	330.5	320.5	VRP250	354.9	344.9
VRP195	331.0	321.0	VRP251	355.3	345.3
VRP196	331.4	321.4	VRP252	355.7	345.7
VRP197	331.8	321.8	VRP253	356.2	346.2
VRP198	332.3	322.3	VRP254	356.6	346.6
VRP199	332.7	322.7	VRP255	357.0	347.0
VRP200	333.2	323.2			
VRP201	333.6	323.6			
VRP202	334.0	324.0			
VRP203	334.5	324.5			
VRP204	334.9	324.9			
VRP205	335.3	325.3			
VRP206	335.8	325.8			
VRP207	336.2	326.2			
VRP208	336.6	326.6			
VRP209	337.1	327.1			
VRP210	337.5	327.5			
VRP211	337.9	327.9			
VRP212	338.4	328.4			
VRP213	338.8	328.8			
VRP214	339.2	329.2			
VRP215	339.7	329.7			
VRP216	340.1	330.1			
VRP217	340.5	330.5			
VRP218	341.0	331.0			
VRP219	341.4	331.4			
VRP220	341.8	331.8			
VRP221	342.3	332.3			
VRP222	342.7	332.7			
VRP223	343.1	333.1			

7. GENERAL INFORMATION
7.1 DIAGNOSIS
7.1.1 PCB LOCATION

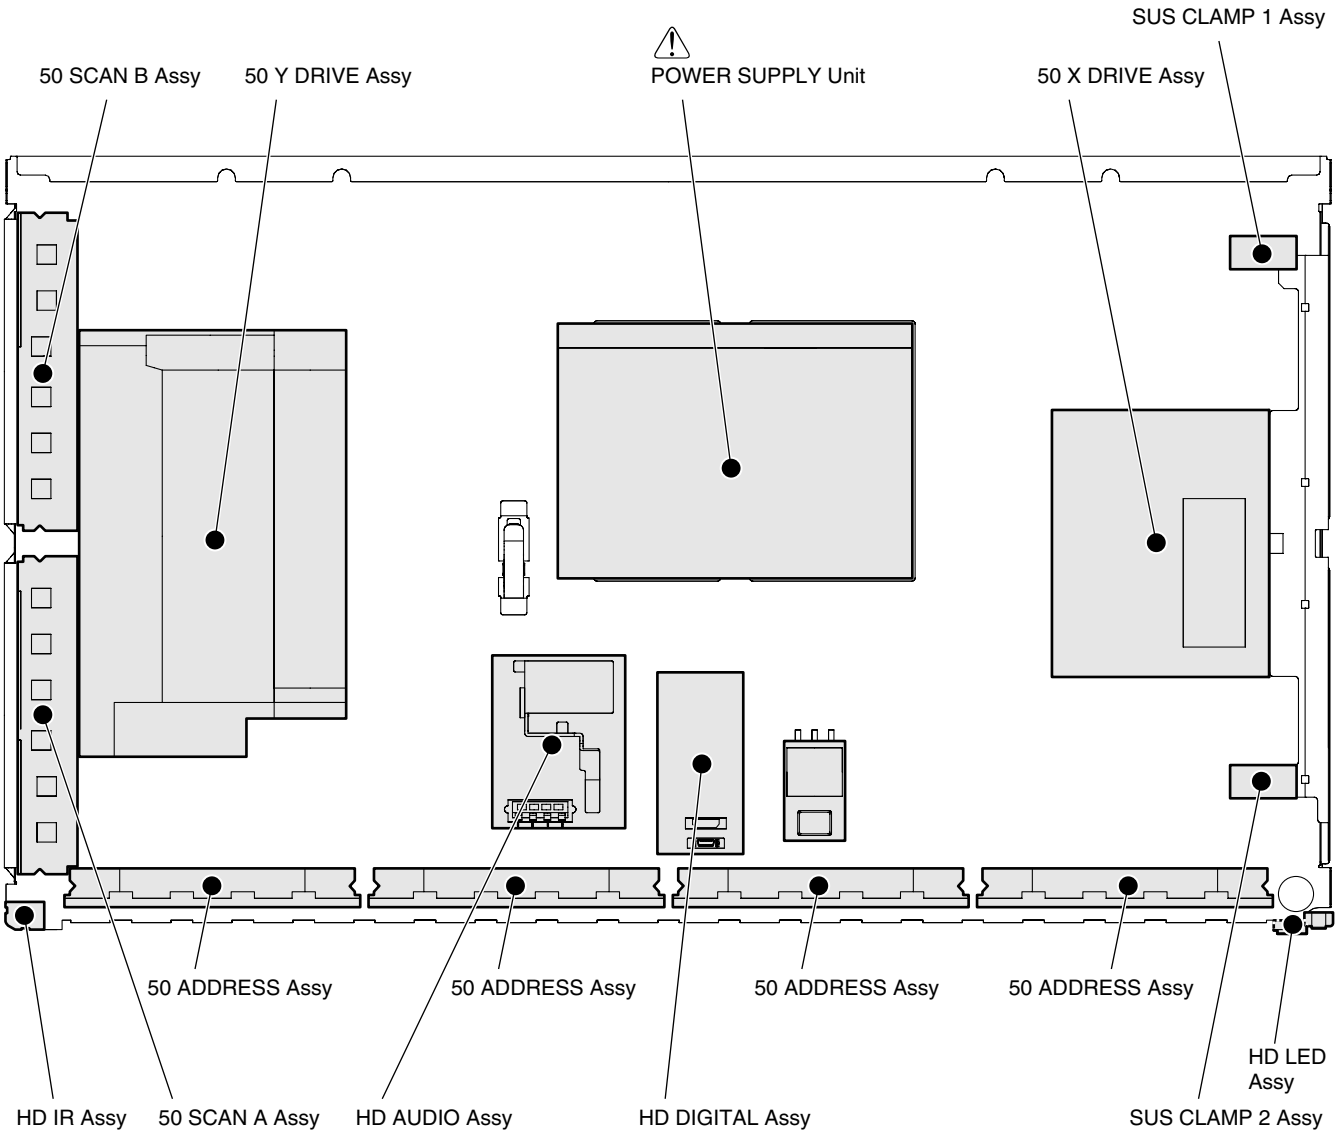

7.1.2 DIAGNOSIS OF SHUTDOWN/POWER-DOWN INDICATED BY LEDS

• Operation statuses indicated by LEDs

Status	LED Pattern			
Standby	1	Lit in Red	Blue Red	
Power ON	2	Lit in Blue	Blue Red	
AC Power OFF of one side	3	Red flashes (1000ms)	Blue Red	1000ms
System cable disconnection	4	Red and blue flash (1000ms)	Blue Red	1000ms 1000ms
Power-down	5	Red flashes (500+2500ms)	Blue Red	Once Twice n times 2.5s Once 500ms
Shutdown	6	Blue flashes (500+2500ms)	Blue Red	500ms Once Twice n times 2.5s Once
No backup copy	7	Lit in Red and blue flashes (200ms)	Blue Red	200ms

: Lit in Red LED
: Lit in Blue LED

• PD (power-down) count

1	Not used
2	POWER SUPPLY Unit
3	SCAN Assy
4	5V power supply for SCAN
5	Y-DRIVE (Not used)
6	DCDC for Y drive
7	Y-SUS
8	ADDRESS Assy
9	X-DRIVE
10	DCDC for X drive
11	X-SUS
12	Not used
13	Sequence drive stop
14	Not used
15	UNKNOWN

Note:
- When a shutdown occurs, a warning will be issued by the Media Receiver and displayed, then the power will be shut off.
- When a shutdown or power-down occurs on the Panel side, the Media Receiver will enter Standby mode (the red LED will light).


• SD (shut down) count

1	SEQUENCE PROCESSOR (SQ_IC)
2	MDU-IIC
3	RST2 abnormality
4	Panel high temperature
5	Speaker short-circuit *

* When a jumper (J105) between the HD AUDIO Assy and the POWER SUPPLY Unit is disconnected, the SD LED flashes five times in this manner.

• Block diagram of the shutdown signal

Note:
The figures ① - ⑤ indicate the number of times the LED flashes when shutdown occurs in the corresponding route.

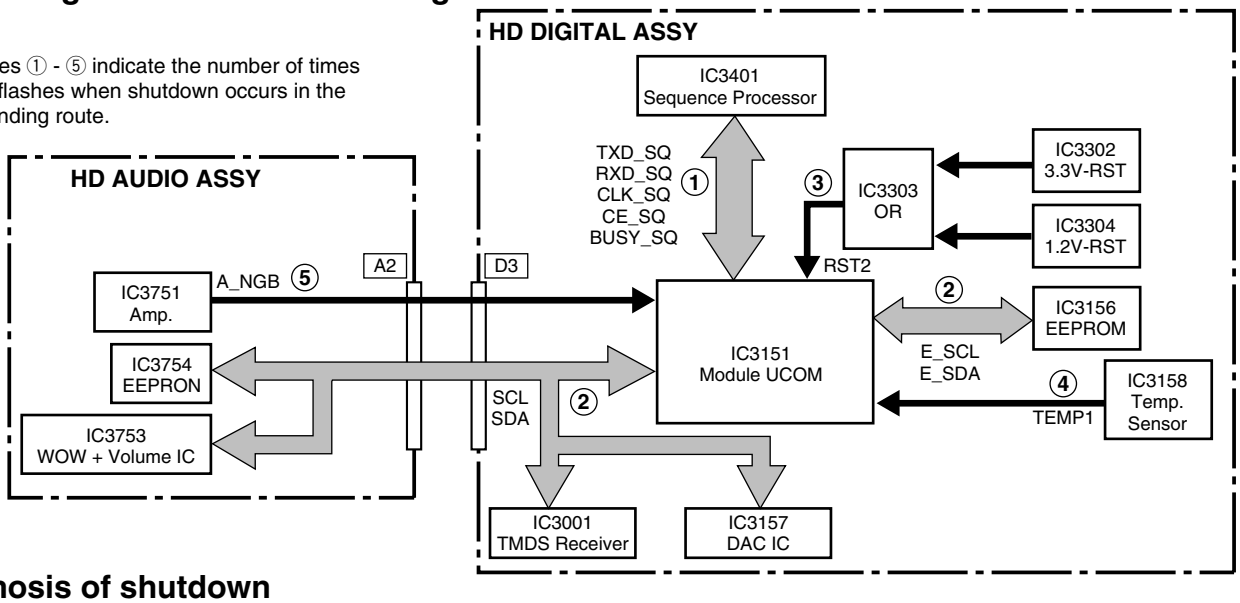

• Diagnosis of shutdown

Number of flashes	SD Circuit in Operation	Defective Assy	Reason for Shutdown	Point to be Checked	Possible Defective Part	Remarks
1 time	Communication failure of the driving processor	HD DIGITAL	Communication failure of IC3401	SQ ASIC BLOCK, PANEL FLASH BLOCK	IC3401, IC3301	
			Writing failure of IC3401			Check if version data can be read, using the "GS1" command, after the power is turned on again.
2 times	Communication failure of the IIC line (Check the SD subcategory on the Factory Menu.)	HD DIGITAL	Communication failure of the EEPROM (for retaining 4-Kbyte of data)	MODULE UCOM BLOCK	IC3156, IC3157	
				TMDS BLOCK	IC3001	
		HD AUDIO	Communication failure of the EEPROM (2-kbyte : for backup)	AUDIO AMP BLOCK	IC3754	
			Disconnection of connectors	A2 - D3		Check if the connectors are disconnected or are not connected securely.
			Defective volume IC	HD AUDIO Assy	IC3753	
3 times	Power failure of the driving processor (RST2)	HD DIGITAL	Defective DC-DC converter	DIGITAL DD CON BLOCK	U3601	Check if 3.3-V and 1.2-V power supplies are activated.
			Defective RST IC	PANEL FLASH BLOCK	IC3302 - IC3304	
			Defective IC3401	SQ ASIC BLOCK	IC3401	
		POWER SUPPLY	The 8-V power supply is not activated.			Check if the 8-V power is supplied at Pin 1 of the D11 connector.
4 times	Abnormally high temperature of the panel		Abnormally high temperature of the panel	Ambient temperature		The Panel will be shut down if the sensor detects temperature of 75°C or higher (for the PDP-436P/-506P).
5 times	Audio failure		Speakers' grounding fault	Speaker terminals		Check if the speaker cables are in contact with the chassis, etc.
		HD AUDIO	Defective AMP IC	HD AUDIO Assy	IC3751	
		HD AUDIO	Disconnection of connectors	A1 - P5		Check if the connectors are disconnected or are not connected securely.

• Power-down diagnosis (defective points)

Number of Blinks	PD Circuit in Operation	Defective PCB Assy	Reason for PD (Power-down)	Point to be Checked	Possible Defective Part	Remarks
2	POWER	POWER SUPPLY				
3	SCAN	50 (43) SCAN A, B	VH UVP	SCAN IC	SCAN IC	VH-GNDH short-circuit
		50 (43) Y DRIVE		Y SUS BLOCK	IC2252, IC2253	VSUS-SUSOUT, SUSOUT-SUSGND short-circuit
				VH DC/DC	IC2502, L2501	
			Disconnection of cable detected	CN2001, CN2350		
		50 (43) X DRIVE	VH UVP	IC1202	IC1202	VSUS-SUSOUT, SUSOUT-SUSGND short-circuit
4	SCN-5V	50 (43) SCAN A, B	Disconnection of cable detected	CN2401, CN2402		
		50 (43) Y DRIVE	IC5V UVP	SCAN IC	SCAN IC	
				IC5V DC/DC	Q2605, R2647	
				Y SUS BLOCK	R2352	
6	Y-DCDC	50 (43) Y DRIVE	VOFS UVP	VOFS DC/DC	Q2606, R2619, R2620	
				Y SUS BLOCK	IC2252, IC2253, Q2280, Q2281	MSKS-SUSOUT short-circuit
			Vprst UVP	Vprst Regulator	Q2531, Q2532, IC2535	
7	Y-SUS	50 (43) Y DRIVE	Power-down caused by detection of middle-point voltage	Y RESONANCE BLOCK	IC2101	
				Y SUS BLOCK	Q2221	
8	ADRS	50 (43) ADDRESS	Address power-down	ADDRESS RESONANCE BLOCK	D1634	V+ADR-GND_ADR short-circuit
			Disconnection of cable detected	CN1501, CN3501-CN3504		
9	XDRIVE	50 (43) X DRIVE	Disconnection of cable detected	CN1001		
10	X-DCDC	50 (43) X DRIVE	Disconnection of cable detected	CN1201		
			VRN UVP	VRN DC/DC	Q1323, R1332, R1333	
				X SUS BLOCK	R1204, Q1272	
11	X-SUS	50 (43) X DRIVE	Power-down caused by detection of middle-point voltage	X RESONANCE BLOCK	IC1101	

OVP : **O**VER **V**OLTAGE **P**ROTECT
UVP : **U**NDER **V**OLTAGE **P**ROTECT

7.1.3 OVERVIEW OF PANEL FACTORY MODE

■ Top screen of the Factory Menu for the main unit

MR INFORMATION

< MUTE > key

FUNC. CHECK

< MUTE > key

COMMON ADJ.


< MUTE > key

PANEL FACTORY

< SET > key

Top screen of the Panel Factory

If a Panel of Generation 6 is connected, "6" is indicated here.

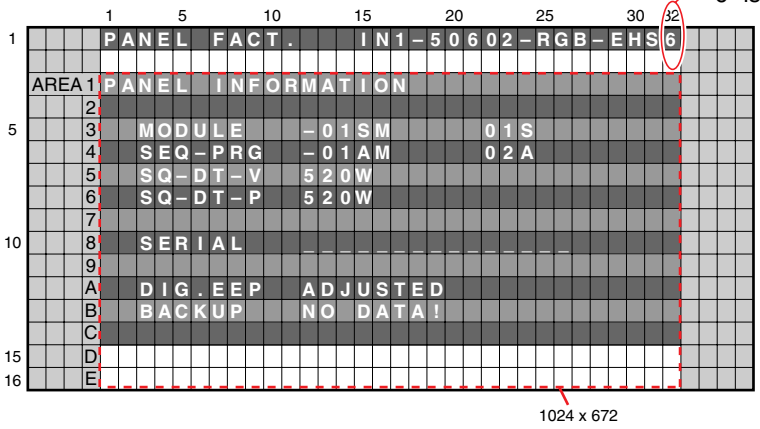

Note: With this model, the structure of Factory mode has been changed, and all items related to the Panel are gathered into PANEL FACTORY mode.

Note: On-screen displays in Factory mode are indicated in white characters on a green background for the PDP-506HD/436HD and subsequent models.


■ Configuration of Panel Factory mode

No.	Submode Name / Submode Items	Adjustable Range	Remarks
1	PANEL INFORMATION		
2	PANEL WORKS		
3	POWER DOWN		
4	SHUT DOWN		
5	PANEL-1 ADJ (+)		
5-1	X-SUS B <=>	120 to 136	Equivalent to XSB
5-2	Y-SUS B <=>	120 to 136	Equivalent to YSB
5-3	Y-SUSTAIL T <=>	120 to 136	Equivalent to YTG
5-4	Y-SUSTAIL W <=>	120 to 136	Equivalent to YTW
5-5	XY-RST W <=>	120 to 136	Equivalent to RSW
5-6	VOL SUS <=>	000 to 255	Equivalent to VSU
5-7	VOL OFFSET <=>	000 to 255	Equivalent to VOF
5-8	VOL RST P <=>	000 to 255	Equivalent to VRP
5-9	SUS FREQ. <=>	MODE1 to MODE8	Equivalent to SFR
6	PANEL-2 ADJ (+)		
6-1	R-HIGH <=>	000 to 511	Equivalent to PRH
6-2	G-HIGH <=>	000 to 511	Equivalent to PGH
6-3	B-HIGH <=>	000 to 511	Equivalent to PBH
6-4	R-LOW <=>	000 to 999	Equivalent to PRL
6-5	G-LOW <=>	000 to 999	Equivalent to PGL
6-6	B-LOW <=>	000 to 999	Equivalent to PBL
6-7	ABL <=>	000 to 255	Equivalent to ABL
7	PANEL REVISE		
7-1	R-LEVEL <=>	LV-0 to LV-7	Equivalent to RRL
7-2	G-LEVEL <=>	LV-0 to LV-7	Equivalent to RGL
7-3	B-LEVEL <=>	LV-0 to LV-7	Equivalent to RBL
8	ETC (+)		
8-1	BACKUP DATA <=>	NO OPRT<=>TRANSFER or ERR	Equivalent to BCP
8-2	DIGITAL EEPROM <=>	NO OPRT<=>DELETE/REPAIR	Equivalent to FAJ/UAJ
8-3	PD INFO. <=>	NO OPRT <=>CLEAR	Equivalent to CPD
8-4	SD INFO. <=>	NO OPRT <=>CLEAR	Equivalent to CSD
8-5	HR-MTR INFO. <=>	NO OPRT <=>CLEAR	Equivalent to CHM
8-6	PM/B1-B5 <=>	NO OPRT <=>CLEAR	Equivalent to CPM
8-7	P-COUNT INFO. <=>	NO OPRT <=>CLEAR	Equivalent to CPC
9	MASK SETUP (+)		
9-1	MASK OFF		Equivalent to MKS+S00
9-2	SGL MASK 01 <=>	<=>V48<=>V50<=>V60<=>P60<=>P70<=>V72<=>V75<=> (Select each sequence.)	Equivalent to MKS+S01
9-3	SGL MASK 02 <=>		Equivalent to MKS+S02
	• • •		• • •
9-62	CMB MASK 08 <=>		Equivalent to MKC+S08
9-63	CMB MASK 09 <=>		Equivalent to MKC+S09

■ Details on submodes related to the panel

The GUI display examples here are those displayed when the main unit is used with the 50-inch model.

1. PANEL INFORMATION

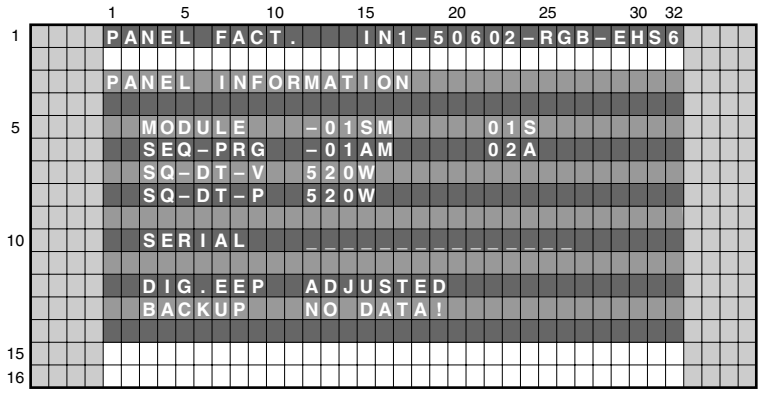


■ Key operation

<DOWN> : Shifting to PANEL WORKS
<UP> : Shifting to MASK SETUP (+)
<SEL> : MASK ON/OFF
<L/R> : Updating displayed information

The version of the microcomputer of the panel, serial number of the main unit, adjustment values of the main unit, and backup status are displayed.

2. PANEL WORKS

Note:
Screen display " PANEL_FACT.___IN1-50602-RGB-EHS6".
Refer to service manual of Media Receiver.

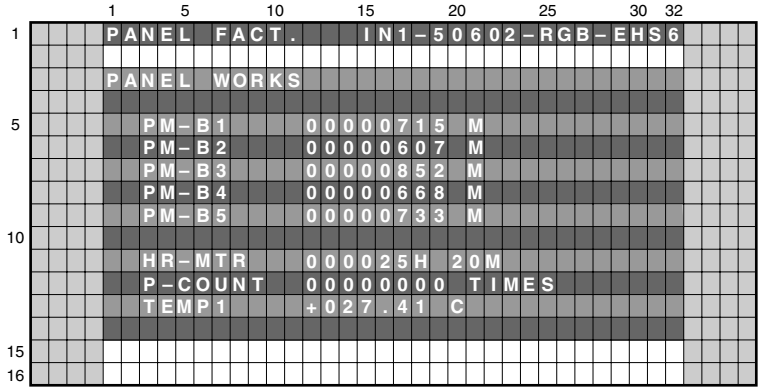


■ Key operation

<DOWN> : Shifting to POWER DOWN
<UP> : Shifting to PANEL INFORMATION
<SEL> : MASK ON/OFF
<L/R> : Updating displayed information

- The data from the pulse meter for each block from PM-B1 to PM-B5 are indicated. The values stored in the EEPROM (3 bytes each) are each converted into a decimal number, and the higher-order 8 digits are displayed (that means that the lowest-order digit represents millions).
- TEMP1: Indicates the temperature of the panel. By your pressing the L or R key, the temperature value can be updated.

3. POWER DOWN

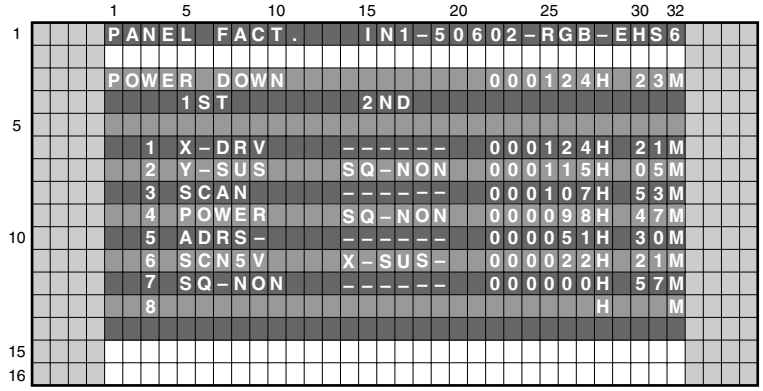

■ Key operation


<DOWN> : Shifting to SHUTDOWN
<UP> : Shifting to PANEL WORKS
<SEL> : MASK ON/OFF
<L/R> : Updating displayed information

• Basically, data acquired with the command QPD are displayed in the columns "1ST" and "2ND, with the values from the hour meter when the power-down occurred.

<Causes of power-down and corresponding OSD indications>

Cause of power-down	OSD Indication	Cause of power-down	OSD Indication
POWER SUPPLY Unit	P-PWR	ADDRESS Assy	ADRS
SCAN Assy	SCAN	X-DRIVE Assy	X-DRV
5V power for SCAN	SCN5V	DCDC for X drive	X-DCDC
Not used		X-SUS	X-SUS
DCDC for Y drive	Y-DCDC	Sequence drive stopped	SQ-NON
Y-SUS	Y-SUS	Specification inability	UNKNOW

4. SHUT DOWN

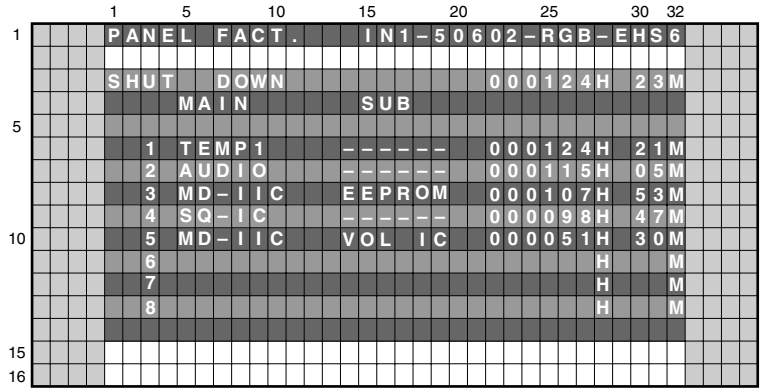

■ Key operation

<DOWN> : Shifting to PANEL-2ADJ (+)
<UP> : Shifting to POWER DOWN
<SEL> : MASK ON/OFF
<L/R> : Updating displayed information


• Basically, data acquired with the command QSD (for MDU-IIC, subcategory data are also displayed) are displayed with the values from the hour meter when the shutdown occurred.

<Causes of shutdown and corresponding OSD indications>

Cause of shutdown (main)	OSD Indication
SEQUENCE PROCESSOR	SQ-IC
MDU-IIC	MDU-IIC (with subcategory)
Abnormality in RST2	RST2
Panel having high temperature	TEMP1
Short-circuited speaker	AUDIO


Cause of shutdown (sub)	OSD Indication
EEPROM	EEPROM (IC3156)
BACKUP	BACKUP (IC3754)
DAC	DAC (IC3302 to IC3304)
Audio IC	VOL-IC (IC3158)
DVI	DVI

5. PANEL-1 ADJ

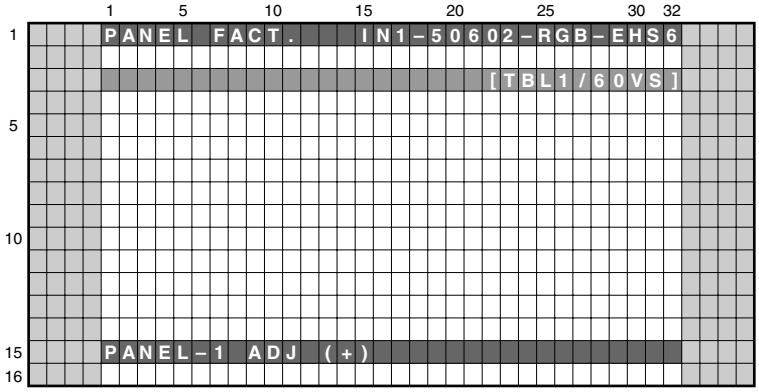

■ Key operation

<DOWN> : Shifting to PANEL-2 ADJ (+)
<UP> : Shifting to POWER DOWN
<SET> : Shifting to the next nested layer
<SEL> : MASK ON/OFF

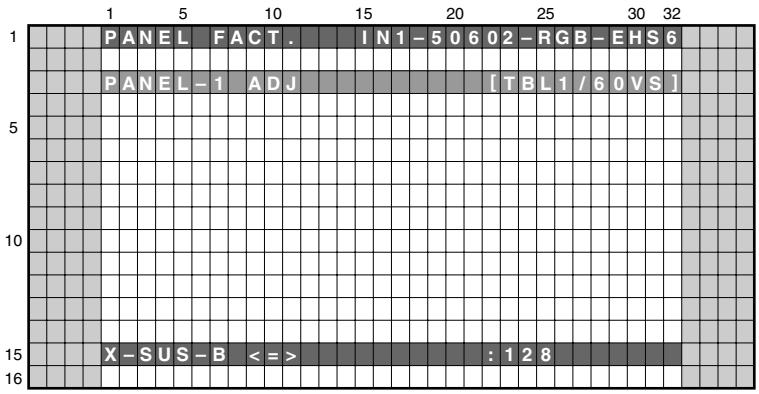

■ Key operation

<DOWN> : Shifting to the next item
<UP> : Shifting to the previous item
<RIGHT> : Adding by one to the adjustment value
<LEFT> : Subtracting by one from the adjustment value
<VOL+> : Adding by 10 to the adjustment value
<VOL-> : Subtracting by 10 from the adjustment value
<SET> : Determining the adjustment value and shifting to the upper layer
<SEL> : MASK ON/OFF


<Drive-sequence indications and indications for the ABL/WB tables>
(The OSD indications are displayed at the right part of the third line for submode PANEL-1 ADJ and subsequent submodes.)

Type of WB/ABL Tables		Type of Drive Sequences					
		Standard Video/MASK ON		Nonstandard Video		PC	
TBL1		48VS		---		60PS	Not used for consumer products
TBL2		50VS		50VN		70PS	
TBL3		60VS		60VN			
TBL4		72VS	Only Mask indication	---			
		75VS		75VN			

<Lower-layer items of PANEL-1 ADJ>


No.	Items	Adjustment/Setting Value	Remarks
1	X-SUS B <=>	120 to 136	Equivalent to XSB
2	Y-SUS B <=>	120 to 136	Equivalent to YSB
3	Y-SUSTAIL T <=>	120 to 136	Equivalent to YTG
4	Y-SUSTAIL W <=>	120 to 136	Equivalent to YTW
5	XY-RST W <=>	120 to 136	Equivalent to RSW
6	VOL SUS <=>	000 to 255	Equivalent to VSU
7	VOL OFFSET <=>	000 to 255	Equivalent to VOF
8	VOL RST P <=>	000 to 255	Equivalent to VRP
9	SUS FREQ. <=>	<=>MODE1 to MODE8<=>	Equivalent to SFR

6. PANEL-2 ADJ

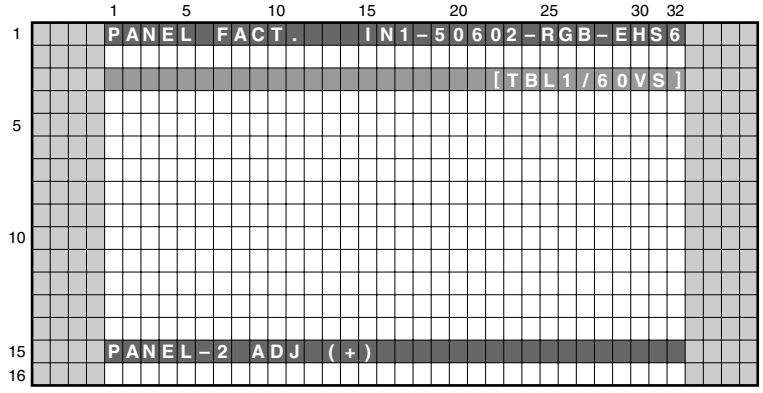

■ Key operation

<DOWN> : Shifting to PANEL REVISE
<UP> : Shifting to PANEL-1 ADJ (+)
<SEL> : MASK ON/OFF
<SET> : Shifting to the next nested layer

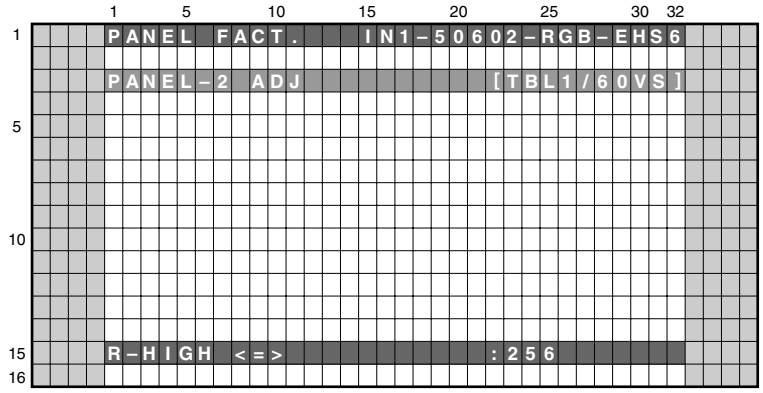


■ Key operation

<DOWN> : Shifting to the next item
<UP> : Shifting to the previous item
<RIGHT> : Adding by one to the adjustment value
<LEFT> : Subtracting by one from the adjustment value
<VOL+> : Adding by 10 to the adjustment value
<VOL-> : Subtracting by 10 from the adjustment value
<SET> : Determining the adjustment value and shifting to the upper layer
<SEL> : MASK ON/OFF

<Lower-layer items of PANEL-2 ADJ>


No.	Items	Adjustment/Setting Value	Remarks
1	R-HIGH <=>	000 to 511	Equivalent to PRH
2	G-HIGH <=>	000 to 511	Equivalent to PGH
3	B-HIGH <=>	000 to 511	Equivalent to PBH
4	R-LOW <=>	000 to 999	Equivalent to PRL
5	G-LOW <=>	000 to 999	Equivalent to PGL
6	B-LOW <=>	000 to 999	Equivalent to PBL
7	ABL <=>	000 to 255	Equivalent to ABL

7. PANEL REVISE

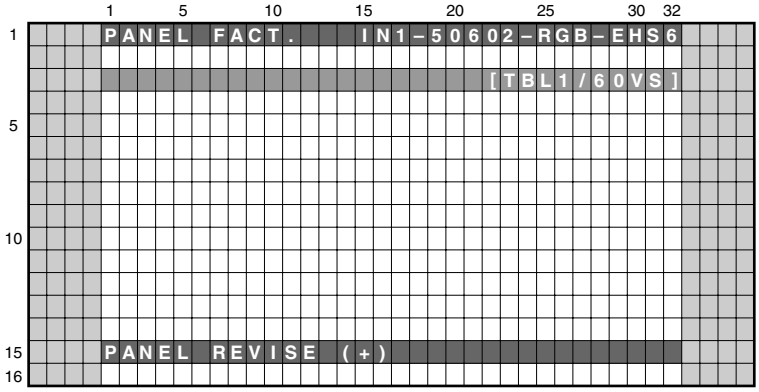

■ Key operation

<DOWN> : Shifting to ETC.(+)
<UP> : Shifting to PANEL-2 ADJ (+)
<SEL> : MASK ON/OFF
<SET> : Shifting to the next nested layer

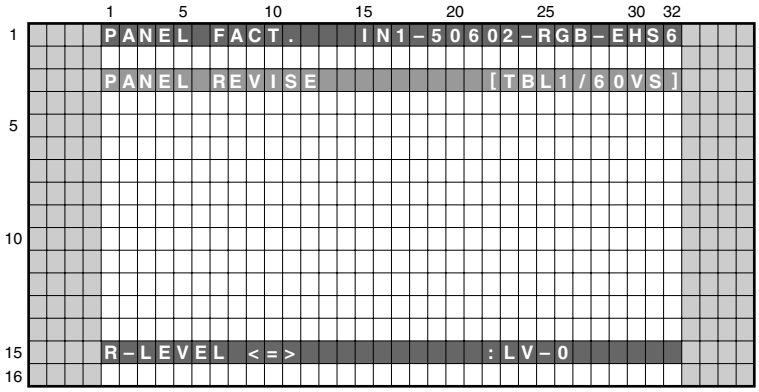


■ Key operation

<DOWN> : Shifting to the next item
<UP> : Shifting to the previous item
<RIGHT> : Adding by one to the adjustment value
<LEFT> : Subtracting by one from the adjustment value
<VOL+> : Adding by 10 to the adjustment value
<VOL-> : Subtracting by 10 from the adjustment value
<SET> : Determining the setting value and shifting to the upper layer
<SEL> : MASK ON/OFF

<Lower-layer items of PANEL REVISE>


No.	Items	Adjustment/Setting Value	Remarks
1	R-LEVEL <=>	<=>LV-0 to LV-7<=>	Equivalent to RRL
2	G-LEVEL <=>	<=>LV-0 to LV-7<=>	Equivalent to RGL
3	B-LEVEL <=>	<=>LV-0 to LV-7<=>	Equivalent to RBL

8. ETC.

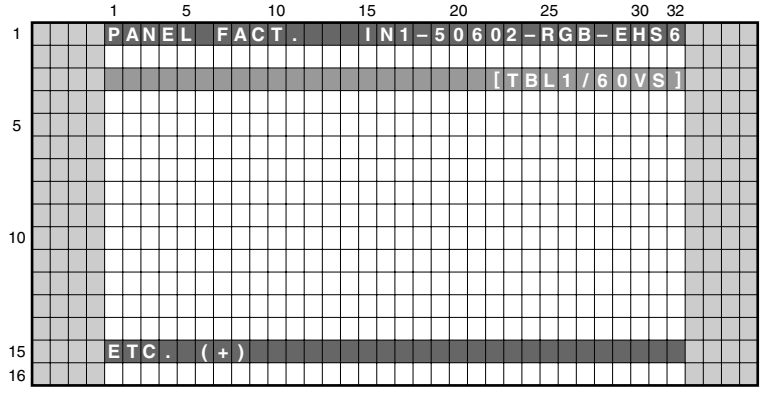

■ Key operation

<DOWN> : Shifting to MASK SETUP (+)
<UP> : Shifting to PANEL REVISE (+)
<SEL> : MASK ON/OFF
<SET> : Shifting to the next nested layer

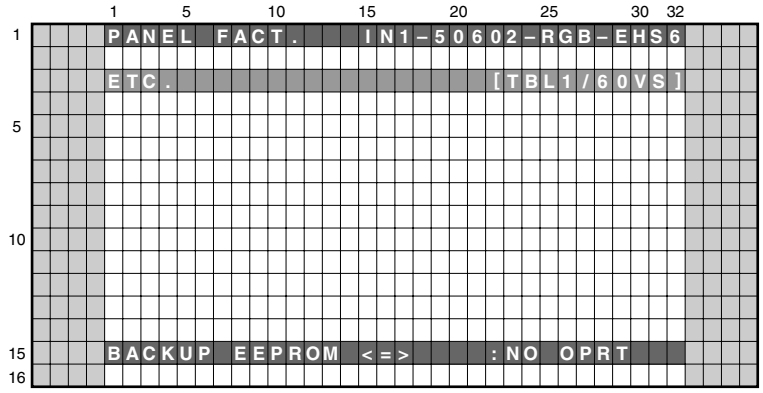

■ Key operation


<DOWN> : Shifting to the next item
<UP> : Shifting to the previous item
<RIGHT> : Adding by one to the adjustment value
<LEFT> : Subtracting by one from the adjustment value
<SET> : Determining the setting value and shifting to the upper layer
<SEL> : MASK ON/OFF

<Lower-layer items of ETC.>

No.	Items	Adjustment/Setting Value	Remarks
1	BACKUP DATA <=>	<=>NO OPRT<=>TRANSFER<=>	"ERR" is indicated when no data are in the backup EEPROM. To activate the option to select TRANSFER, press the SET key about 5 seconds. (There is a situation resting more than 5 seconds.)
2	DIGITAL EEPROM <=>	<=>NO OPRT<=>REPAIR/DELETE<=>	"DELETE" is indicated when the main unit has been already adjusted. To activate the option to select REPAIR/DELETE, press the SET key about 5 seconds. (There is a situation resting more than 5 seconds.)
3	PD INFO. <=>	<=>NO OPRT<=>CLEAR<=>	To activate the option to select CLEAR, repeatedly press the SET key about 5 seconds. (There is a situation resting more than 5 seconds.)
4	SD INFO. <=>	<=>NO OPRT<=>CLEAR<=>	
5	HR-MTR INFO. <=>	<=>NO OPRT<=>CLEAR<=>	
6	PM/B1-B5 <=>	<=>NO OPRT<=>CLEAR<=>	
7	P-COUNT INFO. <=>	<=>NO OPRT<=>CLEAR<=>	


- "NO OPRT" is selected when this submode is entered (to avoid accidental misoperation).
- When each item is set, the process starts then the unit shifts to the upper layer. (When NO OPRT is determined, the unit will shift to the upper layer without doing anything.)
- When data are set to be backed up, if the digital EEPROM has not been adjusted, do the operation of LED pattern No. 7.

9. MASK SETUP

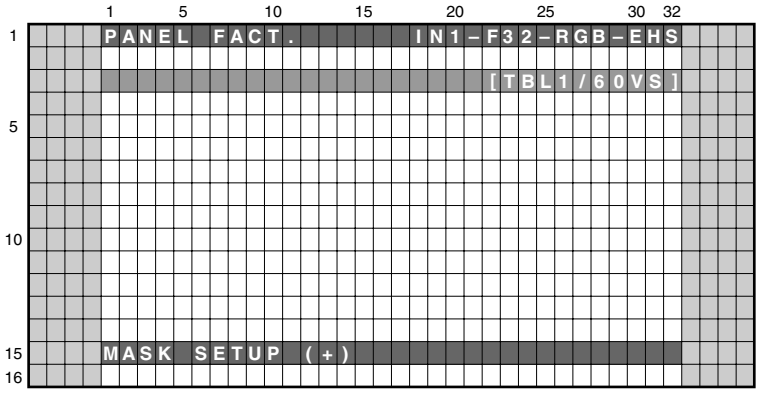

■ Key operation

<DOWN> : Shifting to PANEL INFORMATION
<UP> : Shifting to ETC. (+)
<SEL> : MASK ON/OFF
<SET> : Shifting to the next nested layer

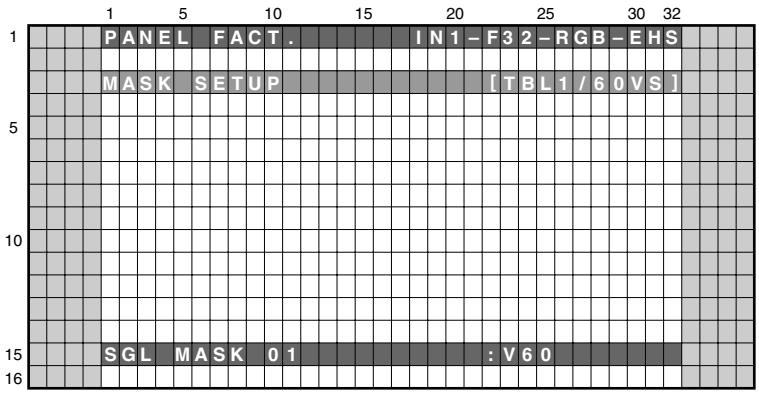

■ Key operation

<DOWN> : Shifting to the next MASK
<UP> : Shifting to the previous MASK
<RIGHT> : Changing MASK sequence (+)
<LEFT> : Changing MASK sequence (-)
<SET> : Determining the setting value and shifting to the upper layer
<SEL> : MASK ON/OFF


<Lower-layer items of MASK SETUP>

No.	Items	Adjustment/Setting Value	Remarks
1	MASK OFF		Equivalent to MKS+S00
2	SGL MASK 01 <=>	<=>48V<=>50V<=>60V<=> 60P<=>70P<=>72V<=>75V<=>	Equivalent to MKS+S01
3	SGL MASK 02 <=>		Equivalent to MKS+S02
4	• • •		• • •
5	CMB MASK 09 <=>		Equivalent to MKC+S08
6	CMB MASK 10 <=>		Equivalent to MKC+S09

• With the keys <LEFT> and <RIGHT>, the Panel drive sequence in the MASK indication is changed in the following way:
<=>48V<=>50V<=>60V<=>72V<=>75V<=>60P<=>70P<=>

7.1.4 OPERATION WHEN THE MEDIA RECEIVER IS NOT CONNECTED

As the connection conditions of the system cables (MDR cable, DVI cable) are usually detected, if no connection, such as cable disconnection, is detected, a warning indication (alternate flashing of the red and blue areas) is displayed on the mask screen, and the red and green LEDs flash alternately. Then after about 30 seconds, the power is automatically turned off.

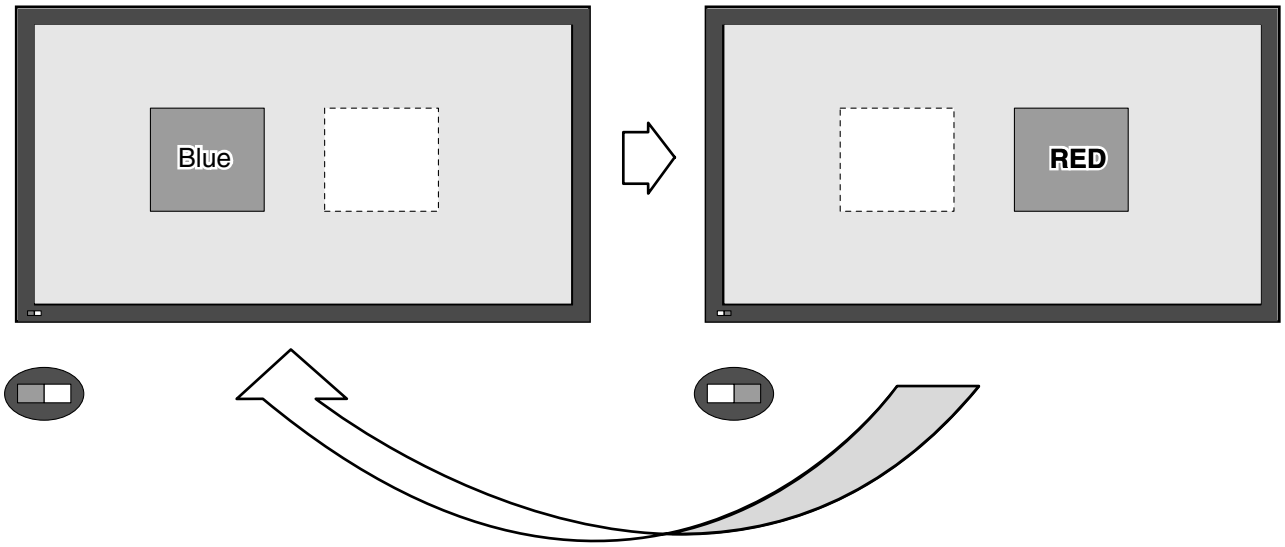

Alternate flashing at intervals of about 1 second

To operate the panel without the Media Receiver, there are the following two ways:

1. Operation-without-the-Media-Receiver mode

Input the "SYS S00" RS232C command. The status of the LEDs changes to that in normal operation mode.

Note: Turning the AC switch to OFF then ON also maintains this mode. However, once the unit is connected with the Media Receiver using the System cable, this mode is automatically canceled.

2. DVI mode

Turn the unit on while DVI SG signals are being input with only the DVI connecter connected. After a warning is displayed for about 5 seconds, the unit is ready to display the screen of the input signal. (Blue LED lit)

Notes: • Although the output from XGA (43 inch) and WXGA (50 inch) can be input to the unit, this is not a mode open to general users. (With some signals, errors such as power-down may occur.)

7.1.5 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM

Function: To prevent a power-down from being generated, operation of only the digital-signal processing and audio circuits are enabled, and power is not supplied to the panel driving system (large-signal system).

Usages: 1. In a case where a check is required of signals' being correctly output to the driving systems during a repair, etc.
2. In a case where diagnosis is required for judging whether the power to the large-signal system or small-signal system has been down when a power-down occurred

Methods: 1. Short-circuit the points (see Fig. 4 below) on the face and on the reverse side of the HD DIGITAL Assy.
2. Issue the "DRV S00" RS-232C command. (Command for turning the function off: DRV S01)

Notes:
- When the power to the large-signal system is off, as the PD signal is muted, power-downs other than PS_PD are not activated.
- As soon as the clips are removed while the power to the large-signal system is off, a power-down will occur. Be sure to turn the power off before removing the clips.
- While this function is activated with RS-232C commands, it is possible to issue "DRV S01" (for turning the function off) while the power is on. However, as it may damage the unit, turn the power off before issuing the "DRV S01" command.
- Although the "DRV S00/S01" RS-232C commands are valid during Standby mode, once the main power is turned off, the unit will return to "DRV S01."

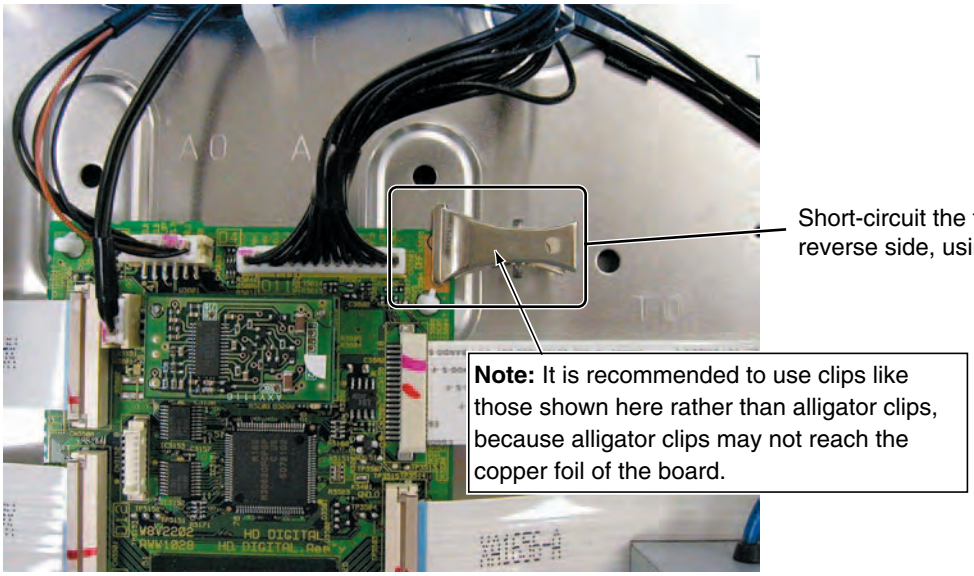


Fig. 4 Position of DRIVE OFF

7.1.6 BACKUP WHEN THE MAIN UNIT IS ADJUSTED

■ Outline

Adjustment data set at the factory are stored in the EEPROM (IC****/4K) on the HD DIGITAL Assy. Those adjustment data are automatically backed up in the EEPROM (backup EEPROM: IC****) on the HD AUDIO Assy. Therefore, even if the HD DIGITAL Assy is replaced, the adjustment data can be restored by copying the backup data, which enables you to omit newly performing adjustments on the main unit.

■ Data to be backed up

- Voltage margin adjustment values
- Data on the hour meter
- Upper limit of power-adjustment value
- Data on the pulse meter
- Panel WB adjustment values
- Serial number
- Drive waveform adjustment values
- Data of the P-ON counter
- PD/SD histories

■ How to copy the backup data

1. When the HD DIGITAL Assy is replaced with that for service (normal servicing)
   (In a case where no data are on the DIG. EEP, and backup data have been adjusted)

   Command: "BCP" (Effective during FAY)
   Factory Menu

   PANEL INFORMATION
   ▼ (down)
   • • •
   ▼ (down)
   ETC. (+)
   [set]
   BACKUP DATA: NO OPRT
   >> (right)
   BACKUP DATA: TRANSFER
   [set] (Press and hold for 5 seconds.)

   - After the HD DIGITAL Assy is replaced with that for service, check that “DIG. EEP: NO DATA!” is displayed on the Panel Information screen of the Factory Menu.
   - If this command is not executed, the red LED lights, and the blue LED flashes, to warn you that copying of the backup adjustment data for the main unit failed.
   - If both the HD DIGITAL Assy and HD AUDIO Assy are to be replaced, first replace the HD AUDIO Assy and set the unit to Standby mode. Then replace the HD DIGITAL Assy.

2. In a case where a HD DIGITAL Assy that was mounted on another unit is to be reused as a service part.

   Command: "FAJ" (Effective during FAY)
   Factory Menu: PANEL FACT => ETC => DIGITAL EEPROM: DELETE

   PANEL INFORMATION
   ▼ (down)
   • • •
   ▼ (down)
   ETC. (+)
   [set]
   BACKUP DATA: NO OPRT
   ▼ (down)
   DIGITAL EEPROM: NO OPRT
   >> (right)
   DIGITAL EEPROM: REPAIR
   [set] (Press and hold for 5 seconds.)

   - If the HD DIGITAL Assy of Unit 1 is mounted to be reused in Unit 2 to be repaired, and Unit 2 enters Standby mode, the adjustment data and histories stored in Unit 1 are erased, and those of Unit 2 are copied. Once overwritten, the original data will not be restored. After the Assy is replaced, be sure to enter Factory mode, using the remote control unit for servicing, and perform the procedures described herein. Or, before mounting an Assy to be reused as a service Assy, perform these procedures then mount it on the product to be repaired.

3. In a case where the HD DIGITAL Assy is replaced with one for servicing because of a defective EEPROM on the original Assy and manual adjustments are to be performed
   (In a case where no data are stored in the HD DIGITAL Assy or as backup, and the values that have been manually adjusted on Service Menu are to be applied as adjustment data for the main unit)

Command: "UAJ" (Effective during FAY)
Factory Menu

PANEL INFORMATION
▼ (down)
• • •
▼ (down)
ETC. (+)
[set]
BACKUP DATA: NO OPRT
▼ (down)
DIGITAL EEPROM: NO OPRT
>> (right)
DIGITAL EEPROM: REPAIR
[set] (Press and hold for 5 seconds.)

- If the HD DIGITAL Assy with which adjustment data for the main unit have been copied is mounted, the above procedures are not necessary after manual adjustment.
  (The indication "DIGITAL EEPROM: REPAIR" will not be displayed.)

7.1.7 HOW TO CLEAR HISTORY DATA

■ Clearing data on various histories when the HD DIGITAL Assy is replaced

Other than adjustment data for the main unit, data to be backed up include the accumulated power-on time and a history of defective parts, which are data updated and stored in memory. Among those data, some are required to be cleared when the HD DIGITAL Assy is replaced for servicing, as shown below:

Item	Backed-up data	Type of servicing			RS-232C command
		Panel replacement	Replacement of the power-supply block	Others	
Hour meter	Accumulated display	To be cleared	Not to be cleared	Not to be cleared	CHM
SD history	Point where an SD occurred and data on the hour meter	To be cleared	Not to be cleared	Not to be cleared	CSD
PD history	Point where a PD occurred and data on the hour meter	To be cleared	Not to be cleared	Not to be cleared	CPD
Pulse meter	Accumulated number of pulses of the Panel (5 blocks)	To be cleared (essential)	Not to be cleared	Not to be cleared	CPM
Accumulated number of power-ons	Accumulated number of RELAY_ONs	Not to be cleared	To be cleared (essential)	Not to be cleared	CPC

Notes:

1: With the PDP-506P/436P and subsequent models, because various compensation functions use pulse-meter data for calculating compensation values, if related Assys are replaced, data on various histories must be cleared.

2: To clear data using RS-232C commands, after entering Factory mode (by sending FAY or PFY), issue a corresponding command. Otherwise, the command will not be executed.

■ How to clear the history for each item on the Factory Menu

Start point of Panel Factory

PANEL INFORMATION


▼ (down)

• • •

▼ (down)

ETC. (+)

[set]

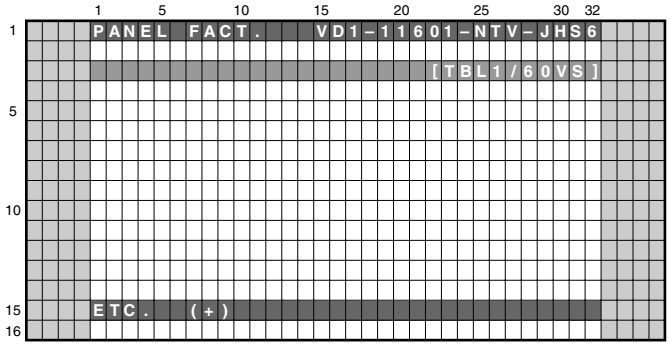

BACKUP DATA

▼ (down)

DIGITAL EEPROM

▼ (down)

Clearing the PD history

PD INFO: NO OPRT >> (right) PD INFO: CLEAR

[set] (Press and hold for 5 seconds.)

▼ (down)

Clearing the SD history

SD INFO: NO OPRT >> (right) SD INFO: CLEAR


[set] (Press and hold for 5 seconds.)

▼ (down)

Clearing the data on the hour meter

HR-MTR INFO: NO OPRT >> (right) HR-MTR INFO: CLEAR

[set] (Press and hold for 5 seconds.)

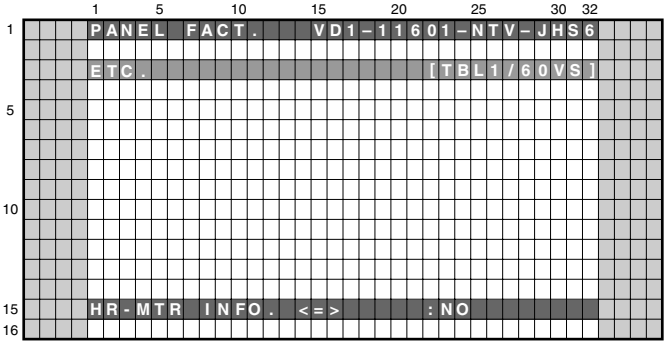

▼ (down)

Clearing the data on the pulse meter

PM/B1-BS INFO: NO OPRT >> (right) PM/B1-BS INFO: CLEAR

[set] (Press and hold for 5 seconds.)

▼ (down)

Clearing the data on the number of power-ons

P COUNT INFO: NO OPRT >> (right) P COUNT INFO: CLEAR

[set] (Press and hold for 5 seconds.)

7.1.8 DISASSEMBLY


Note : Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

1 Rear Case (506)

① Remove the two screws.
② Remove the tweleve screws.
③ Remove the fourteen screws.


Note ∗1:
When reassembling, first secure the screws for these holes to position the rear case (506) correctly.
The hole of a left side, the screw tighten the hole of the right side next first.


④ Remove the rear case (506).

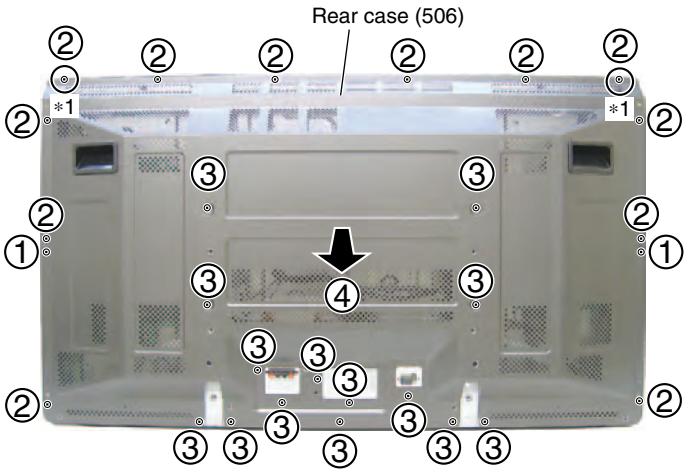

2 Control Plate Section


① Remove the two screws.
② Remove the two screws.
③ Remove the two hexagon head screws.
④ Disconnect the connector.
⑤ Remove the three screws.
⑥ Remove the control plate.

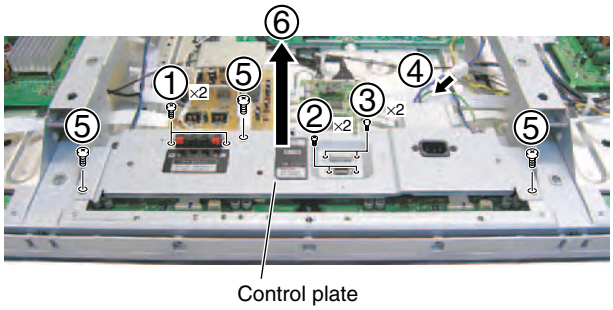

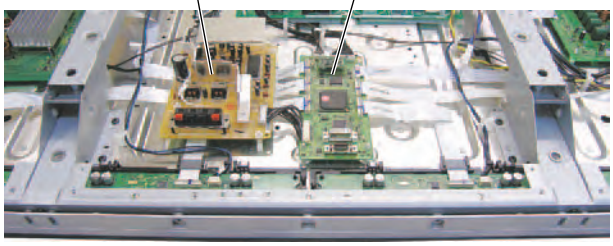


3 Front Case Assy (506PE)

① Remove the four screw rivets.

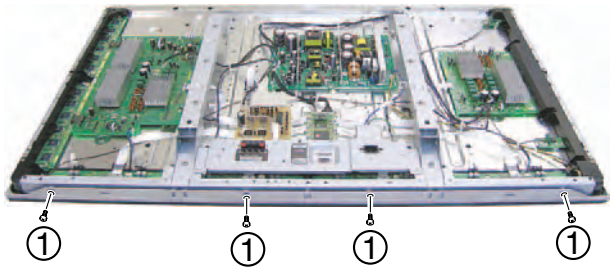


② Remove the front case Assy (506PE).

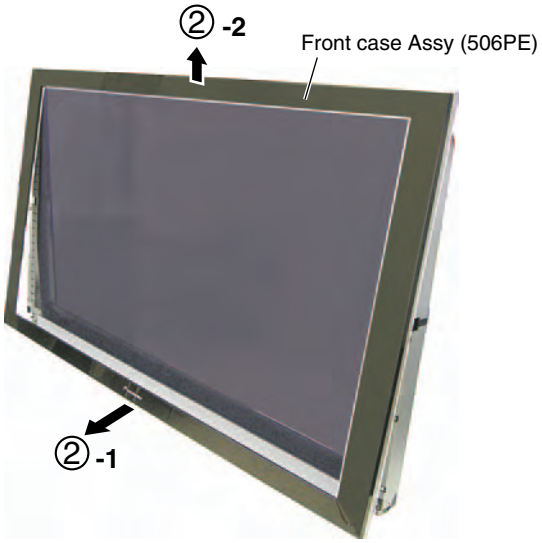


• When only the front case assy (506PE) is to be removed

The front case assy (506PE) can be removed without removing the rear case (506) beforehand.
Remove the two screws and four screw rivets shown below:

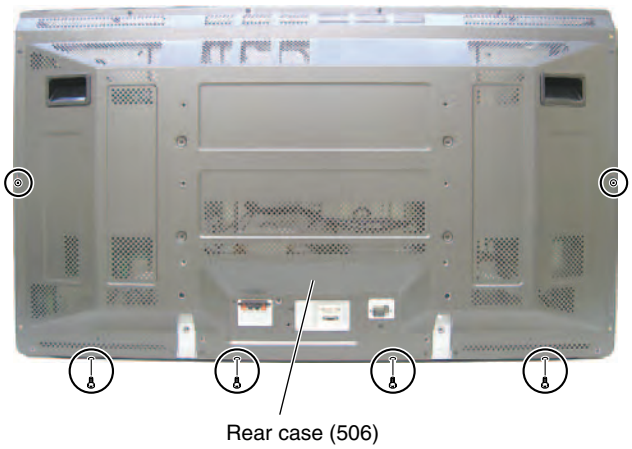


• Note when the front case assy (506PE) is to be reattached

① Hook the upper part of the Front Case Assy (506PE) on the upper part of the Front Panel, leaving a fist-sized gap between the bottom and the lower part of the Front Case Assy.
② Push the couplers of the Front Case Assy (506PE) into the rear case (506).
③ Make sure that all the couplers have been pushed into the rear case (506).

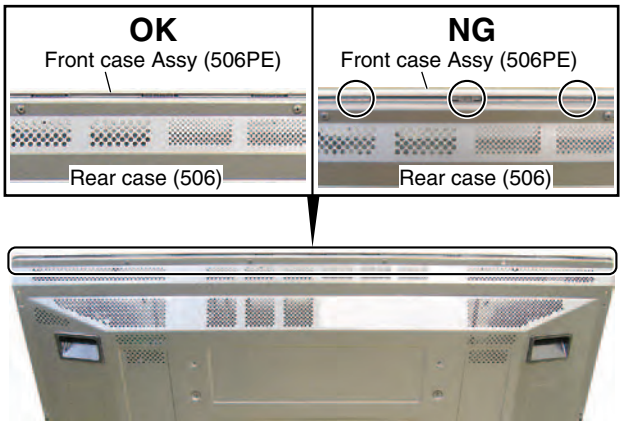


4 Front Chassis H Assy (50)

① Remove the two screws.
② Remove the two screws.
③ Remove the two screws.
④ Disconnect the connector.
⑤ Remove the front chassis H Assy (50).

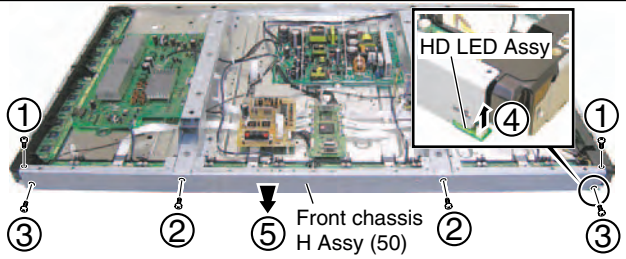


5 SUS CLAMP 1 and 2 Assys


① Remove the two screws.
② Remove the panel holder V1 (50) and V2 (50)s.
(Unhook the six hooks.)

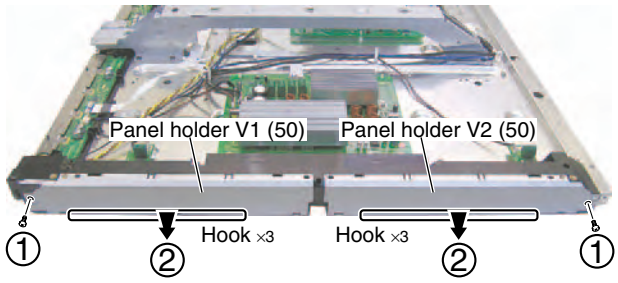

③ Release the housing wire.
④ Remove the four screws.
⑤ Remove the front chassis VR (50).

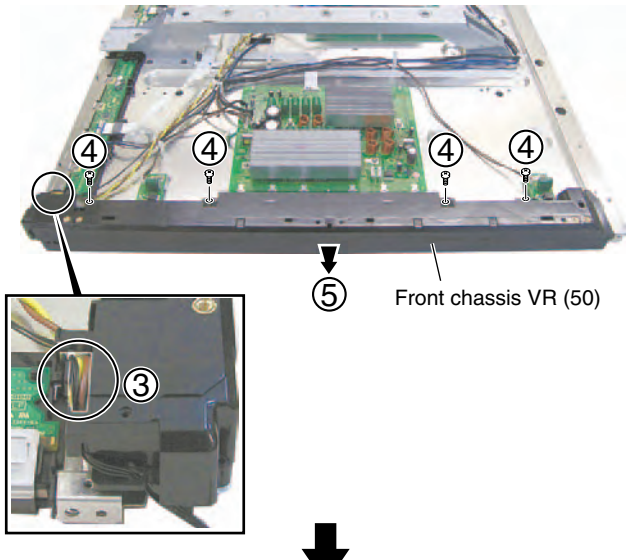


⑥ Remove the two screws.
⑦ Remove the two screws.
⑧ Unhook the two PCB spacers.
⑨ Remove the SUS CLAMP 1 and 2 Assys.

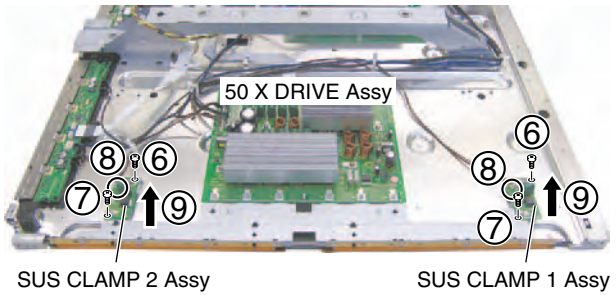

6 50 SCAN A and B Assys

① Remove the two screws.


② Remove the panel holder V1 (50) and V2 (50)s.
(Unhook the six hooks.)

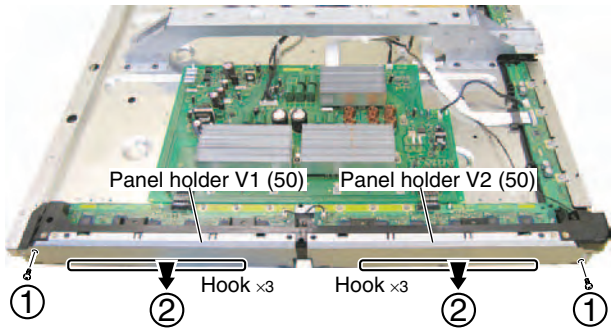

③ Release the housing wire.

④ Remove the three screws.

⑤ Remove the front chassis VL (50).

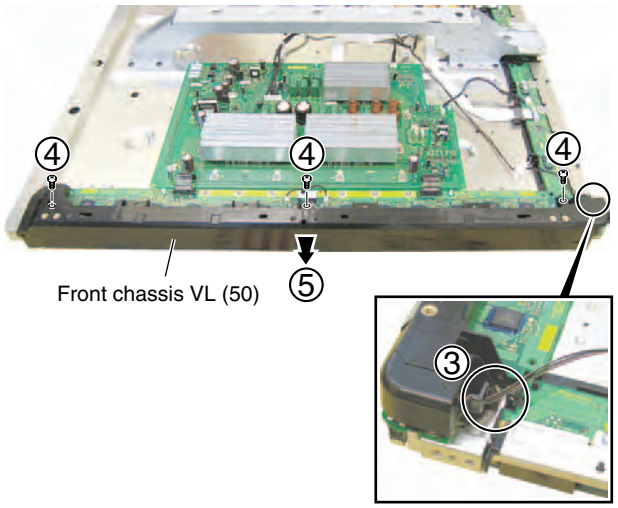


⑥ Remove the four screws.

⑦ Disconnect the two pin connectors.

⑧ Unhook the seven PCB spacers.

⑨ Remove the 50 SCAN A and B Assys.

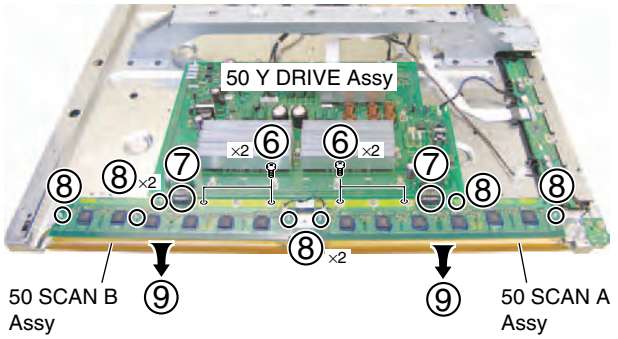

7.2 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.


● **List of IC**

AN16025A, TC7SH08FUS1, TC74VHC00FTS1, AXF1140, AXF1142, TC74VHC08FTS1, AXF1141, M62334FP, TC74VHC123AFTS1, PST3610UR, PEG122C, NJW1183L


■ AN16025A (50 SCAN A ASSY : IC2701 - IC2706) (50 SCAN B ASSY : IC2801 - IC2806)

• Plasma Display Panel IC

● **Pin Arrangement (Top view)**

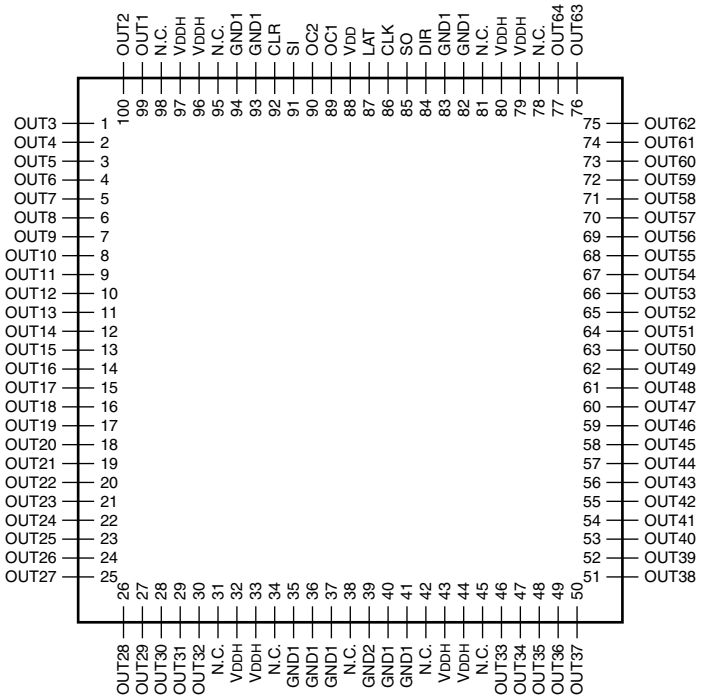

● **Block Diagram**

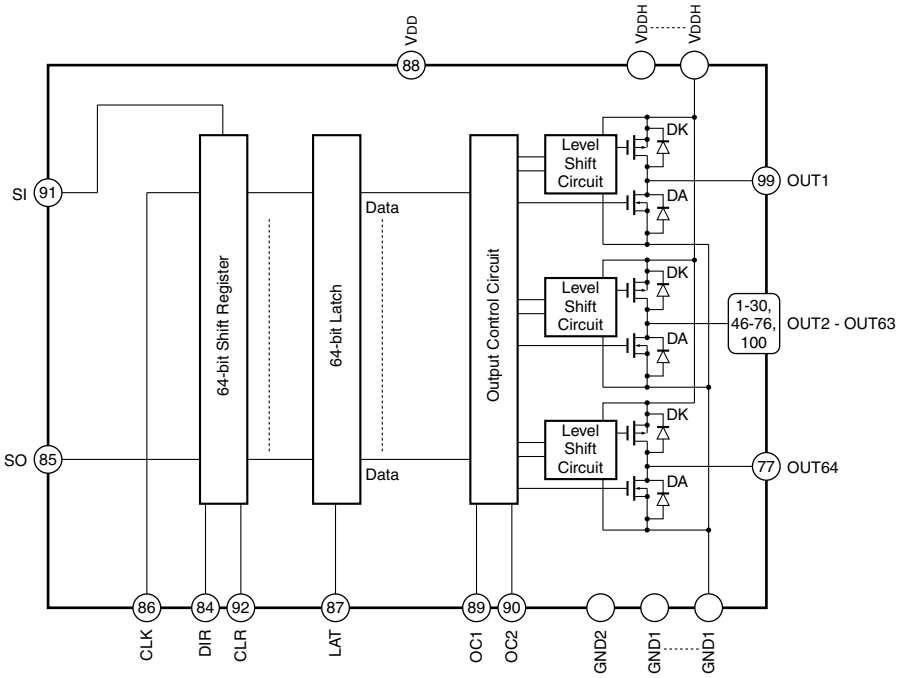

● Pin Function


No.	Pin Name	I/O	Pin Function
1 - 30	OUT3 - OUT32	O	High-voltage push-pull output
31	N.C.	–	Not connected
32 - 33	V_{DDH}	–	High-voltage circuit supply
34	N.C.	–	Not connected
35 - 37	GND1	–	Ground
38	N.C.	–	Not connected
39	GND2	–	Ground
40 - 41	GND1	–	Ground
42	N.C.	–	Not connected
43 - 44	V_{DDH}	–	High-voltage circuit supply
45	N.C.	–	Not connected
46 - 77	OUT33 - OUT64	O	High-voltage push-pull output
78	N.C.	–	Not connected
79 - 80	V_{DDH}	–	High-voltage circuit supply
81	N.C.	–	Not connected
82 - 83	GND1	–	Ground
84	DIR	I	Setup of shift register shift direction L = Shift into reverse (SO → SI) H = Shift forward (SI → SO)
85	SO	I/O	Serial data input / output
86	CLK	I	Serial clock input Fetch SI or SO data to shift register by CLK rise edge
87	LAT	I	LAT data input L = Transfer shift register data to output latch H = Hold data to output latch
88	V_{DD}	–	Logic supply
89	OC1	I	Output control Control output according to the right truth value table
90	OC2	I	
91	SI	I/O	Serial data input / output
92	CLR	I	All output reset CLR pin : L → Normal operation CLR pin : H → All output High
93 - 94	GND1	–	Ground
95	N.C.	–	Not connected
96 - 97	V_{DDH}	–	High-voltage circuit supply
98	N.C.	–	Not connected
99 - 100	OUT1 - OUT2	O	High-voltage push-pull output

OC1	OC2	OUT
L	L	ALL Hi-Z
L	H	DATA
H	L	ALL L
H	H	ALL H

■ TC7SH08FUS1 (50 SCAN B ASSY : IC2807)

• 2-input AND Gate

● Pin Arrangement (Top view) / Block Diagram

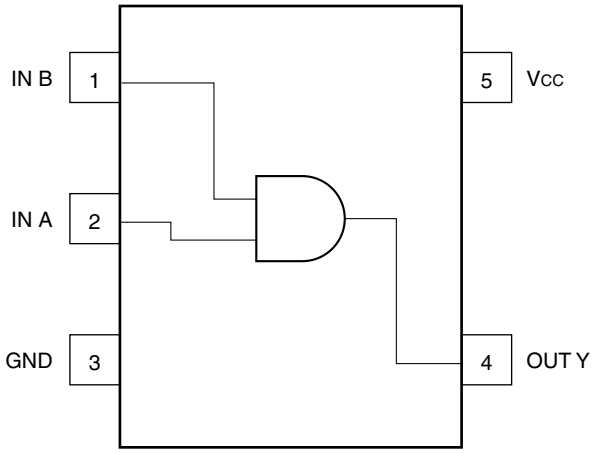


● Truth Table

A	B	Y
L	L	L
L	H	L
H	L	L
H	H	H

■ TC74VHC00FTS1 (50 X DRIVE ASSY : IC1002)

• Quad 2-Input NAND Gate

● Block Diagram

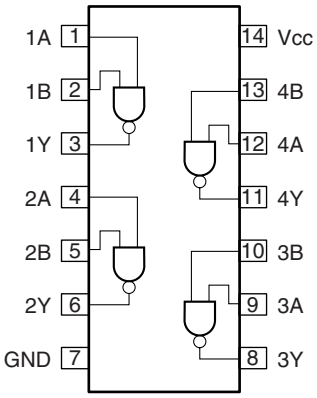


● Truth Table

A	B	Y
L	L	H
L	H	H
H	L	H
H	H	L

■ AXF1140 (50 X DRIVE ASSY : IC1202)

• X Mask Module


● Block Diagram

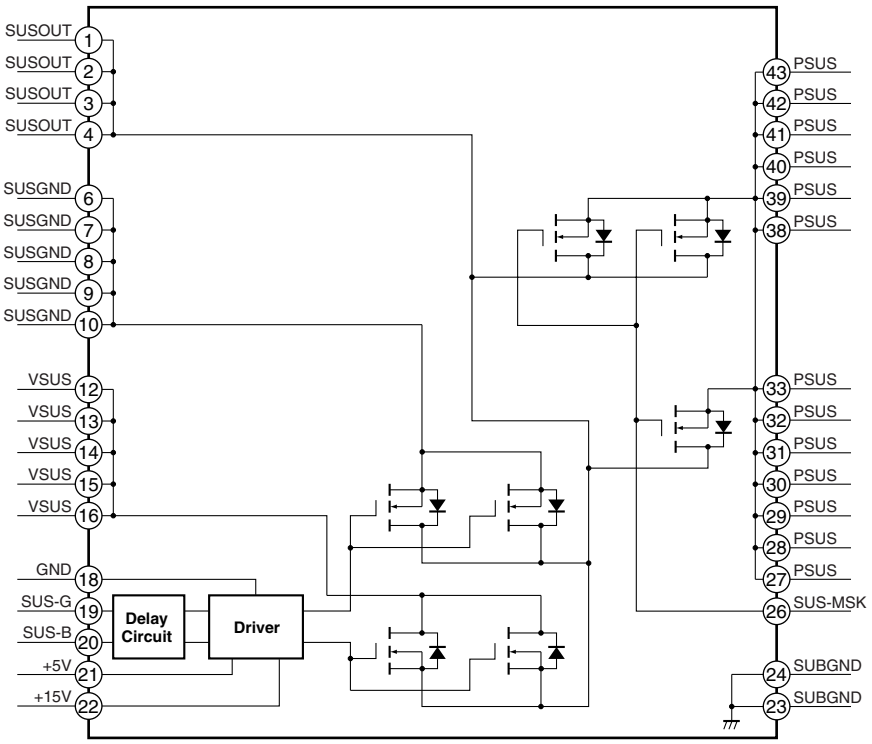

■ AXF1142 (50 X DRIVE ASSY : IC1101)
(50 Y DRIVE ASSY : IC2101)

• DK Module


● Block Diagram

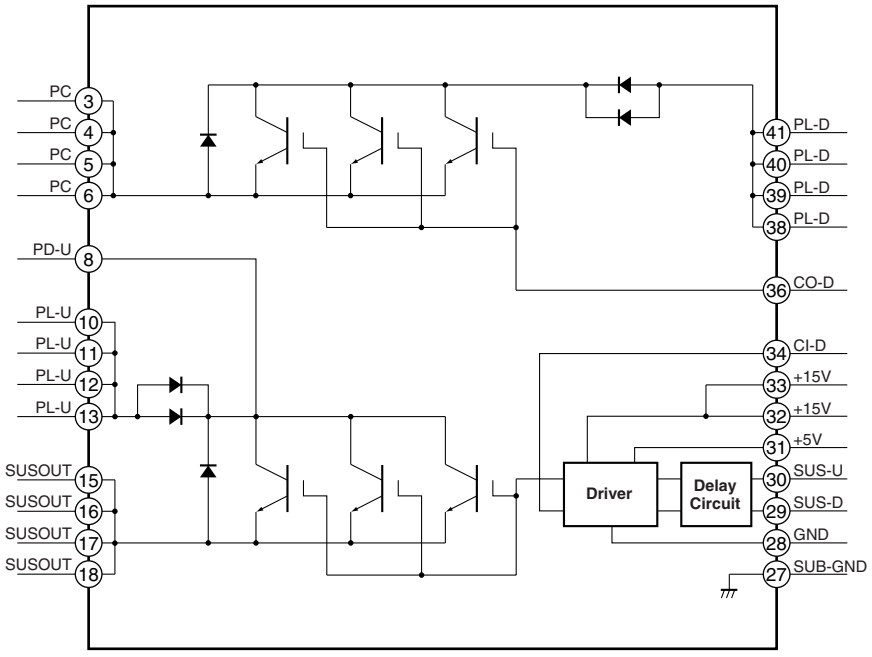

■ TC74VHC08FTS1 (50 Y DRIVE ASSY : IC2003, IC2005)

• Quad 2-input AND Gate

● Pin Arrangement (Top view) / Block Diagram

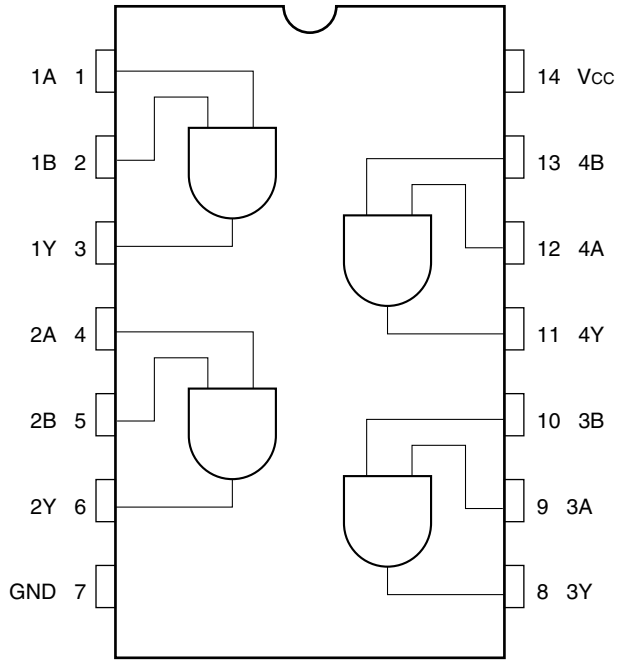


● Truth Table

A	B	Y
L	L	L
L	H	L
H	L	L
H	H	H

■ AXF1141 (50 Y DRIVE ASSY : IC2252, IC2253)

• Y Mask Module


● Block Diagram

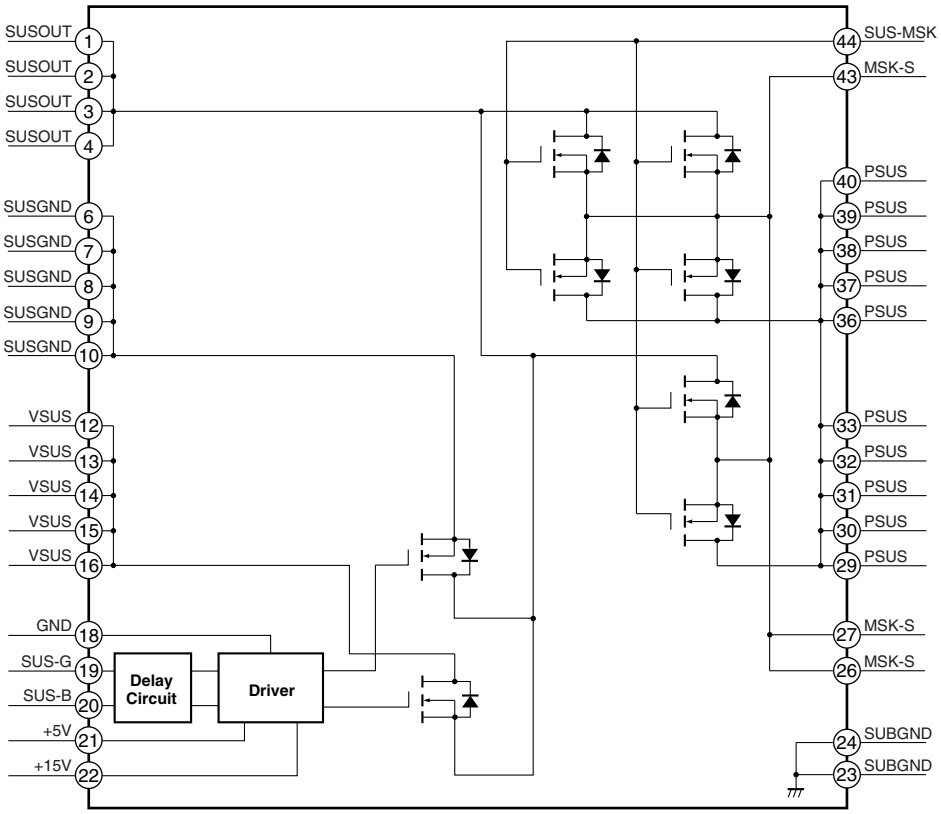

■ M62334FP (HD DIGITAL ASSY : IC3157)

• 8-bit 4ch I2C Bus D-A Converter with Buffer Amplifier


● Pin Arrangement (Top view)

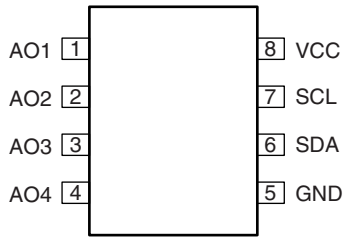

● Pin Function

No.	Pin Name	Pin Function
1	AO1	8-bit resolution D-A converter output
2	AO2	
3	AO3	
4	AO4	
5	GND	Ground
6	SDA	Serial data input
7	SCL	Serial clock input
8	VCC	Power supply


● Block Diagram

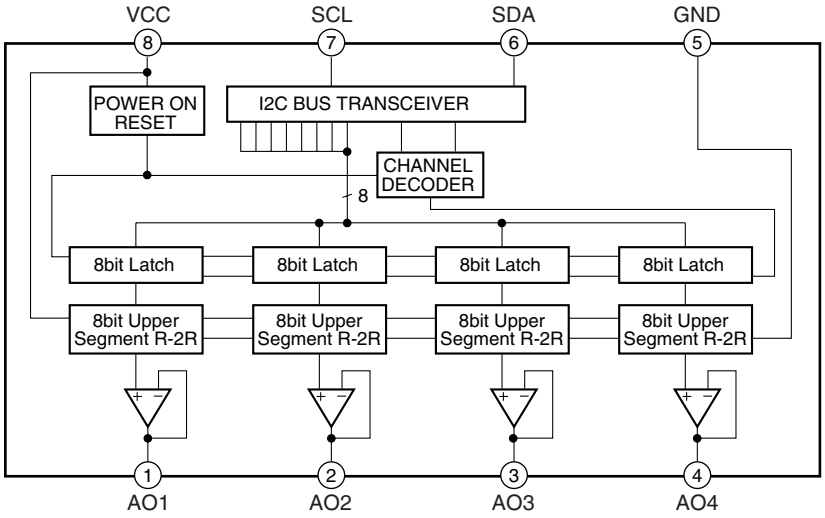

■ TC74VHC123AFTS1 (HD DIGITAL ASSY : IC3160)

• Dual Monostable Multivibrator/AFN/AFT Retriggerble

● Pin Arrangement (Top view)

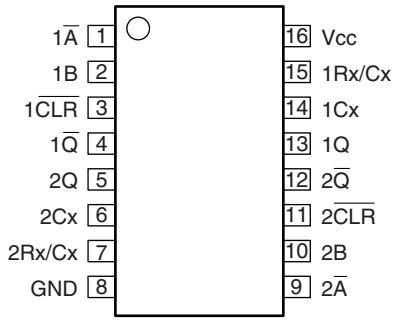

● Truth Table


Inputs			Outputs		Note
$\overline{A}$	B	$\overline{CLR}$	Q	$\overline{Q}$	
↓	H	H	⎍	⎍	Output enable
X	L	H	L	H	Inhibit
H	X	H	L	H	Inhibit
L	↑	H	⎍	⎍	Output enable
L	H	↑	⎍	⎍	Output enable
X	X	L	L	H	Reset

X: Don't care

■ PST3610UR (HD DIGITAL ASSY : IC3304)

• Reset IC


● Pin Arrangement (Top view)

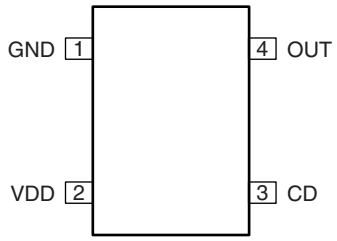

● Pin Function

No.	Pin Name	Pin Function
1	GND	Ground
2	VDD	Power supply / Voltage detection
3	CD	Capacitor connect pin for delay
4	OUT	Reset signal output


● Block Diagram

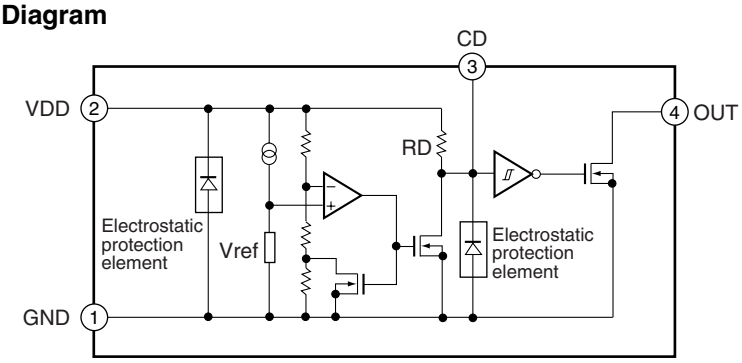

■ PEG122C (HD DIGITAL ASSY : IC3401)

• LSI for PDP video processing (SEQUENCE PROCESSOR)

● Pin Arrangement (Top view)

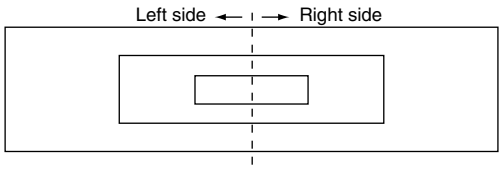

● Left side (Top view)

	1	2	3	4	5	6	7	8	9	10	11	12	13	
A	BAI5	GAI1	GAI4	GAI9	RAI4	RAI9	BBI0	BBI6	GBI1	GBI5	RBI1	RBI7	TRNSEND1	A
B	BAI4	GAI0	GND33	GAI8	RAI3	RAI8	HDI	BBI5	GBI0	GDN33	RBI0	RBI6	TRNSEND0	B
C	BAI3	BAI9	VDD33	GAI7	RAI2	RAI7	VDI	BBI4	BBI9	VDD33	GBI9	RBI5	VDD33	C
D	BAI2	BAI8	GAI3	GAI6	RAI1	RAI6	DEI	BBI3	BBI8	GBI4	GBI8	RBI4	RBI9	D
E	BAI1	BAI7	GAI2	GAI5	RAI0	RAI5	DCLKI	BBI2	BBI7	GBI3	GBI7	RBI3	RBI8	E
F	BAI0	BAI6	PEAK	APLDT	THEATER	GND12	VDD12	BBI1	VDD12	GBI2	GBI6	RBI2	VDD12	F
G	XSCAN20	XSCAN19	XSCAN18	XSCAN17	XSCAN16	VDD12								G
H	XSCAN15	XSCAN14	XSCAN13	XSCAN12	XSCAN11	VDDTC12								H
J	XSCAN10	GND33	VDD33	XSCAN9	GNDTC12	VDD12								J
K	XSCAN8	XSCAN7	XSCAN6	XSCAN5	XSCAN4	VDDTC12								K
L	XSCAN3	XSCAN2	XSCAN1	XSCAN0	GND12	VDD12					GND12	GND12	GND12	L
M	XSUS10	XSUS9	XSUS8	XSUS7	GNDTC12	VDD12					GND12	GND12	GND12	M
N	XSUS6	GND33	VDD33	XSUS5	GND12	VDD12					GND12	GND12	GND12	N
P	XSUS4	XSUS3	XSUS2	XSUS1	XSUS0	VDDTC12					GND12	GND12	GND12	P
R	ADRS0	ADRS1	ADRS2	ADRS3	GNDTC12	VDD12					GND12	GND12	GND12	R
T	TEST_I0	GND33	VDD33	TEST_I1	TEST_I2	TEST_R					GND12	GND12	GND12	T
U	TXOUTM063	TXOUTP063	GNDLA	VDDLA	GNDLA	VDDL12								U
V	TXCLKOUTM06	TXCLKOUTP06	GNDLA	VDDLA	GNDLA	VDDLA								V
W	TXOUTM062	TXOUTP062	GNDLA	VDDLA	GNDLA	VDDLA								W
Y	TXOUTM061	TXOUTP061	GNDLA	VDDLA	GNDLA	VDDL12								Y
AA	TXOUTM060	TXOUTP060	GNDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDL12	VDDLA	VDDLA	VDDL12	VDDLA	VDDLA	AA
AB	TXOUTM073	TXOUTP073	GNDLA	VDDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	VDDBG	REFIN	AB
AC	TXCLKOUTM07	TXCLKOUTP07	GNDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	AC
AD	TXOUTM072	TXOUTP072	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	AD
AE	TXOUTM071	TXOUTP071	GNDLA	TXOUTP033	TXCLKOUTP03	TXOUTP032	TXOUTP031	TXOUTP030	TXOUTP023	TXCLKOUTP02	TXOUTP022	TXOUTP021	TXOUTP020	AE
AF	TXOUTM070	TXOUTP070	GNDLA	TXOUTM033	TXCLKOUTM03	TXOUTM032	TXOUTM031	TXOUTM030	TXOUTM023	TXCLKOUTM02	TXOUTM022	TXOUTM021	TXOUTM020	AF


● Right side (Top view)

	14	15	16	17	18	19	20	21	22	23	24	25	26	
A	CLKD	VSSPA	EXDI011	EXDI09	EXA4	EXA10	EXA2	EXA16	EXA20	CSCS_N1	CSCS_N2	CSIOSCK1	CSIORXD	A
B	CSRD_N	VCCPA	EXDI04	GND33	EXA3	EXA9	EXA1	EXA15	EXA19	CSCS_N0	GND33	TCRAM_MONITOR0	TCRAM_MONITOR1	B
C	CLKS	CLK_MONI	EXDI012	VDD33	EXDI00	EXA8	CSWR_N	EXA14	EXA18	UARTRXD	VDD33	TCRAM_MONITOR2	CSIORQ	C
D	VSSPB	EXDI014	EXDI05	EXDI02	EXDI08	EXA7	EXA0	EXA13	EXA17	UARTTXD	CS10TXD	RESETX	SDIJTAG	D
E	VCCPB	EXDI07	EXDI013	EXDI010	EXDI01	EXA6	EXA11	EXA12	CSEXWAIT_N	SDITRST_N	SDITCK	SDIDBI_N	SDITMS	E
F	LPFMONI	EXDI015	EXDI06	EXDI03	VDD12	EXA5	VDD12	GND12	SDITDO	SDITDI	GPI000	GPI001	GPI002	F
G								VDD12	GPI003	GPI004	GPI005	GPI006	GPI007	G
H								VDDTC12	YSCAN20	YSCAN19	YSCAN18	YSCAN17	YSCAN16	H
J								VDD12	GNDTC12	YSCAN15	VDD33	GND33	YSCAN14	J
K								VDDTC12	YSCAN13	YSCAN12	YSCAN11	YSCAN10	YSCAN9	K
L	GND12	GND12	GND12					VDD12	GND12	YSCAN8	YSCAN7	YSCAN6	YSCAN5	L
M	GND12	GND12	GND12					VDD12	GNDTC12	YSCAN4	YSCAN3	YSCAN2	YSCAN1	M
N	GND12	GND12	GND12					VDD12	GND12	YSCAN0	VDD33	GND33	VSUS10	N
P	GND12	GND12	GND12					VDDTC12	YSUS9	YSUS8	YSUS7	YSUS6	VSUS5	P
R	GND12	GND12	GND12					VDD12	GNDTC12	YSUS4	YSUS3	YSUS2	VSUS1	R
T	GND12	GND12	GND12					YSUS0	RSV1	RSV0	VDD33	GND33	AFE_PS_N	T
U								VDDL12	GNDLA	VDDLA	GNDLA	TXOUTP050	TXOUTM050	U
V								VDDLA	GNDLA	VDDLA	GNDLA	TXOUTP051	TXOUTM051	V
W								VDDLA	GNDLA	VDDLA	GNDLA	TXOUTP052	TXOUTM052	W
Y								VDDL12	GNDLA	VDDLA	GNDLA	TXCLKOUTP05	TXCLKOUTM05	Y
AA	VDDLA	VDDLA	VDDL12	VDDLA	VDDLA	VDDL12	VDDLA	VDDLA	VDDLA	VDDLA	GNDLA	TXOUTP053	TXOUTM053	AA
AB	VREF12	GNDBG	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	VDDLA	GNDLA	TXOUTP040	TXOUTM040	AB
AC	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	VDDLA	GNDLA	TXOUTP041	TXOUTM041	AC
AD	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	GNDLA	TXOUTP042	TXOUTM042	AD
AE	TXOUTP013	TXCLKOUTP01	TXOUTP012	TXOUTP011	TXOUTP010	TXOUTP003	TXCLKOUTP00	TXOUTP002	TXOUTP001	TXOUTP000	GNDLA	TXCLKOUTP04	TXCLKOUTM04	AE
AF	TXOUTM013	TXCLKOUTM01	TXOUTM012	TXOUTM011	TXOUTM010	TXOUTM003	TXCLKOUTM00	TXOUTM002	TXOUTM001	TXOUTM000	GNDLA	TXOUTP043	TXOUTM043	AF


■ NJW1183L (HD AUDIO ASSY : IC3753)

• FOCUS & SRS IC

● Pin Arrangement (Top view)

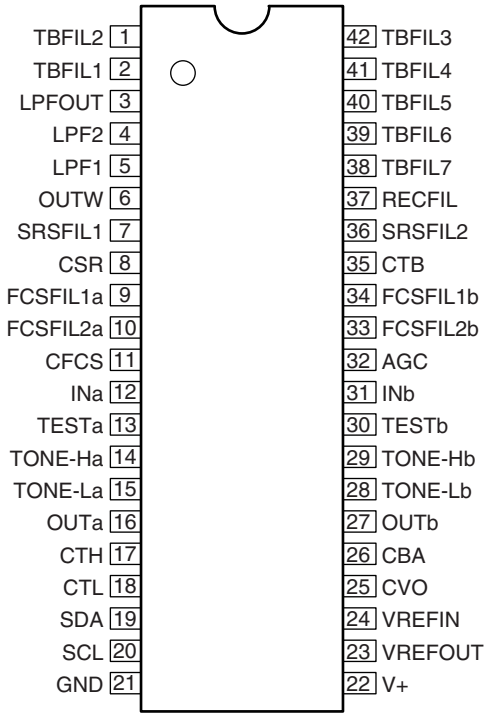


● Block Diagram

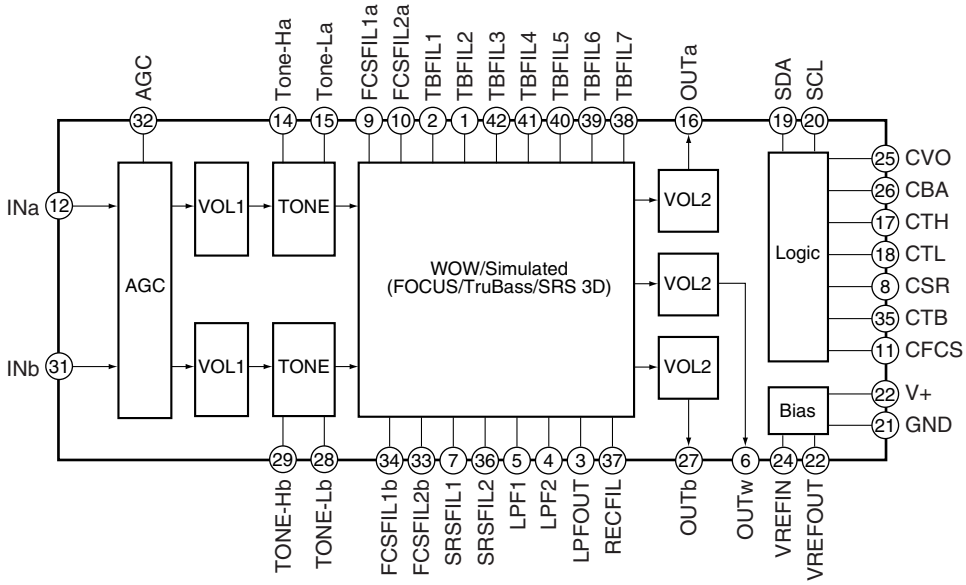


8. PANEL FACILITIES

Front view

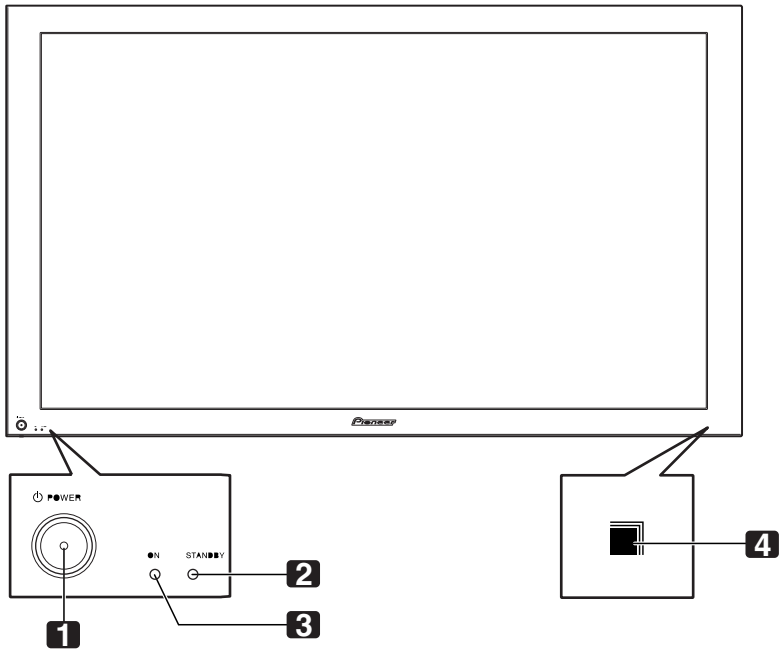

1 **POWER** button
2 STANDBY indicator
3 POWER ON indicator
4 Remote control sensor

Rear view

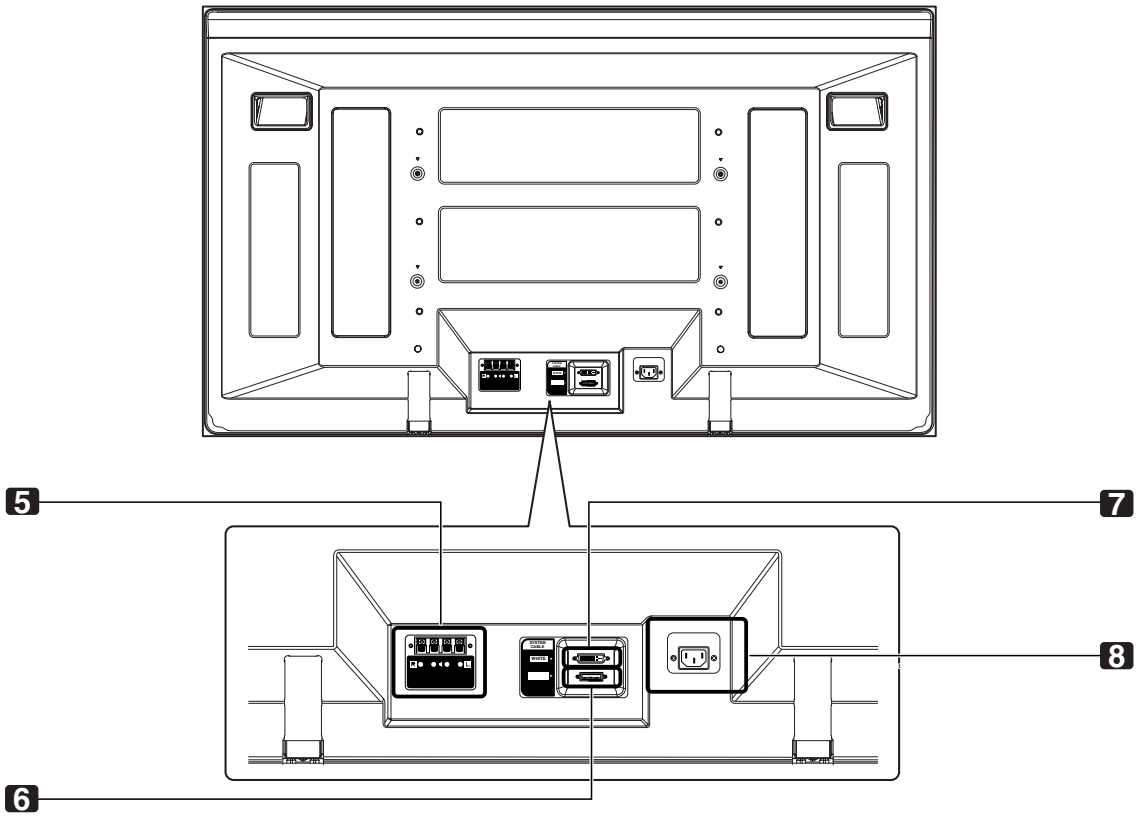

5 SPEAKER (right/left) terminals
6 SYSTEM CABLE terminal (BLACK)
7 SYSTEM CABLE terminal (WHITE)
8 AC IN terminal

A

B

C

D

E


F

■ Jigs list

Jig No.	Jig Name	Remarks
GGF1475	Special Communication Device	See to "6.2 RS-232C COMMAND".

Pioneer sound.vision.soul

Service Manual



PDP-R06G

ORDER NO.
ARP3281

MEDIA RECEIVER

PDP-R06G
PDP-R06C

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PDP-R06G	TLDFXJ	AC 110V - 240V	
PDP-R06C	WAXU5	AC 220V - 240V	

This service manual should be used together with the following manual(s).

Model No.	Order No.	Remarks
PDP-R06G, PDP-R06C	ARP3282	SCHEMATIC DIAGRAM, PCB CONNECTION DIAGRAM



For details, refer to "Important Check Points for good servicing".

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
ⓒ**PIONEER CORPORATION 2005**

T-IZR SEPT. 2005 printed in Japan

SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING
This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65

NOTICE
(FOR CANADIAN MODEL ONLY)
Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE
(POUR MODÈLE CANADIEN SEULEMENT)
Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60 Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5 mA.

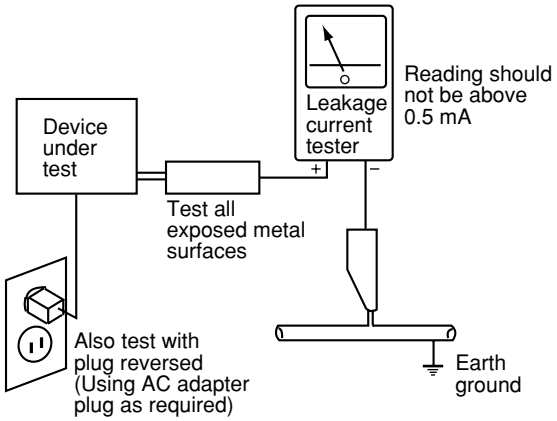

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.
The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification(addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

1. SPECIFICATIONS 5
2. EXPLODED VIEWS AND PARTS LIST 6
   2.1 PACKING SECTION 6
   2.2 EXTERIOR SECTION 8
   2.3 FRONT PANEL SECTION 10
3. BLOCK DIAGRAM 12
   3.1 OVERALL BLOCK DIAGRAM 12
   3.2 POWER SUPPLY UNIT 14
   3.3 POWER SUPPLY SIGNAL ROUTE 15
   3.4 VOLTAGES 16
5. PCB PARTS LIST 17
6. ADJUSTMENT 23
   6.1 POSSIBLE CASES WHERE READJUSTMENT IS REQUIRED 23
   6.2 SERVICING USING ONLY THE MEDIA RECEIVER 24
   6.3 SERVICE FACTORY MODE 25
   6.4 LIST OF RS-232C COMMANDS 38
   6.5 OUTLINE OF COMMANDS 39
7. GENERAL INFORMATION 41
   7.1 DIAGNOSIS 41
      7.1.1 TROUBLESHOOTING 41
      7.1.2 DISASSEMBLY 50
   7.2 EXPLANATION 51
      7.2.1 PROCESSING IN ABNORMALITY 51
      7.2.2 POWER ON SEQUENCE 54
   7.3 PARTS 55
      7.3.1 IC 55
8. PANEL FACILITIES 86


1. SPECIFICATIONS

Item			Media Receiver, Model: PDP-R06G
Color System			PAL/SECAM/NTSC/4.43NTSC/PAL-M/PAL-N
TV Function	Receiving System		PAL: B/G, D/K, I M, N SECAM: B/G, D/K NTSC: M 4.43NTSC : M
	Tuner	VHF/UHF	44.25-863.25 MHz
		CATV	Hyper-band, S1-S41ch
	Auto Channel Preset		99 ch (Normal), 68 ch (Air, US type), 125 ch (Cable, US type), Auto Preset
	Audio multiplex		NICAM/A2/BTSC System
Terminals	Rear	INPUT 1	COMPONENT VIDEO in, S-VIDEO in, AV in
		INPUT 2	COMPONENT VIDEO in, S-VIDEO in, AV in
		INPUT 3	S-VIDEO in, AV in, HDMI in*
		Antenna	75 Ω Din Type for VHF/UHF in
	Front	INPUT 4	S-VIDEO, AV in (Audio input is shared with PC INPUT.)
		PC	Analog RGB in
MONITOR OUT Terminal (Rear)			AV out
PHONES OUTPUT Terminal (Front)			16 - 32 Ω recommended
SUB WOOFER OUTPUT Terminal (Rear)			Variable
Power Requirement			110 - 240 V(PDP-R06G), 220 - 240V(PDP-R06C) , 50/60 Hz, 16 W (0.4 W Standby)
Dimensions			420 (W) × 90 (H) × 299 (D) mm
Weight			3.4 kg


∗ **:** This conforms to HDMI1.1 and HDCP1.1.
HDMI (High Definition Multimedia Interface) is a digital interface that handles both video and audio using a single cable.
HDCP (High-bandwidth Digital Content Protection) is a technology used to protect copyrighted digital contents that use the Digital Visual Interface (DVI).

● Design and specifications are subject to change without notice.


Accessories

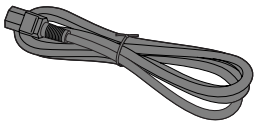


Power cord
(ADG1209: PDP-R06C)

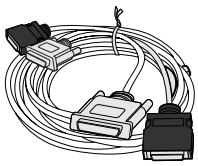


System cable (3 m)
(ADF1027)



AA size Battery ×2
(VEM1031: PDP-R06G)
(VEM1010: PDP-R06C)

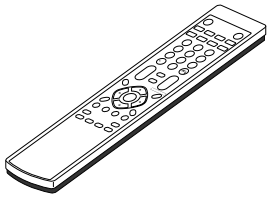

Remote control unit
(AXD1510: PDP-R06G)
(AXD1511: PDP-R06C)

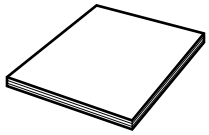


Operating instructions

2. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

2.1 PACKING SECTION

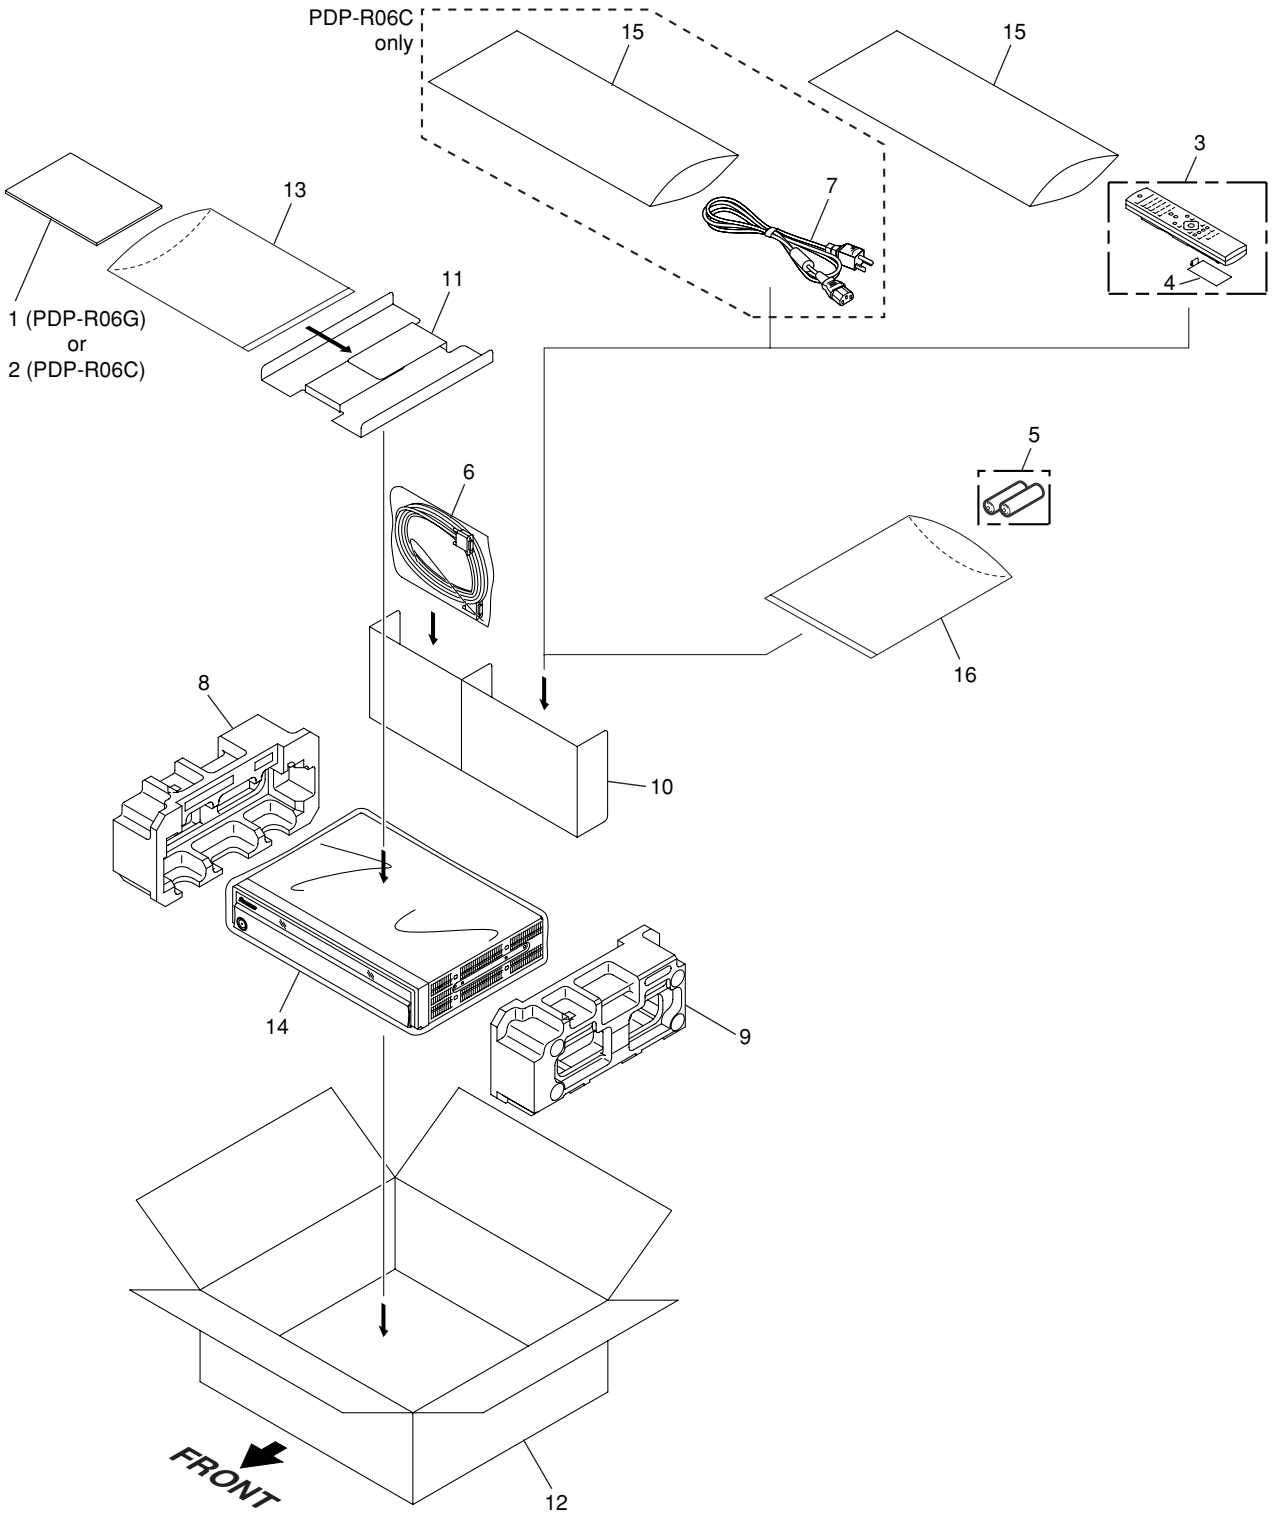

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Operating Instructions (English, Chinese, Spanish, Portuguese)	See Contrast table (2)
	2	Operating Instructions (Chinese)	See Contrast table (2)
	3	Remote Control Unit	See Contrast table (2)
	4	Battery Cover	AZA7424
NSP	5	Dry Cell Battery (R6P, AA)	See Contrast table (2)
	6	System Cable (3m)	ADF1027
⚠	7	Power Cord	See Contrast table (2)
	8	Pad L	See Contrast table (2)
	9	Pad R	See Contrast table (2)
	10	Accessory Carton	See Contrast table (2)
	11	Manual Case	See Contrast table (2)
	12	Carton	See Contrast table (2)
NSP	13	Catalogue Bag	See Contrast table (2)
	14	Laminate Sheet	AHG1350
	15	Air Cap Bag	See Contrast table (2)
NSP	16	Catalogue Bag	See Contrast table (2)

(2) CONTRAST TABLE

PDP-R06G/TLDFXJ and PDP-R06C/WAXU5 are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-R06G/TLDFXJ	PDP-R06C/WAXU5
	1	Operating Instructions (English, Chinese, Spanish, Portuguese)	ARE1398	Not used
	2	Operating Instructions (Chinese)	Not used	ARC1545
	3	Remote Control Unit	AXD1510	AXD1511
NSP	5	Dry Cell Battery (R6P, AA)	VEM1031	VEM1010
⚠	7	Power Cord	Not used	ADG1209
	8	Pad L	AHA2447	AHA2449
	9	Pad R	AHA2448	AHA2450
	10	Accessory Carton M	AHD3423	Not used
	10	Accessory Carton C	Not used	AHD3361
	11	Manual Case	AHD3428	AHD3429
	12	Carton G	AHD3449	Not used
	12	Carton C	Not used	AHD3363
NSP	13	Catalogue Bag	AHG1340	AHG1360
	15	Air Cap Bag	AHG1351	AHG1359
NSP	16	Catalogue Bag	AHG1374	AHG1360

2.2 EXTERIOR SECTION

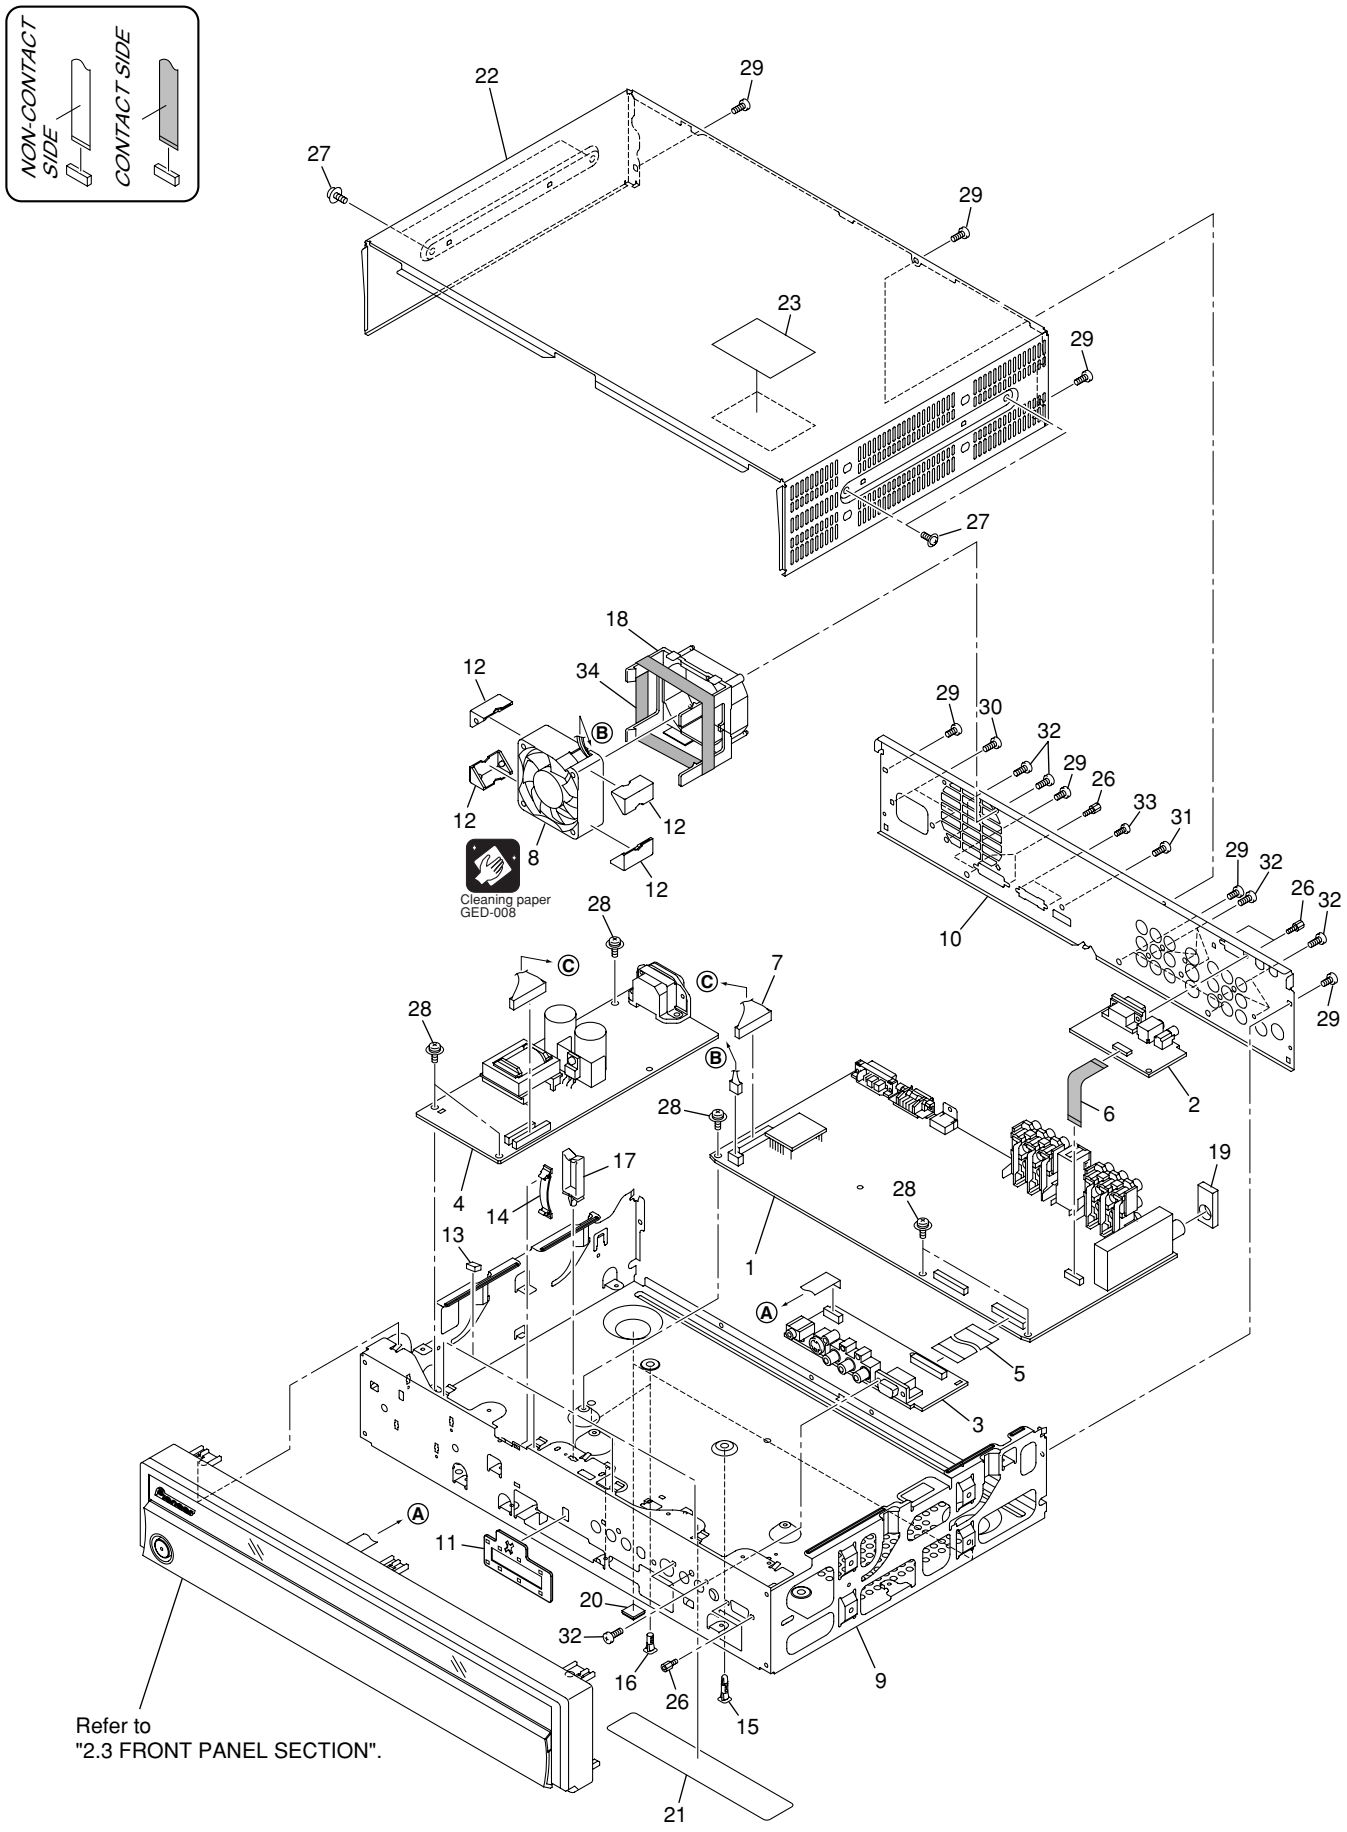

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	MR MAIN Assy	See Contrast table (2)
	2	SR Assy	AWW1037
	3	FRONT Assy	AWW1051
⚠	4	POWER SUPPLY Unit	AXY1114
	5	Flexible Cable (J201)	See Contrast table (2)
	6	Flexible Cable (J208)	See Contrast table (2)
	7	16P Housing Wire (J101)	See Contrast table (2)
⚠	8	Fan Motor (60 x 25L)	AXM1045
	9	Base Chassis	See Contrast table (2)
	10	Terminal Panel	See Contrast table (2)
⚠	11	Shield Plate	ANG2838
	12	Floating Rubber 60	AEB1410
	13	Front Panel Spacer	AEB1429
	14	Flat Clamp	AEC1858
	15	Circuit Board Spacer	AEC1969
	16	Circuit Board Spacer	AEC2028
	17	Re-used Wire Saddle	AEC2038
	18	Fan Holder 60	AMR3451
⚠	19	Gasket M	ANK1774
	20	Rubber Foot	VEB1349
	21	Bottom Cover	See Contrast table (2)
	22	Metal Bonnet	See Contrast table (2)
	23	Caution Label (C)	See Contrast table (2)
	24	• • • • •	
	25	• • • • •	
	26	Hex Head Screw	BBA1051
	27	Screw	ABZ30P060FTC
	28	Screw	BBB30P080FTC
	29	Screw	BBZ30P060FTB
	30	Screw	BBZ30P100FTC
	31	Screw	BMZ30P060FTC
	32	Screw	BPZ30P080FTB
	33	Screw	PMZ26P060FTB
	34	TERAOKA No.570F 16mm(W)	GYH1001


(2) CONTRAST TABLE

PDP-R06G/TLDFXJ and PDP-R06C/WAXU5 are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-R06G/TLDFXJ	PDP-R06C/WAXU5
	1	MR MAIN Assy	AWV2232	AWV2234
	5	Flexible Cable (J201)	ADD1311	ADD1318
	6	Flexible Cable (J208)	ADD1328	ADD1320
	7	16P Housing Wire (J101)	ADX3140	ADX3147
	9	Base Chassis	ANA1872	Not used
	9	Base Chassis (J)	Not used	ANA1891
	10	Terminal Panel G	ANC2379	Not used
	10	Terminal Panel C	Not used	ANC2380
	21	Bottom Cover (G)	AAX3221	Not used
	21	Bottom Cover (C)	Not used	AAX3222
	22	Metal Bonnet	ANE1653	ANE1644
	23	Caution Label (C)	Not used	AAX3220

2.3 FRONT PANEL SECTION

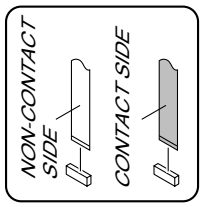

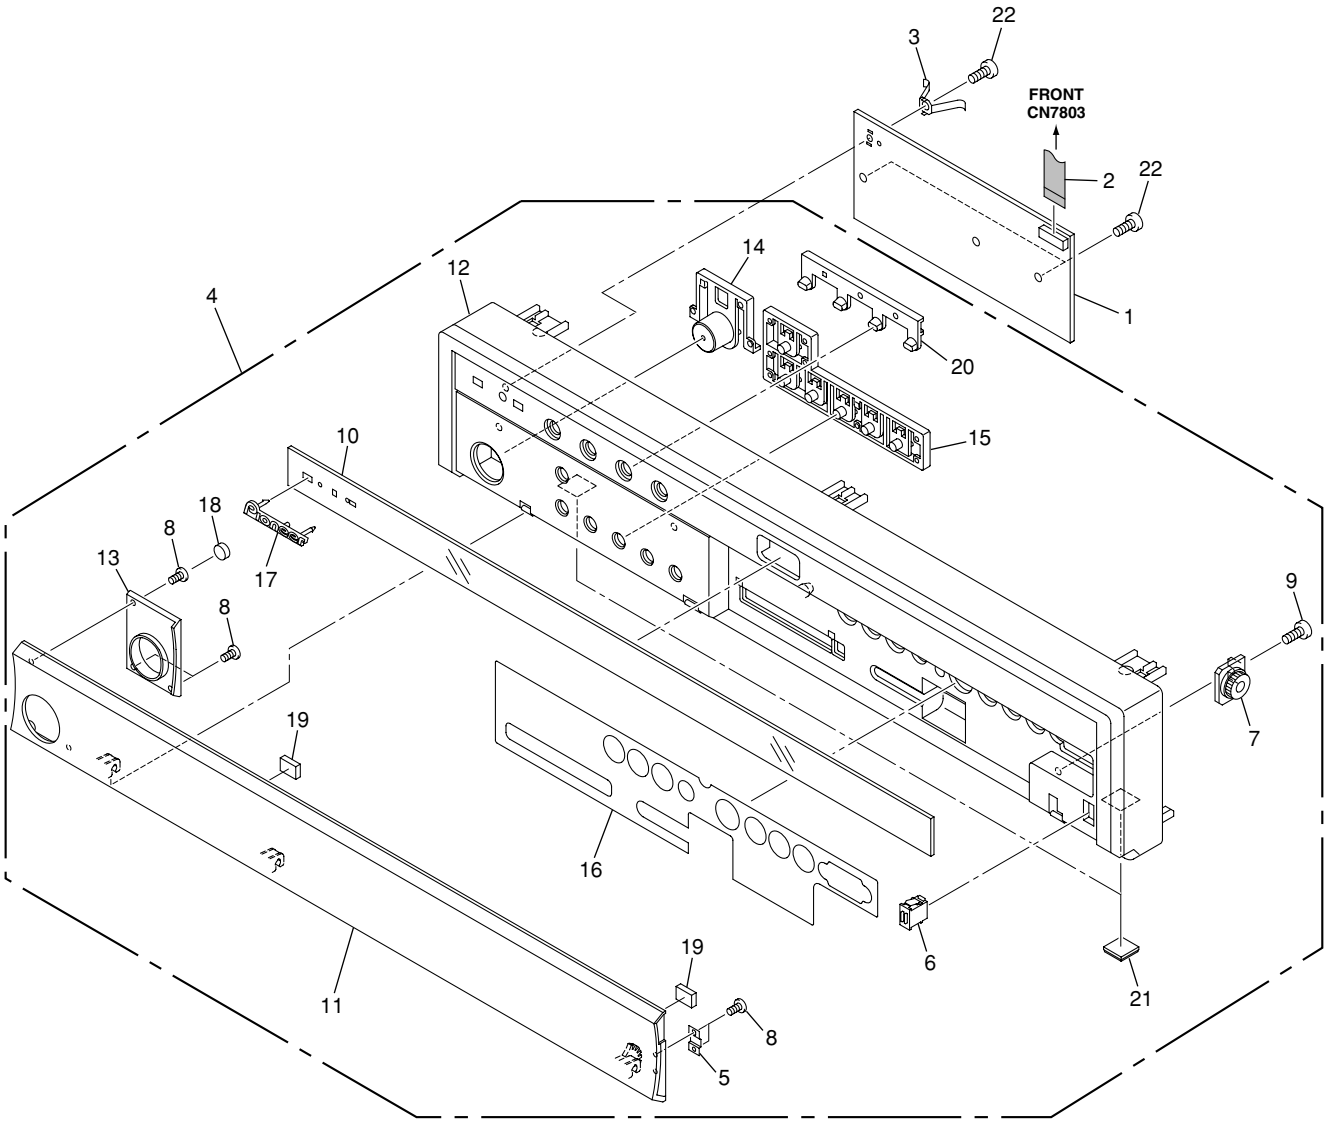

(1) FRONT PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	LED Assy	AWW1043
	2	Flexible Cable (J207)	See Contrast table (2)
⚠	3	Earth Metal	BNG1336
	4	Front Panel Assy	See Contrast table (2)
	5	Magnet Catcher	ANG2820
	6	Magnet Holder Assy	AEC1077
	7	Gear Damper	AXA1019
	8	Screw (2 x 3.5)	ABA1329
	9	Screw	BPZ30P080FTB
	10	Indicator Panel	See Contrast table (2)
	11	Door (GC)	AAN1486
	12	Front Panel	AMB2863
	13	Escutcheon Ring	AAD4134
NSP	14	Power Button	AAD4135
NSP	15	Operation Button	AAD4136
	16	Sealing Sheet (G)	AAL2669
	17	Pioneer Name Plate	AAM1107
	18	Door Cushion	AEB1412
	19	Door Cushion S	AEB1425
NSP	20	LED Lens	AMR3452
	21	Rubber Foot	VEB1349
	22	Screw	BPZ30P080FTB


(2) CONTRAST TABLE


PDP-R06G/TLDFXJ and PDP-R06C/WAXU5 are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-R06G/TLDFXJ	PDP-R06C/WAXU5
	2	Flexible Cable (J207)	ADD1314	ADD1319
	4	Front Panel Assy G	AXG1032	Not used
	4	Front Panel Assy C	Not used	AXG1033
	10	Indicator Panel (G)	AAK2845	Not used
	10	Indicator Panel (C)	Not used	AAK2846


3. BLOCK DIAGRAM

3.1 OVERALL BLOCK DIAGRAM

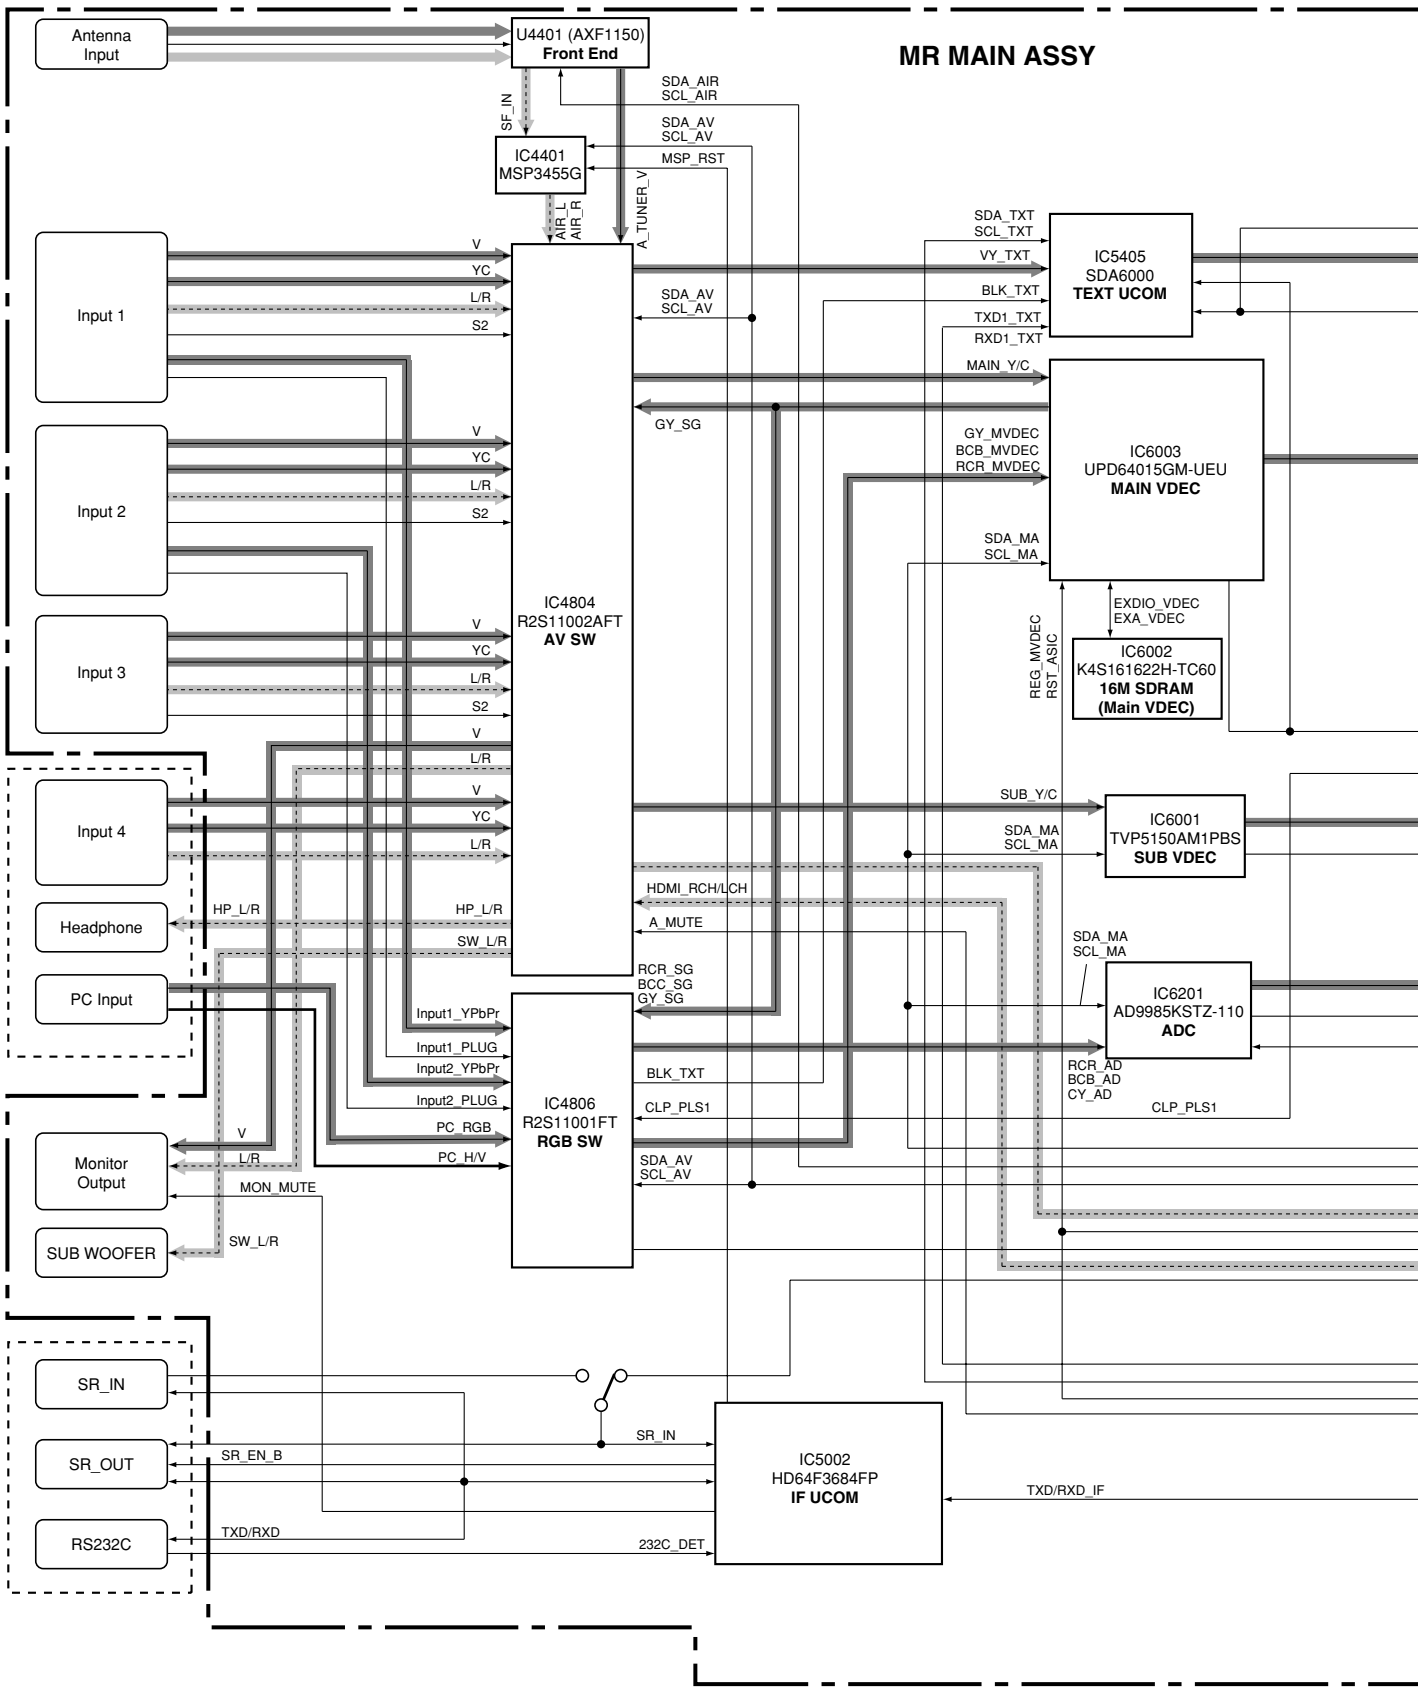

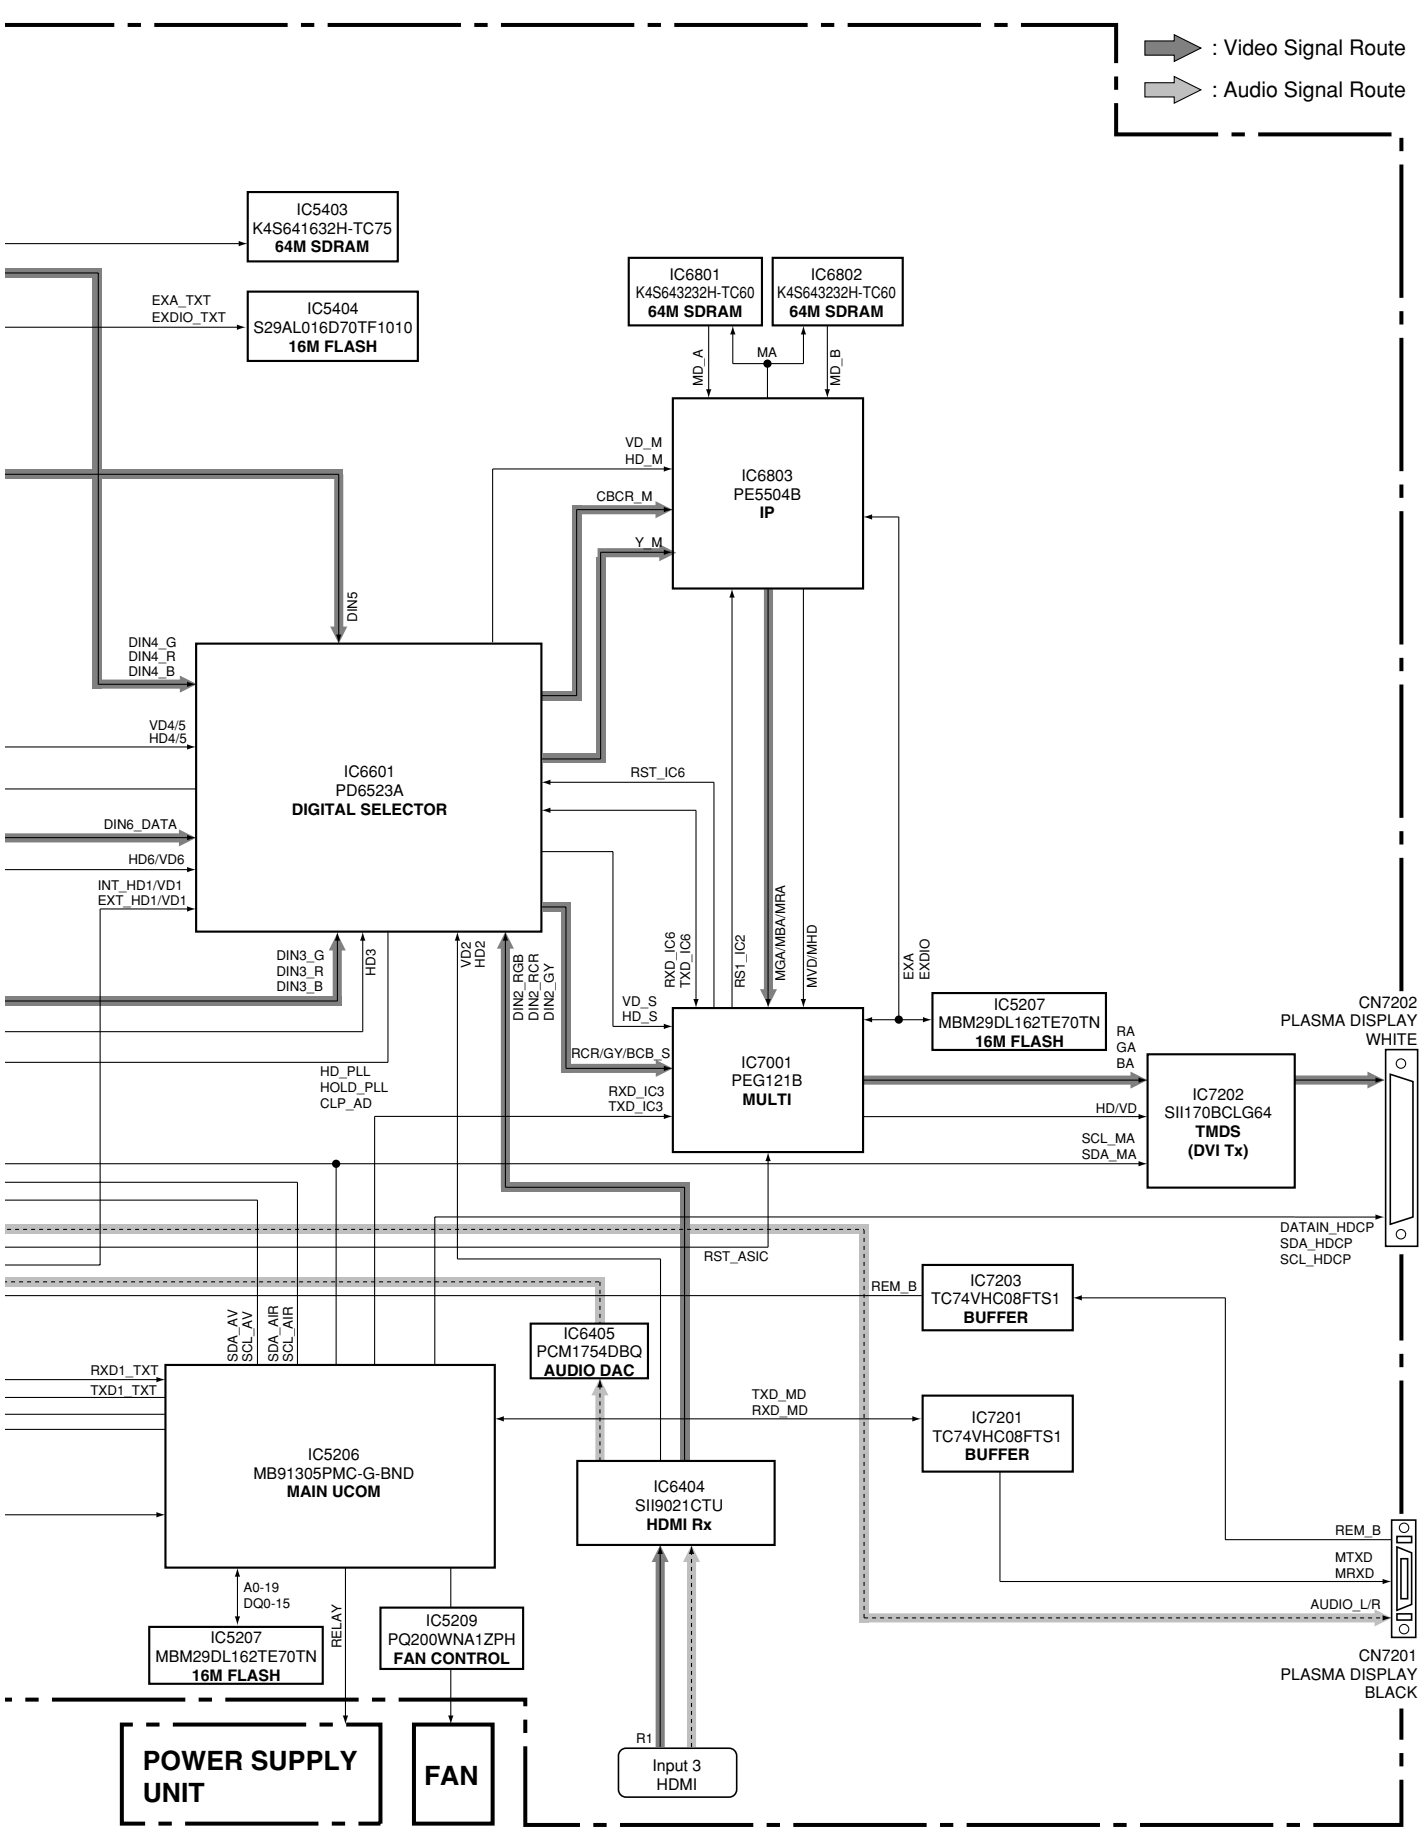

: Video Signal Route
: Audio Signal Route
IC5403
K4S641632H-TC75
64M SDRAM
EXA_TXT
EXDIO_TXT
IC5404
S29AL016D70TF1010
16M FLASH
IC6801
K4S643232H-TC60
64M SDRAM
IC6802
K4S643232H-TC60
64M SDRAM
MD_A
MA
MD_B
VD_M
HD_M
CBCR_M
Y_M
IC6803
PE5504B
IP
DIN5
DIN4_G
DIN4_R
DIN4_B
VD4/5
HD4/5
IC6601
PD6523A
DIGITAL SELECTOR
DIN6_DATA
HD6/VD6
INT_HD1/VD1
EXT_HD1/VD1
RST_IC6
DIN3_G
DIN3_R
DIN3_B
HD3
VD2
HD2
DIN2_RGB
DIN2_RCR
DIN2_GY
RXD_IC6
TXD_IC6
RS1_IC2
MGA/MBA/MRA
MVD/MHD
EXA
EXDIO
VD_S
HD_S
RCR/GY/BCB_S
HD_PLL
HOLD_PLL
CLP_AD
RXD_IC3
TXD_IC3
IC7001
PEG121B
MULTI
IC5207
MBM29DL162TE70TN
16M FLASH
RA
GA
BA
HD/VD
SCL_MA
SDA_MA
IC7202
SII170BCLG64
TMDS
(DVI Tx)
CN7202
PLASMA DISPLAY
WHITE
DATAIN_HDCP
SDA_HDCP
SCL_HDCP
RST_ASIC
REM_B
IC7203
TC74VHC08FTS1
BUFFER
SDA_AV
SCL_AV
SDA_AIR
SCL_AIR
IC6405
PCM1754DBQ
AUDIO DAC
RXD1_TXT
TXD1_TXT
IC5206
MB91305PMC-G-BND
MAIN UCOM
TXD_MD
RXD_MD
IC7201
TC74VHC08FTS1
BUFFER
IC6404
SII9021CTU
HDMI Rx
REM_B
MTXD
MRXD
AUDIO_L/R
CN7201
PLASMA DISPLAY
BLACK
A0-19
DQ0-15
IC5207
MBM29DL162TE70TN
16M FLASH
RELAY
IC5209
PQ200WNA1ZPH
FAN CONTROL
R1
Input 3
HDMI
POWER SUPPLY
UNIT
FAN

3.2 POWER SUPPLY UNIT

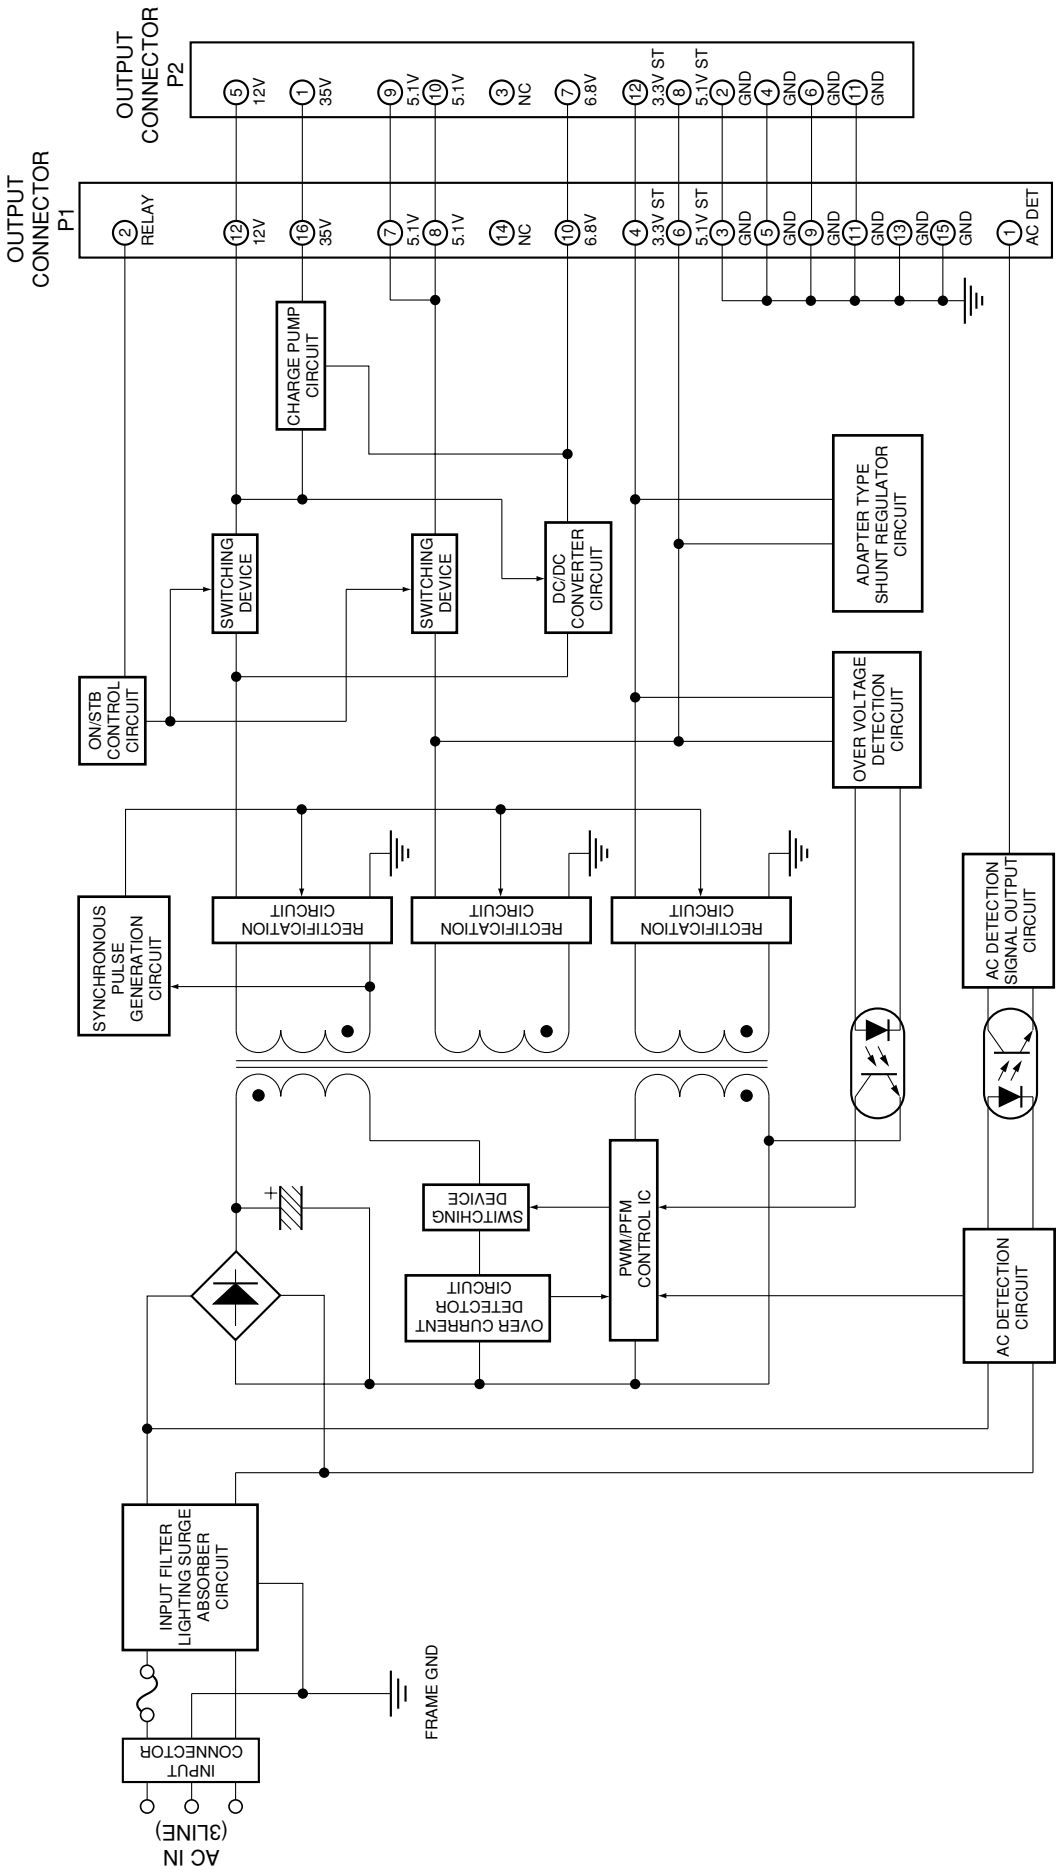

POWER SUPPLY UNIT

3.3 POWER SUPPLY SIGNAL ROUTE

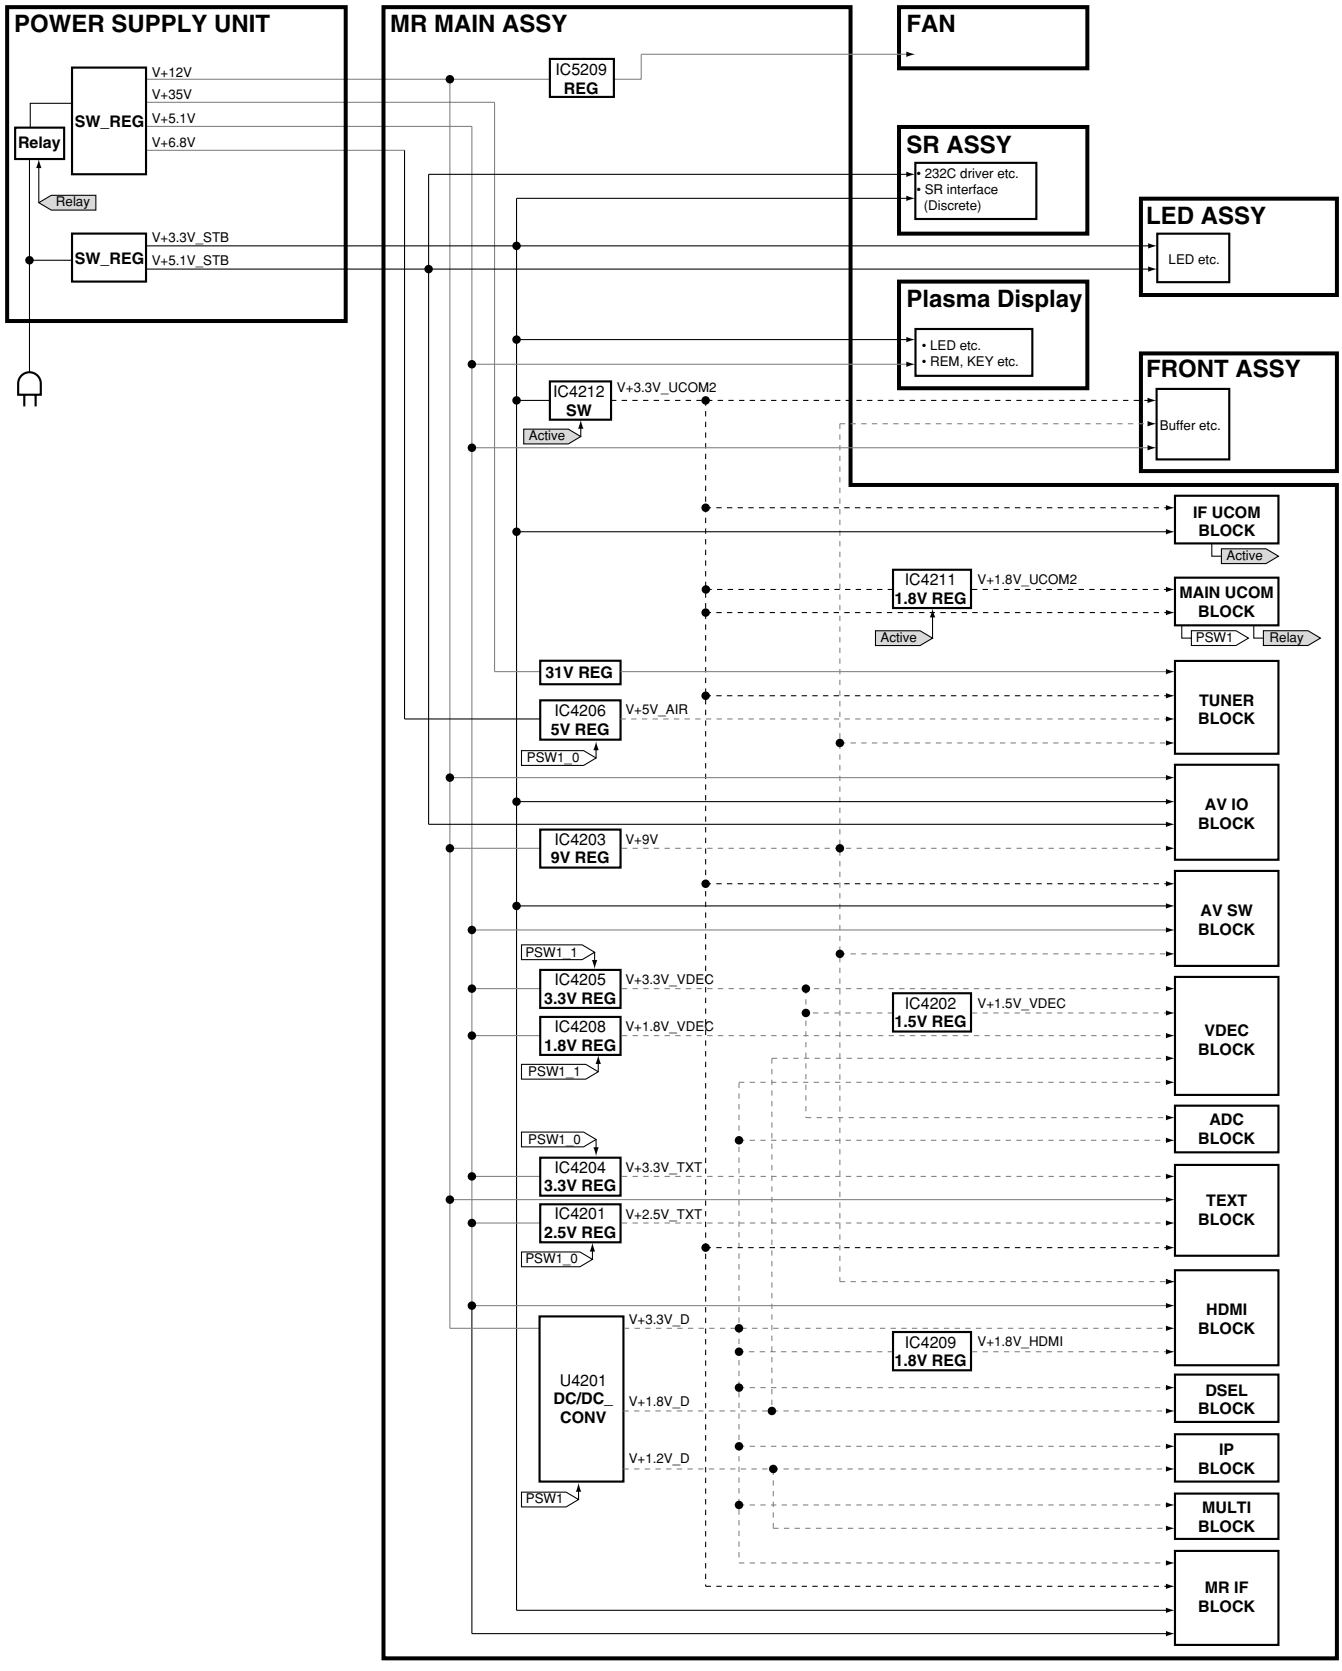

3.4 VOLTAGES

FRONT ASSY — **MR MAIN ASSY**

CN7004 (AKM1236)		Voltage (V)	CN4001 (AKM1236)	
No.	Name		Name	No.
1	V+3_3V_STB	3.4	V+3_3V_STB	50
2	LED_ON	0	LED_ON	49
3	LED_OFF	3.4	LED_OFF	48
4	GND[LED_MDM]	0	GND[LED_MDM]	47
5	V+5_1V_STB	5.1	V+5_1V_STB	46
6	GND[LED_FCT]	0	GND[LED_FCT]	45
7	KEY_AD1	3.4	KEY_AD1	44
8	KEY_AD2	3.4	KEY_AD2	43
9	GND	0	GND	42
10	GND[LED_HDD1]	0	GND[LED_HDD1]	41
11	GND[LED_HDD2]	0	GND[LED_HDD2]	40
12	GND[LED_HDD3]	0	GND[LED_HDD3]	39
13	PC_V	0	PC_V	38
14	GND	0	GND	37
15	PC_H	0	PC_H	36
16	GND	0	GND	35
17	PC_G	2.5	PC_G	34
18	GND	0	GND	33
19	PC_B	2.5	PC_B	32
20	GND	0	GND	31
21	PC_R	2.5	PC_R	30
22	GND	0	GND	29
23	GND	0	GND	28
24	HP_PLUG	0	HP_PLUG	27
25	NC	0	NC	26
26	GND	0	GND	25
27	GND	0	GND	24
28	HP_R	2.1	HP_R	23
29	GND	0	GND	22
30	GND	0	GND	21
31	HP_L	2.1	HP_L	20
32	GND	0	GND	19
33	GND	0	GND	18
34	INPUT4_Y	2.5	INPUT4_Y	17
35	GND	0	GND	16
36	INPUT4_C	2.2	INPUT4_C	15
37	GND	0	GND	14
38	INPUT4_SPLUG	5.0	INPUT4_SPLUG	13
39	INPUT4_S2	0	INPUT4_S2	12
40	GND	0	GND	11
41	INPUT4_V	2.5	INPUT4_V	10
42	GND	0	GND	9
43	INPUT4_L	4.5	INPUT4_L	8
44	GND	0	GND	7
45	INPUT4_R	4.5	INPUT4_R	6
46	GND	0	GND	5
47	WE_RDM	0	WE_RDM	4
48	V+3_3V_UCOM	3.4	V+3_3V_UCOM	3
49	V+5V_A	5.1	V+5V_A	2
50	V+9V_A	9.0	V+9V_A	1

FRONT ASSY — **LED ASSY**

CN7804 (AKM1238)		Voltage (V)	CN8001 (CKS3826)	
No.	Name		Name	No.
1	GND	0	GND	12
2	GND	0	GND	11
3	GND	0	GND	10
4	GND	0	GND	9
5	KEY_AD2	3.4	KEY_AD2	8
6	KEY_AD1	3.4	KEY_AD1	7
7	LED_TREC	0	LED_TREC	6
8	V+5_V_STB	5.1	V+5_V_STB	5
9	GND	0	GND	4
10	LED_OFF	3.4	LED_OFF	3
11	LED_ON	0	LED_ON	2
12	V+3_3V_STB	3.4	V+3_3V_STB	1

FAN — **MR MAIN ASSY**

		Voltage (V)	CN4009 (AKM1274)	
No.	Name		Name	No.
–	–	6.5	FAN_VCC	1
–	–	0	FAN_NG1	2
–	–	0	GND	3

SR ASSY — **MR MAIN ASSY**

CN7601 (CKS3826)		Voltage (V)	CN4008 (AKM1233)	
No.	Name		Name	No.
12	V+5_1_STB	5.1	V+5_1_STB	1
11	V+3_3_STB	3.4	V+3_3_STB	2
10	TXD	3.4	TXD	3
9	RXD	3.4	RXD	4
8	232C_DET	0	232C_DET	5
7	SR_EN_B	3.4	SR_EN_B	6
6	GND	0	GND	7
5	REM_B	3.4	REM_B	8
4	SR_IN	3.4	SR_IN	9
3	GND	0	GND	10
2	NC	-	NC	11
1	GND	0	GND	12

POWER SUPPLY UNIT — **MR MAIN ASSY**

CN101 (B16B-PH-K-S)		Voltage (V)	CN4006 (KM200NA16)	
No.	Name		Name	No.
16	V+35V	35.8	V+35V	16
15	GND	0	GND	15
14	V+17V	0	V+17V	14
13	GND	0	GND	13
12	V+12V	12.2	V+12V	12
11	GND	0	GND	11
10	V+6_8V	6.6	V+6_8V	10
9	GND	0	GND	9
8	V+5_1V	5.1	V+5_1V	8
7	V+5_1V	5.1	V+5_1V	7
6	V+5_1V_STB	5.1	V+5_1V_STB	6
5	GND	0	GND	5
4	V+3_3V_STB	3.4	V+3_3V_STB	4
3	GND	0	GND	3
2	RELAY	3.4	RELAY	2
1	AC_DET	3.4	AC_DET	1

5. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*
Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω → 56 x 10^1 → 561 ····· RD1/4PU 5 6 1 J
47k Ω → 47 x 10^3 → 473 ····· RD1/4PU 4 7 3 J
0.5 Ω → R50 ····· RN2H R 5 0 K
1 Ω → 1R0 ····· RS1P 1 R 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω → 562 x 10^1 → 5621 ····· RN1/4PC 5 6 2 1 F

■ LIST OF HOLE PCB ASSEMBLIES

Mark	Symbol and Description	PDP-R06G/TLDFXJ	PDP-R06C/WAXU5
	1..MR MAIN ASSY	AWV2232	AWV2234
NSP	1..MR FUKUGO ASSY	AWV2233	AWV2233
	2..SR ASSY	AWW1037	AWW1037
	2..FRONT ASSY	AWW1051	AWW1051
	2..LED ASSY	AWW1043	AWW1043
⚠	1..POWER SUPPLY UNIT	AXY1114	AXY1114

MR MAIN ASSY

AWV2232 and AWV2234 are constructed the same except for the following :

Mark	Symbol and Description	AWV2232	AWV2234
	[MAIN UCOM BLOCK]		
	R5243	RS1/16SS103J	Not used
	R5251	Not used	RS1/16SS103J
	R5252	Not used	RS1/10S0R0J
	R5253	RS1/10S0R0J	Not used

■ PCB PARTS LIST FOR PDP-R06G/TLDFXJ UNLESS OTHER WISE NOTED

Mark	No.	Description	Part No.
MR MAIN ASSY			
[BOARD IF BLOCK]			
SEMICONDUCTORS			
	Q4003,Q4004		2SA1586
	Q4001		DTA124EUA
	Q4002		TPC6104
	D4001-D4003,D4005		1SS355
CAPACITORS			
	C4002		CKSRYB105K10
	C4003,C4004		CKSSYB104K10
RESISTORS			
	R4021-R4023		RS1/10S0R0J
	R4007		RS2LMF8R2J
	Other Resistors		RS1/16S###J
OTHERS			
	CN4008	12P FFC CONNECTOR	AKM1233
	CN4001	50P CONNECTOR	AKM1236
	CN4009	CONNECTOR 3P	AKM1274
	CN4006	16P CONNECTOR	KM200NA16

Mark	No.	Description	Part No.
[REG BLOCK]			
SEMICONDUCTORS			
	IC4212		BD6522F
	IC4208,IC4211		MM1661JH
	IC4202		NCP1117ST15
	IC4209		NCP1117ST18
	IC4201		PQ025ENA1ZPH
	IC4204,IC4205		PQ033ENA1ZPH
	IC4206		PQ050DNA1ZPH
	IC4203		PQ090DNA1ZPH
	Q4201		DTC124EUA
	D4201-D4206,D4208,D4209,D4211		1SS355
COILS AND FILTERS			
	L4201	INDUCTOR	BTH1111
⚠	L4203-L4205	CHIP BEAD FILTER	BTX1042
⚠	F4201-F4203,F4205,F4207	EMI FILTER	CCG1162
CAPACITORS			
	C4201,C4206,C4209 (10/6.3V)		ACG7046
	C4215,C4220,C4233 (10/6.3V)		ACG7046
	C4235,C4240 (10/6.3V)		ACG7046
	C4250,C4253 (10/6.3V)		ACG7046
	C4257,C4260,C4263 (10/6.3V)		ACG7046

Mark	No.	Description	Part No.
	C4213	(100/16V)	ACH1394
	C4210,C4244,C4269		ACH1429
	C4273		CCSSCH101J50
	C4205,C4216,C4219,C4221,C4222		CEHVKW101M6R3
	C4224,C4228,C4238,C4264		CEHVKW101M6R3
	C4226		CEHVKW220M16
	C4214		CKSRYB104K16
	C4203,C4217,C4223		CKSRYB105K10
	C4229,C4237,C4252		CKSSYB104K10
	C4232,C4234		CKSSYB471K50
	C4204,C4212,C4227,C4236,C4251		CKSSYF104Z16
	C4261,C4262		CKSSYF104Z16
	C4211,C4225,C4256		DCH1165
	RESISTORS		
	R4221,R4226		RS1/10S0R0J
	Other Resistors		RS1/16S###J
	OTHERS		
	U4201	DD CONTROL UNIT	AXY1117
	[TUNER BLOCK]		
	SEMICONDUCTORS		
	IC4401		MSP3455G
	Q4404		2SA1586
	Q4401,Q4402		2SC4116
	Q4414		DTA124EUA
	Q4413,Q4415		DTC124EUA
	Q4407,Q4408		HN1A01FU
	Q4405		HN1B04FU
	Q4409		HN1C01FU
	D4401		UDZS33(B)
	D4403		UDZS8R2(B)
	COILS AND FILTERS		
	L4401-L4403	CHIP COIL	BTH1119
	L4405,L4406		LCTAW150J2520
	L4407		LCTAW4R7J2520
	L4404		LCTAW8R2J2520
	F4401,F4402	FERRITE BEAD	VTF1080
	CAPACITORS		
	C4404,C4407,C4410	(10/6.3V)	ACG7046
	C4415,C4416	(10/6.3V)	ACG7046
	C4429,C4459	(10/6.3V)	ACG7046
	C4424	(3.3/50V)	ACH1385
	C4449		CCSRCH680J50
	C4442		CCSRCJ3R0C50
	C4417,C4418		CCSSCH100D50
	C4450		CCSSCH121J50
	C4456		CCSSCH181J50
	C4448		CCSSCH470J50
	C4428,C4443		CCSSCH560J50
	C4441		CCSSCH5R0D50
	C4409,C4423		CEHVKW100M16
	C4422		CEHVKW470M16
	C4420		CKSRYB332K50
	C4401,C4413		CKSRYF104Z50
	C4403,C4421,C4427,C4430,C4440		CKSSYB102K50
	C4444,C4455,C4461		CKSSYB102K50
	C4408,C4439,C4446		CKSSYB103K16
	C4438,C4454		CKSSYB472K25

Mark	No.	Description	Part No.
	C4402,C4405,C4406,C4425,C4426		CKSSYF104Z16
	C4434,C4435,C4447,C4451,C4460		CKSSYF104Z16
	C4465		CKSSYF104Z16
	C4414,C4437,C4445		DCH1165
	RESISTORS		
	All Resistors		RS1/16S###J
	OTHERS		
	X4401	CRYSTAL (18.432MHz)	ASS1196
⚠	U4401	FRONT END (IBD)	AXF1150
	[AV IO BLOCK]		
	SEMICONDUCTORS		
	Q4614,Q4626,Q4639		2SA1586
	Q4618,Q4622-Q4624,Q4637		2SC4116
	Q4619,Q4620,Q4640		2SD2114K
	Q4616,Q4621,Q4627		DTA124EUA
	Q4617,Q4628		DTC124EUA
	Q4625,Q4638		HN1A01FU
	D4611,D4612,D4615		1SS301
	D4606		1SS355
	COILS AND FILTERS		
	L4601-L4606		LCTAW1R0J2520
	L4607,L4608		LCTAW560J2520
	CAPACITORS		
	C4621	(10/6.3V)	ACG7046
	C4657	(100/16V)	ACH1394
	C4623		ACH1419
	C4658		CCG1205
	C4643		CKSRYB104K16
	C4603,C4608,C4613,C4631-C4639		CKSRYB105K10
	C4641,C4642,C4645-C4648		CKSRYB105K10
	C4644		CKSRYB224K10
⚠	C4651-C4656		CKSSYB102K50
	C4601,C4604-C4606,C4609-C4611		CKSSYB103K16
	C4614,C4615,C4649,C4650		CKSSYB103K16
	C4602,C4607,C4612		CKSSYB473K16
	C4622		CKSSYF104Z16
	C4620,C4624,C4625,C4628		DCH1165
	RESISTORS		
	R4670		RS1/10S121J
	R4658		RS1/10S151J
	R4602,R4603,R4605,R4606		RS1/16S75R0F
	R4608-R4612,R4619-R4622		RS1/16S75R0F
	R4625,R4626		RS1/16S75R0F
	Other Resistors		RS1/16S###J
	OTHERS		
	JA4603	9P PIN JACK	AKB1319
	JA4602	9P PIN JACK	AKB1330
	JA4601	4P MINI DIN (S)	AKP1280
	JA4604	1P JACK	VKB1159
	[AV SW BLOCK]		
	SEMICONDUCTORS		
	IC4807		BH3544F
	IC4805		NJM12904V
	IC4806		R2S11001FT
	IC4804		R2S11002AFT
	IC4809		TC7WH123FU

Mark No.	Description	Part No.
Q4801,Q4802,Q4809,Q4818,Q4820		2SA1586
Q4808,Q4811-Q4813,Q4821		2SC4116
Q4814		DTA124EUA
Q4815		DTC124EUA
D4802,D4806		1SS301
CAPACITORS		
C4916 (4.7/10V)		ACG1122
C4821,C4835,C4871 (10/6.3V)		ACG7046
C4875,C4896,C4923 (10/6.3V)		ACG7046
C4877,C4880		CCSRCH181J50
C4859		CCSRCH331J50
C4861		CCSRCH680J50
C4885,C4888		CCSRCH681J50
C4822,C4862		CEHVKW101M6R3
C4898		CEHVKW470M6R3
C4802,C4805,C4806,C4808		CKSRYB105K10
C4813,C4814,C4820,C4833,C4834		CKSRYB105K10
C4836,C4838-C4841,C4847,C4848		CKSRYB105K10
C4850,C4851,C4878,C4879,C4889		CKSRYB105K10
C4894,C4895,C4922		CKSRYB105K10
C4853-C4858,C4860,C4865		CKSSYB103K16
C4869,C4870,C4890-C4893		CKSSYB103K16
C4807,C4809		CKSSYB104K10
C4801,C4819,C4845,C4846,C4864		CKSSYF104Z16
C4867,C4868,C4873,C4874		CKSSYF104Z16
C4881-C4884,C4886,C4887		CKSSYF104Z16
C4899-C4901,C4917,C4921,C4925		CKSSYF104Z16
C4844,C4863,C4866,C4872,C4876		DCH1165
RESISTORS		
R4975,R4999		RD1/2LMF120J
R4784,R4786		RS1/16S1800F
R4785,R4787		RS1/16S5600F
Other Resistors		RS1/16S###J
[IF UCOM BLOCK]		
SEMICONDUCTORS		
IC5002		HD64F3684FP
IC5003		PST9230N
IC5001		TC74VHC08FTS1
IC5004		TC7W126FU
Q5001		DTC124EUA
CAPACITORS		
C5007,C5008		CCSSCH180J50
C5001		CEHVKW101M6R3
C5010		CKSSYB472K25
C5002-C5005,C5009,C5012		CKSSYF104Z16
RESISTORS		
R5002,R5007,R5025-R5027		RAB4CQ103J
Other Resistors		RS1/16S###J
OTHERS		
X5002 CERAMIC RESONATOR		ASS1168
X5001 CRYSTAL OSCILLATOR		ASS1172

Mark No.	Description	Part No.
[MAIN UCOM BLOCK]		
SEMICONDUCTORS		
IC5202		BR24L64F-W
IC5206		MB91305PMC-G-BND
IC5207		MBM29DL162TE70TN
IC5210		MM1522XU
IC5209		PQ200WNA1ZPH
IC5203		PST3628UR
IC5201		TC74VHC125FTS1
Q5202		2SJ461A
Q5204		DTC124EUA
Q5201		SM6K2
D5203		1SS355
D5201		SML-311UT
CAPACITORS		
C5235		CCSRCH221J50
C5244,C5245		CCSSCH120J50
C5217,C5218,C5237,C5239-C5243		CCSSCH470J50
C5246-C5249		CCSSCH470J50
C5238		CEHVKW100M35
C5201		CEHVKW101M6R3
C5261-C5263		CKSSYB102K50
C5216,C5233		CKSSYB103K16
C5215		CKSSYB472K25
C5253		CKSSYF103Z50
C5202-C5209,C5211-C5214,C5219		CKSSYF104Z16
C5222-C5232,C5234,C5252		CKSSYF104Z16
C5236		DCH1165
RESISTORS		
R5262,R5268		ACN1248
R5205,R5213		RAB4CQ101J
R5253		RS1/10S0R0J
R5283		RS1/16S1001F
R5282		RS1/16S4701F
R5273		RS1/16S8201F
Other Resistors		RS1/16S###J
OTHERS		
CN5202 50P CONNECTOR		AKM1201
K5201,K5202 TEST PIN		AKX9002
X5201 CERAMIC RESONATOR		ASS1178
[TEXT UCOM BLOCK]		
SEMICONDUCTORS		
IC5403		K4S641632H-TC75
IC5404		S29AL016D70TFI010
IC5405		SDA6000
IC5407		TC74LCX125FT
IC5402		TC7SH04FUS1
IC5406		TC7W126FU
Q5401,Q5406		DTA124EUA
Q5403,Q5407		DTC124EUA
D5404		1SS355
D5401		UDZS12(B)
D5402		UDZS3R0(B)
D5403		UDZS3R9(B)
COILS AND FILTERS		
⚠F5402,F5403 EMI FILTER		CCG1162

Mark No.	Description	Part No.
	CAPACITORS	
	C5412,C5438,C5453 (10/6.3V)	ACG7046
	C5422,C5423	CCSSCH200J50
A	C5404	CKSSYB102K50
	C5403	CKSSYB103K16
	C5445	CKSSYB104K10
	C5405,C5406,C5408,C5410,C5413	CKSSYF104Z16
	C5416,C5418,C5420,C5425,C5427	CKSSYF104Z16
	C5429-C5431,C5434,C5435,C5440	CKSSYF104Z16
	C5442,C5446,C5449,C5451,C5454	CKSSYF104Z16
	C5456,C5458,C5460,C5476	CKSSYF104Z16
	RESISTORS	
	R5409	ACN1251
B	R5404,R5428,R5429,R5434,R5435	BCN1067
	R5439,R5457,R5476	RAB4CQ103J
	R5432,R5460	RAB4CQ680J
	Other Resistors	RS1/16S###J
	OTHERS	
	X5401 CRYSTAL	ASS1193
	[VDEC BLOCK]	
	SEMICONDUCTORS	
	IC6002	K4S161622H-TC60
	IC6001	TVP5150AM1PBS
C	IC6003	UPD64015GM-UEU
	Q6002	DTA124EUA
	COILS AND FILTERS	
	⚠F6001,F6002,F6008-F6011,F6022 EMI FILTER	CCG1162
	CAPACITORS	
	C6056,C6088 (10/6.3V)	ACG7046
	C6059,C6060	CCSSCH100D50
	C6078,C6083	CCSSCH8R0D50
	C6048-C6050	CKSRYB105K10
D	C6062,C6069	CKSSYB103K16
	C6046,C6051,C6052,C6054,C6058	CKSSYB104K10
	C6063,C6064,C6066,C6067	CKSSYB104K10
	C6072,C6073,C6075-C6077	CKSSYB104K10
	C6081,C6082,C6084,C6085	CKSSYB104K10
	C6001-C6008,C6012-C6028	CKSSYF104Z16
	C6031-C6045,C6047,C6053,C6055	CKSSYF104Z16
	C6061,C6065,C6068,C6070,C6071	CKSSYF104Z16
	C6074,C6079,C6080,C6090,C6091	CKSSYF104Z16
	RESISTORS	
E	R6010,R6062,R6068,R6072	ACN1246
	R6065,R6073	BCN1067
	R6007,R6023,R6030,R6071	RAB4CQ220J
	R6063	RS1/16SS1001D
	R6038,R6039,R6049	RS1/16SS2000F
	R6054	RS1/16SS2201D
	R6052	RS1/16SS6200D
	Other Resistors	RS1/16S###J
	OTHERS	
	X6001 CRYSTAL	ASS1189
	X6002 CRYSTAL	ASS1191
F		

Mark No.	Description	Part No.
	[ADC BLOCK]	
	SEMICONDUCTORS	
	IC6201	AD9985KSTZ-110
	COILS AND FILTERS	
	⚠F6201,F6204 EMI FILTER	CCG1162
	CAPACITORS	
	C6205,C6209	CKSSYB104K10
	C6207,C6210,C6218	CKSSYB473K16
	C6202	CKSSYB822K16
	C6201	CKSSYB823K10
	C6203,C6204,C6206,C6208	CKSSYF104Z16
	C6211,C6212,C6215-C6217	CKSSYF104Z16
	C6222-C6224	CKSSYF104Z16
	RESISTORS	
	R6213,R6218,R6223	BCN1067
	R6202	RS1/16SS2701F
	Other Resistors	RS1/16S###J
	[HDMI BLOCK]	
	SEMICONDUCTORS	
	IC6403	BR24L02FJ-W
	IC6405	PCM1754DBQ
	IC6404	SII9021CTU
	Q6416	2SA1586
	Q6414	DTA124EUA
	Q6415	DTC124EUA
	Q6405	HN1K02FU
	Q6404	RN1902
	D6408	1SS301
	D6407	UDZS6R8(B)
	COILS AND FILTERS	
	⚠F6401 EMI FILTER	CCG1162
	CAPACITORS	
	C6491 (10/6.3V)	ACG7046
	C6401,C6403,C6405,C6407,C6411	CCSSCH101J50
	C6419,C6426,C6428,C6430,C6432	CCSSCH101J50
	C6434,C6435,C6438,C6440,C6442	CCSSCH101J50
	C6444,C6446,C6448,C6449,C6454	CCSSCH101J50
	C6456,C6459,C6464,C6466,C6468	CCSSCH101J50
	C6470,C6472,C6474,C6476,C6478	CCSSCH101J50
	C6480,C6482	CCSSCH101J50
	C6462,C6463	CCSSCH120J50
	C6484	CEHVKW220M6R3
	C6402,C6404,C6406,C6408,C6410	CKSSYF104Z16
	C6412,C6414,C6416,C6418,C6420	CKSSYF104Z16
	C6422,C6423,C6427,C6429,C6431	CKSSYF104Z16
	C6433,C6436,C6437,C6439,C6441	CKSSYF104Z16
	C6443,C6445,C6447,C6450,C6451	CKSSYF104Z16
	C6455,C6457,C6458,C6460,C6461	CKSSYF104Z16
	C6465,C6467,C6469,C6471,C6473	CKSSYF104Z16
	C6475,C6477,C6479,C6481,C6483	CKSSYF104Z16
	C6490	CKSSYF104Z16
	RESISTORS	
	R6418,R6419,R6421	ACN1251
	R6414	RAB4CQ100J
	R6465	RAB4CQ103J
	R6438	RAB4CQ470J
	R6416	RAB4CQ680J

Mark No.	Description	Part No.
	Other Resistors	RS1/16S###J
OTHERS		
	JA6402 HDMI CONNECTOR	AKP1278
	X6401 CRYSTAL	ASS1192
[DSEL BLOCK]		
SEMICONDUCTORS		
	IC6601	PD6523A
	IC6602	TC74LCX125FT
COILS AND FILTERS		
⚠	F6604 CHIP BEAD FILTER	ATX1058
⚠	F6601-F6603 EMI FILTER	CCG1162
CAPACITORS		
	C6632 (10/6.3V)	ACG7046
	C6604	CCSRCH221J50
	C6631	CKSSYB102K50
	C6601-C6603,C6607-C6610	CKSSYF104Z16
	C6613-C6617,C6619,C6621-C6623	CKSSYF104Z16
	C6625-C6627,C6629,C6630	CKSSYF104Z16
RESISTORS		
	R6603-R6605	ACN1251
	R6611,R6614,R6618	BCN1071
	R6613,R6620	RAB4CQ101J
	Other Resistors	RS1/16S###J
OTHERS		
	X6601 CRYSTAL	ASS1194
[IP BLOCK]		
SEMICONDUCTORS		
	IC6801,IC6802	K4S643232H-TC60
	IC6803	PE5504B
COILS AND FILTERS		
⚠	L6801-L6804 CHIP BEAD FILTER	BTX1042
CAPACITORS		
	C6801 (10/6.3V)	ACG7046
	C6863	CKSSYB102K50
	C6802,C6804,C6807-C6809,C6813	CKSSYF104Z16
	C6815-C6817,C6821,C6824-C6828	CKSSYF104Z16
	C6830,C6831,C6834,C6835	CKSSYF104Z16
	C6839-C6862	CKSSYF104Z16
RESISTORS		
	R6833,R6838	ACN1246
	R6841,R6844-R6847	ACN1251
	R6813,R6814,R6816,R6820,R6821	BCN1067
	R6823,R6825,R6827,R6828	BCN1067
	R6818	BCN1071
	R6832	RAB4CQ101J
	R6817	RAB4CQ470J
	Other Resistors	RS1/16S###J

Mark No.	Description	Part No.
[MULTI BLOCK]		
SEMICONDUCTORS		
	IC7002	MBM29DL162TE70TN
	IC7001	PEG121B
	IC7004	TC74VHC08FTS1
COILS AND FILTERS		
⚠	F7001-F7005 EMI FILTER	CCG1162
CAPACITORS		
	C7052	CKSSYB102K50
	C7006,C7008,C7010-C7017,C7019	CKSSYF104Z16
	C7021,C7023,C7024,C7026-C7029	CKSSYF104Z16
	C7032-C7034,C7036,C7037	CKSSYF104Z16
	C7039-C7042,C7044,C7046-C7048	CKSSYF104Z16
	C7050	CKSSYF104Z16
RESISTORS		
	R7011,R7013,R7024,R7032,R7036	ACN1246
	R7062-R7064	ACN1251
	R7015,R7023	RAB4CQ101J
	R7016,R7018,R7070	RAB4CQ103J
	R7060	RAB4CQ680J
	Other Resistors	RS1/16S###J
[MR IF BLOCK]		
SEMICONDUCTORS		
	IC7202	SII170BCLG64
	IC7201,IC7203	TC74VHC08FTS1
	Q7206	2SA1586
	Q7203,Q7207,Q7210	DTA124EUA
	Q7211	DTC124EUA
	Q7209	HN1C01FU
	Q7201	RN1902
	D7202-D7206	1SS355
COILS AND FILTERS		
⚠	F7204-F7207 EMI FILTER	ATF1209
⚠	L7201 CHIP BEAD FILTER	BTX1042
⚠	F7201-F7203 EMI FILTER	CCG1162
⚠	F7208 EMI FILTER	CCG1162
CAPACITORS		
	C7203,C7207,C7208 (10/6.3V)	ACG7046
	C7226,C7227	CCSSCH100D50
	C7201,C7204,C7211,C7213,C7214	CCSSCH101J50
	C7216,C7217,C7219,C7221,C7222	CCSSCH101J50
	C7223	CKSSYB102K50
	C7209,C7215,C7220,C7225,C7228	CKSSYB471K50
	C7202,C7205,C7206,C7210,C7212	CKSSYF104Z16
	C7218,C7224	CKSSYF104Z16
RESISTORS		
	R7215	RAB4CQ101J
	R7216	RS1/16S5100F
	Other Resistors	RS1/16S###J
OTHERS		
	CN7201 SOCKET (20P)	AKP1226
	CN7202 DVI SOCKET (24P)	AKP1250

Mark	No.	Description	Part No.

SR ASSY

SEMICONDUCTORS

	IC7601	MAX3232CPW
	IC7603	TC74VHC00FTS1
	IC7602	TC74VHC125FTS1
	Q7601,Q7605	2SA1586
	Q7603	2SC4116
	Q7602,Q7604,Q7606	DTC124EUA
	D7609-D7612	1SS355

CAPACITORS

	C7608,C7611	CEHVKW100M16
	C7603-C7607,C7609,C7610	CKSSYF104Z16

RESISTORS

	All Resistors	RS1/16S###J

OTHERS

	JA7603 MINI JACK (4P)	AKN1073
	CN7602 9P D-SUB SOCKET	AKP1213
	CN7601 CONNECTOR	CKS3826
	JA7602 JACK	RKN1004

FRONT ASSY

SEMICONDUCTORS

	IC7801	BR24C21FJ
	IC7802	TC74VHC08FTS1
	Q7806-Q7808	2SC4116
	Q7804,Q7805	DTC124EUA
	D7813	1SS301
	D7816-D7818	1SS302
	D7801-D7803	UDZS5R1(B)
	D7809-D7812,D7814,D7815	UDZS5R6(B)
	D7804,D7808	UDZS9R1(B)

COILS AND FILTERS

	L7803,L7804	LCTAW560J2520

CAPACITORS

	C7821,C7827 (10/6.3V)	ACG7046
	C7829,C7830 (10/6.3V)	ACG7046
	C7822,C7823	CCSRCH220J50
	C7817,C7818	CEHAT471M10
	C7803,C7804	CKSRYB103K50
	C7805,C7808,C7809,C7813	CKSRYB105K10
	C7831,C7832,C7834	CKSRYB105K10
	C7801	CKSRYB473K16
⚠	C7839,C7840	CKSSYB102K50
	C7802,C7820,C7824	CKSSYF104Z16
	C7819,C7835	DCH1165

RESISTORS

	R7801,R7803,R7809,R7857-R7859	RS1/16S75R0F
	Other Resistors	RS1/16S###J

OTHERS

	JA7803 PIN JACK (3P)	AKB1303
	CN7803 12P FFC CONNECTOR	AKM1233
	CN7804 50P CONNECTOR	AKM1236
	CN7801 MINI JACK	AKN1028
	CN7806 15P D-SUB SOCKET	AKP1214
	JA7801 4P MINI DIN SOCKET (S)	AKP1238
⚠	7805 SCREW TERMINAL	VNE1949

LED ASSY

SEMICONDUCTORS

	Q8004	DTC124EUA
	Q8002	RN2902
	D8003	SML-311UT
	D8004	SML310BA1T

SWITCHES AND RELAYS

	S8001-S8006	ASG1088

CAPACITORS

	C8005,C8006	CCSRCH101J50
	C8001,C8002	CKSSYF104Z16

RESISTORS

	All Resistors	RS1/16S###J

OTHERS

	CN8001 CONNECTOR	CKS3826

POWER SUPPLY UNIT

POWER SUPPLY Unit has no service part.

6. ADJUSTMENT

1. At shipment, the unit is adjusted to its best conditions. Normally, it is not necessary to readjust even if an assembly is replaced.
2. Use a stable AC power supply.

6.1 POSSIBLE CASES WHERE READJUSTMENT IS REQUIRED

■ When any of the following assemblies is replaced

POWER SUPPLY Unit	➡	No adjustment required
MR MAIN Assy	➡	No adjustment required
Other assemblies	➡	No adjustment required

■ When any part in the following assemblies is replaced

POWER SUPPLY Unit	➡	The assembly must be replaced as a unit, and no part replacement is allowed.
MR MAIN Assy	➡	No adjustment required. However, IC4804, IC4806, IC5207, IC6001, IC6003 and IC6201 must not be replaced. In this case, the assembly must be replaced as a unit.
Other assemblies	➡	No adjustment required


6.2 SERVICING USING ONLY THE MEDIA RECEIVER

For servicing of the PDP-436HD and PDP-506HD-series Plasma Display using only the Media Receiver, the following two methods can be used:

● Remote controlling using SR connections


About connections

- Connect the SR OUT connector of a Pioneer product having that connector (a DVD in the following example) and the SR IN connector of the Media Receiver, using the SR cable. As the remote control sensor is not provided with the Media Receiver, this connection is required for using the remote control unit if the panel is not available. In this case, aim the remote control unit at the remote control sensor of the device (DVD in this case).
- Connect either the audio or the video output of the device (DVD in the example) and the corresponding audio or video input of the Media Receiver, using a cable with phono plugs. This connection is required in order to use ground in common with the SR cable, because with the SR cable connection the ground connection for signal reference is not available. In the example, the audio L channel is used, but the audio R channel or video can be used instead.
- If the plasma display for a previous model, such as the PDP-433P or PDP-503P, is available, servicing while checking displays or using the menus is possible. For this, connect only the DVI connectors (white) of the Media Receiver and the plasma display. The MDR connector of the Media Receiver must not be used, even though it has the same shape and number of pins, because signals assigned to the connectors

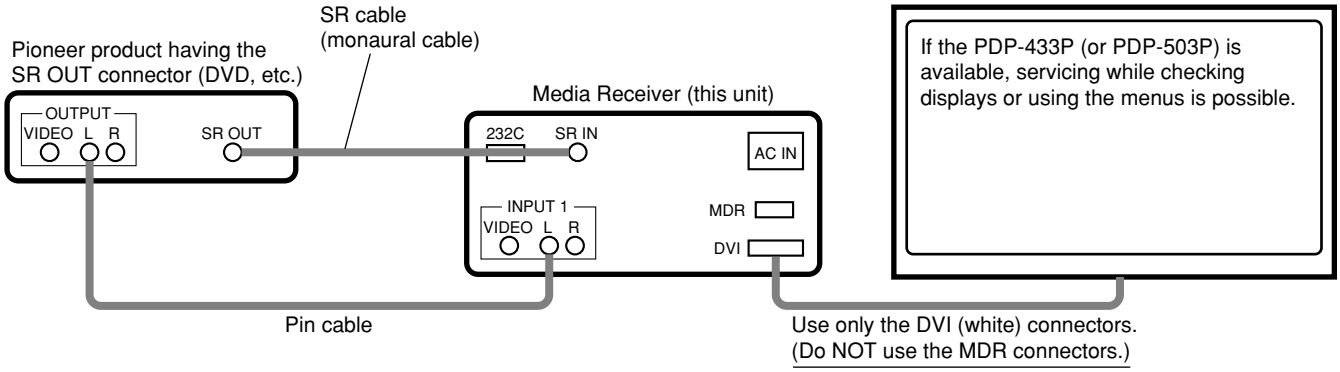


● RS-232C control using a PC

RS-232C control is not available in shipment.
Please set baud rate of PC in 38400bps.
For connection with the PC, use a straight cable.

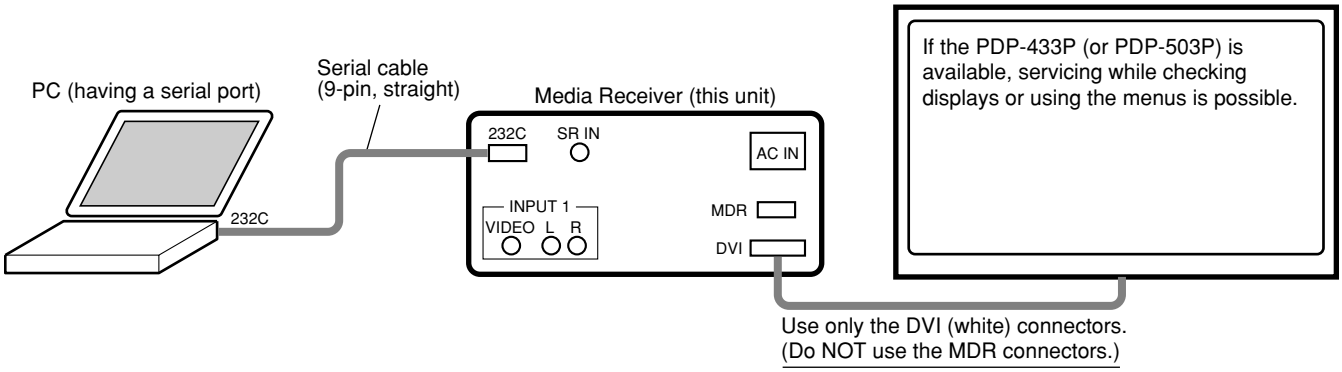

● Note on connection

If the MDR connector of the PDP-436HD or PDP-506HD-series is used, it is considered that the PDP-436P (or PDP-506P) is connected, and the Media Receiver operates on such precondition, **which may result in a failure of the Media Receiver. Be sure not to connect to the MDR connector.** (Do NOT use the MDR connector when servicing the Media Receiver alone.)

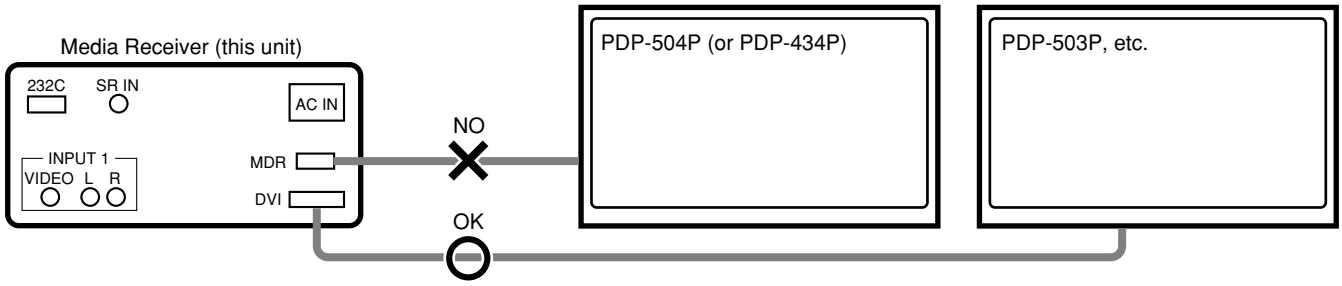

6.3 SERVICE FACTORY MODE

To operate in Service Factory mode, use the supplied remote control unit.

How to enter Service Factory Mode

While in Standby mode, follow the below procedures with the remote control to enter Service Factoy mode.

1. Press the [DISPLAY] key.
2. 3 second counter will start.
3. After 3 seconds, press [LEFT] key.
   (If no operation is done within 10 seconds, the Service Factory routine is cleared, and the standby mode is returned)
4. 5 Second counter will start.
5. Before 5 second counter ends, press [UP] key.
6. Before 5 second counter ends, press [LEFT] key.
7. Before 5 second counter ends, press [RIGHT] key.
8. Before 5 second counter ends, press [POWER] key.
9. If the prodcedure is correct with the given time, the Service Factory mode is up and ready.

* During step 3 to 8, if other operations took place, the Service Factory routine is cleared.

Operation in Service Factory mode

● Functions whose settings are set to OFF

The settings for the following functions are set to OFF when Service Factory mode is entered (including when the "FAY" command is received):

- Two-screen operations (input function set on the main side is selected)
- P ZOOM
- FREEZE
- Detection of the TRAP switch (The log in the EEPROM is retained.) (KUC type only)


● User data

User data will be treated as follows:


- User data on picture- and audio-quality adjustments are not reflected, and factory-preset data are output (user data will be retained in memory). When the unit enters Factory mode, the current audio-quality adjustment data will still be retained in memory.
- As to data on various settings, user data will be applied to the items that are associated with signal format change (screen size switching, etc.).
- Data on screen (i.e., screen position; meaning clock dividers, and not including data on screen size) are reset to the default values (data stored in memory will be retained). Screen size will be retained.

Remote control codes in Service Factory mode


SR Function	Main Function	Remarks
Muting	Switching the main items	Shifting to the next main item (top)
DOWN	Switching the subtitled items	Shifting downward to the next subtitled item
UP	Switching the subtitled items	Shifting upward to the next upper layer
LEFT	Increasing the adjustment value	Increasing the adjustment value
RIGHT	Decreasing the adjustment value	Decreasing the adjustment value
SET	Switching layers	Shifting downward or upward to the next lower or upper layer
INPUT	Selecting input	Shifting the input to the next function
INPUTxx	Selecting input	Switching the input to xx
CH+	Increasing the channel number	Advancing a preset channel (effective when Function is set to TV)
CH-	Decreasing the channel number	Turning a preset channel backward (effective when Function is set to TV)
Numeric keys	Function: TV	Function: TV (previously selected channel number is selected)
POWER	Power OFF	Turning the power off
FACTORY	Factory OFF	Turning Service Factory mode off
MENU	Menu ON	Turning Service Factory mode off and Menu mode on

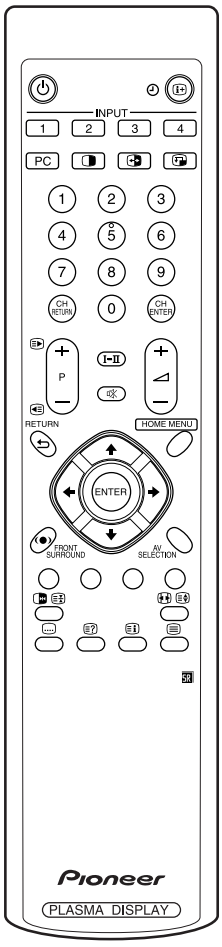

Changes of the Service Factory menus

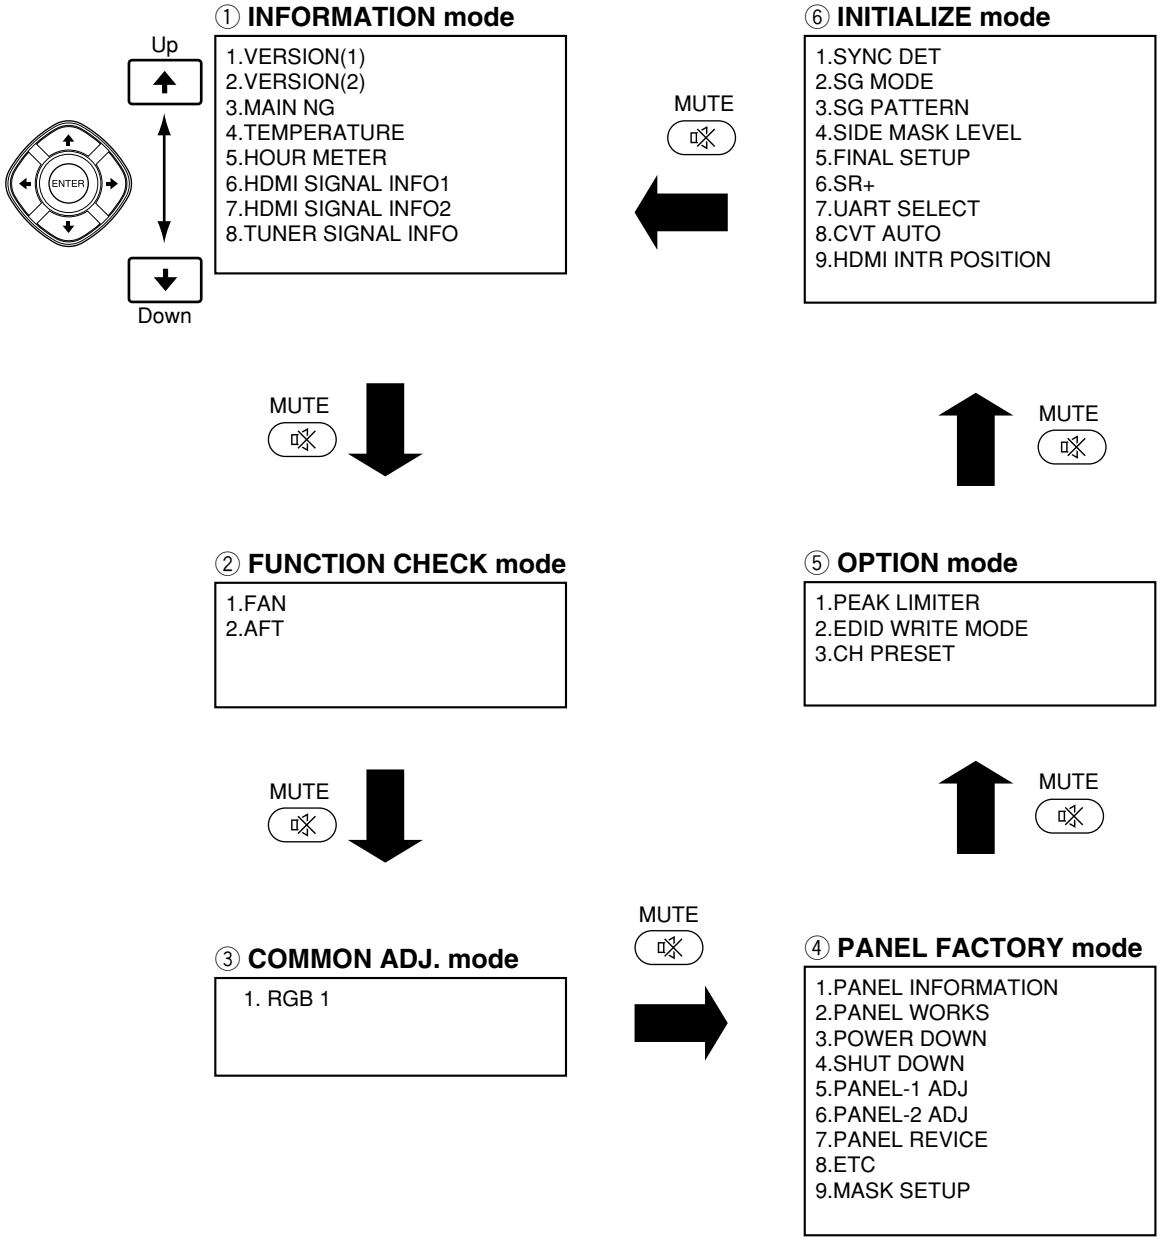


Indications in Service Factory mode

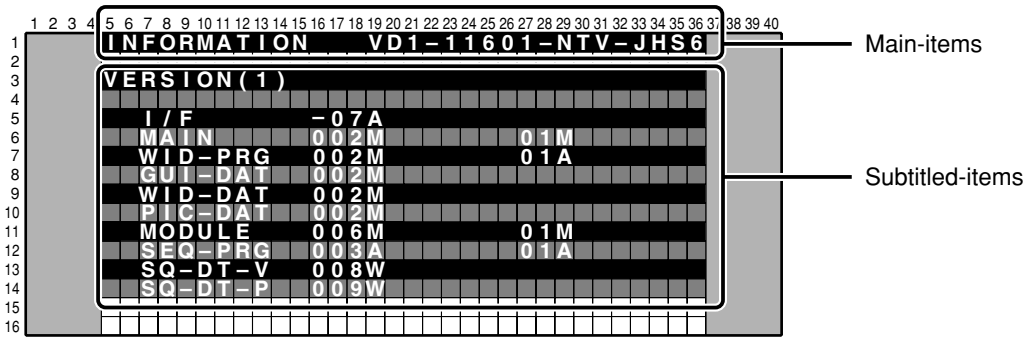

Main-item indications

Four parameters are displayed:

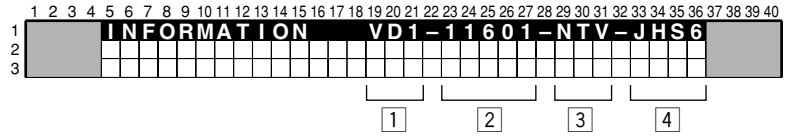

1 Input function

Input Functions	On-Screen Display
INPUT 1- 4	VD 1 - 4
Analog Tuner	AIR
PC	PC

4 Option (Destination, etc.)

Options	On-Screen Display
PDP-R06G	GHS6
PDP-R06C	CHS6

2 SIG mode and screen size

Note: See SIG-Mode Tables. (See next page.)

3 Color system and signal type

Color System and Signal Type		On-Screen Display	Color System and Signal Type		On-Screen Display
NTSC	Composite input	NTV	NTSC	S-connector input	NTS
PAL		PLV	PAL		PLS
PAL N		PNV	PAL N		PNS
PAL M		PMV	PAL M		PMS
SECAM		SCV	SECAM		SCS
4.43NTSC		4NV	4.43NTSC		4NS
BLACK/WHITE		BWV	BLACK/WHITE		BWS
Y / CB / CR		CBR	RGB		RGB
Y / PB / PR		PBR	Digital video signal		DIG

● SIG-Mode Table

The signal mode is displayed in four charecters:

1st and 2nd charecters : Resolutin of the input signal (numerics for the video signals, and alphabetics for the PC signals)
3rd and 4th charecters : Grouping of the V frequencies (refresh rate)
5th charecter : Selection of the screen size by the user is displayed.

SIG-Mode table for video signals (resolutions and V frequencies)

1st and 2nd	3rd and 4th	Signal Type	Fv (Hz)	Fh (kHz)
10	50	SDTV*625i	50.000	15.625
	60	SDTV*525i	60.000	15.750
12	60	SDTV*525i (PAL60)	60.000	15.750
20	50	SDTV*625p	50.000	31.250
	60	SDTV*525p	60.000	31.500
30	50	HDTV*1125i	50.000	28.125
	60	HDTV*1125i	60.000	33.750
40	50	HDTV*750p	50.000	37.500
	60	HDTV*750p	60.000	45.000
50	24	HDTV*1125p	24.000	27.000

Fv: Vertical Frequency, Fh: Horizontal Frequency

SIG-Mode table for PC signals (resolutions and V frequencies)

1st and 2nd	3rd and 4th	Signal Type	Fv (Hz)	Fh (kHz)
C1	70	720x400	70.087	31.469
C2	60	640x480	59.940	31.469
	72		72.809	37.861
	75		75.000	37.500
C4	56	800x600	56.250	35.1556
	60		60.317	37.879
	72		72.188	48.077
	75		75.000	46.875
C7	60	1024x768	60.004	48.363
	70		70.069	56.476
	75		75.029	60.023
C8	56	1280x768	56.250	45.113
	60		59.833	47.986
	70		70.000	56.137

Fv: Vertical Frequency, Fh: Horizontal Frequency

Selection of the screen size by the user is displayed.

5th	Description on GUI	VIDEO	PC	Remarks
0	DOT BY DOT	–	●	
1	4:3	●	●	
2	FULL(FULL1)	●	●	
3	ZOOM	●	–	
4	CINEMA	●	–	
5	WIDE	●	–	
6	FULL 14:9	●	–	
7	CINEMA 14:9	●	–	
8	FULL2	●	●	

●: available, –: not available


■ Factory Menus

① INFORMATION mode

● Operation items


No.	Function / Display	Content	RS-232C
1	VERSION (1)	The flash memory versions for each device are displayed. (common part)	QS1
2	VERSION (2)	The flash memory versions for each device are displayed. (individual part)	QS6
3	MAIN NG	The shutdown generated on Media Receiver side and its time of occurrence are displayed.	QNG
4	TEMPERATURE	Information of temperature and fan status on Media Receiver side are displayed.	QMT
5	HOUR METER	Cumulative power-on time to the Media Receiver is displayed.	–
6	HDMI SIGNAL INFO 1	The file information of HDMI series are displayed.	–
7	HDMI SIGNAL INFO 2		–
8	TUNER SIGNAL INFO	The signal information on TUNER is displayed.	–

1. VERSION (1)

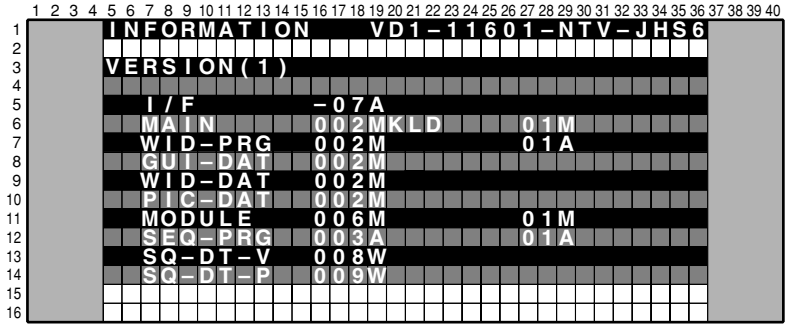


Flash memory on Device	On-Screen Display
IF microcomputer	I/F
Main microcomputer	MAIN
Program for CARRERA-MANTA	WID-PRG
GUI data for CARRERA-MANTA	GUI-DAT
Enhanced data for CARRERA-MANTA.	WID-DAT
Picture Quality data for CARRERA-MANTA	PIC-DAT
Module microcomputer (for the PDP)	MODULE
Program for ASTRA-MANTA (for the PDP)	SEQ-PRG
Sequence data for ASTRA-MANTA Video	SQ-DT-V
Sequence data for ASTRA-MANTA PC	SQ-DT-P

2. VERSION (2)

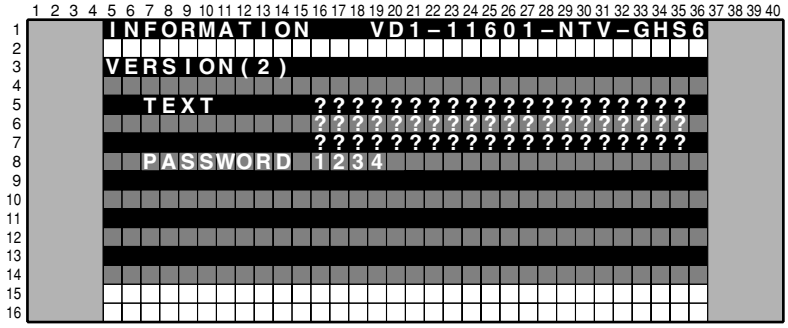

Device	On - Screen Display	Version Display	Remarks
Teletext ucom Software Version	TEXT	60 character	20 character x 3
User Password	PASSWORD	4 character	


3. MAIN NG

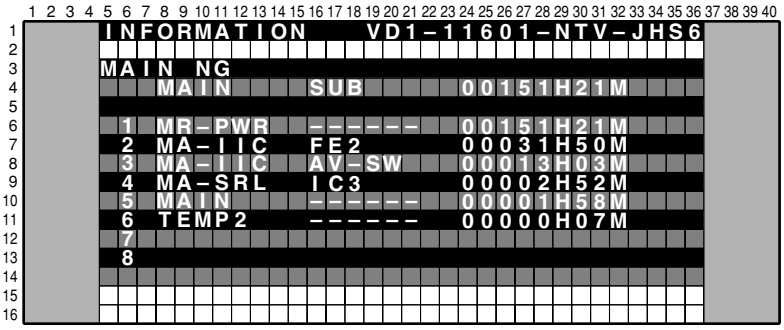

● **Media Receiver NG information**

OSD: MAIN	OSD: SUB	Cause of Shutdown
MODULE	----	Abnormally in Module microcomputer communication
MA-SRL		Abnormally in 3-wire Serial Communication of the Main microcomputer.
	IF	Communication failure of IF microcomputer
	MULTI1	MANTA communication failure (MULIT1)
	I/P	MANTA communication failure (I/P)
	D-SEL	MANTA communication failure (D-SEL)
MA-IIC		Abnormally in Main microcomputer IIC communication
	FE1	Analog Tuner 1 (Front End 1)
	AV-SW	AV Switch
	RGB-SW	RGB Switch
	M-VDEC	Main VDEC
	S-VDEC	Sub VDEC
	ADC	AD/PLL
	HDMI	HDMI
	PLK-T	TMDS Tx
	PLK-R	TMDS Rx
	TX-COM	M2 Communication
	TX-BSY	M2 Busy
	MA-EEP	64k EEPROM
MAIN		Abnormally in Main microcomputer communication
FAN		Fan stopped
TEMP2		Abnormally high temperature of the MR.


4. TEMPERATURE

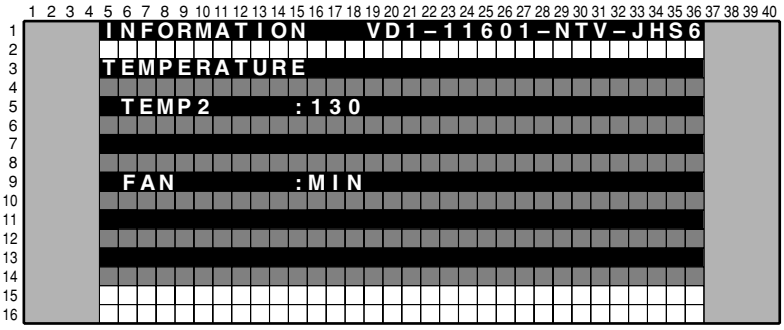

TEMP2 : The value read from the temperature sensor built into the Media Receiver is displayed in the range of 000-255. For reference, the approximate value for 60°C is 86 and for 35°C is 67.
Reference: When TEMP2 exceeds 100 (about 78°C), SD LED (Blue) flash 11 times.


FAN : The value of the Fan output is displayed.
STOP: stopped, MIN: slow speed, MAX: high speed


5. HOUR METER

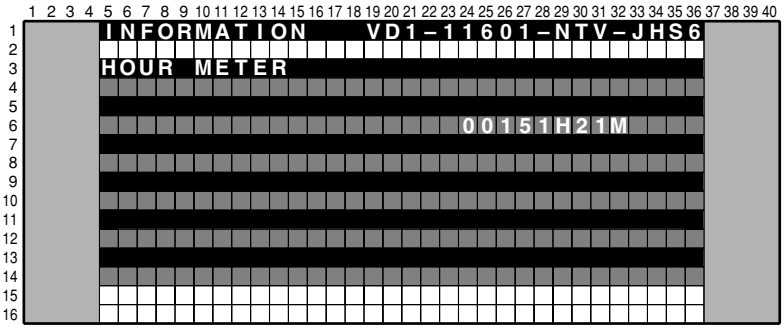

The cumulative power-on time of the Media Receiver is displayed.

6. HDMI SIGNAL INFO

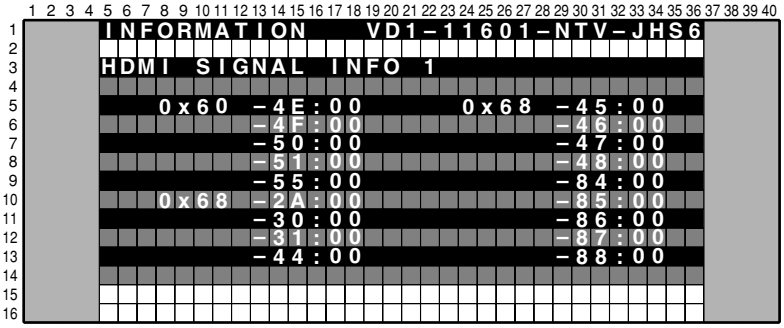

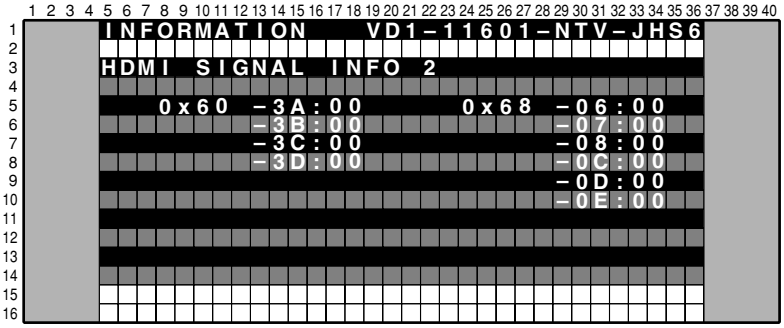


● **Technical examination display (Reading status registers in HDMI receiver and displaying them by HEX value.)**

HDMI SIGNAL INFO 1		
SA		**Context**
0x60	- 4E:	Video DE pixels [7:0]
	- 4F:	Video DE pixels [11:8]
	- 50:	Video DE lines [7:0]
	- 51:	Video DE lines [10:8]
	- 55:	Video status (interlace or progressive, sync polarity)
0x68	- 2A:	Audio in channel status (PCM, copy information etc.)
	- 30:	Audio in SPDIF channel status (sampling frequency)
	- 31:	Audio in SPDIF channel status (sample word length)
	- 44:	AVI InfoFrame data1 (video format etc.)
	- 45:	AVI InfoFrame data2 (colorimetry, aspect ratio)
	- 46:	AVI InfoFrame data3 (video scaling)
	- 47:	AVI InfoFrame data4 (video identification code)
	- 48:	AVI InfoFrame data5 (pixel repeat value for 2880dot)
	- 84:	Audio InfoFrame data1 (channel count, cording type)
	- 85:	Audio InfoFrame data2 (always zero)
	- 86:	Audio InfoFrame data3 (always zero)
	- 87:	Audio InfoFrame data4 (channel / speaker allocation)
	- 88:	Audio InfoFrame data5 (downmix inhibit, level shift value for downmixing)

HDMI SIGNAL INFO 2		
SA		**Context**
0x60	- 3A:	Video full H resolution [7:0]
	- 3B:	Video full H resolution [12:8]
	- 3C:	Video full V lines [7:0]
	- 3D:	Video full V lines [10:8]
0x68	- 06:	N Value for audio clock regeneration method. [7:0]
	- 07:	N Value for audio clock regeneration method. [15:8]
	- 08:	N Value for audio clock regeneration method. [19:16]
	- 0C:	CTS Value for audio clock regeneration method. [7:0]
	- 0D:	CTS Value for audio clock regeneration method. [15:8]
	- 0E:	CTS Value for audio clock regeneration method. [19:16]

7. TUNER SIGNAL INFO

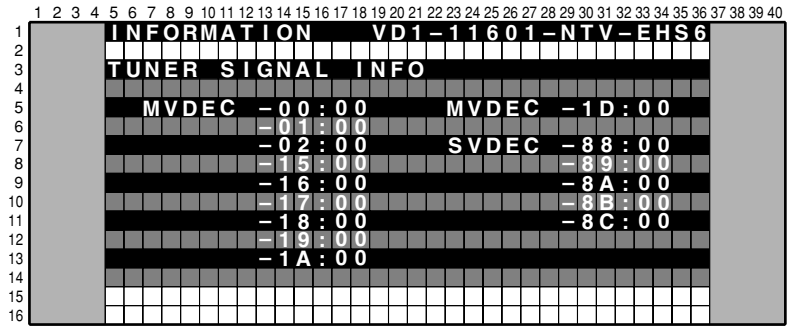

● **Tuner signal information in MVDEC / SVDEC.**

Device	SA	Context
MVDEC	00h	Signal distinction 1
	01h	Signal distinction 2
	02h	Flag detection output
	15h	Noise level detection 1
	16h	Noise level detection 2
	17h	Non - standard signal detection
	18h	Subcarrier signal detection
	19h	ACC data output
	1Ah	ACC information output
	1Dh	Input signal mode
SVDEC	88h	Status register 1 (TV/VCR status)
	89h	Status register 2 (Macrovision detection etc)
	8Ah	Status register 3 (Front-end AGC gain value)
	8Bh	Status register 4 (Subcarrier to horizontal (SCH) phase)
	8Ch	Status register 5 (signal distinction)

② FUNCTION CHECK mode

● **Operation items**

No.	Display	Content	RS-232C
1	FAN <=>	Control FAN speed for Force.	—
2	AFT <=>	Control AFT Lock.	—

③ COMMON ADJ. mode

RGB1

Only for the technical use.

④ PANEL FACTORY mode

● **Operation items**

No.	Function / Display
1	PANEL INFORMATION
2	PANEL WORKS
3	POWER DOWN
4	SHUT DOWN
5	PANEL-1 ADJ
6	PANEL-2 ADJ
7	PANEL REVISE
8	ETC
9	MASK SETUP

Refer to the service manual of the PDP-506P/436P.

⑤ OPTION mode

● **Operation items**

No.	Function/Display	Content	RS-232C
1	PEAK LIMITTER ⇔	Control Peak Limitter (Select ON/OFF)	—
2	EDID WRITE MODE ⇔	Control EDID WRITE MODE (Select DISABLE/ENABLE)	—
3	CH PRESET ⇔	Only for the productical use.	—

⑥ INITIALIZE mode

● **Operation items**


No.	Function/Display	Content	RS-232C
1	SYNC DET (+)	Only for the technical use.	–
2	SG MODE ⇔	Paired SG_MODE with SG_PATTERN. Select SG Route.	–
3	SG PATTERN ⇔	Paired SG_MODE with SG_PATTERN. Select SG Pattern.	–
4	SIDE MASK LEVEL (+)	Adjust Side Mask Color (R, G, B).	BSL GSL RSL
5	FINAL SETUP (+)	Initialize flash memories on virgin product status	FST
6	SR+ ⇔	Select SR+ mode or UART SELECT mode.	–
7	UART SELECT ⇔	Select boud Rate on RS-232C Communication	–
8	CVT AUTO ⇔	Only for the productical use.	–
9	HDMI INTR POSITION (+)	Only for the technical use.	–

1. SYNC DET(+)

Only for the technical use.


2. SG MODE

The route of the Test Signal from the MVDEC is chosen by this function.
After setting this function, SG pattern should be set.

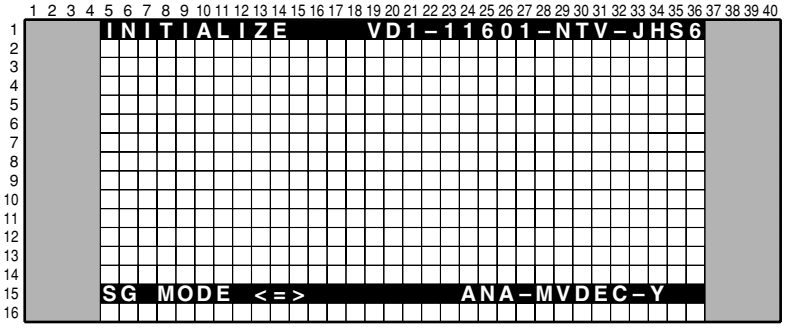

No.	Display	Function
1	SG OFF	SG is set to OFF
2	DIG MVDEC YCBCR	Digital output (YCbCr)
3	ANA MVDEC RGB	Analog output to the RGB SW (RGB)
4	ANA SVDEC Y	Analog output to the Video SW (Y)
5	ANA MVDEC Y	Analog output to the Video SW (Y)
6	ANA AD YCBCR	Analog output to the RGB SW (YCbCr)
7	ANA AD RGB	Analog output to the RGB SW (RGB)

3. SG PATTERN

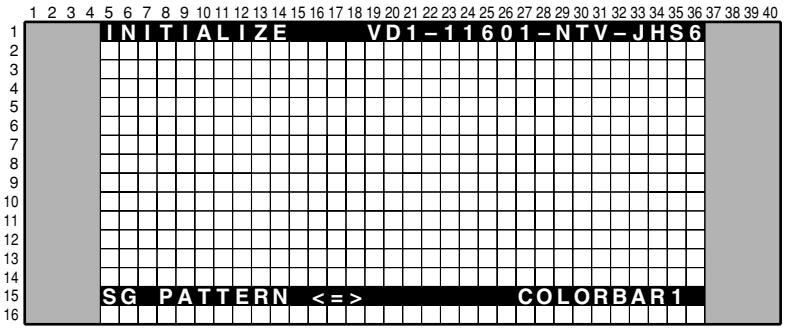


No.	Function/Display	SG Pattern (Brightness IRE Level/Color)	No.	Function/Display	SG Pattern (Brightness IRE Level/Color)
1	COLOR BAR1	Colorbar (75%)	11	RASTER4	Raster (75% Green)
2	COLOR BAR2	Colorbar (100%)	12	RASTER5	Raster (75% Magenta)
3	RAMP1	Ramp (100% white)	13	RASTER6	Raster (75% Red)
4	RAMP2	Ramp (100% Yellow)	14	RASTER7	Raster (75% Blue)
5	RAMP3	Ramp (75% Green)	15	RASTER8	Raster (-% Black)
6	RAMP4	Ramp (75% Red)	16	10STEP1	10STEP (100% white)
7	RAMP5	Ramp (75% Blue)	17	10STEP2	10STEP (100% Yellow)
8	RASTER1	Raster (100% White)	18	10STEP3	10STEP (75% Green)
9	RASTER2	Raster (75% Yellow)	19	10STEP4	10STEP (75% Red)
10	RASTER3	Raster (75% Cyanide)	20	10STEP5	10STEP (75% Blue)

Important notice of the Test Signal mode (SG mode, SG pattern)

- The route switching should be done correctly in the factory mode.
- Y or G signal from SG should be input to the AVI terminal of the MVDEC when the SG signal is output.
- The function of the blanking offset (50 IRE) should be OFF during the SG mode.
- The setting of the Y/C separation function should be set to the NTSC during the SG mode
- Only the RGB and Component signals can be output during SG mode, so only the Y signal is input at the CVBS and S signal mode, thus the picture is composed in black and white color. This isn't a trouble.
- The SG mode 7 (ANA AD RGB) is only for the factory mode. Therefore some probrem (strange color, unstable brightness etc.) might be happened.


4. SIDE MASK LEVEL

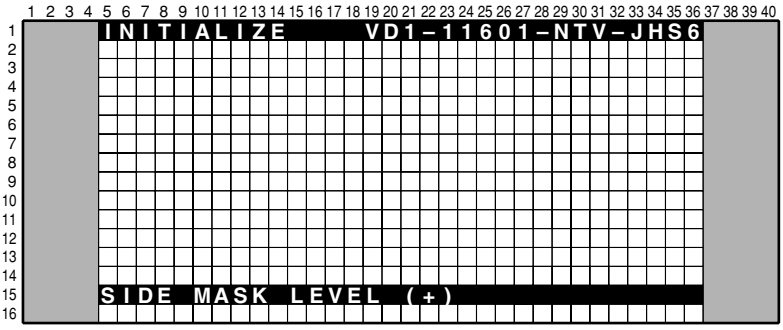

Level of the side mask (R, G, and B) can be adjusted by using this menu.
The input signal is necessary to adjust it.


No.	Display	Context	RS-232C
1	R MASK LEVEL ⇔	Adjust Side Mask R (range :000-255)	RSL
2	G MASK LEVEL ⇔	Adjust Side Mask G (range :000-255)	GSL
3	B MASK LEVEL ⇔	Adjust Side Mask B (range :000-255)	BSL

5. FINAL SETUP

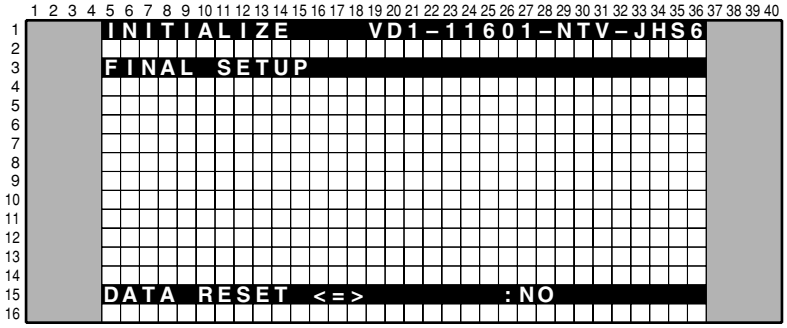


The value of all memorized data are set to shipment status. If the ENTER key is kept on pressing for 5 second when the status of this menu is YES, final setup will be done.

6. SR+

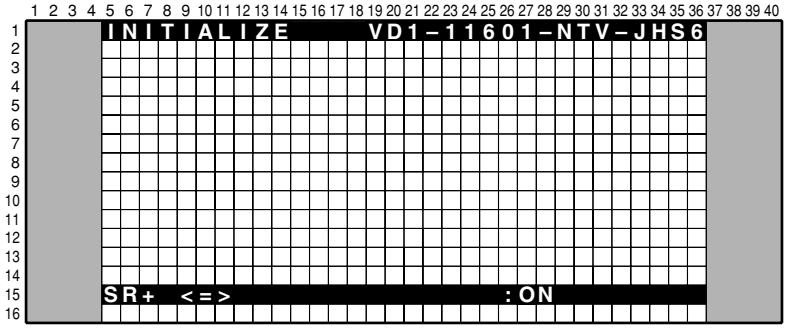

SR+ function → ON, RS-232C function → OFF

7. UART SELECT

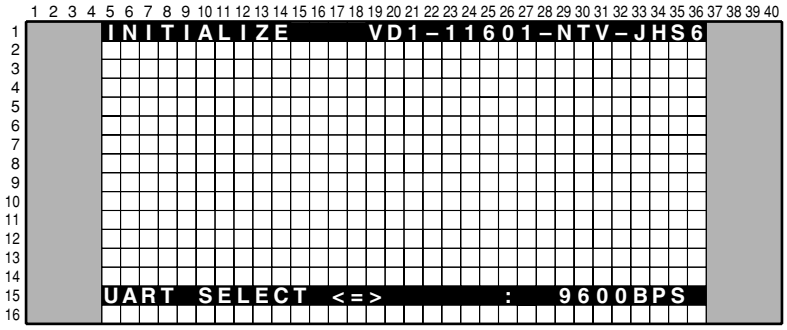

This function can be selected when the SR+ function is OFF.

Option No.	Display	Operation / Control	RS-232C
1 (Initial setting)	----	To Set to SR+ (9600bps)	SR+ is ON
2	1200	To Set to RS-232C (1200bps)	SR+ is OFF
3	2400	To Set to RS-232C (2400bps)	SR+ is OFF
4	4800	To Set to RS-232C (4800bps)	SR+ is OFF
5	9600	To Set to RS-232C (9600bps)	SR+ is OFF
6	19200	To Set to RS-232C (19200bps)	SR+ is OFF
7	38400	To Set to RS-232C (38400bps)	SR+ is OFF

6.4 LIST OF RS-232C COMMANDS

RS-232C commands can be used in Service Factory mode. Before using RS-232C commands, it is necessary to change the factory presetting.
Also the RS-232C commands for the panle is not listed. Please refer to panle's service manual.

Command	Operation	Remarks
B		
BSL	Adjust side mask B	
C		
CNG	Clearing MR NG information	
CHR	Clearing MR Hour meter	
D		
DW*	Decreasing the adjustment value by*	*:1-9, 0 (0 means 10), F (making the adjustment value the minimum)
F		
FAN	Turning Service Factory mode off.	
FAY	Turning Service Factory mode on.	
FST	Final Set Up	
G		
GSL	Adjusting side mask G	
I		
INA	Selection of tuner for terrestrial analog signals.	
INC***	Selection of tuner for terrestrial digital signals.	
INH	Selection of SD card/PCMCIA card	
INPS01	Input selection: input 1	
INPS02	Input selection: input 2	
INPS03	Input selection: input 3	
INPS04	Input selection: input 4	
INPS05	Input selection: input 5	
O		
OSDS00	Turning On-Screen Display off	Prohibit On-Screen Display.
OSDS01	Turning On-Screen Display on	Permit On-Screen Display.
P		
POF	Turning the power off.	
PON	Turning the power on.	
Q		
QS1	Obtaining the version data for each device.	
QS6	Obtaining the any version.	
QMT	Obtaining the MR temperature information.	
QNG	Obtaining NG data of the MR.	
R		
RSL	Adjustment od side mask R	
U		
UP*	Increasing the adjustment value by *	*:1-9, 0 (0 means 10), F (making the adjustment value the maximum)
Z		
ZME	Initializing of the EEPROM video data	

6.5 OUTLINE OF COMMANDS

If you want to see version information (ex. QS1,QS6,Factory Menu), Please see 10 seconds after starting.

QS1: Returning information on the module and the version of the software.

Order	Part	Data Content	Size	Remarks
0	-	Received Command Name on MR	3 byte	'QS1' only
1	MDU	Display Information 1	1 byte	
2		Display Information 2	1 byte	
3		Display Information 3	1 byte	
4		Display Information 4	1 byte	
5		Display Information 5	1 byte	
6		Boot Version of Module microcomputer.	3 byte	
7		Program Version of Module microcomputer.	8 byte	
8		Boot Version of ASTRA-MANTA	3 byte	
9		Program Version of ASTRA-MANTA	8 byte	
10		Sequence Version (43VIDEO)	4 byte	
11		Sequence Version (43PC)	4 byte	
12		Sequence Version (50VIDEO)	4 byte	
13		Sequence Version (50PC)	4 byte	
14	MR	, (comma)	1 byte	
15		MR Information 1	1 byte	
16		MR Information 2	1 byte	
17		MR Information 3	1 byte	
18		MR Information 4	1 byte	
19		Version of IF microcomputer	4 byte	
20		Version of Main microcomputer	8 byte	
21		Boot Version of Main microcomputer	4 byte	
22		Program Version of CARRERA-MANTA	8 byte	
23		Boot Version of CARRERA-MANTA	4 byte	
24		GUI Version of CARRERA-MANTA	8 byte	
25		Enhanced Version of CARRERA-MANTA	8 byte	
26		PIC Version of CARRERA-MANTA	8 byte	

QS6: Returning information of the Flash Device.

Order	Data Content	Size	Remarks
0	Received Command Name on MR	3 byte	'QS6' only
1	Version of Text	60 byte	
2	User Password	4 byte	

QMT: Returning information of MR temperature and FAN speed.

Order	Data Content	Size	Remark
1	Received Command Name on MR	3 byte	'QMT' only
2	MR Temperature	3 byte	
3	MR FAN Speed	1 byte	0: STOP 1: MIN 2: MAX

QNG: Returning data (logs keep on Main microcomputer) on shutdown of Media Receiver.

Order	Data	Size	Context
0	Received Command Name on MR	3 byte	'QNG' only
1	Latest NG data	1 byte	
2	Data of subcategory for the latest NG	1 byte	
3	Data of MR hour meter for the latest NG	7 byte	
4	Data of temperature for the latest NG	3 byte	
5	2nd latest NG data	1 byte	
6	Data of subcategory for the 2nd latest NG	1 byte	
7	Data of MR hour meter for the 2nd latest NG	7 byte	
8	Data of temperature for the 2nd latest NG	3 byte	
:	:	:	
29	7th latest NG data	1 byte	
30	Data of subcategory for the 8th latest NG	1 byte	
31	Data of MR hour meter for the 8th latest NG	7 byte	
32	Data of temperature for the 8th latest NG	3 byte	

• Details on the NG data and subcategory

Data	Cause of Shutdown	Remarks
0	Normal	
1	Failure of communication to Module microcomputer	
2	3-wire Serial Communication of Main microcomputer.	Subcategory ⇒ 1
3	IIC Communication failure of Main microcomputer	Subcategory ⇒ 2
4	Communication failure of Main microcomputer &Unknown Error	
5	Fan stopped	
6	Abnormally high temperature at MR.	
8	Abnormally in RST2 of MR (power decrease of DC-DC converter)	

• Data on Subcategories for failure in 3-wire serial communication of Main microcomputer (subcategory 1)

Data	Cause of Shutdown	Remarks
0	Non subcategory	
1	Communication failure of IF microcomputer	Power OFF
2	MANTA communication failure (MULIT1)	Power OFF
3	MANTA communication failure (MULIT2)	Reserved
4	MANTA communication failure (I/P)	
5	MANTA communication failure (D-SEL)	

• Data on Subcategories for failure in IIC communication of Main microcomputer (subcategory 2)


Data	Cause of Shutdown	Data	Cause of Shutdown
0	Non subcategory	A	AD/PLL
1	Analog Tuner 1 (Front End 1)	B	HDMI
4	AV Switch	C	TMDS Tx
5	RGB Switch	D	TMDS Rx
8	Main VDEC	E	M2 Communication
9	Sub VDEC	F	M2 Busy
		G	64k EEPROM

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 TROUBLESHOOTING

● **Image for the composite or S or TV signal is not displayed**

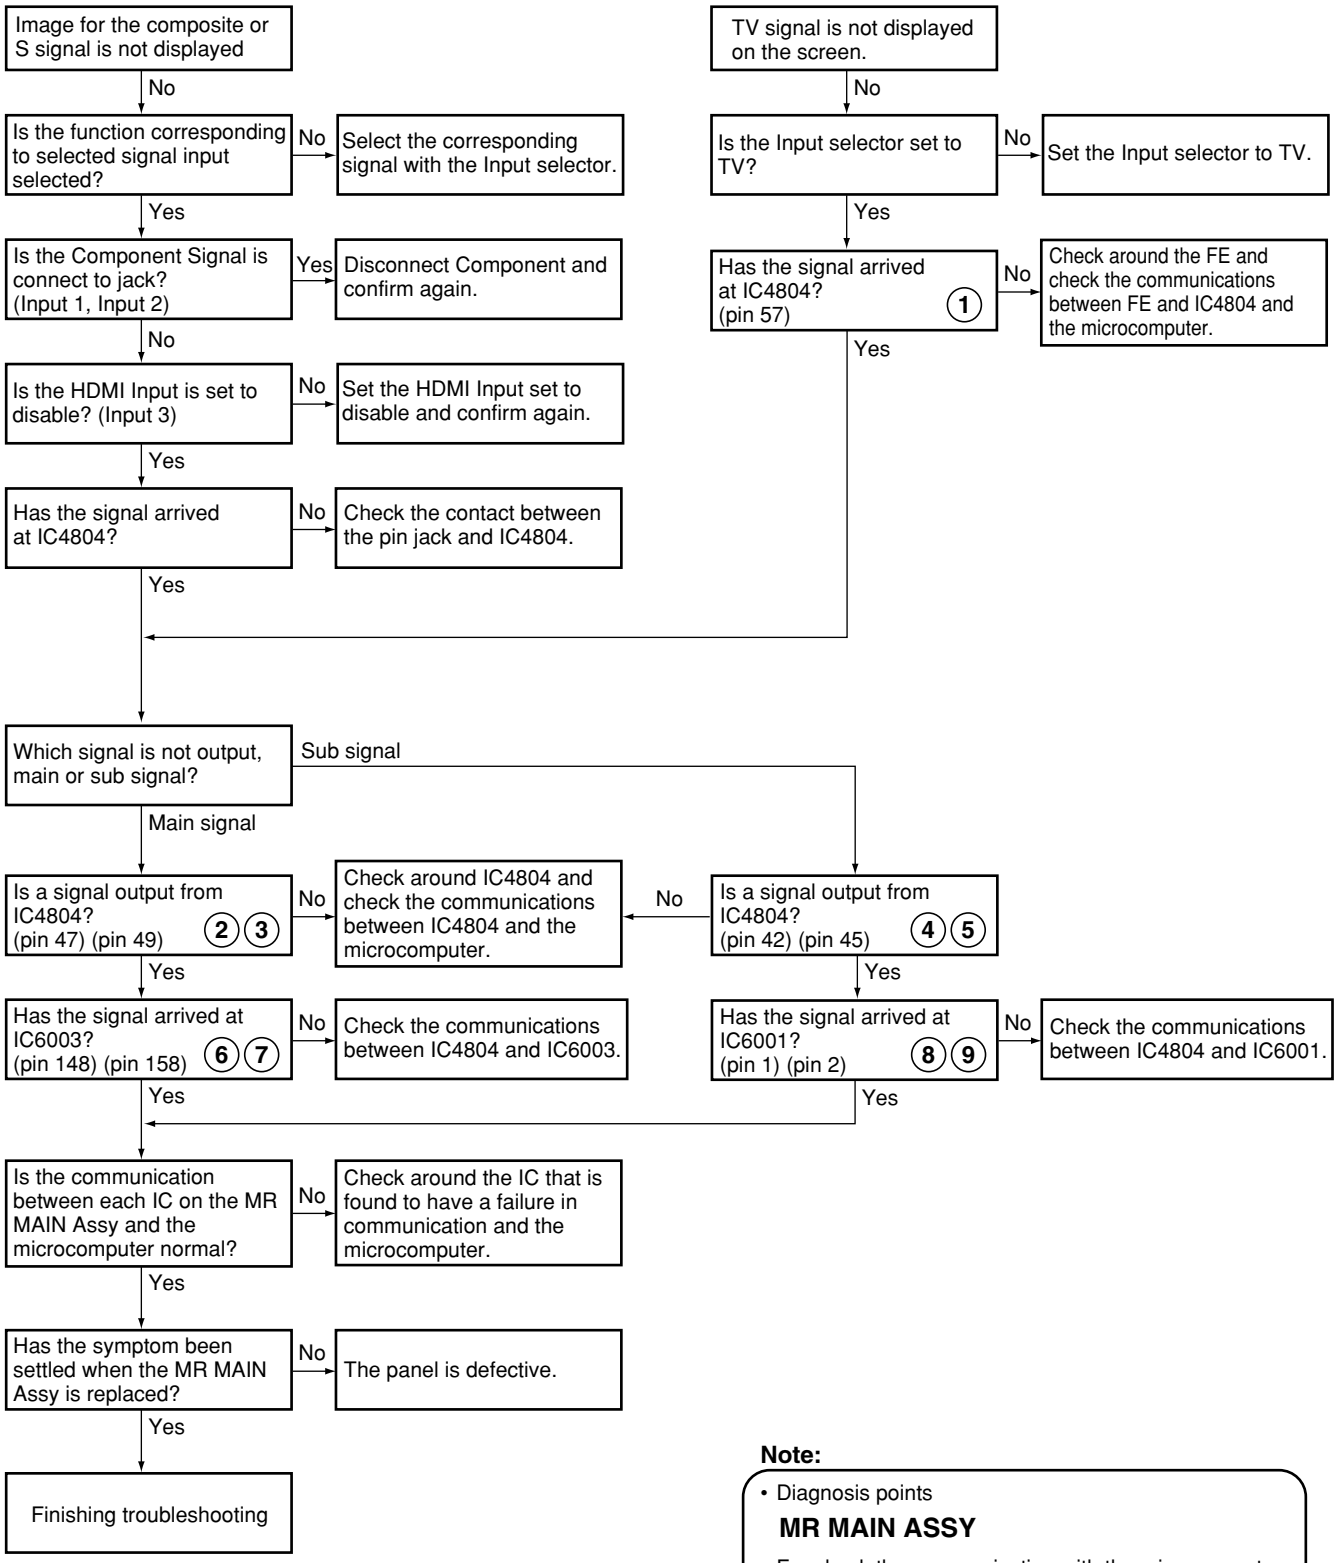


Note:

- Diagnosis points


  MR MAIN ASSY

- For check the communication with the microcomputer, refer to the section 6.3 SERVICE FACTORY MODE.
- The encircled numbers denote measuring point in the Waveforms for Troubleshooting.


● Image for the component or PC signal is not displayed

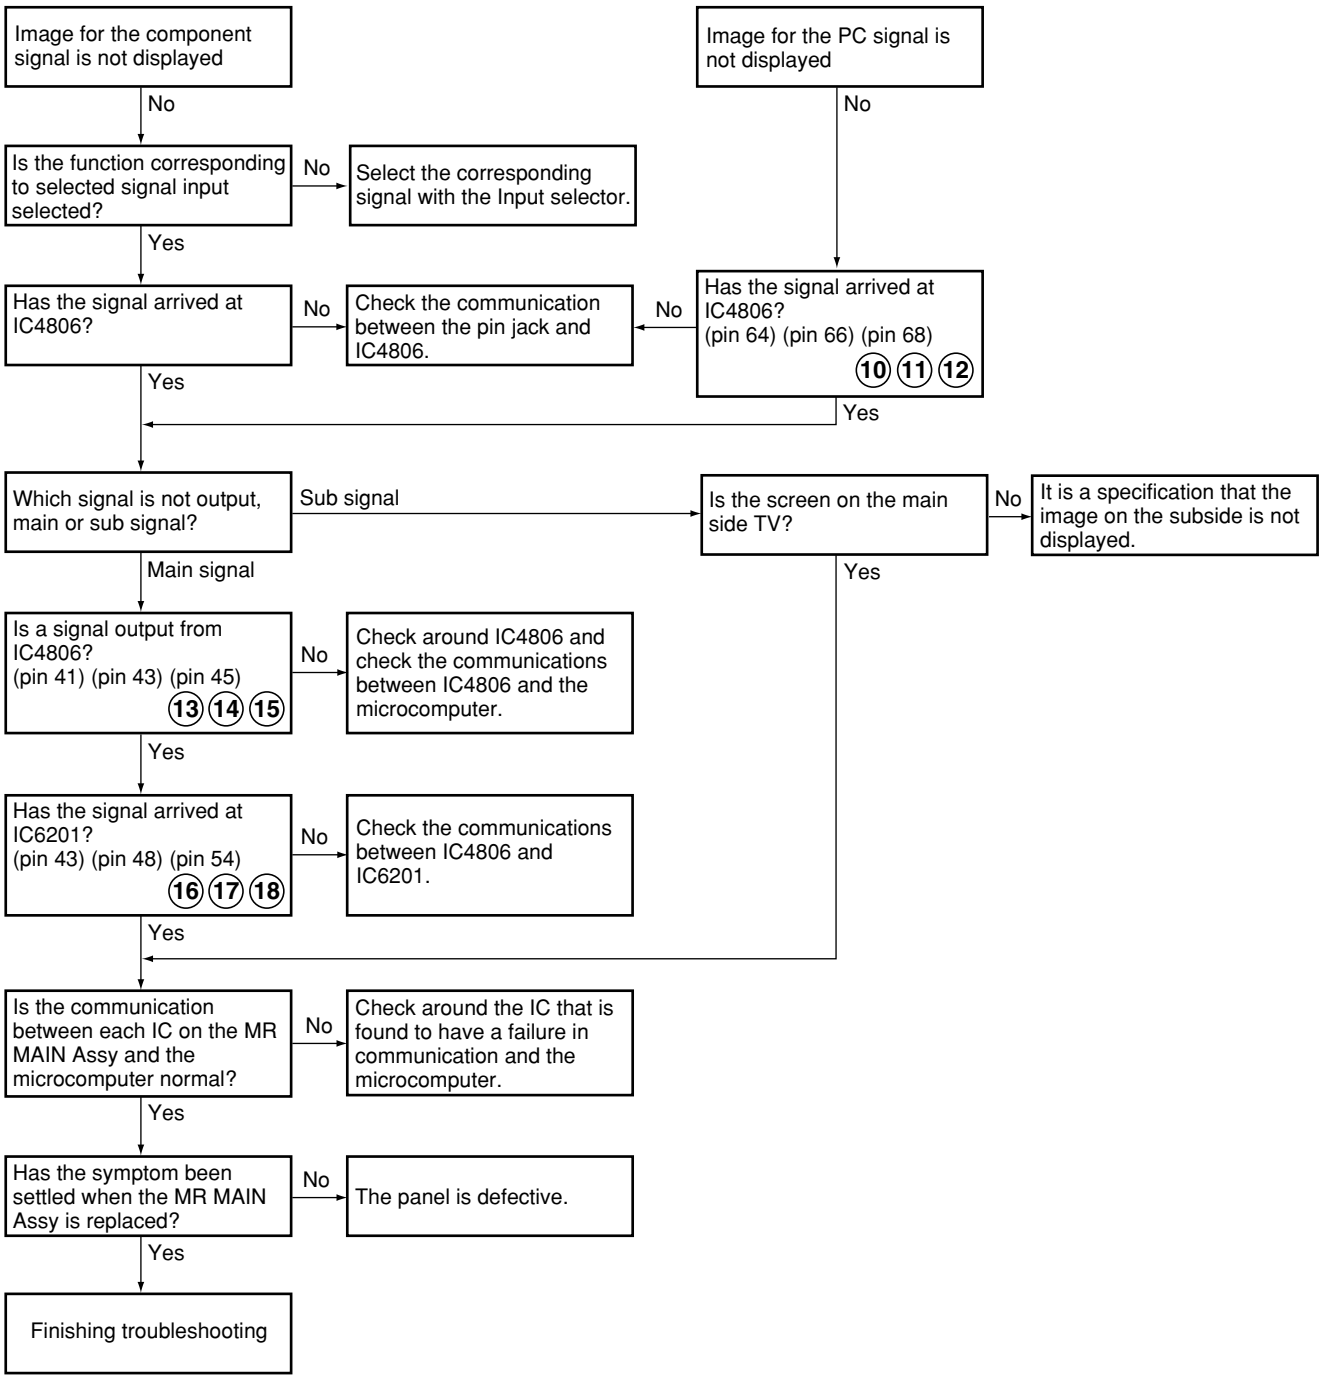


● MONITOR OUT image is not displayed

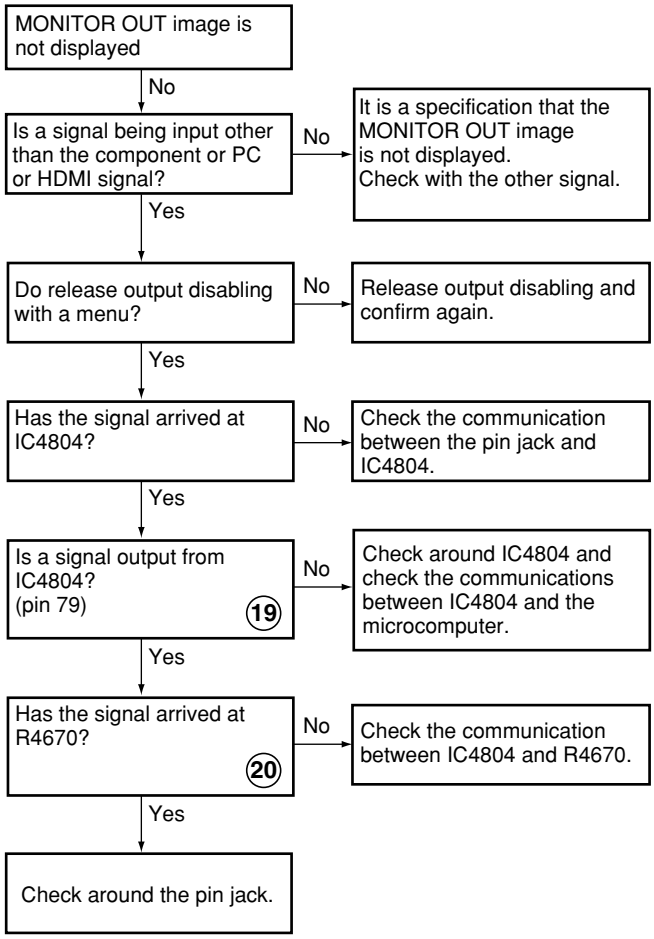


● No sound from the headphones and audio output

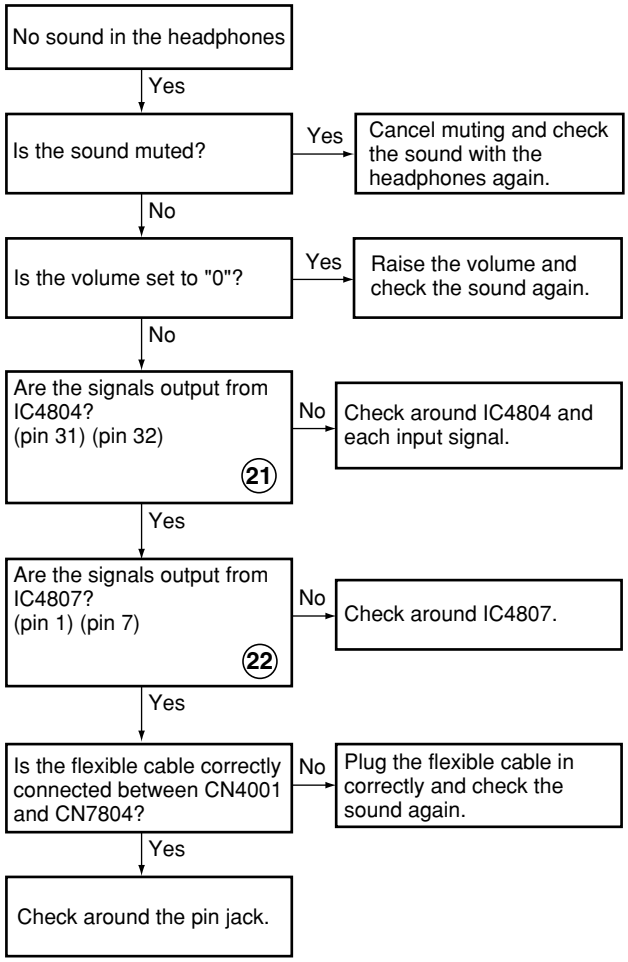


● No sound from the Panel speakers (1/2)

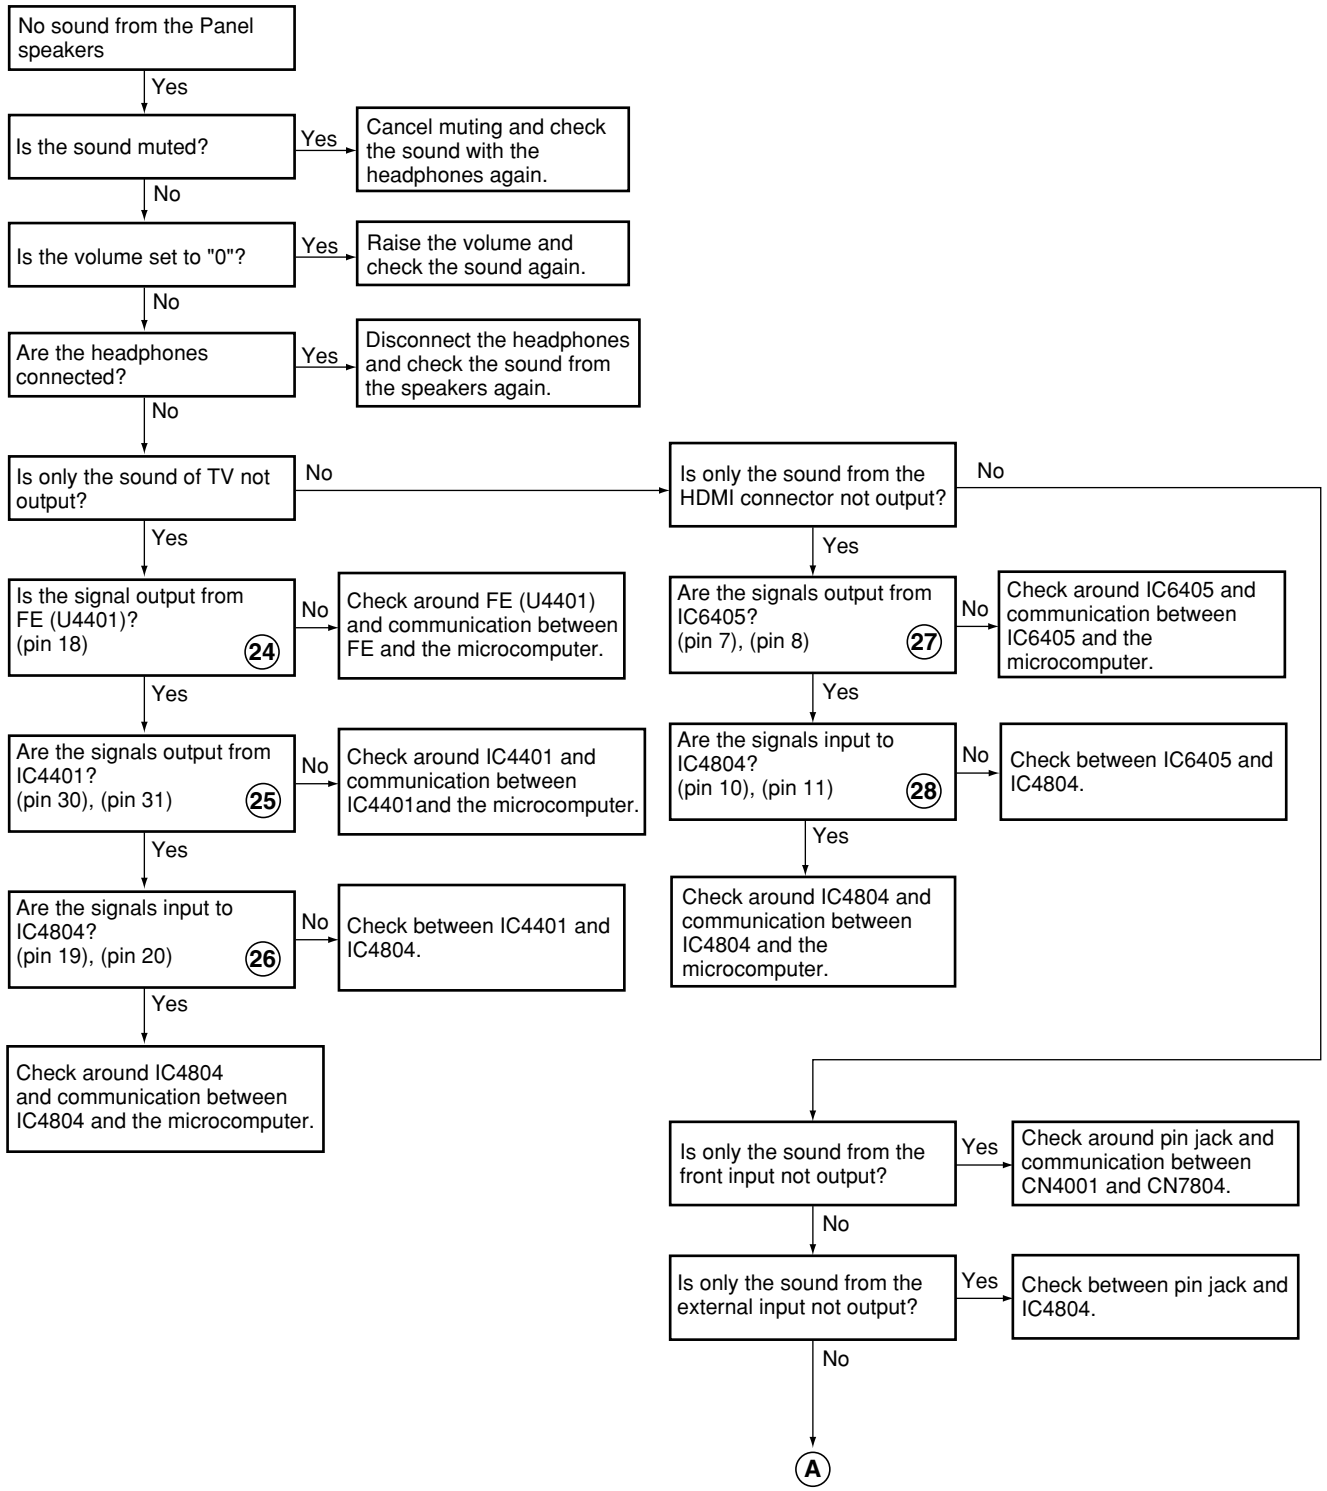

● No sound from the speakers (2/2)

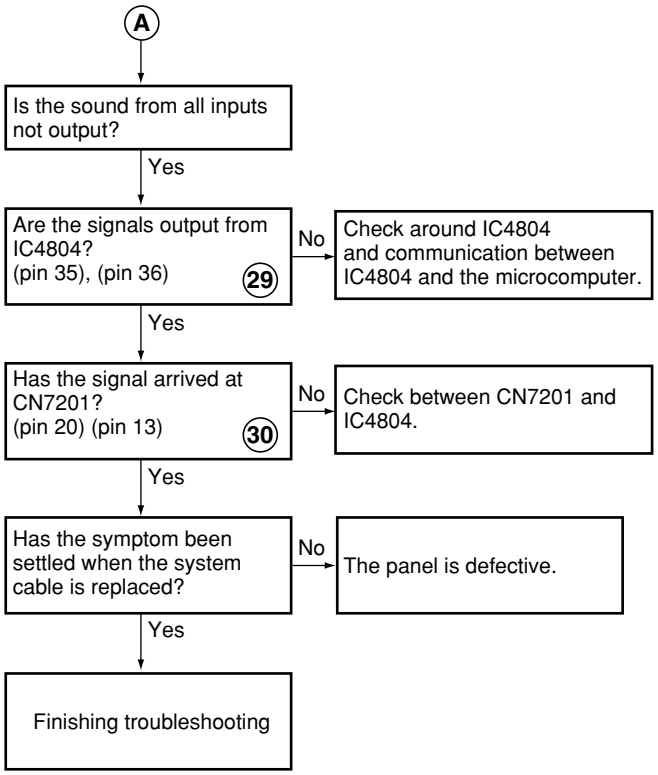

● No sound from the subwoofer

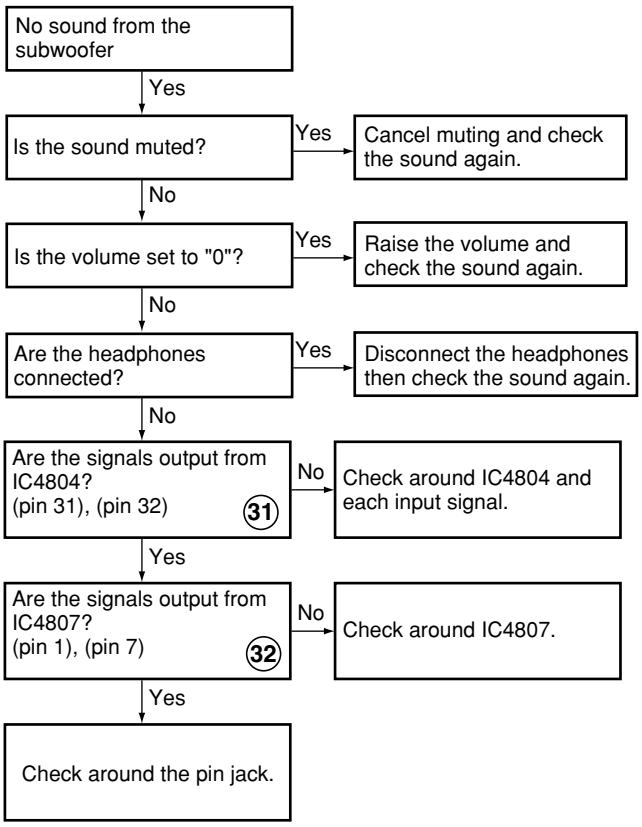


● Waveforms for Troubleshooting


MR MAIN ASSY

• Color-bar input unless otherwise noted


① IC4804-pin 57
V: 500mV/div. H: 20µsec/div.

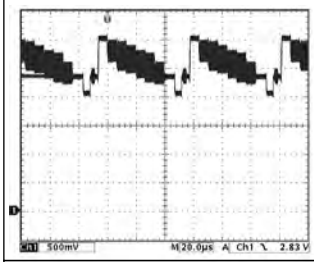


② IC4804-pin 47 S-Video
V: 500mV/div. H: 20µsec/div.

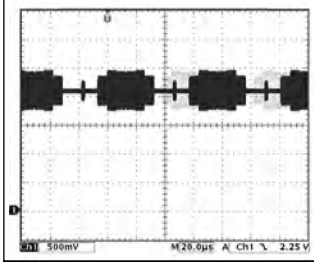


③ IC4804-pin 49 Composite
V: 500mV/div. H: 20µsec/div.

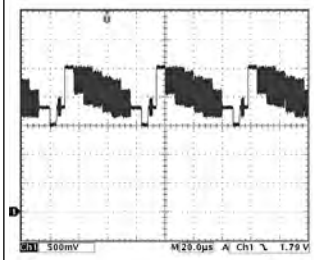


IC4804-pin 49 S-Video
V: 500mV/div. H: 20µsec/div.

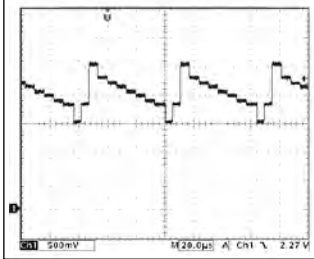


④ IC4804-pin 42 S-Video
V: 500mV/div. H: 20µsec/div.

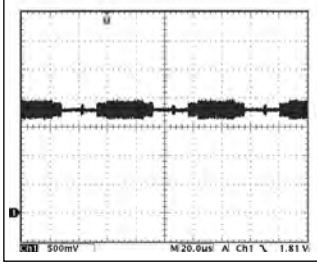


⑤ IC4804-pin 45 Composite
V: 500mV/div. H: 20µsec/div.

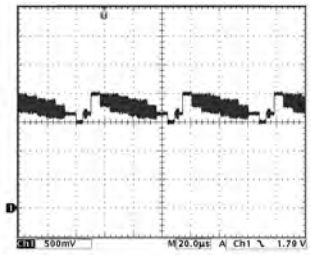


IC4804-pin 45 S-Video
V: 500mV/div. H: 20µsec/div.

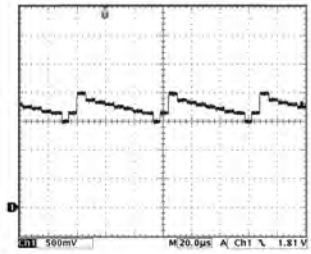


⑥ IC6003-pin 148 Composite
V: 500mV/div. H: 20µsec/div.

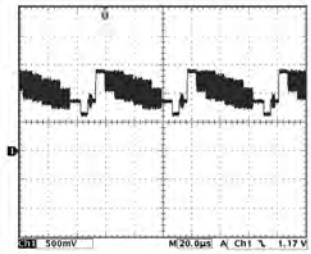


IC6003-pin 148 S-Video
V: 500mV/div. H: 20µsec/div.

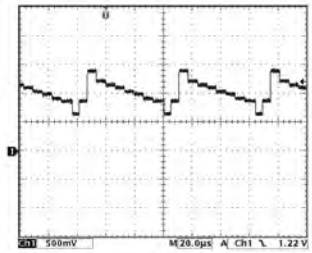


⑦ IC6003-pin 158 S-Video
V: 500mV/div. H: 20µsec/div.

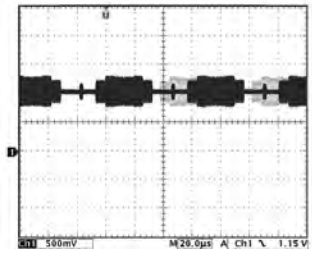


⑧ IC6001-pin 1 Composite
V: 200mV/div. H: 20µsec/div.

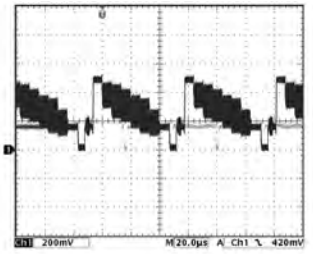


IC6001-pin 1 S-Video
V: 200mV/div. H: 20µsec/div.

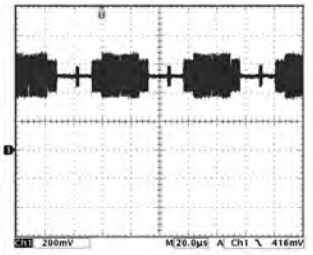


⑨ IC6002-pin 2 S-Video
V: 200mV/div. H: 20µsec/div.

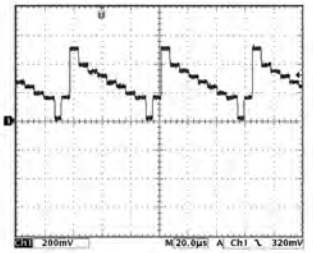


⑩ IC4806-pin 64 PC
V: 500mV/div. H: 20µsec/div.

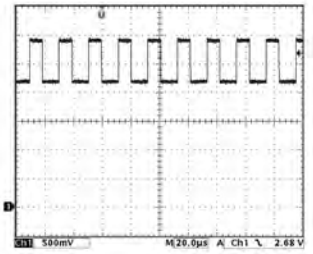


⑪ IC4806-pin 66 PC
V: 500mV/div. H: 20µsec/div.

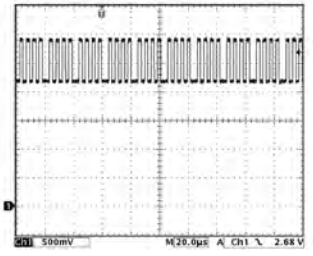


⑫ IC4806-pin 68 PC
V: 500mV/div. H: 20µsec/div.

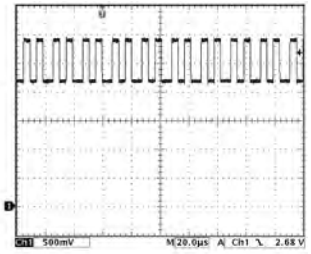


⑬ IC4806-pin 41 Component
V: 500mV/div. H: 20µsec/div.

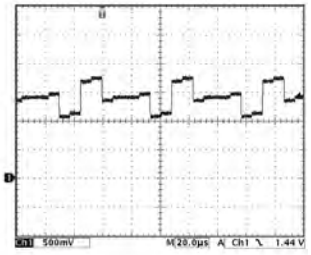


IC4806-pin 41 PC
V: 500mV/div. H: 20µsec/div.

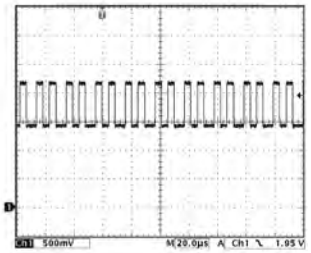

⑭ IC4806-pin 43 Component
V: 500mV/div. H: 20µsec/div.

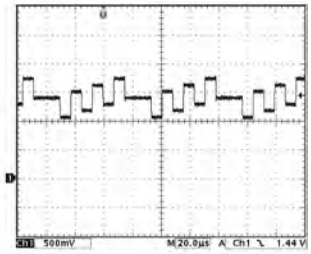


IC4806-pin 43 PC
V: 500mV/div. H: 20µsec/div.

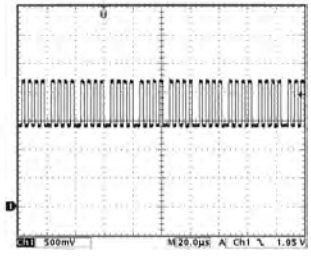


• Color-bar input unless otherwise noted


(15) IC4806-pin 45 Component
V: 500mV/div. H: 20µsec/div.

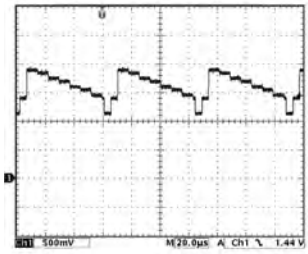


IC4806-pin 45 PC
V: 500mV/div. H: 20µsec/div.

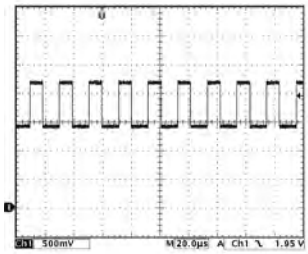


(16) IC6201-pin 43 Component
V: 500mV/div. H: 20µsec/div.

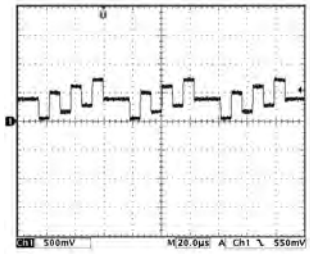


IC6201-pin 43 PC
V: 500mV/div. H: 20µsec/div.

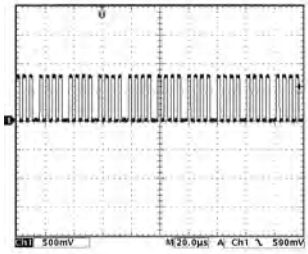


(17) IC6201-pin 48 Component
V: 500mV/div. H: 20µsec/div.

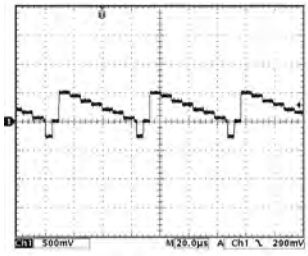


(17) IC6201-pin 48 PC
V: 500mV/div. H: 20µsec/div.

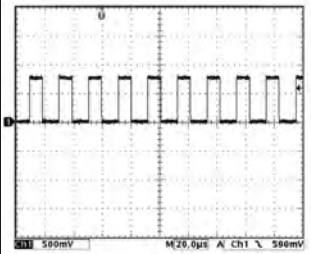


(18) IC6201-pin 54 Component
V: 500mV/div. H: 20µsec/div.

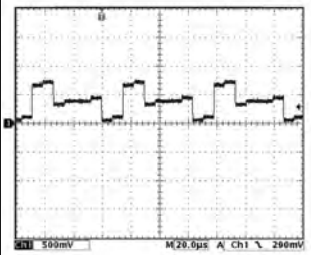


IC6201-pin 54 PC
V: 500mV/div. H: 20µsec/div.

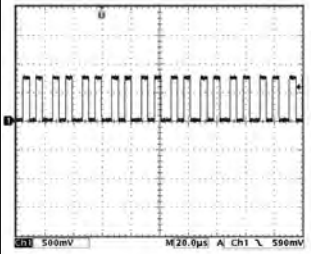


(19) IC4804-pin 79
V: 1V/div. H: 20µsec/div.

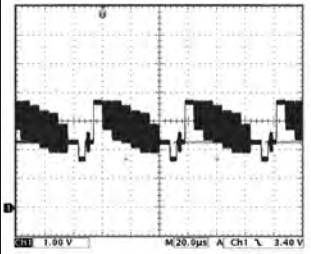


(20) R4670
V: 1V/div. H: 20µsec/div.

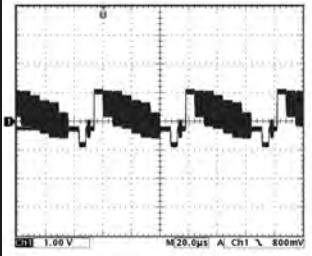


(21) IC4804-pins 31, 32 AC
V: 200mV/div. H: 400µsec/div.
• 1kHz input, VOL: 25 fixed

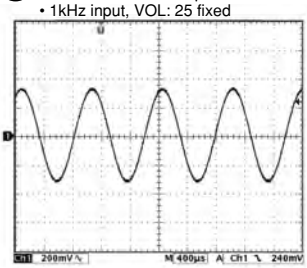


IC4804-pins 31, 32 DC
V: 1V/div. H: 400µsec/div.
• 1kHz input, VOL: 25 fixed

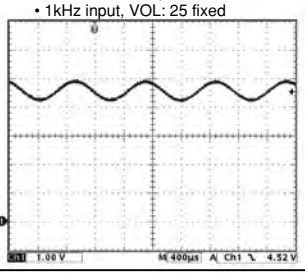


(22) IC4807-pins 1, 7 AC
V: 200mV/div. H: 400µsec/div.
• 1kHz input, VOL: 25 fixed

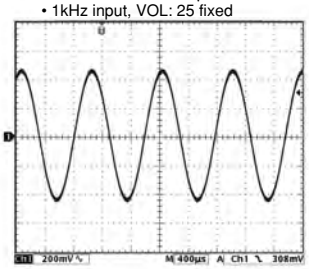


IC4807-pins 1, 7 DC
V: 500mV/div. H: 400µsec/div.
• 1kHz input, VOL: 25 fixed

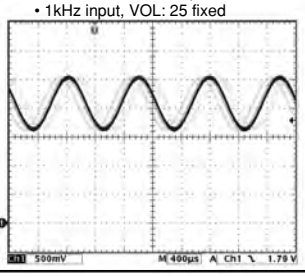


(23) IC4804-pins 33, 34 AC
V: 500mV/div. H: 400µsec/div.
• 1kHz input, VOL: 25 fixed

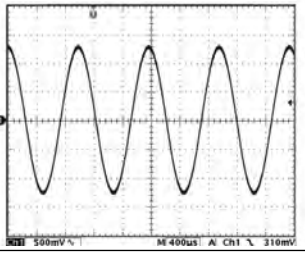


(23) IC4804-pins 33, 34 DC
V: 1V/div. H: 400µsec/div.
• 1kHz input, VOL: 25 fixed

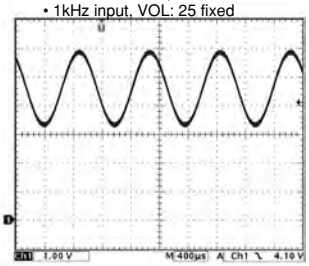


(24) U4401-pin 18=C4403
V: 200mV/div. H: 100nsec/div.
• 1kHz input, VOL: 25 fixed

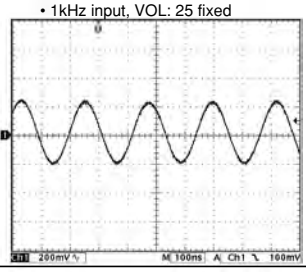

(25) IC4401-pins 30, 31 AC
V: 200mV/div. H: 400µsec/div.
• 1kHz input, VOL: 25 fixed

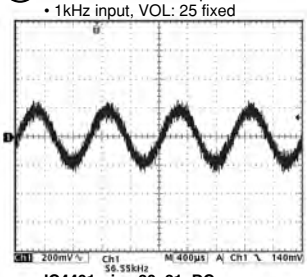


IC4401-pins 30, 31 DC
V: 1V/div. H: 2msec/div.
• 1kHz input, VOL: 25 fixed

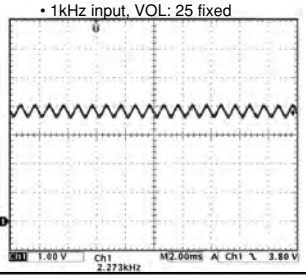


• 1kHz input, VOL: 25 fixed unless otherwise noted


26 **IC4804-pins 19, 20 AC**
V: 200mV/div. H: 400µsec/div.

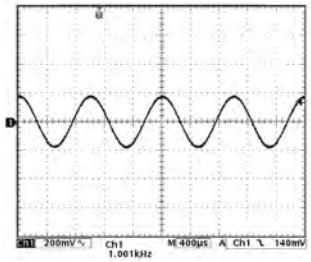


IC4804-pins 19, 20 DC
V: 1V/div. H: 2msec/div.

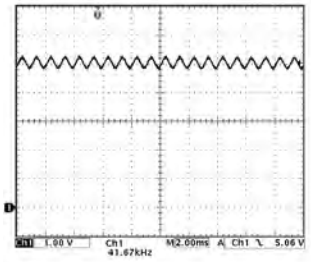


27 **IC6405-pins 7, 8 AC**
V: 1V/div. H: 400µsec/div.

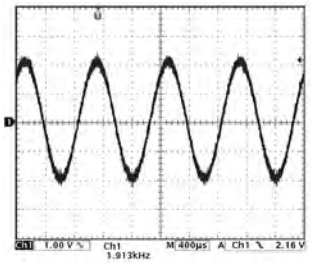


IC6405-pins 7, 8 DC
V: 1V/div. H: 400µsec/div.

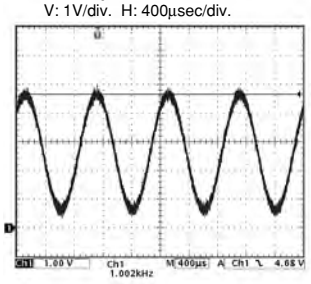


28 **IC4804-pins 10, 11 AC**
V: 1V/div. H: 400µsec/div.

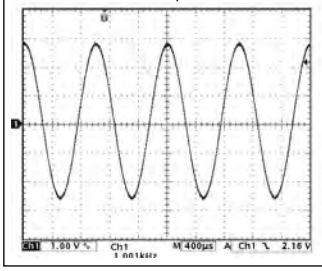


28 **IC4804-pins 10, 11 DC**
V: 2V/div. H: 400µsec/div.

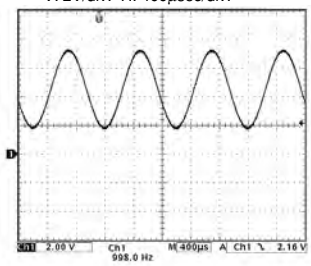


29 **IC4804-pins 35, 36 AC**
V: 100mV/div. H: 400µsec/div.

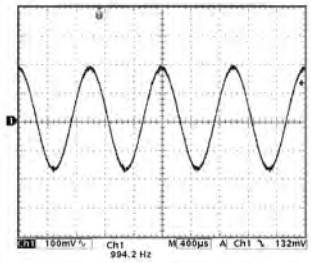


IC4804-pins 35, 36 DC
V: 1V/div. H: 1msec/div.

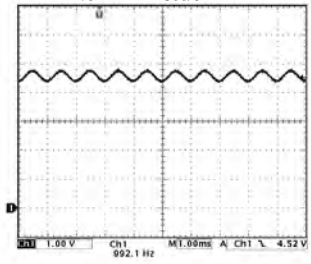


30 **CN7201-pins 13, 20 AC**
V: 500mV/div. H: 4msec/div.

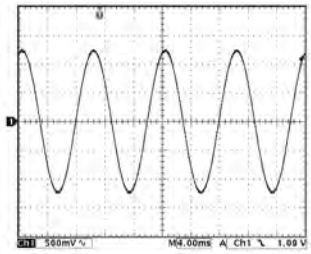


CN7201-pins 13, 20 DC
V: 500mV/div. H: 4msec/div.

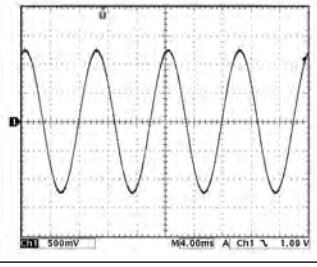


31 **IC4804-pins 31, 32 AC-SUBWOO**
V: 200mV/div. H: 4msec/div.
• 100Hz input, VOL: 25 fixed

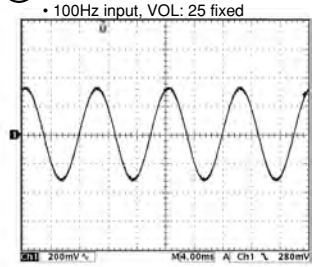


IC4804-pins 31, 32 DC-SUBWOO
V: 1V/div. H: 10msec/div.
• 100Hz input, VOL: 25 fixed

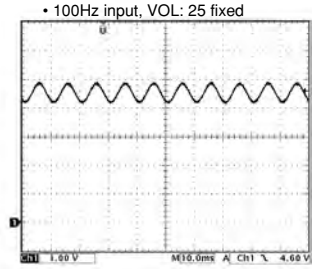

32 **IC4808-pins 1, 7 AC-SUBWOO**
V: 200mV/div. H: 4msec/div.
• 100Hz input, VOL: 25 fixed

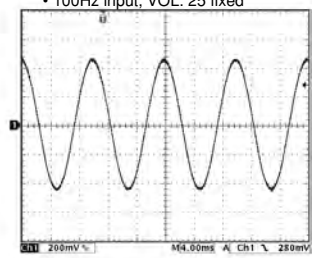

IC4808-pins 1, 7 DC-SUBWOO
V: 500mV/div. H: 4msec/div.
• 100Hz input, VOL: 25 fixed

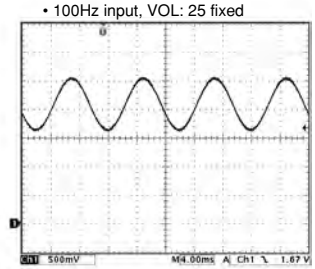

7.1.2 DISASSEMBLY

Note : Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

1 Metal Bonnet


① Remove the three screws.



● **Rear view**

② Remove the four screws.

③ Remove the metal bonnet while pulling it backward.

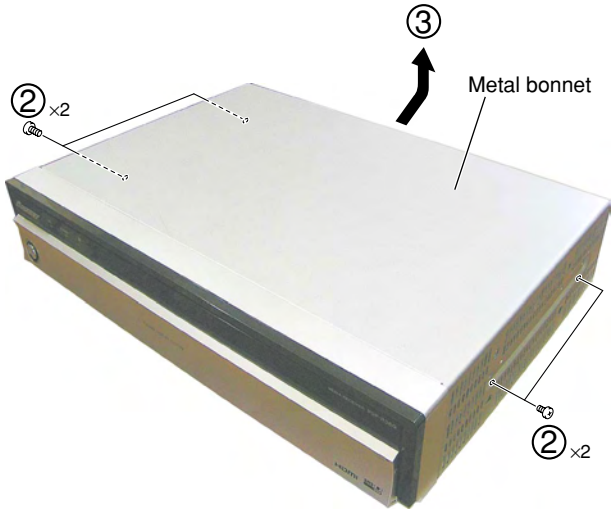


2 Front Panel Section

① Disconnect the flexible cable.

② Remove the flexible cable from the flat clamp.


③ Unhook the six hooks.

④ Remove the front panel section.

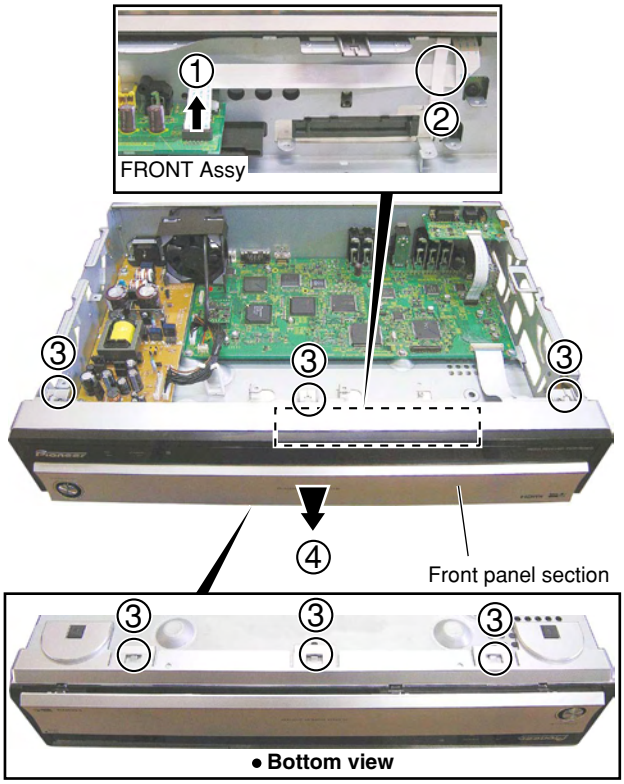

● **Bottom view**


PCB Location

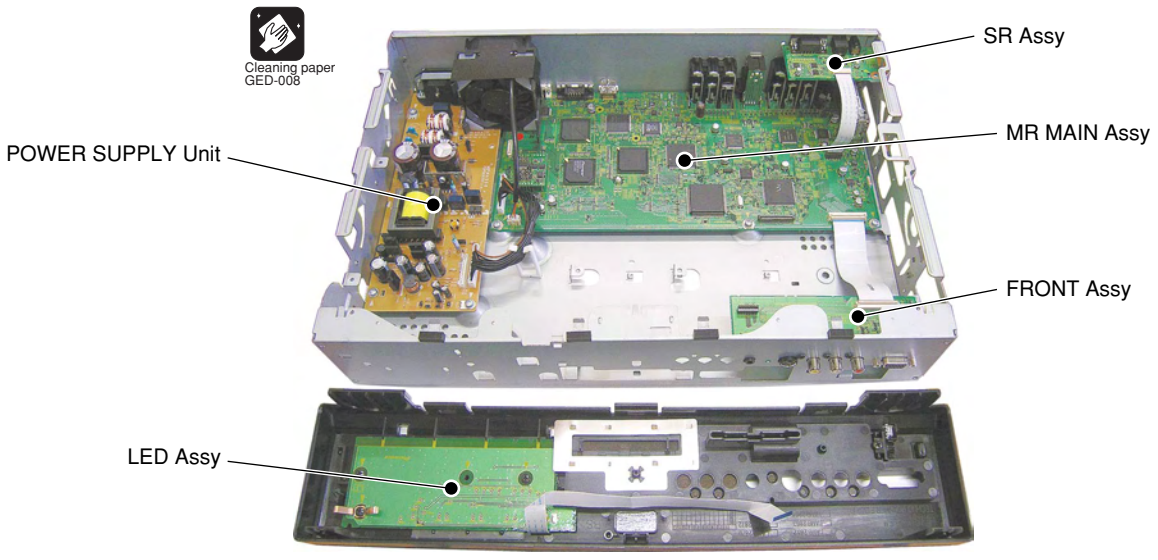

7.2 EXPLANATION
7.2.1 PROCESSING IN ABNORMALITY


Power supply and DC-DC converter

● **Circuit diagram**

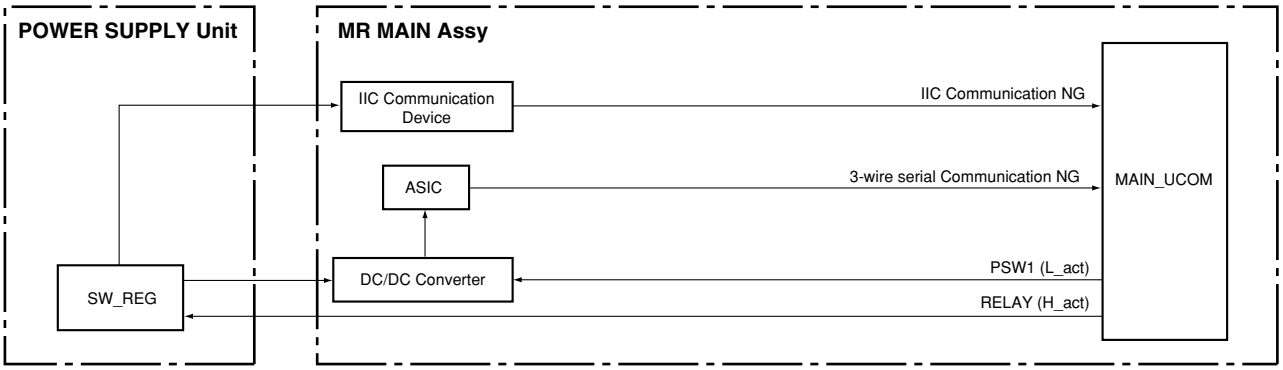

Fan and temperature sensor




● **Circuit diagram**

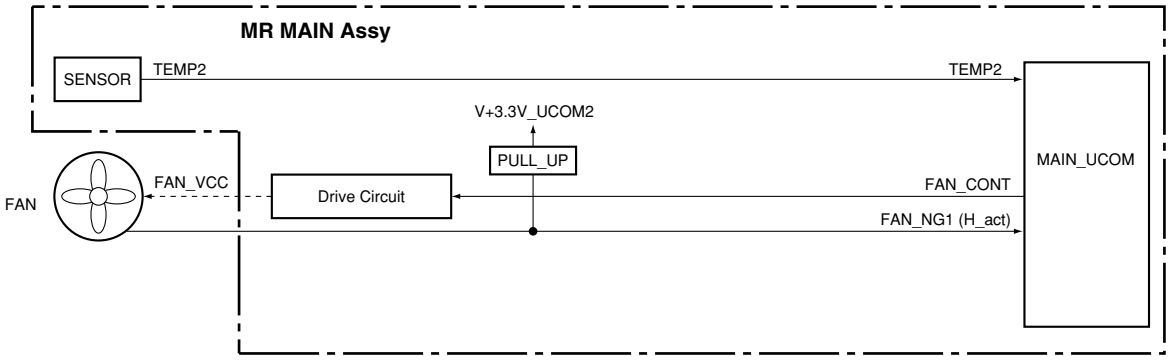

● **Specifications for port monitoring**

Port Name	SD/PD Indication	Assigned Pin	Active
FAN_NG 1	FAN	155	Shutdown with H
TEMP2	Abnormally high temperature in the MR	76	Shutdown when the value exceeds the predetermined value

LED-lighting patterns

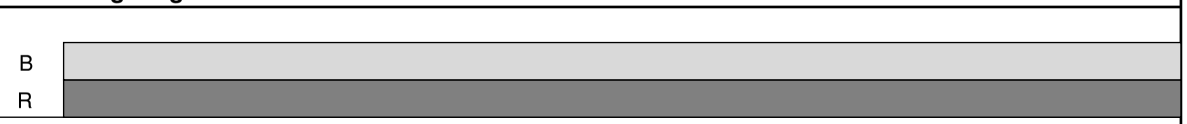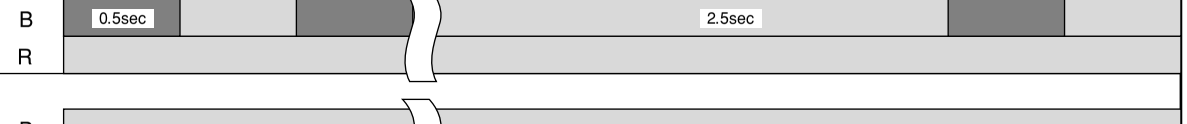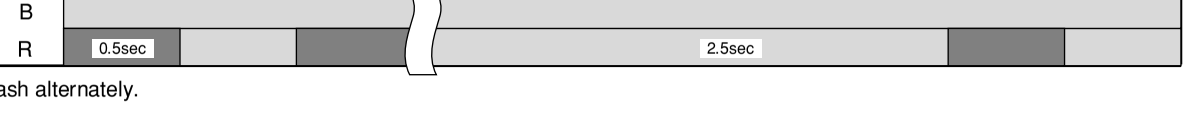Status of the Unit		LED-lighting Pattern
Standby, power management	Lit in red	
Power on	Lit in blue	
PDP's power not on	Flashing in red (at 1-sec intervals)	
System cable disconnected *	Flashing alternately in red and blue (at 1-sec intervals)	
Waiting for start of rewriting by the microcomputer		
Waiting for finish of rewriting by the microcomputer		
Shutdown (circuit protection)	Flashing in blue n times (initially at 0.5-sec intervals then 2.5-sec intervals)	
Power-down (circuit protection)	Flashing in red for n times (initially at 0.5-sec intervals then 2.5-sec intervals)	

* In this case, the red and blue areas on the screen of the panel flash alternately.


■ Defective points assumed from the number of times of LED flashing

No. of times of LED flashing				Category *1	Site detected as defective	Possible defective points (representative examples)	OSD when detected (warning message)
LEDs on the panel		LEDs on the MR					
Red	Blue	Red	Blue				
	Blue 1	Red		SD	Panel drive IC	*2	None
	Blue 2	Red			Module section IIC	*2	None
	Blue 3	Red			Power decrease of DIGITAL-DC-DC	*2	None
	Blue 4	Red			Panel having abnormally high temperature	*2	Power off. Internal temperature is too high. Check temperature around PDP. [SD04] *6
	Blue 5	Red			Short-circuiting of the speakers	*2	Internal protection circuit turns power off. Is there a short in speaker cable? (SD05)
Red			Blue 6		Module microcomputer	Disconnection of the system cable Defective module microcomputer or its peripheral circuits of the panel (Refer to the service manual of the PDP-436PG or PDP-506PG.) Defective main microcomputer (IC5206) Failure in communication (TXD_MD, RXD_MD, REQ_MD) between the panel's module microcomputer and IC5206 (main microcomputer)	None
Red			Blue 7		3-wire serial connection of the main section	Defective IC5002 or its peripheral circuits Failure in communication (TXD_IF, RXD_IF, CLK_IF, CE_IF, REQ_IF, BUSY_IF) between IC5002 and IC5206 (main microcomputer) Defective IC7001 or its peripheral circuits Failure in communication (TXD_IC3, RXD_IC3, CLK_IC3, CE_IC3, REQ_IC3, BUSY_IC3) between IC7001 and IC5206 (main microcomputer)	None
Red			Blue 8		IIC of the main section	Defective U4401 (FE1) or its peripheral circuits Defective IC4401 (MPX) or its peripheral circuits Defective IC4806 (RGB_SW) or its peripheral circuits Defective ICxxxx (GCR) or its peripheral circuits *4 Defective IC6001 (S-VDEC) or its peripheral circuits Defective IC6404 (HDMI) or its peripheral circuits Defective ICxxxx (PLK-R) or its peripheral circuits Defective IC5405 (TTX-COM, TTX-BSY) or its peripheral circuits Defective IC5202 (MA-EEP) or its peripheral circuits Defective Uxxxx (FE2) or its peripheral circuits *3 Defective IC4804 (AV_SW) or its peripheral circuits Defective ICxxxx (CCD) or its peripheral circuits *3 Defective IC6003 (M-VDEC) or its peripheral circuits Defective IC6201 (ADC) or its peripheral circuits Defective IC7202 (PLK-T) or its peripheral circuits Failure in communication (SCL_AV, SDA_AV, SCL_MA, SDA_MA, SCL_EP, SDA_EP, SCL_TTX, SDA_TTX, SCL-HDCP, SDA-HDCP) between one of the above devices and IC5206 (main microcomputer)	None
Red			Blue 9		Main microcomputer	Defective IC5206 (main microcomputer) Failure in communication (TXD_IF, RXD_IF, CLK_IF, CE_IF, REQ_IF, BUSY_IF) between IC5206 (main microcomputer) and IC5002	None
Red			Blue 10		Fan	Failure in the fan motor, or the fan stopped because of dust attached to the fan	None
Red			Blue 11		MR or unit having abnormally high temperature	The Media Receiver or the unit being used at high temperature	Power off. Internal temperature is too high. Check temperature around media receiver. [SD011]
Red			Blue 12		Digital tuner	Defective DTV tuner *5	None
Red			Blue 13		ASIC power supply (DC-DC)	Defective U4201 (DD_CON) or short-circuiting elsewhere *6	None
Red 2		Red		PD	POWER	*2	None
Red 3		Red			SCAN	*2	None
Red 4		Red			SCN-5V	*2	None
Red 5		Red			Y-DRV	*2	None
Red 6		Red			Y-DCDC	*2	None
Red 7		Red			Y-SUS	*2	None
Red 8		Red			ADRS	*2	None
Red 9		Red			X-DRV	*2	None
Red 10		Red			X-DCDC	*2	None
Red 11		Red			X-SUS	*2	None
Red 12		Red			D-DCDC	*2	None
Red 13		Red			IC4	*2	None
Red 15		Red			UNKNOWN	*2	None

*1: Shutdown (SD) is a protective operation controlled by the microcomputer, and you can turn on the unit again using the remote control unit. Power-down (PD) is a protective operation activated by the circuitry and can be reset after AC power is off for about 1 minute.

*2: Refer to the service manual of the PDP-436PG or PDP-506PG.
*3: Only for US model.
*4: Only for J model.
*5: Only for US and J models.
*6: Only for one-body model.

7.2.2 POWER ON SEQUENCE

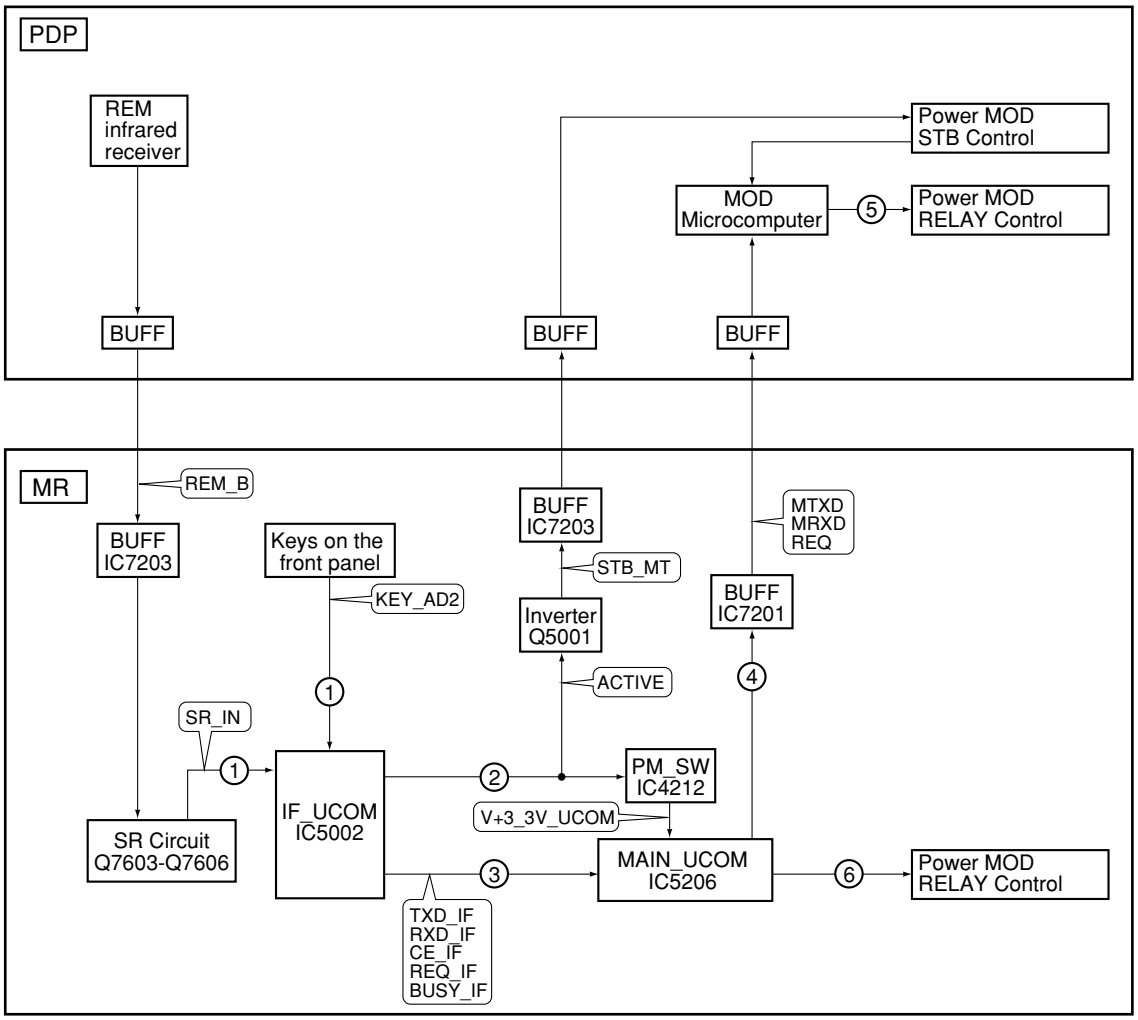

REM_B Descriptions in a call-out are signal names for reference.
For wiring numbers on the PDP side, refer to the service manual for the PDP.

① : The signal from the remote control unit (or a key signal) is input to the IF microcomputer.
② : The IF microcomputer supplies the power to the main microcomputer and MOD microcomputer.
③ : The IF microcomputer transmits operation data from the remote control unit (or keys) to the main microcomputer.
④ : The main microcomputer issues a startup command to the MOD microcomputer.
⑤ : The MOD microcomputer controls the relay of the PDP Power MOD and starts the power-on sequence of the PDP.
⑥ : The main microcomputer controls the relay of the MR Power MOD and starts the power-on sequence of the MR.

7.3 PARTS

7.3.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.


● **List of IC**

R2S11002AFT, R2S11001FT, K4S641632H-TC75, S29AL016D70TFI010, UPD64015GM-UEU, TVP5150AM1PBS, K4S161622H-TC60, AD9985KSTZ-110, SII9021CTU, K4S643232H-TC60, MBM29DL162TE70TN, SII170BCLG64, AXF1150, AXY1117

■ R2S11002AFT (MR MAIN ASSY: IC4804)

• AV SW


● **Block Diagram**

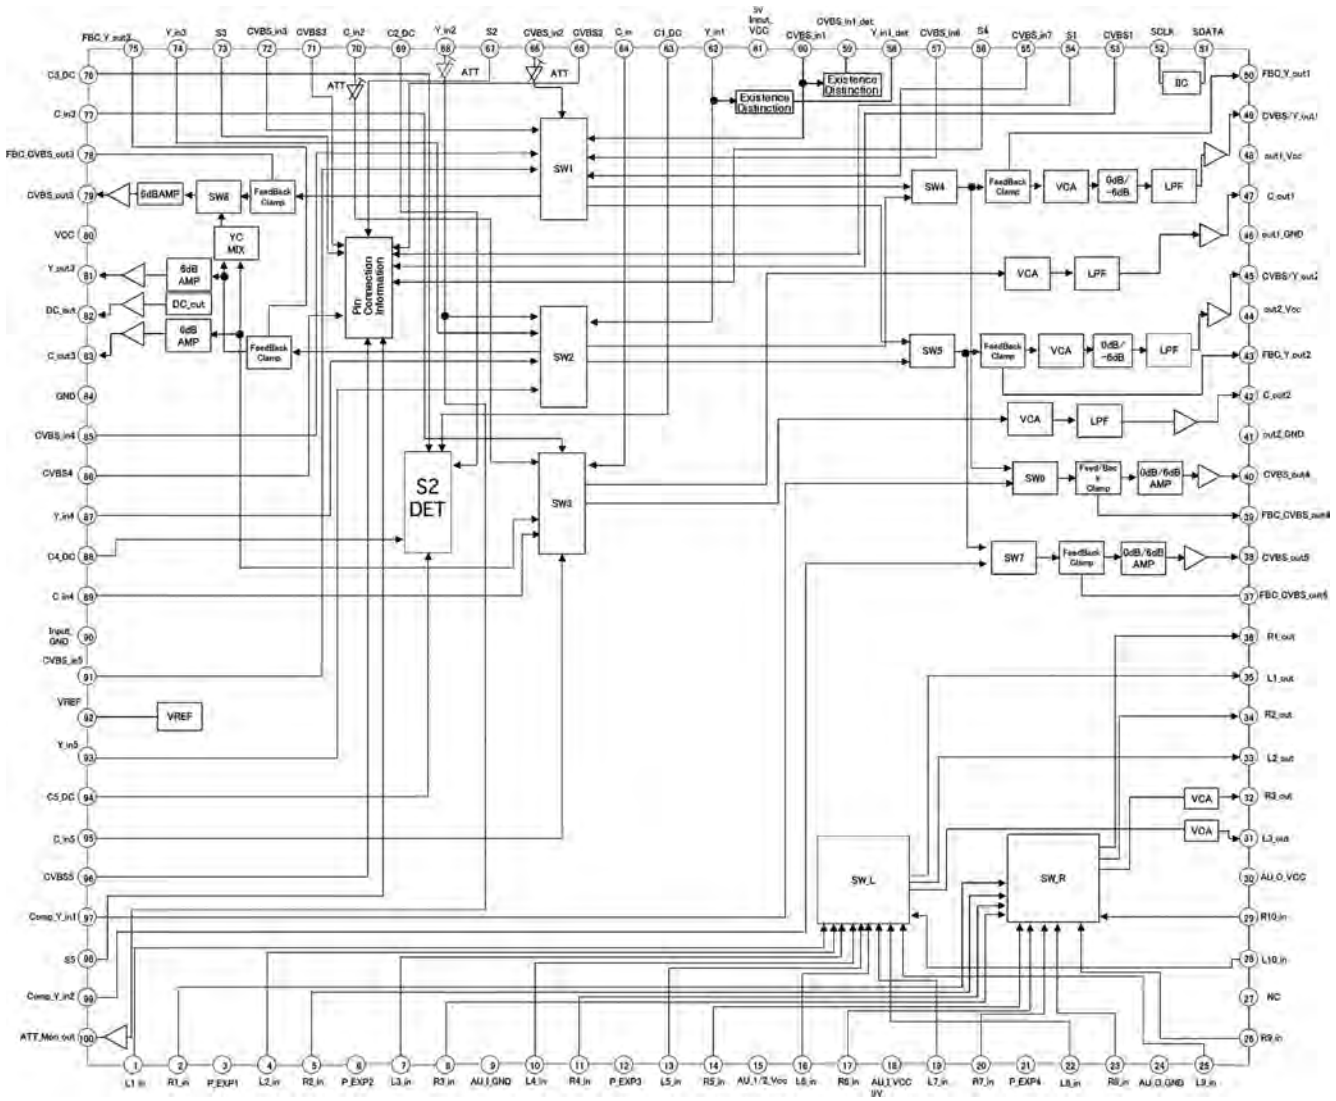

■ R2S11001FT (MR MAIN ASSY: IC4806)

• Component SW IC


● Block Diagram

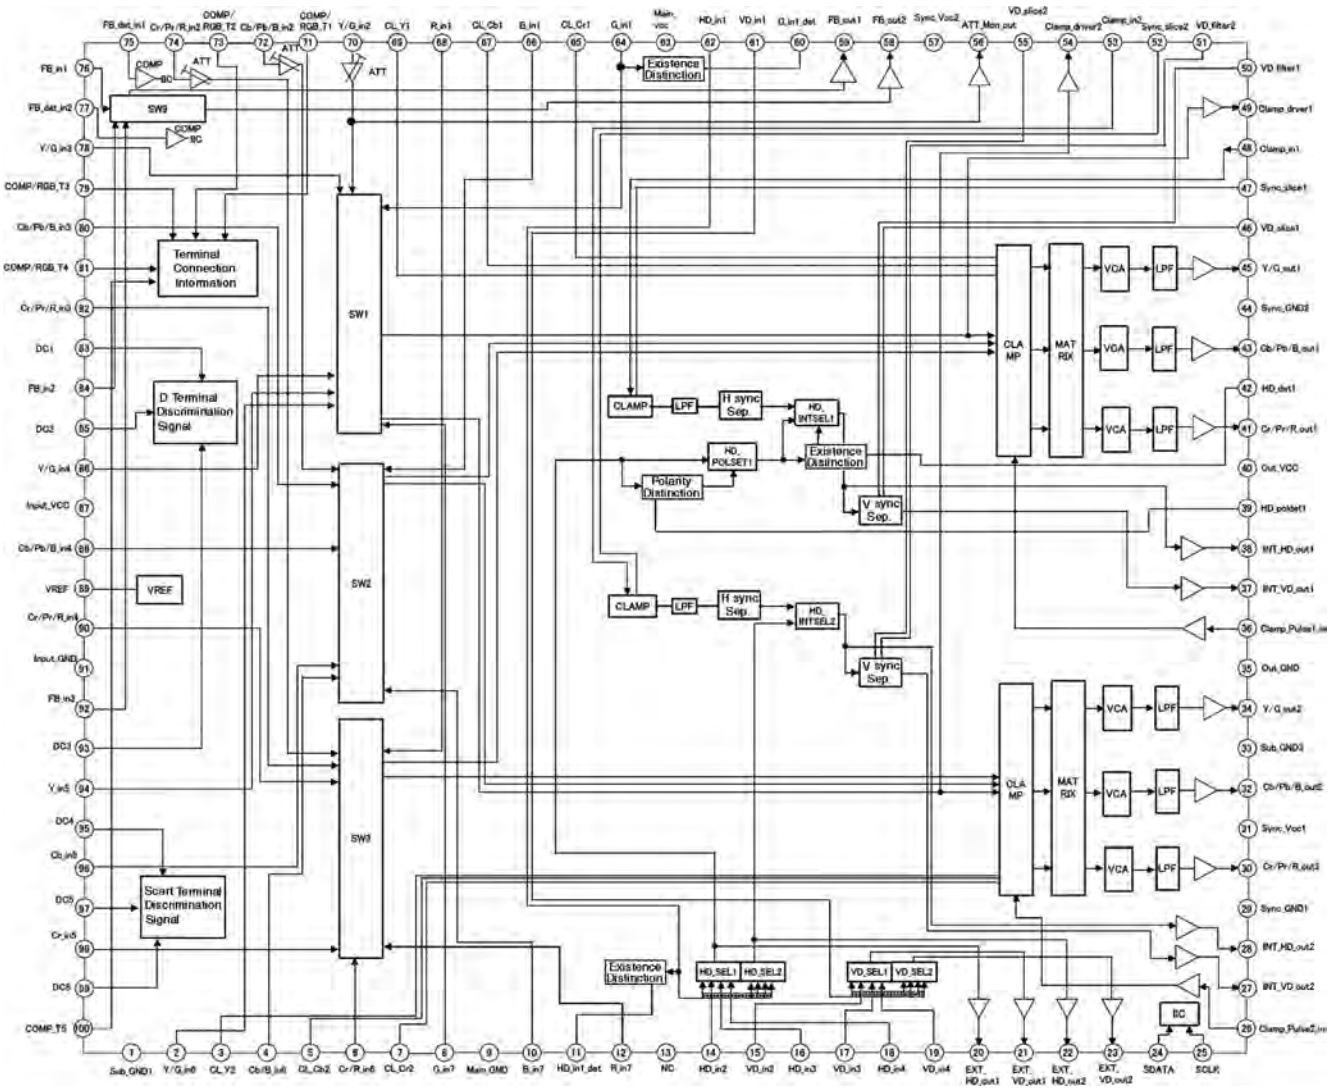


■ K4S641632H-TC75 (MR MAIN ASSY : IC5403)

• 64M SDRAM

● Pin Arrangement (Top view)

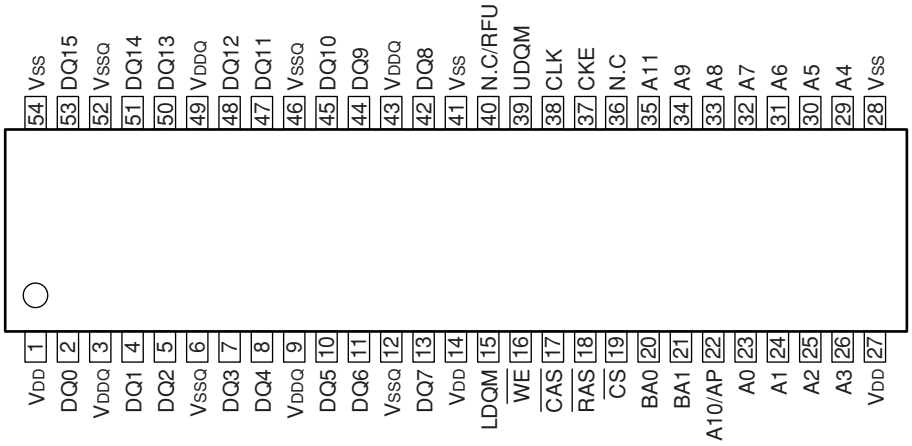

● Block Diagram

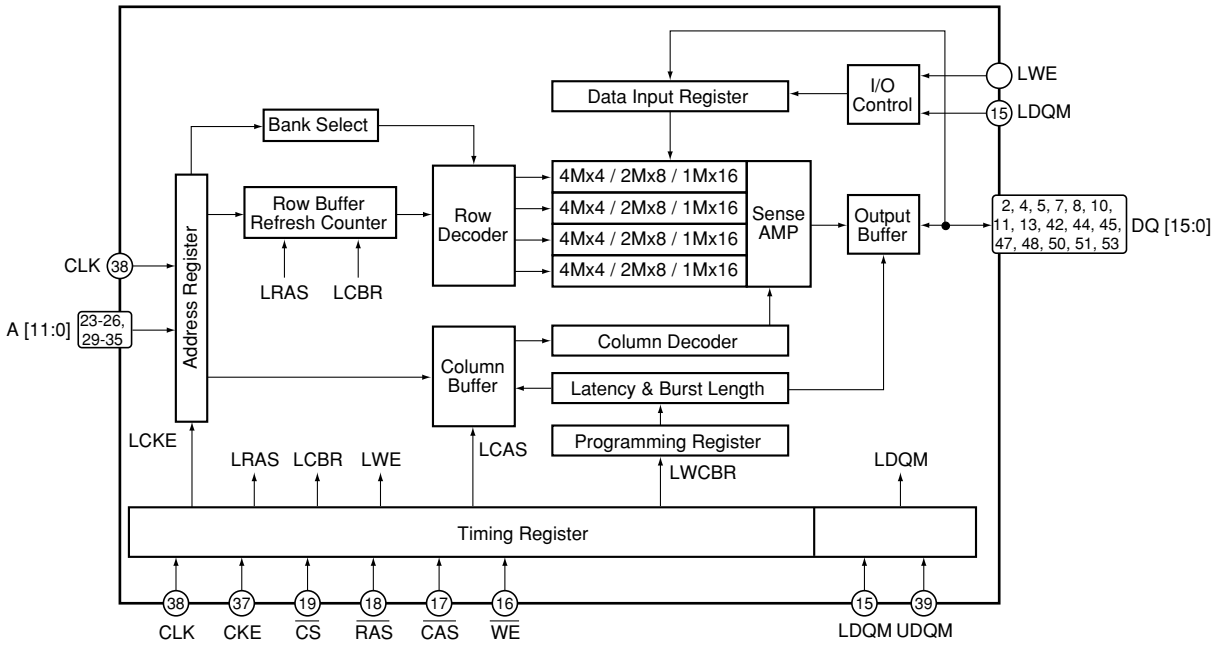


● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	V_{DD}	–	Power supply	28	V_{SS}	–	Ground
2	DQ0	I/O	Data input/output	29	A4	I	Address input
3	V_{DDQ}	–	Power supply for data output	30	A5	I	Address input
4	DQ1	I/O	Data input/output	31	A6	I	Address input
5	DQ2	I/O	Data input/output	32	A7	I	Address input
6	V_{SSQ}	–	Ground for data output	33	A8	I	Address input
7	DQ3	I/O	Data input/output	34	A9	I	Address input
8	DQ4	I/O	Data input/output	35	A11	I	Address input
9	V_{DDQ}	–	Power supply for data output	36	N.C	–	No connection
10	DQ5	I/O	Data input/output	37	CKE	I	Clock enable input
11	DQ6	I/O	Data input/output	38	CLK	I	System clock input
12	V_{SSQ}	–	Ground for data output	39	UDQM	I	Data input/output mask
13	DQ7	I/O	Data input/output	40	N.C/RFU	–	No connection (Reserved for future use)
14	V_{DD}	–	Power supply	41	V_{SS}	–	Ground
15	LDQM	I	Data input/output mask	42	DQ8	I/O	Data input/output
16	$\overline{WE}$	I	Write enable input	43	V_{DDQ}	–	Power supply for data output
17	$\overline{CAS}$	I	Column address strobe input	44	DQ9	I/O	Data input/output
18	$\overline{RAS}$	I	Row address strobe input	45	DQ10	I/O	Data input/output
19	$\overline{CS}$	I	Chip select input	46	V_{SSQ}	–	Ground for data output
20	BA0	I	Bank select address input	47	DQ11	I/O	Data input/output
21	BA1	I	Bank select address input	48	DQ12	I/O	Data input/output
22	A10/AP	I	Address input	49	V_{DDQ}	–	Power supply for data output
23	A0	I	Address input	50	DQ13	I/O	Data input/output
24	A1	I	Address input	51	DQ14	I/O	Data input/output
25	A2	I	Address input	52	V_{SSQ}	–	Ground for data output
26	A3	I	Address input	53	DQ15	I/O	Data input/output
27	V_{DD}	–	Power supply	54	V_{SS}	–	Ground


■ S29AL016D70TFI010 (MR MAIN ASSY : IC5404)

• 16M Flash Memory

● Pin Arrangement (Top view)

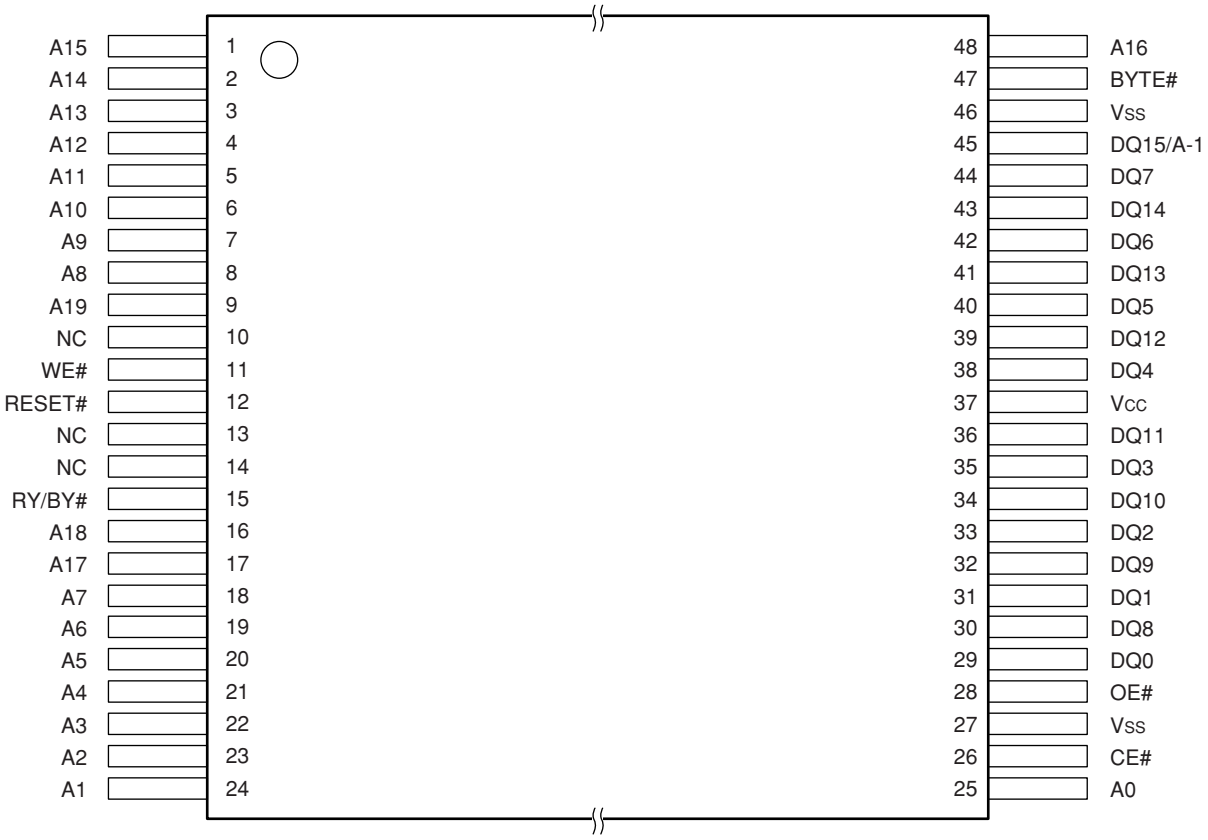

● Block Diagram

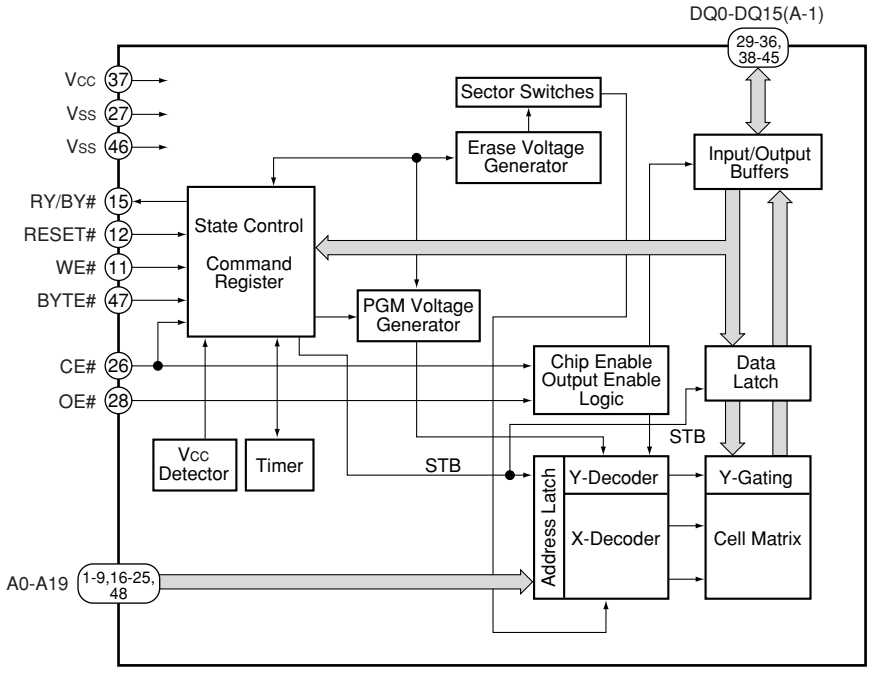


● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	A15	I	Address input	25	A0	I	Address input
2	A14	I	Address input	26	CE#	I	Chip enable
3	A13	I	Address input	27	Vss	–	Device ground
4	A12	I	Address input	28	OE#	I	Output enable
5	A11	I	Address input	29	DQ0	I/O	Data input/output
6	A10	I	Address input	30	DQ8	I/O	Data input/output
7	A9	I	Address input	31	DQ1	I/O	Data input/output
8	A8	I	Address input	32	DQ9	I/O	Data input/output
9	A19	I	Address input	33	DQ2	I/O	Data input/output
10	NC	–	No connection	34	DQ10	I/O	Data input/output
11	WE#	I	Write enable	35	DQ3	I/O	Data input/output
12	RESET#	I	Hardware reset	36	DQ11	I/O	Data input/output
13	NC	–	No connection	37	Vcc	–	3V single power supply
14	NC	–	No connection	38	DQ4	I/O	Data input/output
15	RY/BY#	O	Ready/Busy output	39	DQ12	I/O	Data input/output
16	A18	I	Address input	40	DQ5	I/O	Data input/output
17	A17	I	Address input	41	DQ13	I/O	Data input/output
18	A7	I	Address input	42	DQ6	I/O	Data input/output
19	A6	I	Address input	43	DQ14	I/O	Data input/output
20	A5	I	Address input	44	DQ7	I/O	Data input/output
21	A4	I	Address input	45	DQ15/A-1	I/O	DQ15: Data input/output, word mode A-1: LSB address input, byte mode
22	A3	I	Address input	46	Vss	–	Device ground
23	A2	I	Address input	47	BYTE#	I	Selects 8-bit or 16-bit mode
24	A1	I	Address input	48	A16	I	Address input


■ UPD64015GM-UEU (MR MAIN ASSY : IC6003)

• Video Decoder (for main screen)

● Pin Arrangement (Top view)

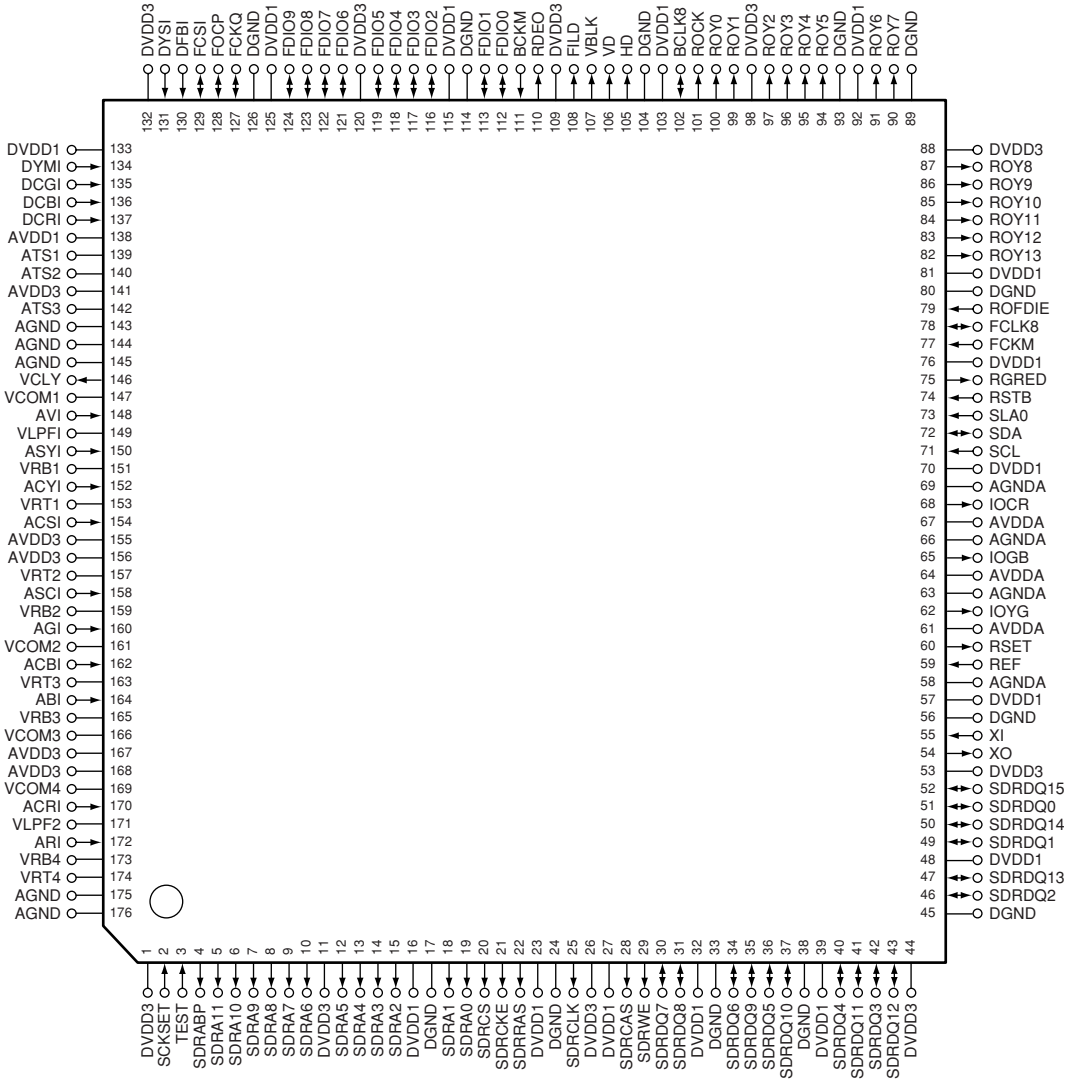

● Block Diagram

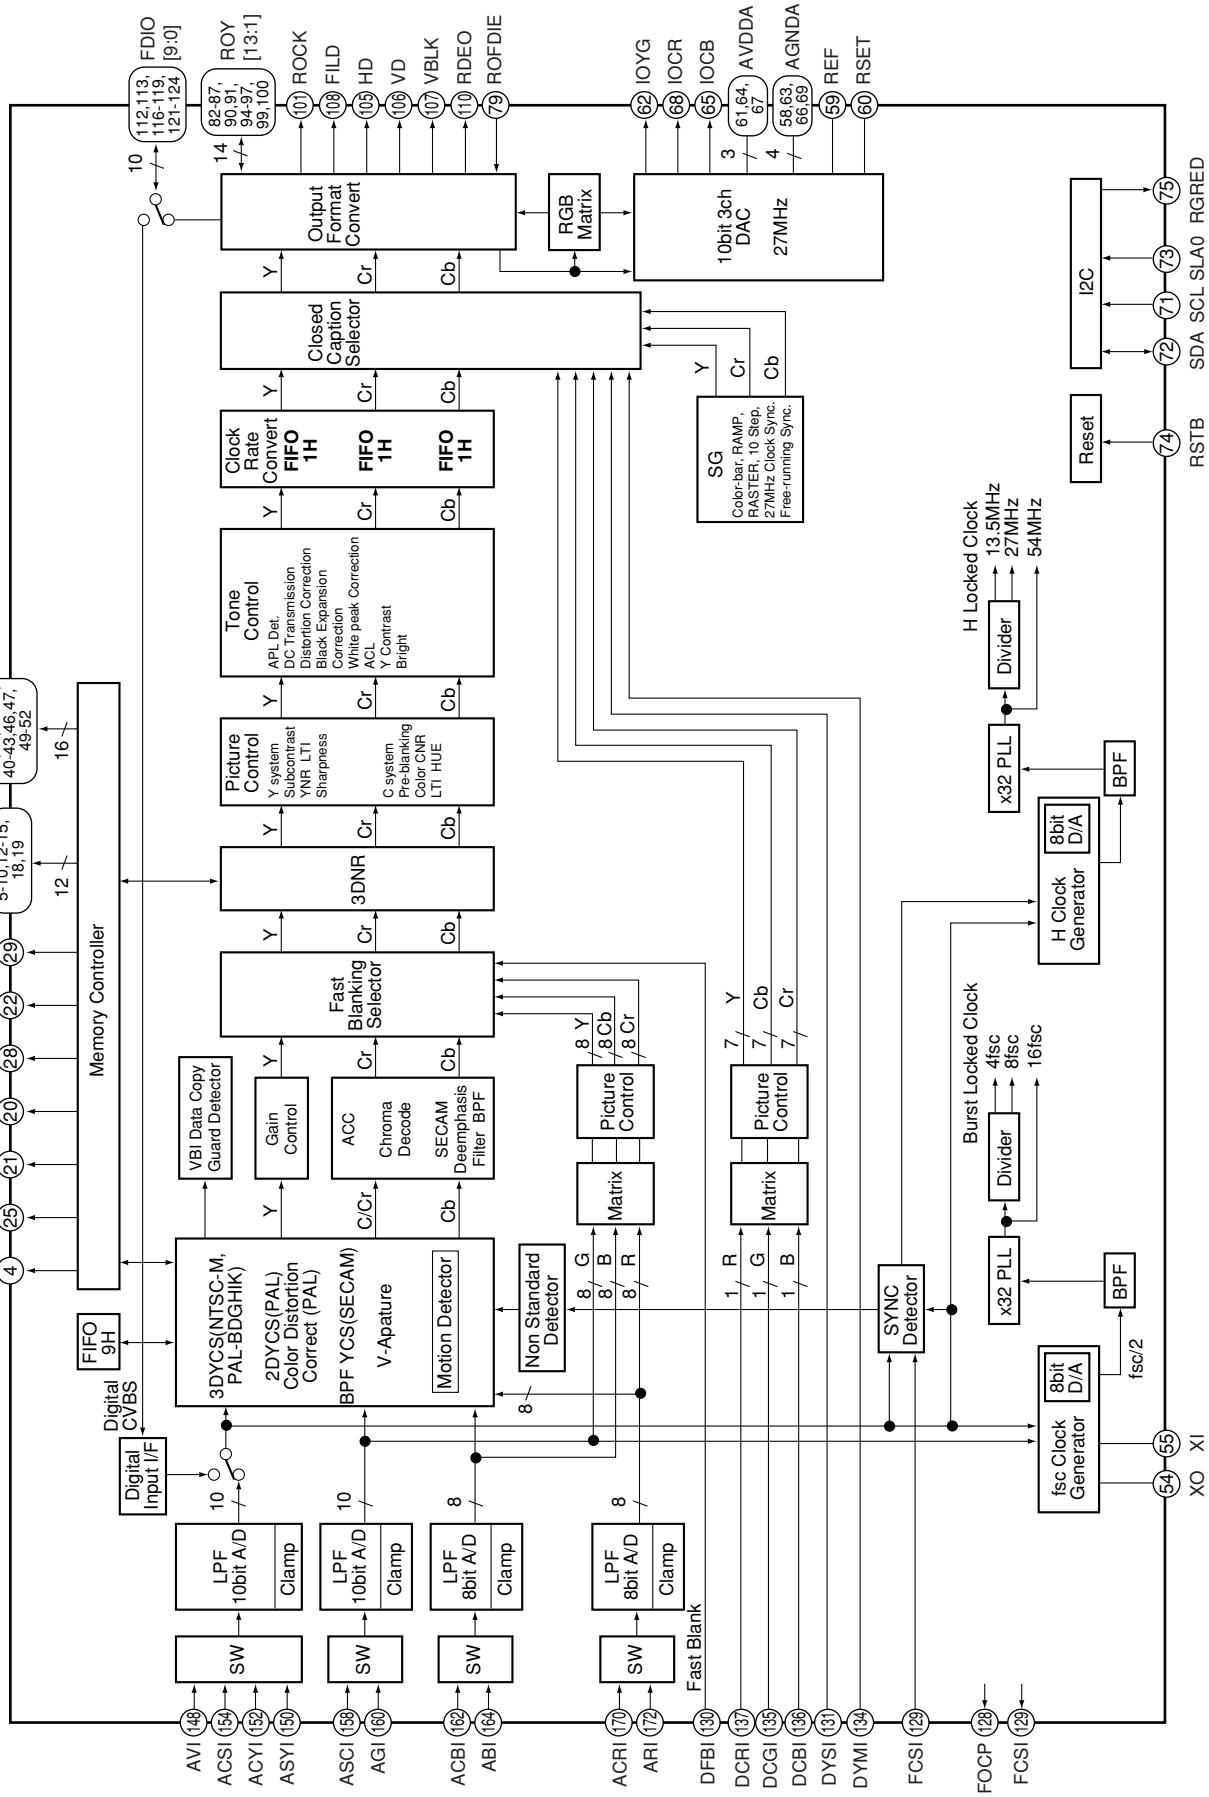

● **Pin Function**

No.	Pin Name	I/O	Pin Function
1	DVDD3	–	Digital power supply (3.3V)
2	SCKSET	I	Test mode selection (L: Normal, H: Test mode)
3	TEST	I	Test setting (L: Normal, H: Test mode)
4	SDRABP	O	All bank precharge output for external memory (Active High)
5	SDRA11	O	Address output for external memory
6	SDRA10	O	Address output for external memory
7	SDRA9	O	Address output for external memory
8	SDRA8	O	Address output for external memory
9	SDRA7	O	Address output for external memory
10	SDRA6	O	Address output for external memory
11	DVDD3	–	Digital power supply (3.3V)
12	SDRA5	O	Address output for external memory
13	SDRA4	O	Address output for external memory
14	SDRA3	O	Address output for external memory
15	SDRA2	O	Address output for external memory
16	DVDD1	–	Digital power supply (1.5V)
17	DGND	–	Digital ground
18	SDRA1	O	Address output for external memory
19	SDRA0	O	Address output for external memory
20	SDRCS	O	Chip select output for external memory (Active Low)
21	SDRCKE	O	Clock enable output for external memory (Active High)
22	SDRRAS	O	Row address strobe output for external memory (Active Low)
23	DVDD1	–	Digital power supply (1.5V)
24	DGND	–	Digital ground
25	SDRCLK	O	Clock output for external memory
26	DVDD3	–	Digital power supply (3.3V)
27	DVDD1	–	Digital power supply (1.5V)
28	SDRCAS	O	Column address strobe output for external memory (Active Low)
29	SDRWE	O	Write enable output for external memory (Active Low)
30	SDRDQ7	I/O	Data input/output for external memory
31	SDRDQ8	I/O	Data input/output for external memory
32	DVDD1	–	Digital power supply (1.5V)
33	DGND	–	Digital ground
34	SDRDQ6	I/O	Data input/output for external memory
35	SDRDQ9	I/O	Data input/output for external memory
36	SDRDQ5	I/O	Data input/output for external memory
37	SDRDQ10	I/O	Data input/output for external memory
38	DGND	–	Digital ground
39	DVDD1	–	Digital power supply (1.5V)
40	SDRDQ4	I/O	Data input/output for external memory
41	SDRDQ11	I/O	Data input/output for external memory
42	SDRDQ3	I/O	Data input/output for external memory
43	SDRDQ12	I/O	Data input/output for external memory
44	DVDD3	–	Digital power supply (3.3V)
45	DGND	–	Digital ground
46	SDRDQ2	I/O	Data input/output for external memory
47	SDRDQ13	I/O	Data input/output for external memory
48	DVDD1	–	Digital power supply (1.5V)
49	SDRDQ1	I/O	Data input/output for external memory
50	SDRDQ14	I/O	Data input/output for external memory

No.	Pin Name	I/O	Pin Function
51	SDRDQ0	I/O	Data input/output for external memory
52	SDRDQ15	I/O	Data input/output for external memory
53	DVDD3	–	Digital power supply (3.3V)
54	XO	O	Reference clock output Connect a 24.576MHz crystal.
55	XI	I	Reference clock input Connect a 24.576MHz crystal.
56	DGND	–	Digital ground
57	DVDD1	–	Digital power supply (1.5V)
58	AGNDA	–	Analog ground for DAC
59	REF	I	External reference input
60	RSET	O	Connect a 620 ohm resistor for external adjustment to AGND
61	AVDDA	–	Analog power supply for DAC (3.3V)
62	IOYG	O	Color-difference component Y / RGB component G output signal
63	AGNDA	–	Analog ground for DAC
64	AVDDA	–	Analog power supply for DAC (3.3V)
65	IOGB	O	Color-difference component Cb / RGB component B output signal
66	AGNDA	–	Analog ground for DAC
67	AVDDA	–	Analog power supply for DAC (3.3V)
68	IOCR	O	Color-difference component Cr / RGB component R output signal
69	AGNDA	–	Analog ground for DAC
70	DVDD1	–	Digital power supply (1.5V)
71	SCL	I	I^2C bus clock input Connect to SCL line of the system.
72	SDA	I/O	I^2C bus data input/output Connect to SDA line of the system.
73	SLA0	I	I^2C bus slave address select input (L: B8h/B9h, H: BAh/BBh)
74	RSTB	I	System reset input (Active Low)
75	RGRED	O	I^2C register read flag output (Active Low)
76	DVDD1	–	Digital power supply (1.5V)
77	FCKM	I	FCLK8 test mode selection (L: Normal, H: Test mode)
78	FCLK8	I/O	Line-lock clock monitor input/output
79	ROFDIE	I	Output enable of the video input/output terminal L: Output terminal Hi-Z, H: Output enable
80	DGND	–	Digital ground
81	DVDD1	–	Digital power supply (1.5V)
82	ROY13	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
83	ROY12	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
84	ROY11	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
85	ROY10	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
86	ROY9	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
87	ROY8	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
88	DVDD3	–	Digital power supply (3.3V)
89	DGND	–	Digital ground
90	ROY7	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
91	ROY6	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
92	DVDD1	–	Digital power supply (1.5V)
93	DGND	–	Digital ground
94	ROY5	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
95	ROY4	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
96	ROY3	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
97	ROY2	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
98	DVDD3	–	Digital power supply (3.3V)
99	ROY1	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output
100	ROY0	O	Digital ITU-R BT. 656/component output Digital RGB component (8 bit) output


No.	Pin Name	I/O	Pin Function
101	ROCK	O	Clock for digital ITU-R BT. 656/component output
102	BCLK8	I/O	Line-lock clock monitor input/output
103	DVDD1	–	Digital power supply (1.5V)
104	DGND	–	Digital ground
105	HD	O	Horizontal sync. signal output
106	VD	O	Vertical sync. signal output
107	VBLK	O	V blanking output
108	FILD	O	Field output
109	DVDD3	–	Digital power supply (3.3V)
110	RDEO	O	Effective pixel area output
111	BCKM	I	Test mode selection of BCLK8 pin (L: Normal, H: Test mode)
112	FDIO0	I/O	Digital 8/10 bit Cb, Cr output / Input at UPD64031A digital connection Open at no use.
113	FDIO1	I/O	Digital 8/10 bit Cb, Cr output / Input at UPD64031A digital connection Open at no use.
114	DGND	–	Digital ground
115	DVDD1	–	Digital power supply (1.5V)
116	FDIO2	I/O	Digital 8/10 bit Cb, Cr output / Input at UPD64031A digital connection Open at no use.
117	FDIO3	I/O	Digital 8/10 bit Cb, Cr output / Input at UPD64031A digital connection Open at no use.
118	FDIO4	I/O	Digital 8/10 bit Cb, Cr output / Input at UPD64031A digital connection Open at no use.
119	FDIO5	I/O	Digital 8/10 bit Cb, Cr output / Input at UPD64031A digital connection Open at no use.
120	DVDD3	–	Digital power supply (3.3V)
121	FDIO6	I/O	Digital 8/10 bit Cb, Cr output / Input at UPD64031A digital connection Open at no use.
122	FDIO7	I/O	Digital 8/10 bit Cb, Cr output / Input at UPD64031A digital connection Open at no use.
123	FDIO8	I/O	Digital 8/10 bit Cb, Cr output / Input at UPD64031A digital connection Open at no use.
124	FDIO9	I/O	Digital 8/10 bit Cb, Cr output / Input at UPD64031A digital connection Open at no use.
125	DVDD1	–	Digital power supply (1.5V)
126	DGND	–	Digital ground
127	FCKQ	I/O	Sampling clock output for digital connection
128	FOCP	I/O	Clamp pulse output for digital connection / Timing output for digital RGB input (VD)
129	FCSI	I/O	Sync sep. signal input / Timing output for RGB input (HD)
130	DFBI	I	Fast blanking signal input for analog RGB input
131	DYSI	I	YS signal input for digital RGB input
132	DVDD3	–	Digital power supply (3.3V)
133	DVDD1	–	Digital power supply (1.5V)
134	DYMI	I	YM signal input for digital RGB input
135	DCGI	I	Digital RGB/G signal input
136	DCBI	I	Digital RGB/B signal input
137	DCRI	I	Digital RGB/R signal input
138	AVDD1	–	Analog power supply (1.5V)
139	ATS1	–	Analog test input Normally, connect to GND.
140	ATS2	–	Analog test input Normally, connect to GND.
141	AVDD3	–	Analog power supply (3.3V)
142	ATS3	–	Analog test input Normally, connect to GND.
143	AGND	–	Analog ground
144	AGND	–	Analog ground
145	AGND	–	Analog ground
146	VCLY	O	ADC1 clamp voltage
147	VCOM1	–	ADC1 common-mode reference voltage
148	AVI	I	ADC1 composite/Y signal input
149	VLPFI	–	Analog test output Connect to GND via 0.1μF capacitor.
150	ASYI	I	ADC1 composite/Y signal input

No.	Pin Name	I/O	Pin Function
151	VRB1	–	ADC1 bottom reference voltage
152	ACYI	I	ADC1 composite/Y signal input
153	VRT1	–	ADC1 top reference voltage
154	ACSI	I	ADC1 composite/Y signal input
155	AVDD3	–	Analog power supply for ADC (3.3V)
156	AVDD3	–	Analog power supply for ADC (3.3V)
157	VRT2	–	ADC2 top reference voltage
158	ASCI	I	ADC2 separate C signal input
159	VRB2	–	ADC2 bottom reference voltage
160	AGI	I	ADC2 RGB component G signal input
161	VCOM2	–	ADC2 common-mode reference voltage
162	ACBI	I	ADC3 color-difference component Cb signal input
163	VRT3	–	ADC3 top reference voltage
164	ABI	I	ADC3 RGB component B signal input
165	VRB3	–	ADC3 bottom reference voltage
166	VCOM3	–	ADC3 common-mode reference voltage
167	AVDD3	–	Analog power supply for ADC (3.3V)
168	AVDD3	–	Analog power supply for ADC (3.3V)
169	VCOM4	–	ADC4 common-mode reference voltage
170	ACRI	I	ADC4 color-difference component Cr signal input
171	VLPF2	–	Analog test output
172	ARI	I	ADC3 RGB component R signal input
173	VRB4	–	ADC4 bottom reference voltage
174	VRT4	–	ADC4 top reference voltage
175	AGND	–	Analog ground
176	AGND	–	Analog ground


■ TVP5150AM1PBS (MR MAIN ASSY : IC6001)

• Video Decoder (for Subscreen)

● Pin Arrangement (Top view)

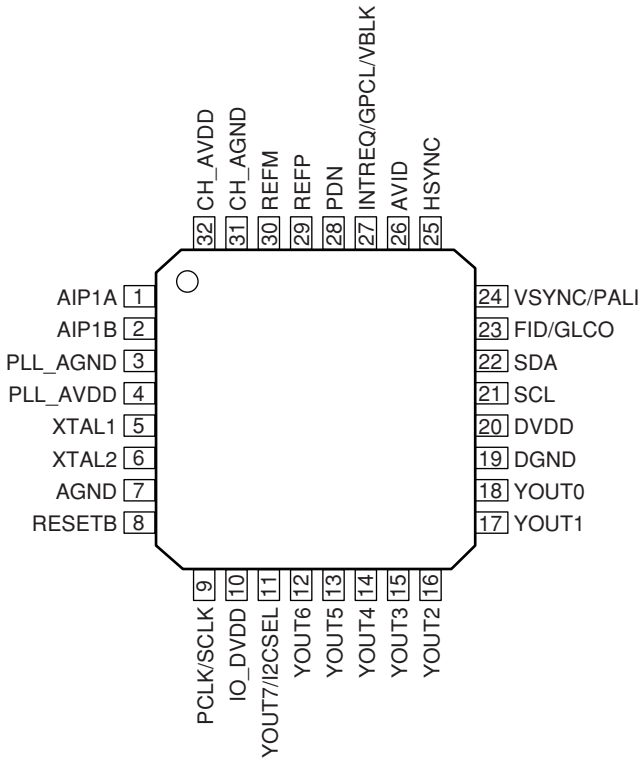

● Block Diagram

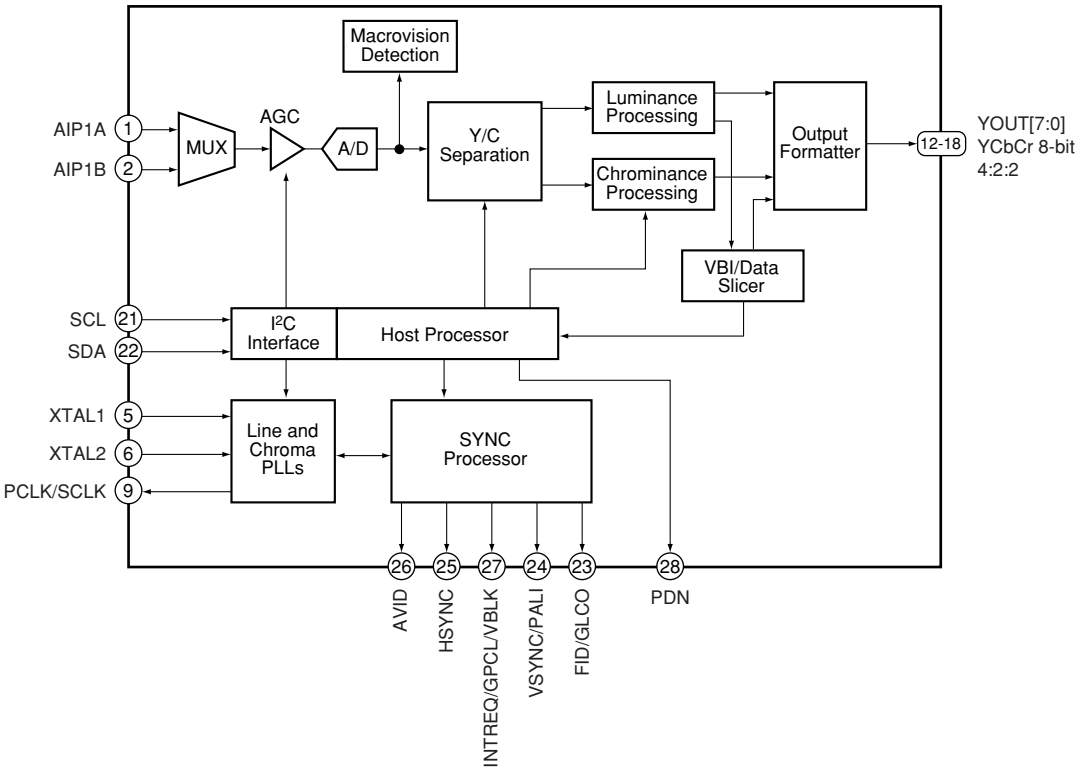


● **Pin Function**

No.	Pin Name	I/O	Pin Function
1	AIP1A	I	Analog input
2	AIP1B	I	Analog input
3	PLL_AGND	I	PLL ground Connect to analog ground.
4	PLL_AVDD	I	PLL power supply (1.8V)
5	XTAL1	I	External clock reference
6	XTAL2	O	External clock reference
7	AGND	I	Substrate Connect to analog ground.
8	RESETB	I	Active-low reset
9	PCLK/SCLK	O	System clock at either 1x or 2x the frequency of the pixel clock
10	IO_DVDD	I	Digital power supply (3.3V)
11	YOUT(7)/I2CSEL	I/O	I2CSEL: Determines address for I²C (sampled during reset) YOUT7: MSB of output decoded ITU-R BT.656 output/YCbCr 4:2:2 output
12	YOUT6	I/O	Output decoded ITU-R BT.656 output/YCbCr 4:2:2 output with discrete sync
13	YOUT5	I/O	Output decoded ITU-R BT.656 output/YCbCr 4:2:2 output with discrete sync
14	YOUT4	I/O	Output decoded ITU-R BT.656 output/YCbCr 4:2:2 output with discrete sync
15	YOUT3	I/O	Output decoded ITU-R BT.656 output/YCbCr 4:2:2 output with discrete sync
16	YOUT2	I/O	Output decoded ITU-R BT.656 output/YCbCr 4:2:2 output with discrete sync
17	YOUT1	I/O	Output decoded ITU-R BT.656 output/YCbCr 4:2:2 output with discrete sync
18	YOUT0	I/O	Output decoded ITU-R BT.656 output/YCbCr 4:2:2 output with discrete sync
19	DGND	I	Digital ground
20	DVDD	I	Digital power supply (1.8V)
21	SCL	I/O	I²C serial clock (open drain)
22	SDA	I/O	I²C serial data (open drain)
23	FID/GLCO	O	FID: Odd/even field indicator or vertical lock indicator GLCO: This serial output carries color PLL information
24	VSYNC/PALI	O	VSYNC: Vertical synchronization signal PALI: PAL line indicator or horizontal lock indicator
25	HSYNC	O	Horizontal synchronization signal
26	AVID	O	Active video indicator
27	INTREQ/GPCL /VBLK	I/O	INTREQ: Interrupt request output GPCL: General-purpose control logic
28	PDN	I	Power-down terminal (active low)
29	REFP	I	A/D reference supply
30	REFM	I	A/D reference ground
31	CH_AGND	I	Analog ground
32	CH_AVDD	I	Analog power supply (1.8V)


K4S161622H-TC60 (MR MAIN ASSY : IC6002)

• 16M SDRAM (for Main VDEC)

● Pin Arrangement (Top view)

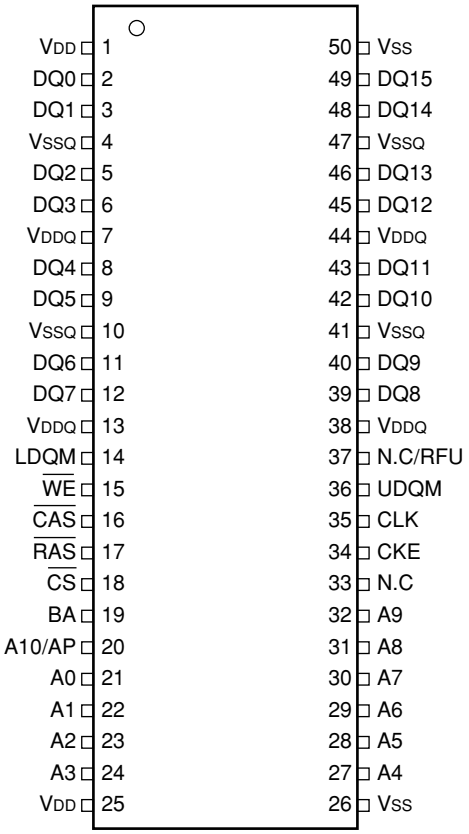

● Block Diagram

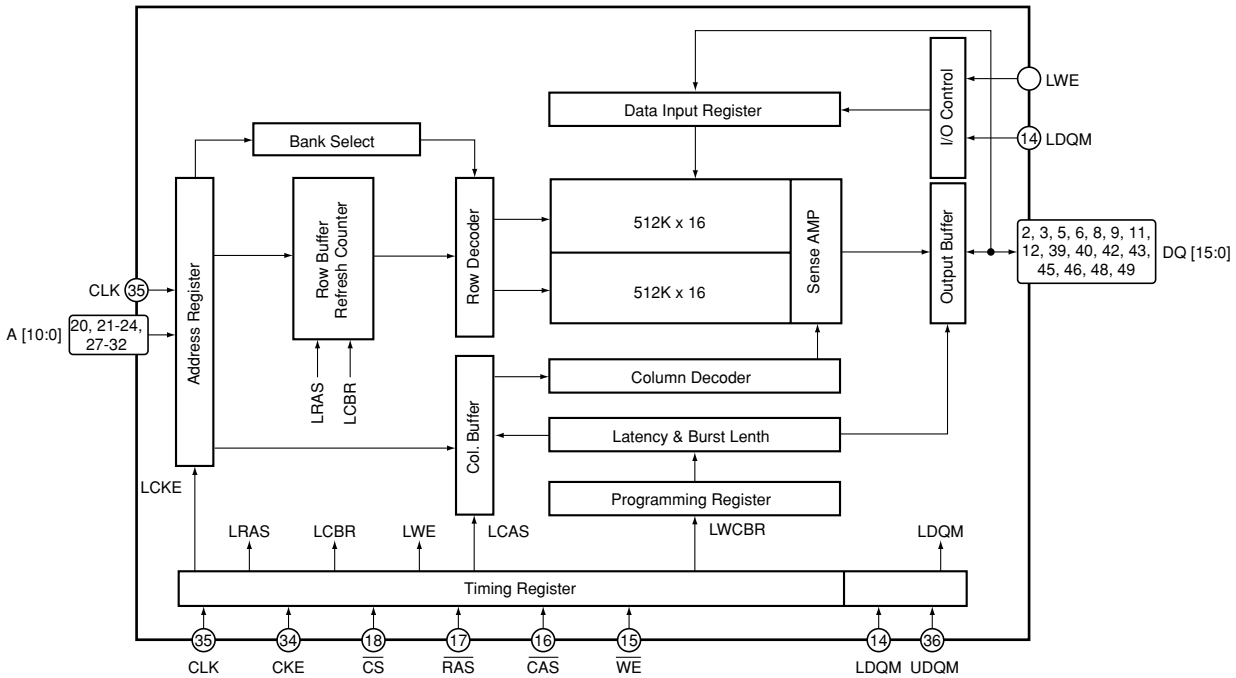


● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	V_{DD}	–	Power supply	26	V_{SS}	–	Ground
2	DQ0	I/O	Data input / output	27	A4	I	Address input
3	DQ1	I/O	Data input / output	28	A5	I	Address input
4	V_{SSQ}	–	Ground for data output	29	A6	I	Address input
5	DQ2	I/O	Data input / output	30	A7	I	Address input
6	DQ3	I/O	Data input / output	31	A8	I	Address input
7	V_{DDQ}	–	Power supply for data output	32	A9	I	Address input
8	DQ4	I/O	Data input / output	33	N.C	–	No connection
9	DQ5	I/O	Data input / output	34	CKE	I	Clock enable input
10	V_{SSQ}	–	Ground for data output	35	CLK	I	System clock input
11	DQ6	I/O	Data input / output	36	UDQM	I	Data input / output mask input
12	DQ7	I/O	Data input / output	37	N.C/RFU	–	No connection / Reserved for future use
13	V_{DDQ}	–	Power supply for data output	38	V_{DDQ}	–	Power supply for data output
14	LDQM	I	Data input / output mask input	39	DQ8	I/O	Data input / output
15	$\overline{WE}$	I	Write enable input	40	DQ9	I/O	Data input / output
16	$\overline{CAS}$	I	Column address strobe input	41	V_{SSQ}	–	Ground for data output
17	$\overline{RAS}$	I	Row address strobe input	42	DQ10	I/O	Data input / output
18	$\overline{CS}$	I	Chip select input	43	DQ11	I/O	Data input / output
19	BA	I	Bank select address input	44	V_{DDQ}	–	Power supply for data output
20	A10/AP	I	Address input	45	DQ12	I/O	Data input / output
21	A0	I	Address input	46	DQ13	I/O	Data input / output
22	A1	I	Address input	47	V_{SSQ}	–	Ground for data output
23	A2	I	Address input	48	DQ14	I/O	Data input / output
24	A3	I	Address input	49	DQ15	I/O	Data input / output
25	V_{DD}	–	Power supply	50	V_{SS}	–	Ground


AD9985KSTZ-110 (MR MAIN ASSY : IC6201)

• ADC

● Pin Arrangement (Top view)

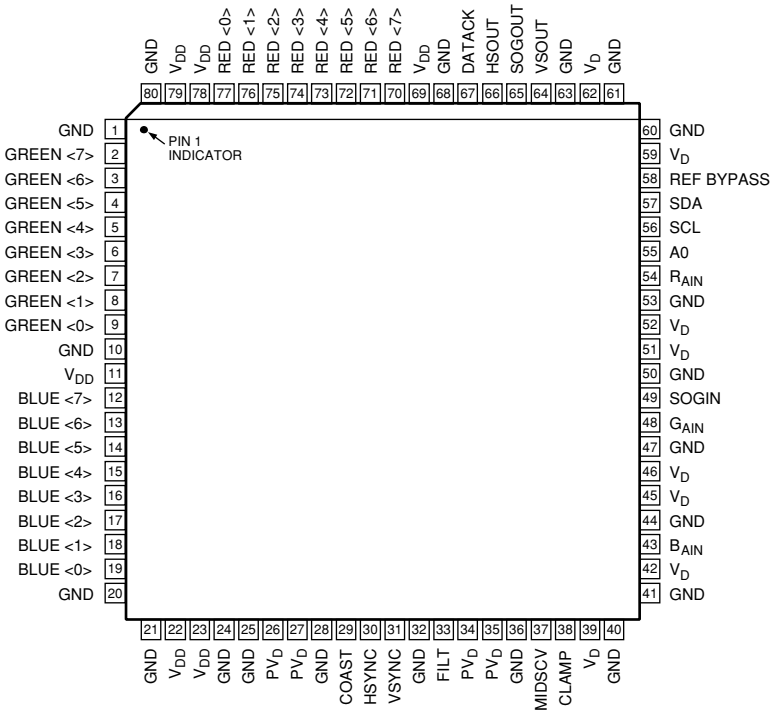

● Block Diagram

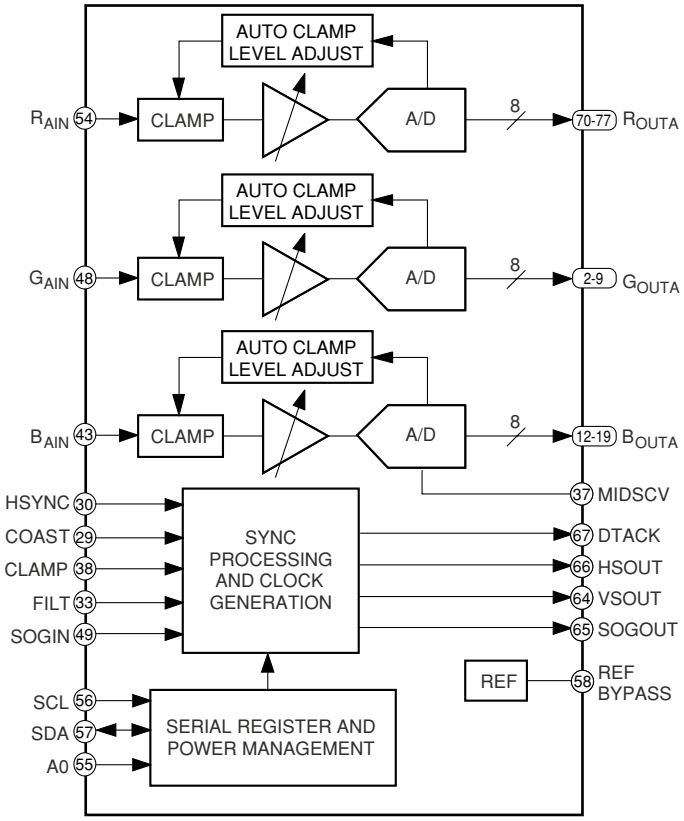


● Pin Function

Pin Type	No.	PIN Name	Pin Function
Inputs	54	RAIN	Analog input for converter R
	48	GAIN	Analog input for converter G
	43	BAIN	Analog input for converter B
	30	HSYNC	Horizontal sync input
	31	VSYNC	Vertical sync input
	49	SOGIN	Input for sync-on green
	38	CLAMP	Clamp input (External CLAMP signal)
	29	COAST	PLL COAST signal input
Outputs	70-77	Red [7 : 0]	Outputs of converter red, bit 7 is the MSB
	2-9	Green [7 : 0]	Outputs of converter green, bit 7 is the MSB
	12-19	Blue [7 : 0]	Outputs of converter blue, bit 7 is the MSB
	67	DATACK	Data output clock
	66	HSOUT	HSYNC output (Phase-aligned with DATACK)
	64	VSOUT	VSYNC output (Phase-aligned with DATACK)
	65	SOGOUT	Sync-on-green slicer output
Reference	58	REF BYPASS	Internal reference bypass
	37	MIDSCV	Internal midscale voltage bypass
	33	FILT	Connection for external filter components for internal PLL
Power Supply	39, 42, 45, 46, 51, 52, 59, 62	VD	Analog power supply
	11, 22, 23, 69, 78, 79	VDD	Output power supply
	26, 27, 34, 35	PVD	PLL power supply
	1, 10, 20, 21, 24, 25, 28, 32, 36, 40, 41, 44, 47, 50, 53, 60, 61, 63 68, 80	GND	Ground
Control	57	SDA	Serial port data I/O
	56	SCL	Serial port data clock (100 kHz maximum)
	55	A0	Serial port address input 1


SII9021CTU (MR MAIN ASSY : IC6404)

• HDMI Rx

● Pin Arrangement (Top view)

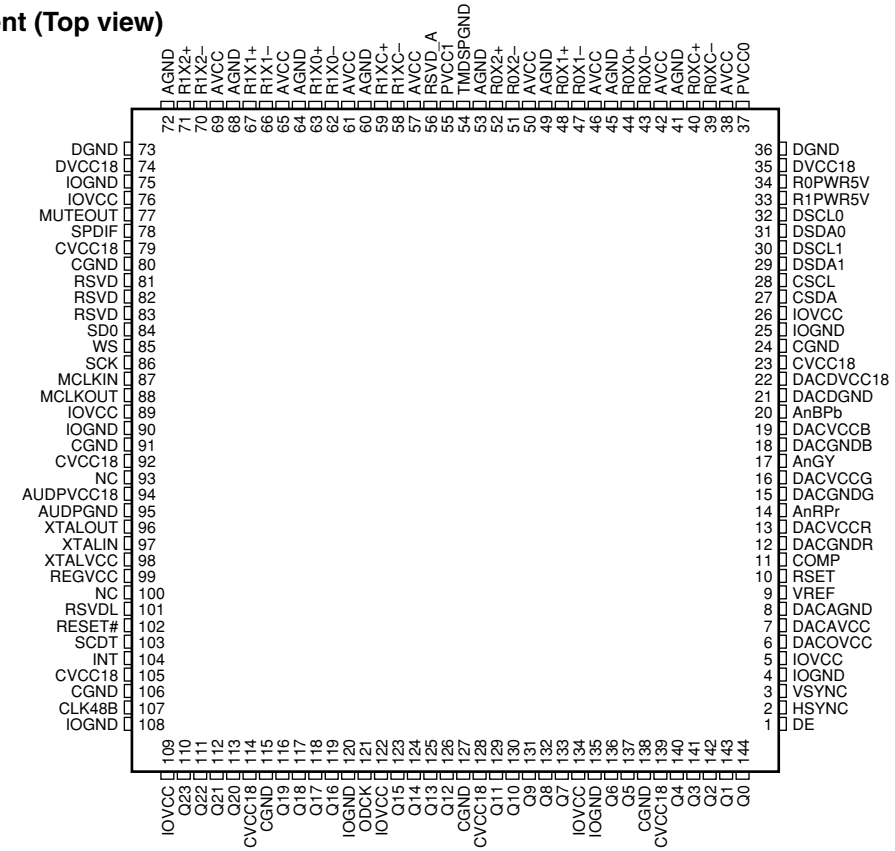

● Block Diagram

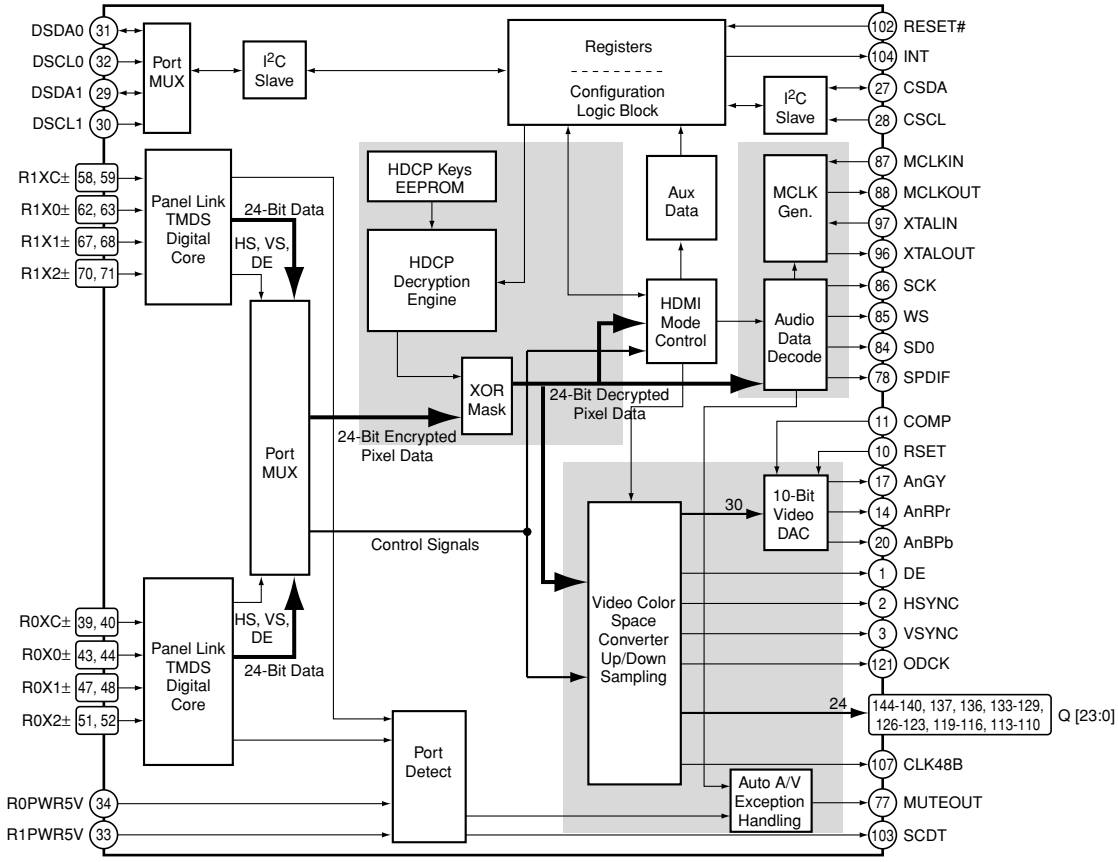

A

● Pin Function

No.	Pin Name	I/O	Pin Function
1	DE	O	Data enable
2	HSYNC	O	Horizontal sync output control signal
3	VSYNC	O	Vertical sync output control signal
4	IOGND	–	Input / output pin ground
5	IOVCC	–	Input / output pin VCC
6	DACOVCC	–	DAC output VCC
7	DACAVCC	–	DAC analog VCC
8	DACAGND	–	DAC analog ground
9	VREF	–	–
10	RSET	–	Full scale adjust resistor
11	COMP	–	Compensation
12	DACGNDR	–	DAC red ground
13	DACVCCR	–	DAC red VDD
14	AnRPr	O	Analog video red, Pr output
15	DACGNDG	–	DAC green ground
16	DACVCCG	–	DAC green VDD
17	AnGY	O	Analog video green, Y output
18	DACGNDB	–	DAC blue ground
19	DACVCCB	–	DAC blue VDD
20	AnBPb	O	Analog video blue, Pb output
21	DACDGND	–	DAC digital ground
22	DACDVCC18	–	DAC digital VCC
23	CVCC18	–	Digital logic VCC
24	CGND	–	Digital logic ground
25	IOGND	–	Input / output pin ground
26	IOVCC	–	Input / output pin VCC
27	CSDA	I/O	Configuration I^2C data
28	CSCL	I	Configuration I^2C clock
29	DSDA1	I/O	DDC I^2C data for port 1
30	DSCL1	I	DDC I^2C clock for port 1
31	DSDA0	I/O	DDC I^2C data for port 0
32	DSCL0	I	DDC I^2C clock for port 0
33	R1PWR5V	I	Port 1 transmitter detect
34	R0PWR5V	I	Port 0 transmitter detect
35	DVCC18	–	ACR PLL digital VCC
36	DGND	–	ACR PLL ground
37	PVCC0	–	TMDS port 0 PLL VCC
38	AVCC	–	TMDS analog VCC
39	R0XC–	I	TMDS input clock
40	R0XC+	I	TMDS input clock
41	AGND	–	TMDS analog ground
42	AVCC	–	TMDS analog VCC
43	R0X0–	I	TMDS input data
44	R0X0+	I	TMDS input data
45	AGND	–	TMDS analog ground
46	AVCC	–	TMDS analog VCC
47	R0X1–	I	TMDS input data
48	R0X1+	I	TMDS input data
49	AGND	–	TMDS analog ground
50	AVCC	–	TMDS analog VCC


No.	Pin Name	I/O	Pin Function
51	R0X2–	I	TMDS input data
52	R0X2+	I	TMDS input data
53	AGND	–	TMDS analog ground
54	TMDSPGND	–	TMDS PLL ground
55	PVCC1	–	TMDS port 1 PLL VCC
56	RSVD_A	–	Reserved pin
57	AVCC	–	TMDS analog VCC
58	R1XC–	I	TMDS input clock
59	R1XC+	I	TMDS input clock
60	AGND	–	TMDS analog ground
61	AVCC	–	TMDS analog VCC
62	R1X0–	I	TMDS input data
63	R1X0+	I	TMDS input data
64	AGND	–	TMDS analog ground
65	AVCC	–	TMDS analog VCC
66	R1X1–	I	TMDS input data
67	R1X1+	I	TMDS input data
68	AGND	–	TMDS analog ground
69	AVCC	–	TMDS analog VCC
70	R1X2–	I	TMDS input data
71	R1X2+	I	TMDS input data
72	AGND	–	TMDS analog ground
73	DGND	–	ACR PLL ground
74	DVCC18	–	ACR PLL digital VCC
75	IOGND	–	Input / output pin ground
76	IOVCC	–	Input / output pin VCC
77	MUTEOUT	O	Mute audio output
78	SPDIF	O	S/PDIF audio output
79	CVCC18	–	Digital logic VCC
80	CGND	–	Digital logic ground
81	RSVD	O	–
82	RSVD	O	–
83	RSVD	O	–
84	SD0	O	I^2S serial data output
85	WS	O	I^2S word select output
86	SCK	O	I^2S serial clock output
87	MCLKIN	I	Audio master clock input reference
88	MCLKOUT	O	Audio master clock output
89	IOVCC	–	Input / output pin VCC
90	IOGND	–	Input / output pin ground
91	CGND	–	Digital logic ground
92	CVCC18	–	Digital logic VCC
93	NC	–	No connection
94	AUDPVCC18	–	ACR PLL VCC
95	AUDPGND	–	ACR PLL ground
96	XTALOUT	O	Crystal clock output
97	XTALIN	I	Crystal clock input
98	XTALVCC	–	ACR PLL crystal input VCC
99	REGVCC	–	ACR PLL regulator VCC
100	NC	–	No connection

No.	Pin Name	I/O	Pin Function
101	RSVDL	I	Reserved, must be tied LOW
102	RESET#	I	Reset pin, active LOW
103	SCDT	O	Indicates active video at HDMI input port
104	INT	O	Interrupt output
105	CVCC18	–	Digital logic VCC
106	CGND	–	Digital logic ground
107	CLK48B	I/O	Data bus latch enable
108	IOGND	–	Input / output pin ground
109	IOVCC	–	Input / output pin VCC
110	Q23	O	24-bit output pixel data bus
111	Q22	O	24-bit output pixel data bus
112	Q21	O	24-bit output pixel data bus
113	Q20	O	24-bit output pixel data bus
114	CVCC18	–	Digital logic VCC
115	CGND	–	Digital logic ground
116	Q19	O	24-bit output pixel data bus
117	Q18	O	24-bit output pixel data bus
118	Q17	O	24-bit output pixel data bus
119	Q16	O	24-bit output pixel data bus
120	IOGND	–	Input / output pin ground
121	ODCK	O	Output data clock
122	IOVCC	–	Input / output pin VCC
123	Q15	O	24-bit output pixel data bus
124	Q14	O	24-bit output pixel data bus
125	Q13	O	24-bit output pixel data bus
126	Q12	O	24-bit output pixel data bus
127	CGND	–	Digital logic ground
128	CVCC18	–	Digital logic VCC
129	Q11	O	24-bit output pixel data bus
130	Q10	O	24-bit output pixel data bus
131	Q9	O	24-bit output pixel data bus
132	Q8	O	24-bit output pixel data bus
133	Q7	O	24-bit output pixel data bus
134	IOVCC	–	Input / output pin VCC
135	IOGND	–	Input / output pin ground
136	Q6	O	24-bit output pixel data bus
137	Q5	O	24-bit output pixel data bus
138	CGND	–	Digital logic ground
139	CVCC18	–	Digital logic VCC
140	Q4	O	24-bit output pixel data bus
141	Q3	O	24-bit output pixel data bus
142	Q2	O	24-bit output pixel data bus
143	Q1	O	24-bit output pixel data bus
144	Q0	O	24-bit output pixel data bus


K4S643232H-TC60 (MR MAIN ASSY : IC6801, IC6802)

• 64M SDRAM (for Silvia)

● Pin Arrangement (Top view)

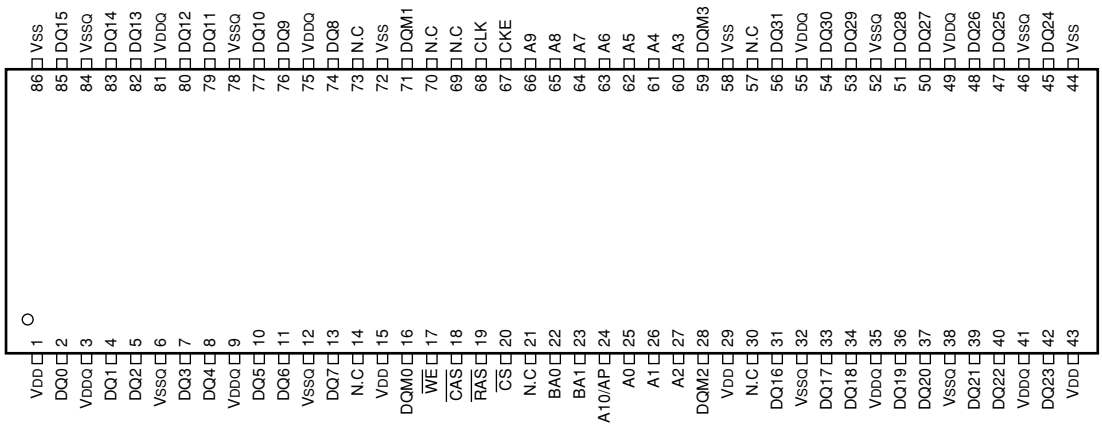

● Block Diagram

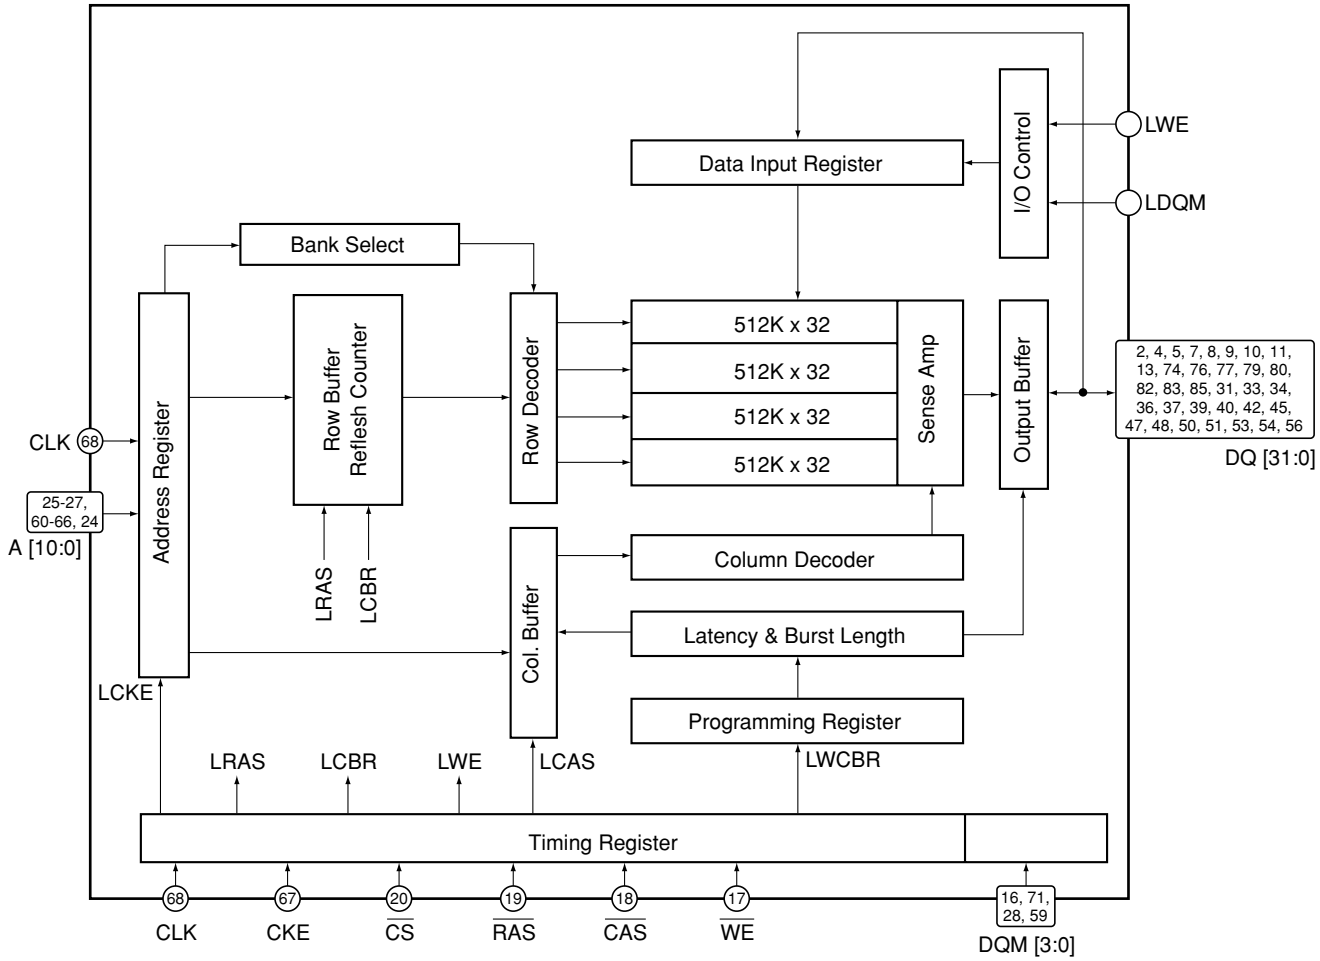


● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	V_{DD}	–	Power supply	44	V_{SS}	–	Ground
2	DQ0	I/O	Data input / output	45	DQ24	I/O	Data input / output
3	V_{DDQ}	–	Power supply for data output	46	V_{SSQ}	–	Ground for data output
4	DQ1	I/O	Data input / output	47	DQ25	I/O	Data input / output
5	DQ2	I/O	Data input / output	48	DQ26	I/O	Data input / output
6	V_{SSQ}	–	Ground for data output	49	V_{DDQ}	–	Power supply for data output
7	DQ3	I/O	Data input / output	50	DQ27	I/O	Data input / output
8	DQ4	I/O	Data input / output	51	DQ28	I/O	Data input / output
9	V_{DDQ}	–	Power supply for data output	52	V_{SSQ}	–	Ground for data output
10	DQ5	I/O	Data input / output	53	DQ29	I/O	Data input / output
11	DQ6	I/O	Data input / output	54	DQ30	I/O	Data input / output
12	V_{SSQ}	–	Ground for data output	55	V_{DDQ}	–	Power supply for data output
13	DQ7	I/O	Data input / output	56	DQ31	I/O	Data input / output
14	N.C	–	No connection	57	N.C	–	No connection
15	V_{DD}	–	Power supply	58	V_{SS}	–	Ground
16	DQM0	I	Data input / output mask input	59	DQM3	I	Data input / output mask input
17	$\overline{WE}$	I	Write enable input	60	A3	I	Address input
18	$\overline{CAS}$	I	Column address strobe input	61	A4	I	Address input
19	$\overline{RAS}$	I	Row address strobe input	62	A5	I	Address input
20	$\overline{CS}$	I	Chip select input	63	A6	I	Address input
21	N.C	–	No connection	64	A7	I	Address input
22	BA0	I	Bank select address input	65	A8	I	Address input
23	BA1	I	Bank select address input	66	A9	I	Address input
24	A10/AP	I	Address input	67	CKE	I	Clock enable input
25	A0	I	Address input	68	CLK	I	System clock input
26	A1	I	Address input	69	N.C	–	No connection
27	A2	I	Address input	70	N.C	–	No connection
28	DQM2	I	Data input / output mask input	71	DQM1	I	Data input / output mask input
29	V_{DD}	–	Power supply	72	V_{SS}	–	Ground
30	N.C	–	No connection	73	N.C	–	No connection
31	DQ16	I/O	Data input / output	74	DQ8	I/O	Data input / output
32	V_{SSQ}	–	Ground for data output	75	V_{DDQ}	–	Power supply for data output
33	DQ17	I/O	Data input / output	76	DQ9	I/O	Data input / output
34	DQ18	I/O	Data input / output	77	DQ10	I/O	Data input / output
35	V_{DDQ}	–	Power supply for data output	78	V_{SSQ}	–	Ground for data output
36	DQ19	I/O	Data input / output	79	DQ11	I/O	Data input / output
37	DQ20	I/O	Data input / output	80	DQ12	I/O	Data input / output
38	V_{SSQ}	–	Ground for data output	81	V_{DDQ}	–	Power supply for data output
39	DQ21	I/O	Data input / output	82	DQ13	I/O	Data input / output
40	DQ22	I/O	Data input / output	83	DQ14	I/O	Data input / output
41	V_{DDQ}	–	Power supply for data output	84	V_{SSQ}	–	Ground for data output
42	DQ23	I/O	Data input / output	85	DQ15	I/O	Data input / output
43	V_{DD}	–	Power supply	86	V_{SS}	–	Ground


MBM29DL162TE70TN (MR MAIN ASSY : IC5207, IC7002)

• 16M Flash for Carrera MANTA

● Pin Arrangement (Top view)

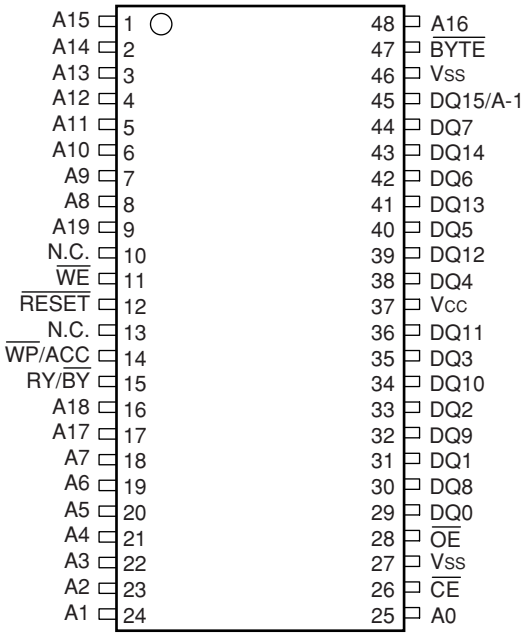

● Block Diagram

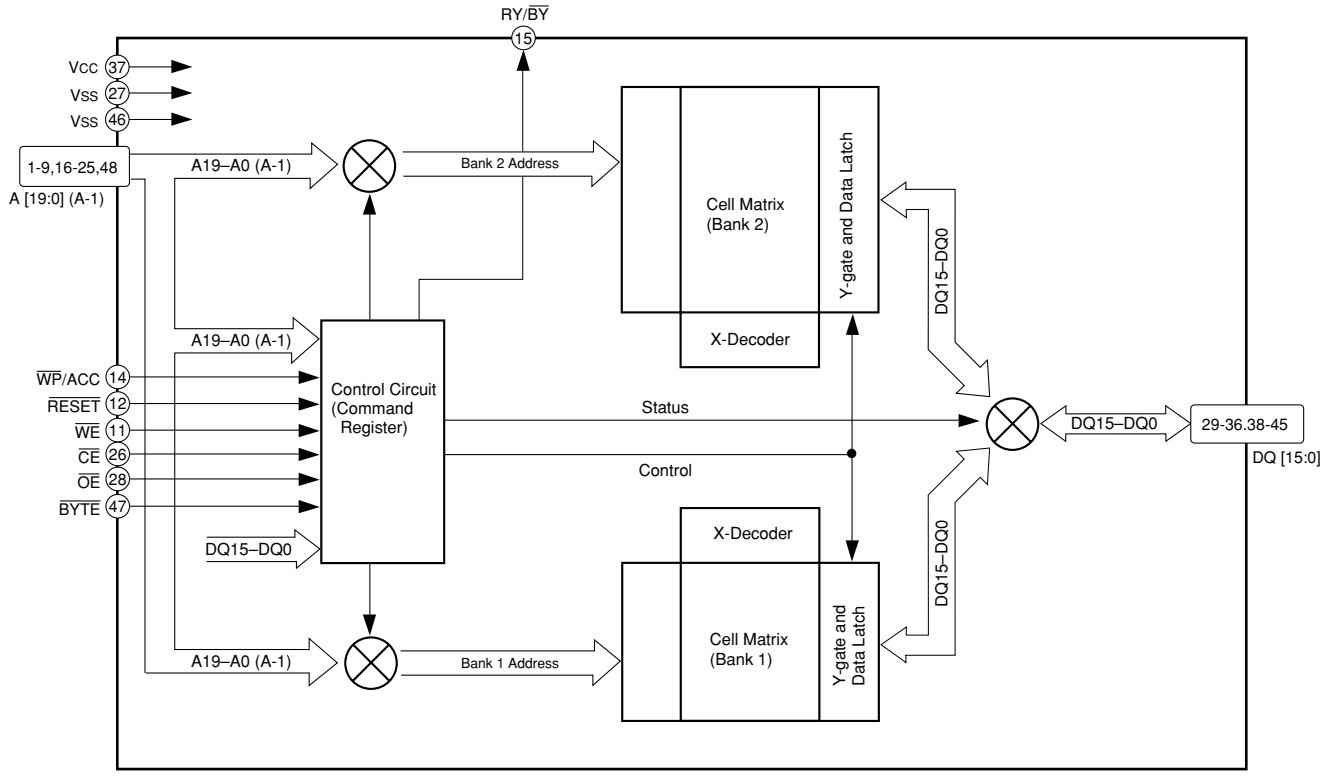


● Pin Function

No.	Pin Name	I/O	Pin Function
1	A15	I	Address input
2	A14	I	Address input
3	A13	I	Address input
4	A12	I	Address input
5	A11	I	Address input
6	A10	I	Address input
7	A9	I	Address input
8	A8	I	Address input
9	A19	I	Address input
10	N.C.	I	No connection
11	$\overline{WE}$	I	Write enable input
12	$\overline{RESET}$	I	Hardware reset
13	N.C.	–	No connection
14	$\overline{WP}$/ACC	I	Hardware write protect / Acceleration
15	RY/$\overline{BY}$	O	Ready / Busy output
16	A18	I	Address input
17	A17	I	Address input
18	A7	I	Address input
19	A6	I	Address input
20	A5	I	Address input
21	A4	I	Address input
22	A3	I	Address input
23	A2	I	Address input
24	A1	I	Address input
25	A0	I	Address input
26	$\overline{CE}$	I	Chip enable input
27	Vss	–	Ground
28	$\overline{OE}$	I	Output enable input
29	DQ0	I/O	Data input / output
30	DQ8	I/O	Data input / output
31	DQ1	I/O	Data input / output
32	DQ9	I/O	Data input / output
33	DQ2	I/O	Data input / output
34	DQ10	I/O	Data input / output
35	DQ3	I/O	Data input / output
36	DQ11	I/O	Data input / output
37	Vcc	–	Power supply
38	DQ4	I/O	Data input / output
39	DQ12	I/O	Data input / output
40	DQ5	I/O	Data input / output
41	DQ13	I/O	Data input / output
42	DQ6	I/O	Data input / output
43	DQ14	I/O	Data input / output
44	DQ7	I/O	Data input / output
45	DQ15/A-1	I/O	Data input / output / Address input
46	Vss	–	Ground
47	$\overline{BYTE}$	I	Selects 8-bit or 16-bit mode
48	A16	I	Address input


■ SII170BCLG64 (MR MAIN ASSY : IC7202)

• DVI Tx

● Pin Arrangement (Top view)

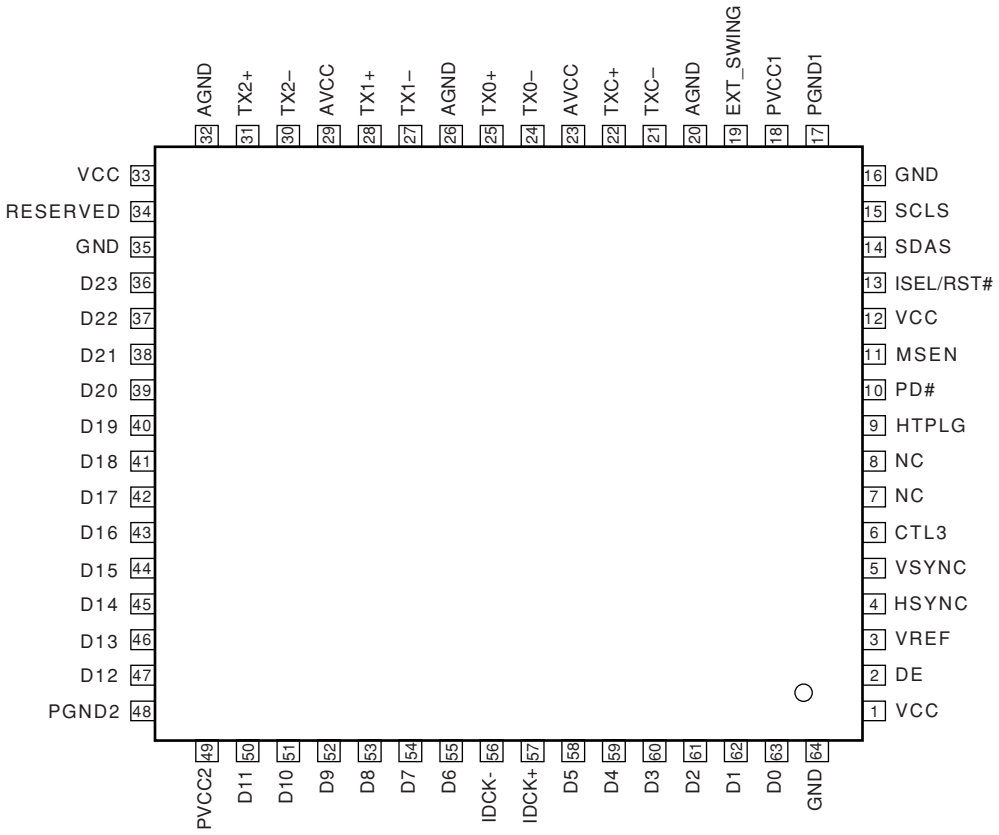

● Block Diagram

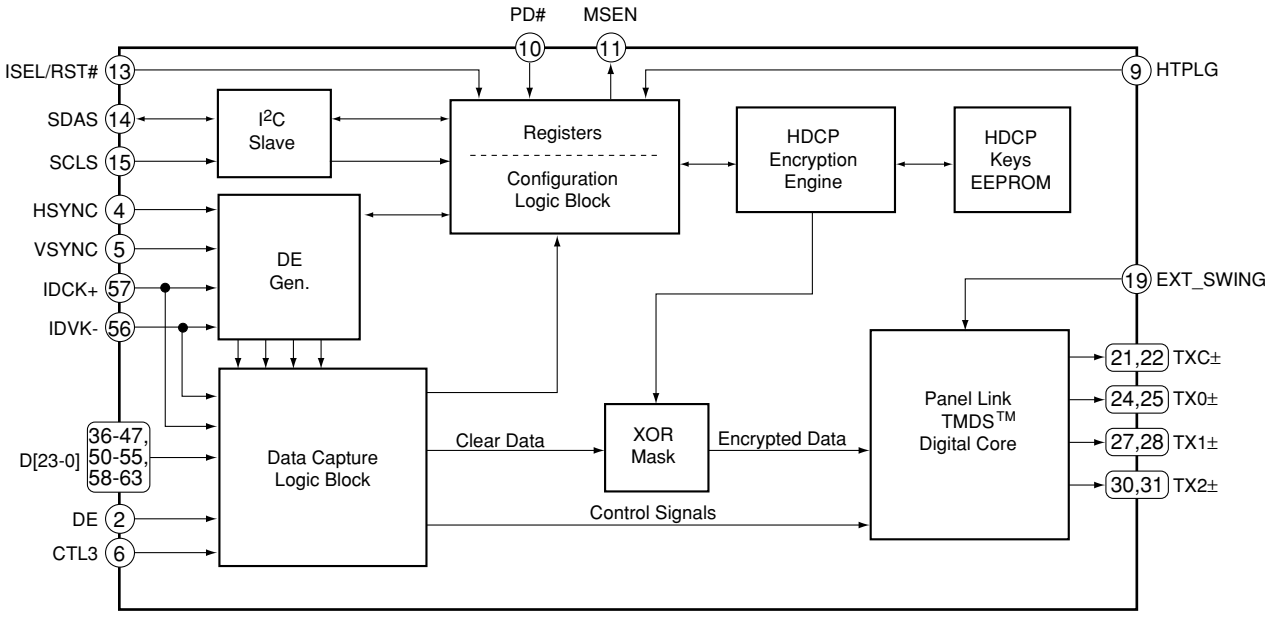

● Pin Function


No.	Pin Name	I/O	Pin Function
1	VCC	–	Digital power supply (3.3V)
2	DE	I	Data enable
3	VREF	I	3.3V fixed
4	HSYNC	I	Horizontal sync. control signal input
5	VSYNC	I	Vertical sync. control signal input
6	CTL3	I	External CTL3 input
7	NC	–	No connection
8	NC	–	No connection
9	HTPLG	I	Monitor chrage input
10	PD#	I	Power down input (Active low)
11	MSEN	O	Monitor sense output (open-collector output)
12	VCC	–	Digital power supply (3.3V)
13	ISEL/RST#	I	I2C interface selecting input High: I2C interface is active
14	SDAS	I/O	DDC I2C data input/output
15	SCLS	I	DDC I2C clock input
16	GND	–	Digital ground
17	PGND1	–	PLL analog ground
18	PVCC1	–	Analog power supply for PLL of primary side (3.3V)
19	EXT_SWING	I	Voltage regulation adjustment
20	AGND	–	Analog ground
21	TXC–	O	Differential signal clock output of TMDS Low voltage
22	TXC+	O	Differential signal clock output of TMDS Low voltage
23	AVCC	–	Analog power supply (3.3V)
24	TX0–	O	Differential signal clock output of TMDS Low voltage
25	TX0+	O	Differential signal clock output of TMDS Low voltage
26	AGND	–	Analog ground
27	TX1–	O	Differential signal clock output of TMDS Low voltage
28	TX1+	O	Differential signal clock output of TMDS Low voltage
29	AVCC	–	Analog power supply (3.3V)
30	TX2-	O	Differential signal clock output of TMDS Low voltage
31	TX2+	O	Differential signal clock output of TMDS Low voltage
32	AGND	–	Analog ground
33	VCC	–	Digital power supply (3.3V)
34	RESERVED	I	Reserved pin for Silicon Image Normally, fixed to low.
35	GND	–	Digital ground
36	D23	I	24-bit pixel bus input
37	D22	I	24-bit pixel bus input
38	D21	I	24-bit pixel bus input
39	D20	I	24-bit pixel bus input
40	D19	I	24-bit pixel bus input

No.	Pin Name	I/O	Pin Function
41	D18	I	24-bit pixel bus input
42	D17	I	24-bit pixel bus input
43	D16	I	24-bit pixel bus input
44	D15	I	24-bit pixel bus input
45	D14	I	24-bit pixel bus input
46	D13	I	24-bit pixel bus input
47	D12	I	24-bit pixel bus input
48	PGND2	–	PLL analog ground
49	PVCC2	–	Analog power supply for filter PLL (3.3V)
50	D11	I	24-bit / 12-bit pixel bus input
51	D10	I	24-bit / 12-bit pixel bus input
52	D9	I	24-bit / 12-bit pixel bus input
53	D8	I	24-bit / 12-bit pixel bus input
54	D7	I	24-bit / 12-bit pixel bus input
55	D6	I	24-bit / 12-bit pixel bus input
56	IDCK–	I	Data clock - input
57	IDCK+	I	Data clock + input
58	D5	I	24-bit / 12-bit pixel bus input
59	D4	I	24-bit / 12-bit pixel bus input
60	D3	I	24-bit / 12-bit pixel bus input
61	D2	I	24-bit / 12-bit pixel bus input
62	D1	I	24-bit / 12-bit pixel bus input
63	D0	I	24-bit / 12-bit pixel bus input
64	GND	–	Digital ground

AXF1150 (MR MAIN ASSY : U4401)

• Front End

● Pin Arrangement

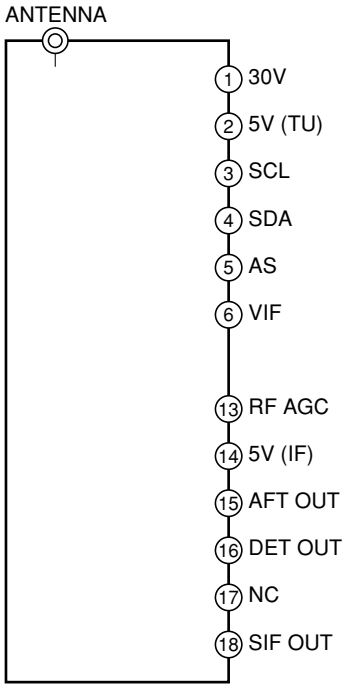


● Pin Function

No.	Pin Name	Pin Function
1	30V	Power supply for 30V
2	5V (TU)	Power supply for tuner
3	SCL	Terminal for I2C bus control
4	SDA	
5	AS	
6	VIF	VIF output
13	RF AGC	RF AGC terminal
14	5V (IF)	Power supply for IF
15	AFT OUT	Analog AFT output
16	DET OUT	VIDEO output (Typical = 1.0Vp-p)
17	NC	No connection
18	SIF OUT	SIF output

■ AXY1117 (MR MAIN ASSY: U4201)

• 3 Outputs DD Control Unit

● Pin Arrangement

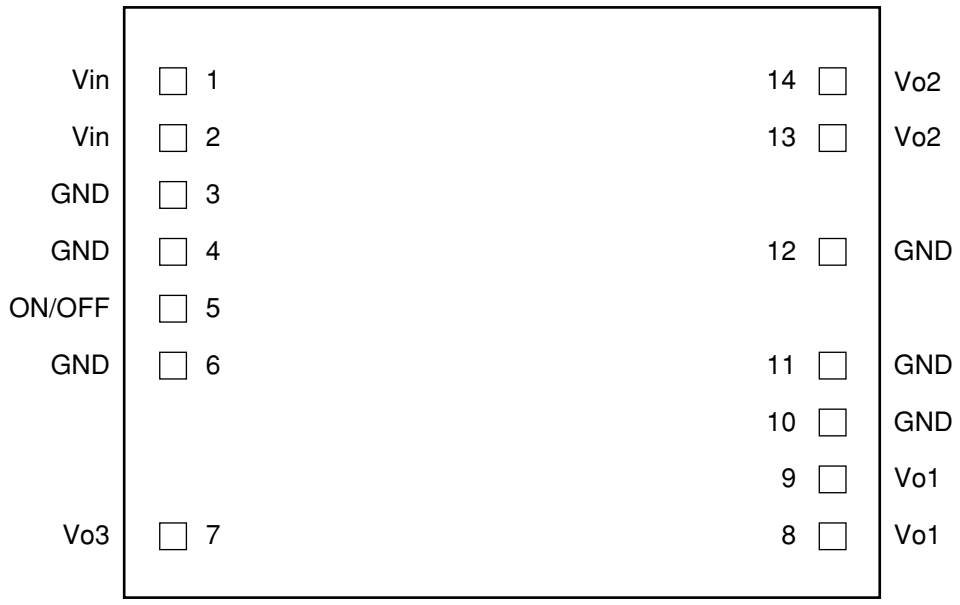


● Pin Function

No.	Pin Name	Pin Function
1	Vin	Input
2	Vin	
3	GND	Ground for input side
4	GND	
5	ON/OFF	Output ON/OFF
6	GND	Ground for output side
7	Vo3	1.8V output
8	Vo1	3.3V output
9	Vo1	3.3V output
10	GND	Ground for output side
11	GND	
12	GND	
13	Vo2	1.2V output
14	Vo2	1.2V output


8. PANEL FACILITIES

■ Front view

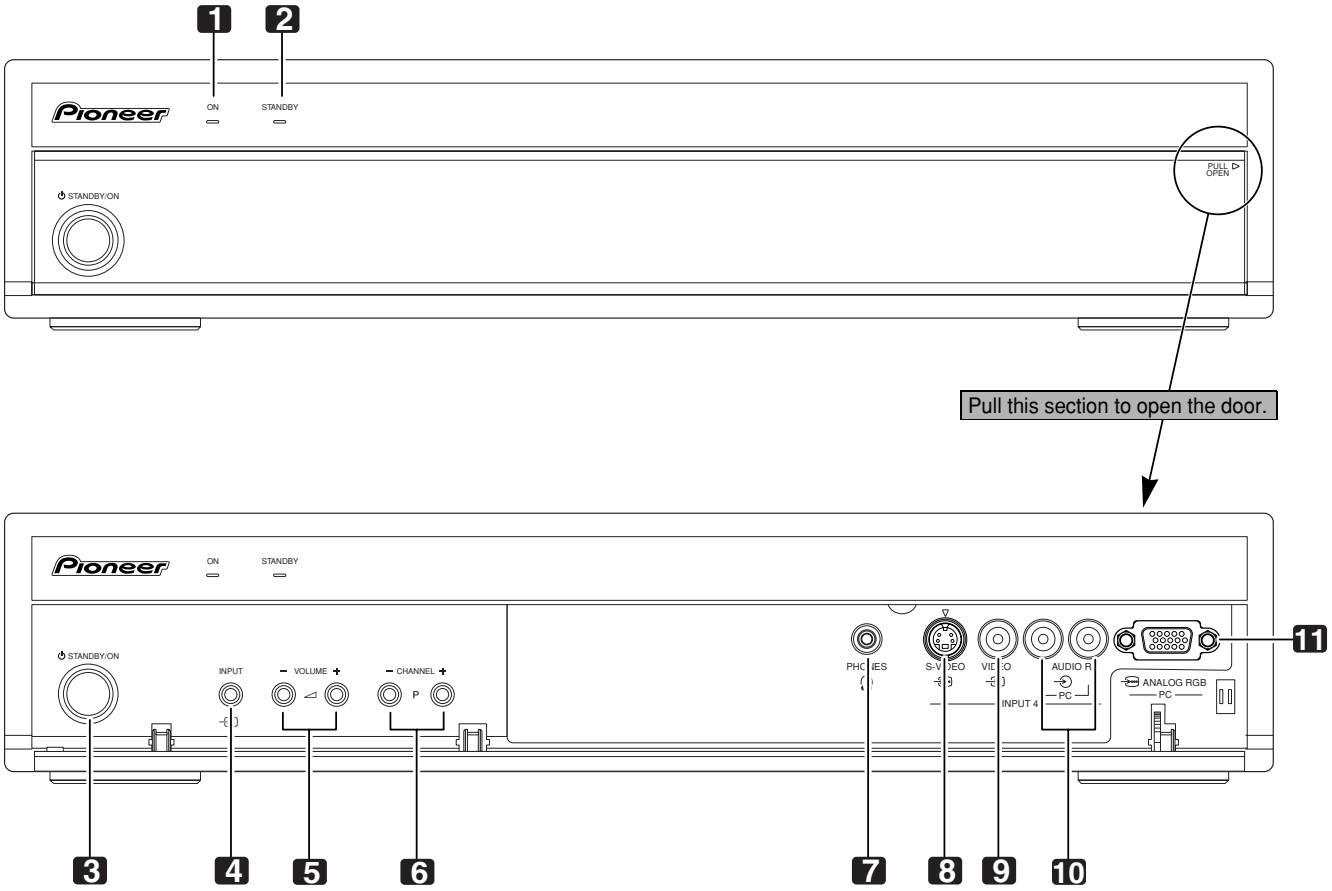


1 POWER ON indicator
2 STANDBY indicator
3 **STANDBY/ON** button
4 **INPUT** button
5 **VOLUME +/–** buttons
6 **CHANNEL +/–** buttons
7 PHONES output terminal
8 INPUT 4 terminal (S-VIDEO)
9 INPUT 4 terminal (VIDEO)
10 INPUT 4/PC INPUT terminals (AUDIO)
11 PC INPUT terminal (ANALOG RGB)

■ Rear view

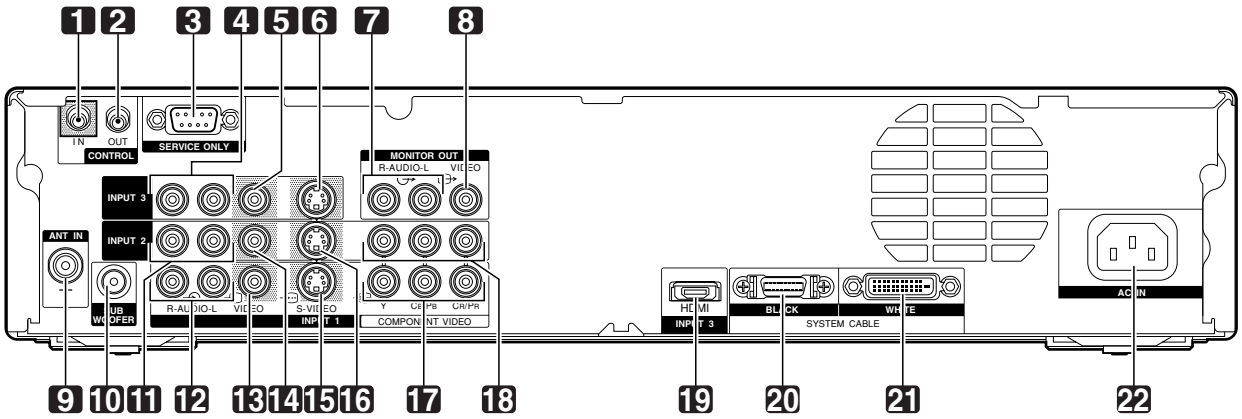

1 CONTROL IN terminal
2 CONTROL OUT terminal
3 RS-232C terminal (used for factory setup)
4 INPUT 3 terminals (AUDIO)
5 INPUT 3 terminal (VIDEO)
6 INPUT 3 terminal (S-VIDEO)
7 MONITOR OUT terminals (AUDIO)
8 MONITOR OUT terminal (VIDEO)
9 ANT (Antenna) IN terminal
10 SUB WOOFER output terminal
11 INPUT 2 terminals (AUDIO)
12 INPUT 1 terminals (AUDIO)
13 INPUT 1 terminal (VIDEO)
14 INPUT 2 terminal (VIDEO)
15 INPUT 1 terminal (S-VIDEO)
16 INPUT 2 terminal (S-VIDEO)
17 INPUT 1 terminals (COMPONENT VIDEO: Y, CB/PB, CR/PR)
18 INPUT 2 terminals (COMPONENT VIDEO: Y, CB/PB, CR/PR)
19 INPUT 3 terminal (HDMI)
20 SYSTEM CABLE terminal (BLACK)
21 SYSTEM CABLE terminal (WHITE)
22 AC IN terminal

■ Remote control unit

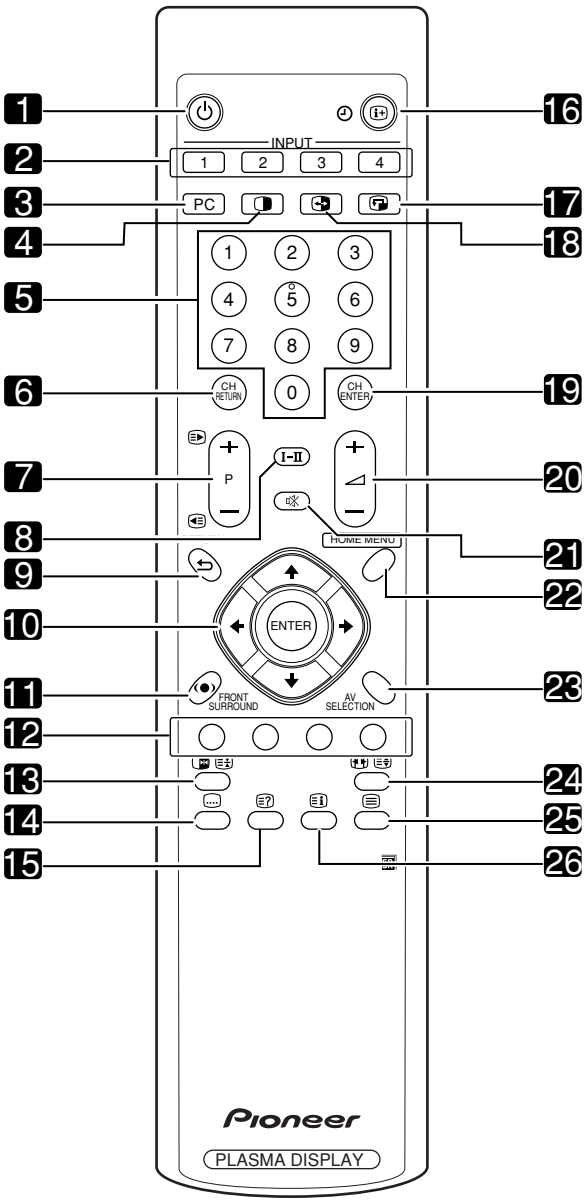

1 ⏻
Turns on the power to the Plasma Display or places it into standby mode.

2 INPUT 1, 2, 3, 4
Selects an input source of the Plasma Display. (INPUT1, INPUT2, INPUT3, INPUT4).

3 PC
Selects the PC terminal as an input source.

4 ◑
Switches the screen mode among 2-screen, picture-in-picture, and single-screen.

5 0 - 9
Switches on the power to the Plasma Display.
TV/External input mode: Selects a channel.
TELETEXT mode: Selects a page.

6 CH RETURN
Returns to the previous channel.

7 P +/P –
TV/External input mode: Selects a channel.
▶/◀
TELETEXT mode: Selects a page.

8 I-II
Sets the sound multiplex mode.

9 ⮌ (RETURN)
Restores the previous menu screen.

10 ↑/↓/←/→
Selects a desired item on the setting screen.
ENTER
Executes a command.

11 FRONT SURROUND
Switches the Front Surround mode.

12 Color (RED/GREEN/YELLOW/BLUE)
TELETEXT mode: Selects a page.

13
Freezes a frame from a moving image. Press again to cancel the function.
TELETEXT mode: Stops updating Teletext pages. Press again to release the hold mode.

14
Jumps to the Teletext subtitle page.

15
TELETEXT mode: Displays hidden characters.

16
Displays the channel information.

17
Moves the location of the small screen when in the picture-in-picture mode.

18
Switches between the two screens when in the 2-screen or picture-in-picture mode.

19 CH ENTER
Executes a channel number.

20 +/–
Sets the volume.

21
Mutes the sound.

22 HOME MENU
TV/External Input mode: Displays the Menu screen.

23 AV SELECTION
Selects audio and video settings.
(AV mode: STANDARD, DYNAMIC, MOVIE, GAME, USER. PC mode: STANDARD, USER.)

24
TV/External input mode: Changes the wide screen size.
TELETEXT mode: Switches Teletext images. (full/upper half/lower half)

25
Selects the TELETEXT mode.
(all TV image, all TEXT image, TV/TEXT image)

26
TELETEXT mode: Displays an Index page for the CEEFAX/FLOF format. Displays a TOP Over View page for the TOP format.

NOTE: When using the remote control unit, point it at the Plasma Display.

A

B

C

D

E

F


■ Cleaning

• Before shipping out the product, be sure to clean the following positions by using the prescribed cleaning tools:

Position to be cleaned	Cleaning tools	Remark
Fans	Cleaning paper : GED-008	Refer to "2.3 EXTERIOR SECTION" , "7.1.2 DISASSEMBLY SECTION".

Pioneer sound.vision.soul

Service Manual



PDP-R06G

ORDER NO.
ARP3282

MEDIA RECEIVER

PDP-R06G
PDP-R06C

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PDP-R06G	TLDFXJ	AC110–240V	
PDP-R06C	WAXU5	AC220–240V	

This service manual should be used together with the following manual(s).

Model No.	Order No.	Remarks
PDP-R06G, PDP-R06C	ARP3281	EXPLODED VIEWS, BLOCK DIAGRAM etc.

For details, refer to "Important Check Points for good servicing".

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
ⓒ**PIONEER CORPORATION 2005**

T-ZZR SEPT. 2005 printed in Japan

SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING
This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to causecancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

NOTICE
(FOR CANADIAN MODEL ONLY)
Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts mustbe of identical designation.

REMARQUE
(POUR MODÈLE CANADIEN SEULEMENT)
Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les piècesde remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (waterpipe , conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

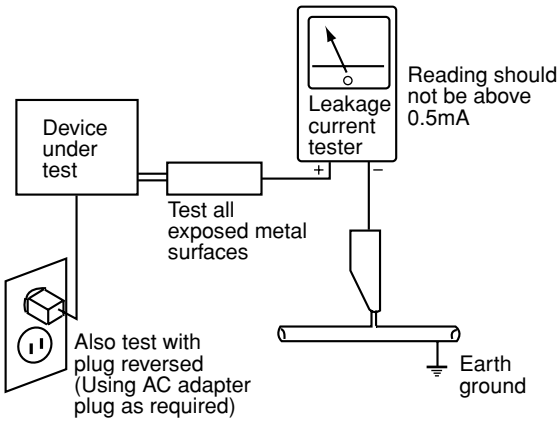

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.
The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification(addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

3. SCHEMATIC DIAGRAM 6
3.1 OVERALL BLOCK DIAGRAM 6
3.2 OVERALL WIRING DIAGRAM 8
3.3 MR MAIN ASSY (1/15) 10
3.4 MR MAIN ASSY (2/15) 12
3.5 MR MAIN ASSY (3/15) 14
3.6 MR MAIN ASSY (4/15) 16
3.7 MR MAIN ASSY (5/15) 18
3.8 MR MAIN ASSY (6/15) 20
3.9 MR MAIN ASSY (7/15) 22
3.10 MR MAIN ASSY (8/15) 24
3.11 MR MAIN ASSY (9/15) 26
3.12 MR MAIN ASSY (10/15) 28
3.13 MR MAIN ASSY (11/15) 30
3.14 MR MAIN ASSY (12/15) 32
3.15 MR MAIN ASSY (13/15) 34
3.16 MR MAIN ASSY (14/15) 36
3.17 MR MAIN ASSY (15/15) 38
3.18 SR ASSY 40
3.19 FRONT ASSY 42
3.20 LED ASSY 44
3.21 POWER SUPPLY UNIT 46
4. PCB CONNECTION DIAGRAM 48
4.1 MR MAIN ASSY 48
4.2 FRONT and LED ASSYS 52
4.3 REAR IO and SR ASSYS 54

A

B

C


D


E

F


3. SCHEMATIC DIAGRAM


3.1 OVERALL BLOCK DIAGRAM

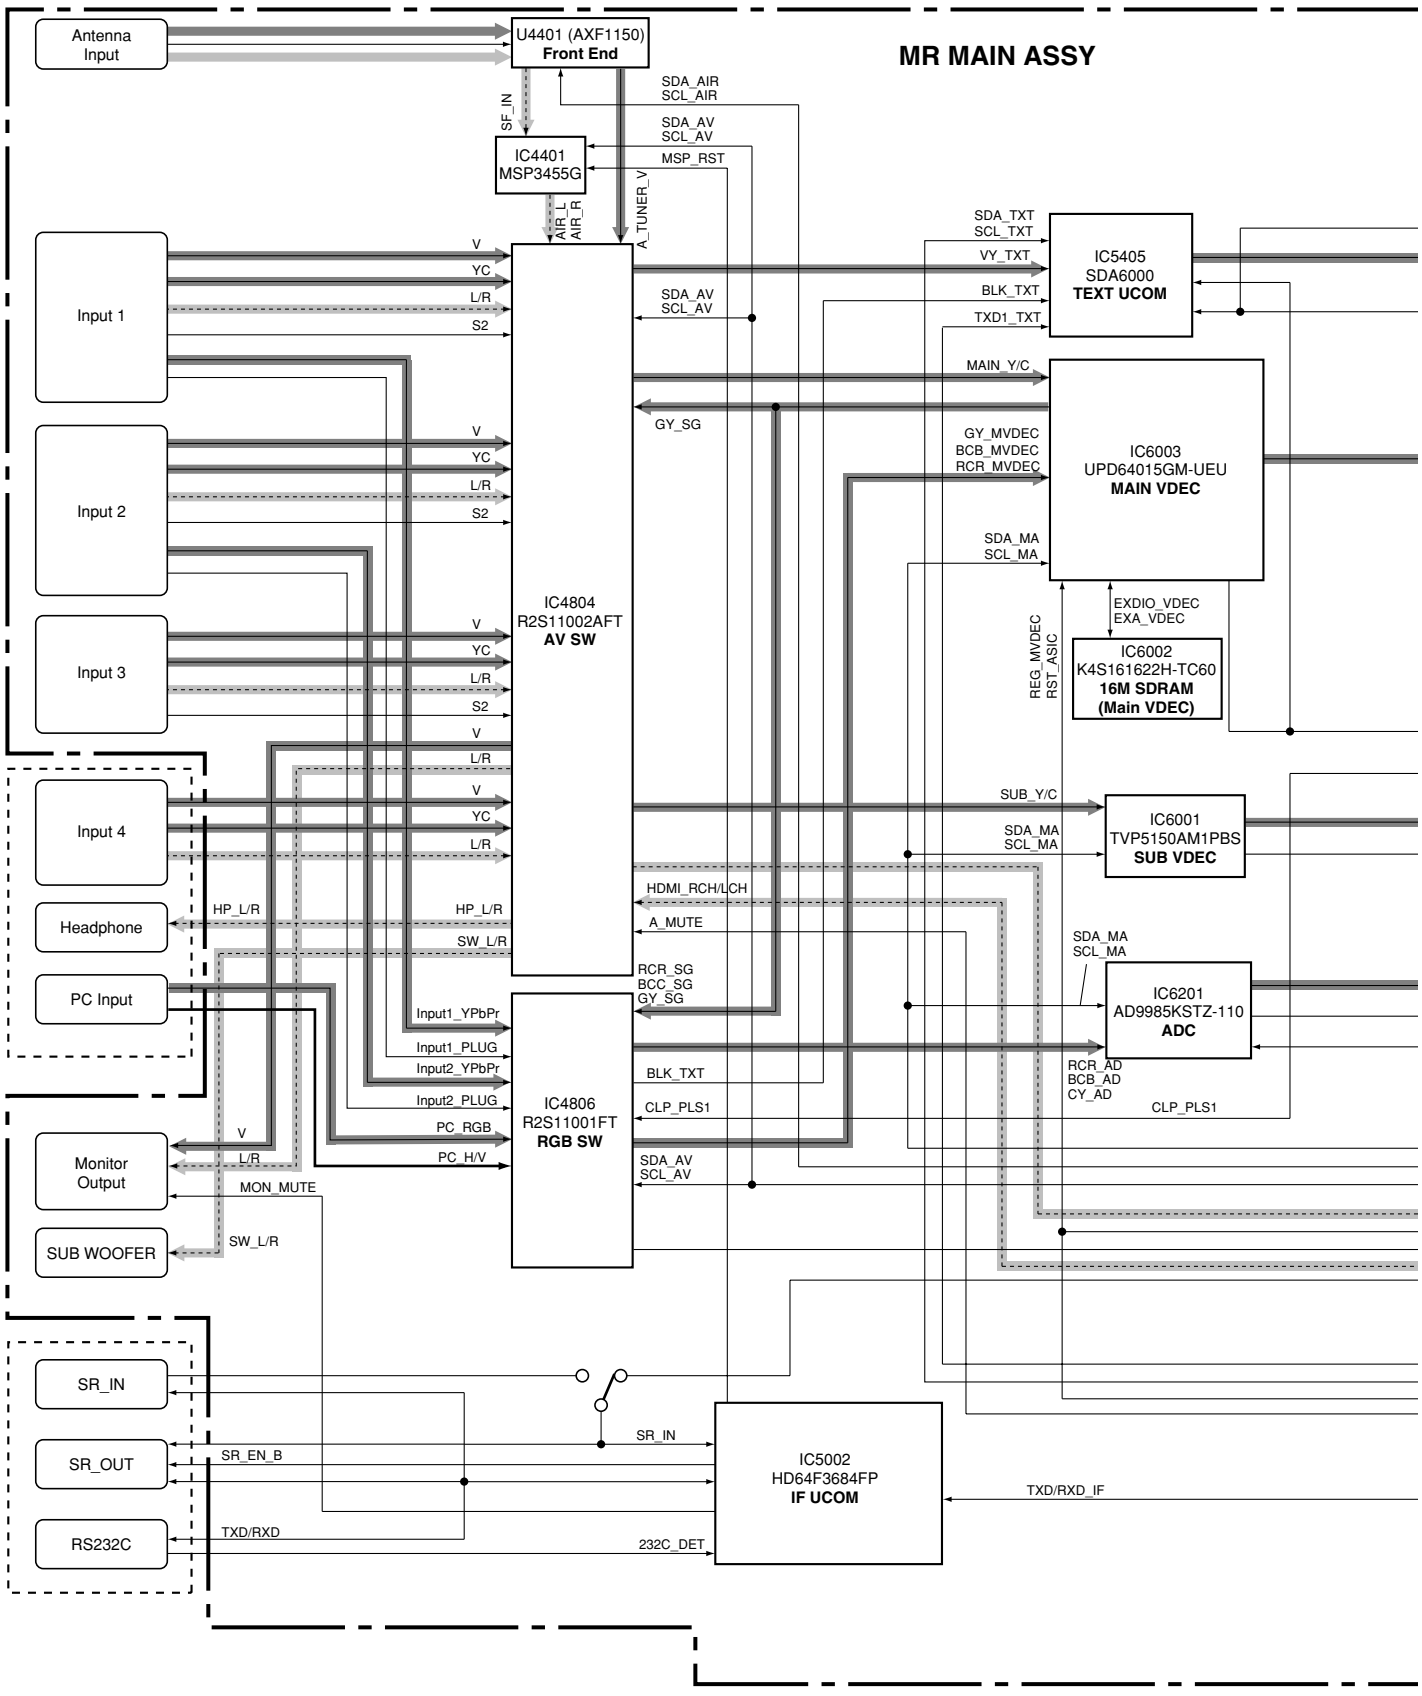

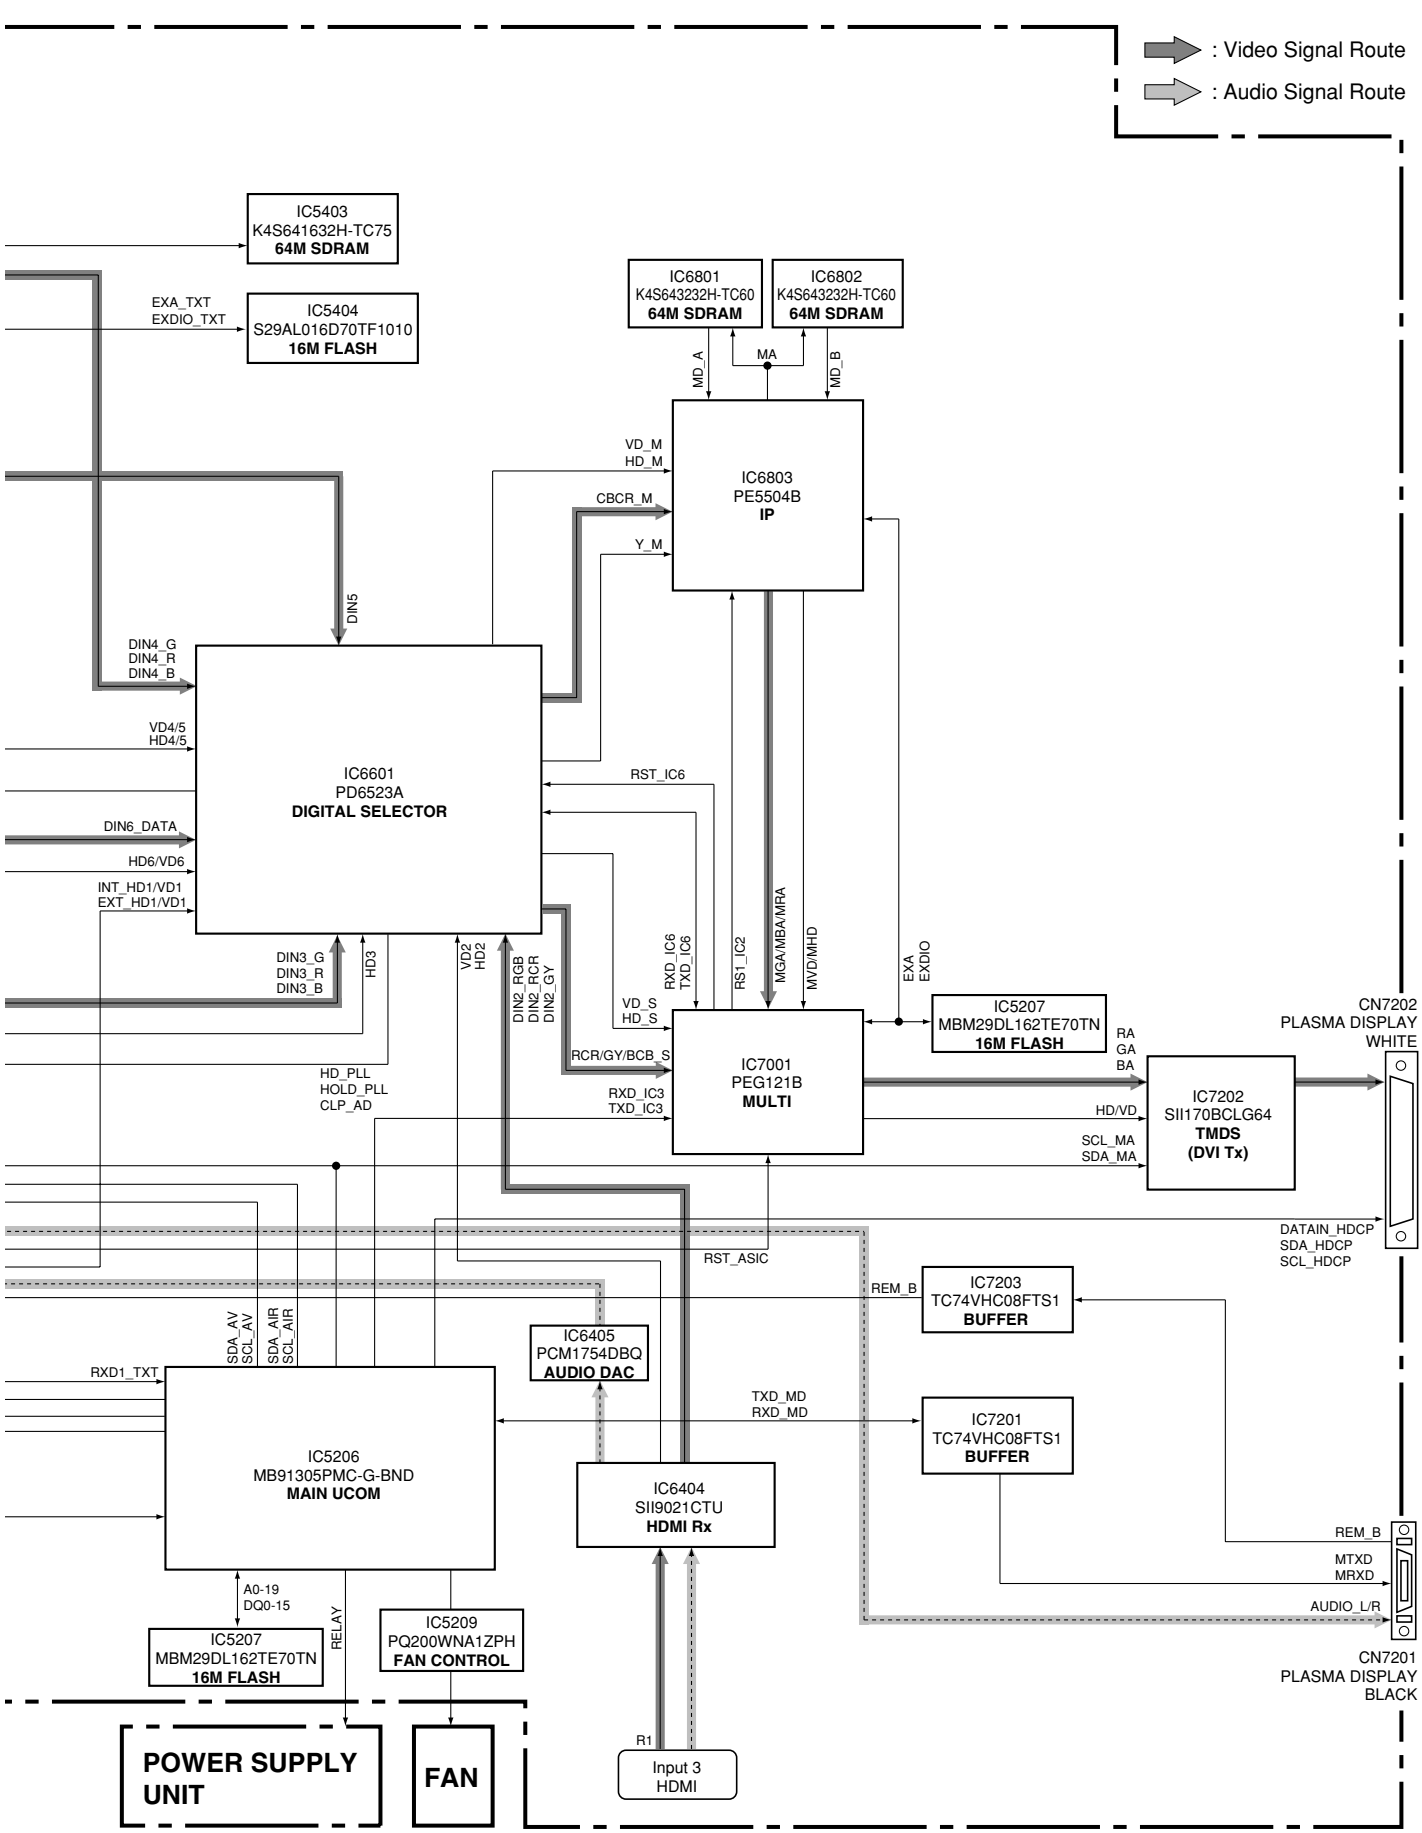
: Video Signal Route
: Audio Signal Route
IC5403
K4S641632H-TC75
64M SDRAM
EXA_TXT
EXDIO_TXT
IC5404
S29AL016D70TF1010
16M FLASH
IC6801
K4S643232H-TC60
64M SDRAM
IC6802
K4S643232H-TC60
64M SDRAM
MD_A
MA
MD_B
VD_M
HD_M
CBCR_M
Y_M
IC6803
PE5504B
IP
DIN5
DIN4_G
DIN4_R
DIN4_B
VD4/5
HD4/5
IC6601
PD6523A
DIGITAL SELECTOR
RST_IC6
DIN6_DATA
HD6/VD6
INT_HD1/VD1
EXT_HD1/VD1
DIN3_G
DIN3_R
DIN3_B
HD3
VD2
HD2
DIN2_RGB
DIN2_RCR
DIN2_GY
RXD_IC6
TXD_IC6
RS1_IC2
MGA/MBA/MRA
MVD/MHD
EXA
EXDIO
IC5207
MBM29DL162TE70TN
16M FLASH
CN7202
PLASMA DISPLAY
WHITE
VD_S
HD_S
RCR/GY/BCB_S
HD_PLL
HOLD_PLL
CLP_AD
IC7001
PEG121B
MULTI
RXD_IC3
TXD_IC3
RA
GA
BA
HD/VD
SCL_MA
SDA_MA
IC7202
SII170BCLG64
TMDS
(DVI Tx)
DATAIN_HDCP
SDA_HDCP
SCL_HDCP
RST_ASIC
REM_B
IC7203
TC74VHC08FTS1
BUFFER
SDA_AV
SCL_AV
SDA_AIR
SCL_AIR
IC6405
PCM1754DBQ
AUDIO DAC
RXD1_TXT
TXD_MD
RXD_MD
IC7201
TC74VHC08FTS1
BUFFER
IC5206
MB91305PMC-G-BND
MAIN UCOM
IC6404
SII9021CTU
HDMI Rx
REM_B
MTXD
MRXD
AUDIO_L/R
A0-19
DQ0-15
RELAY
IC5207
MBM29DL162TE70TN
16M FLASH
IC5209
PQ200WNA1ZPH
FAN CONTROL
CN7201
PLASMA DISPLAY
BLACK
R1
Input 3
HDMI
POWER SUPPLY
UNIT
FAN

3.2 OVERALL WIRING DIAGRAM

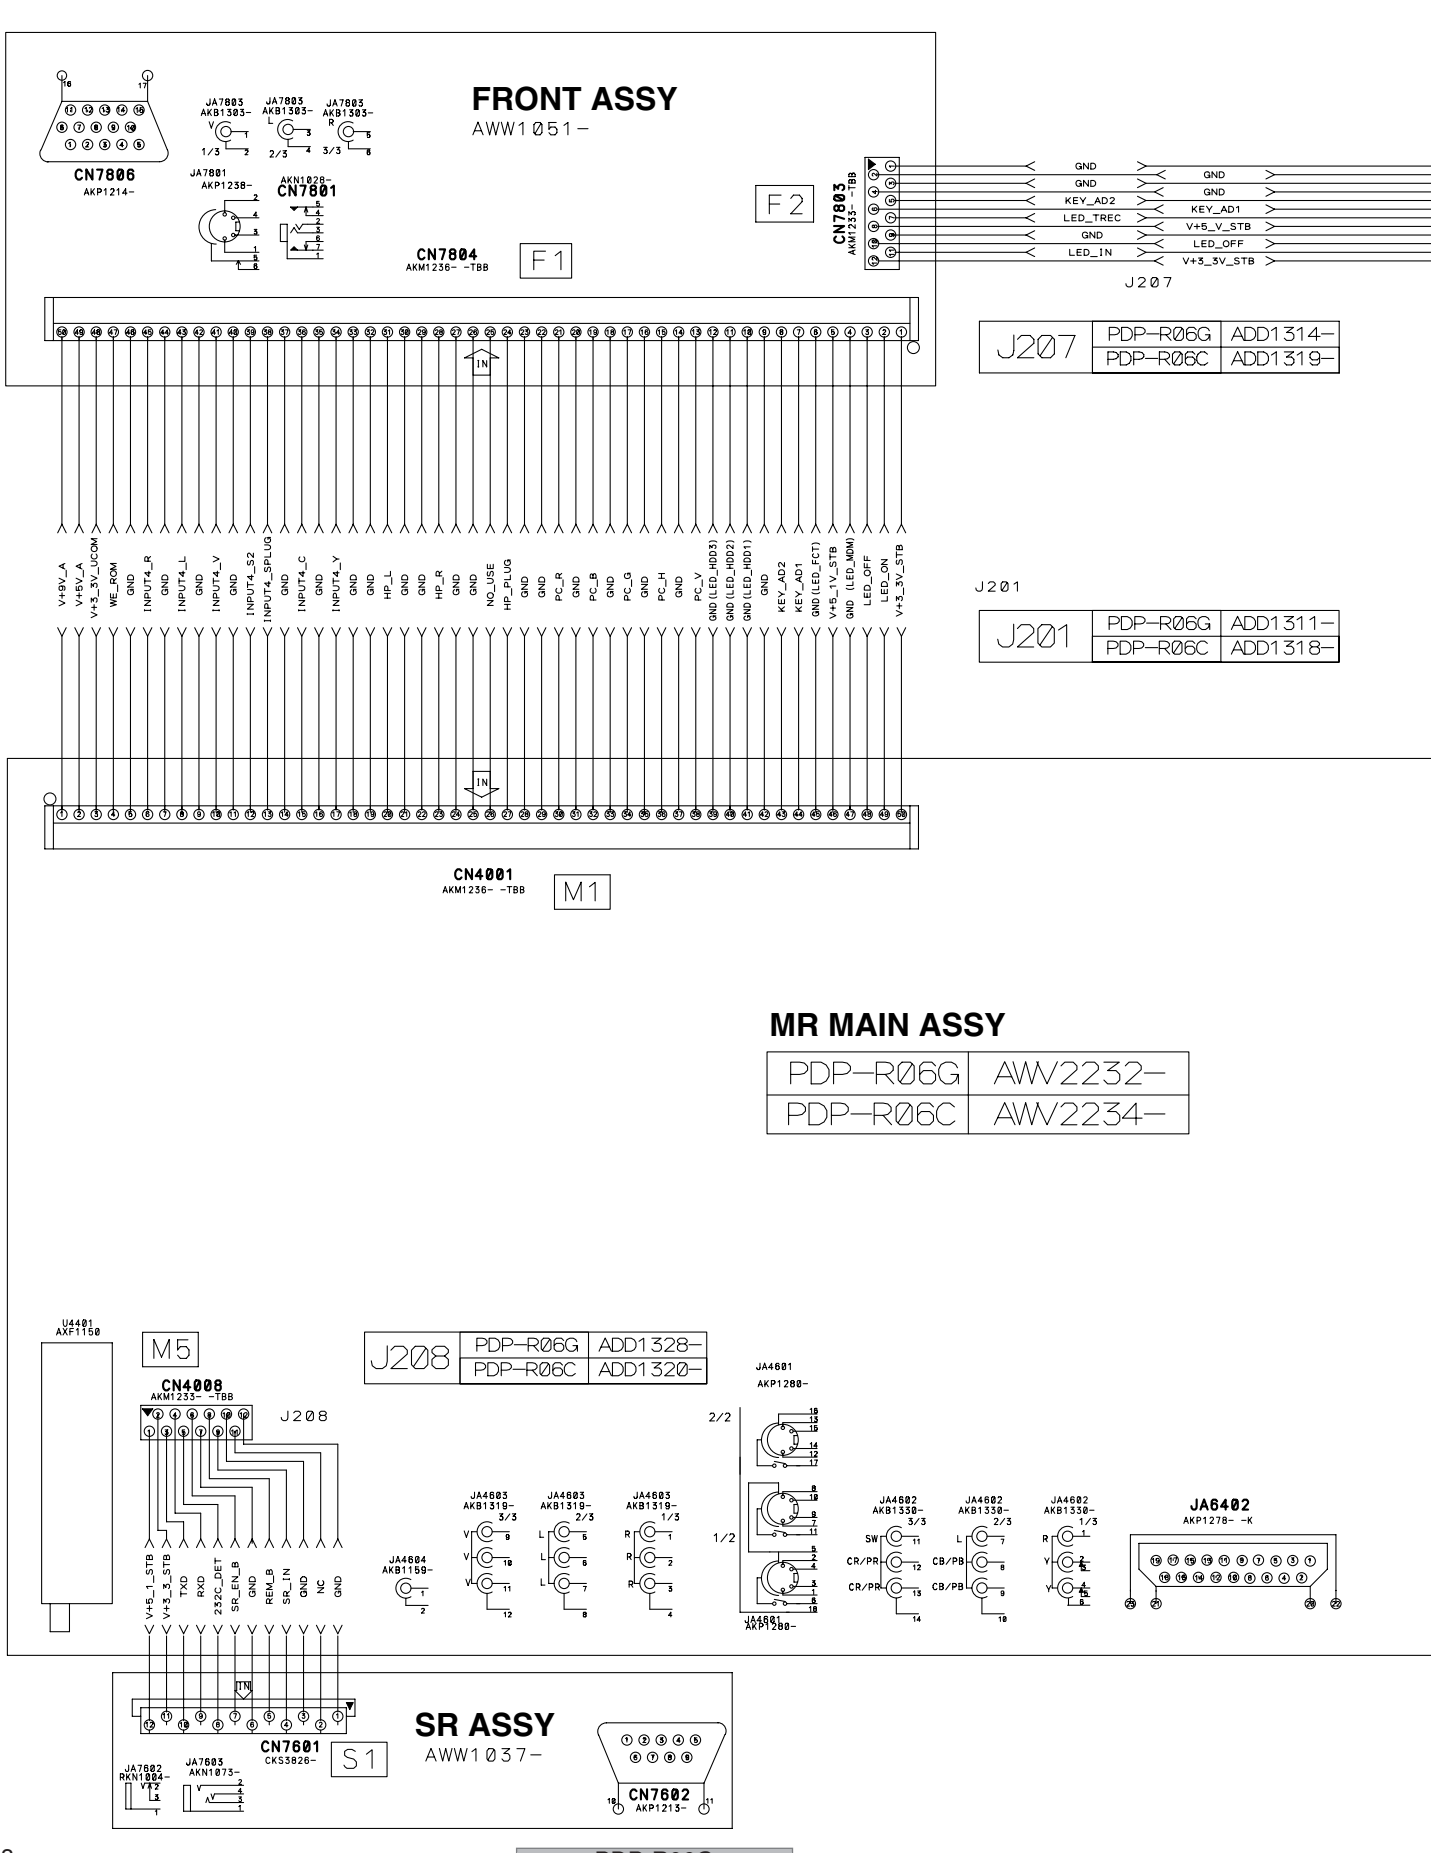


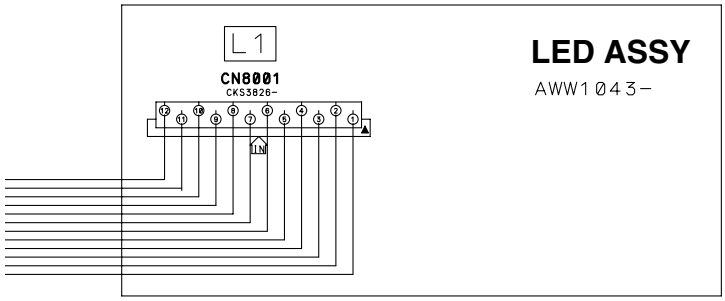


- When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".
- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- The encircled numbers denote measuring point in the schematic diagram. Waveforms, refer to service manual (ARP3281).

PDP-R06G	———
PDP-R06C	ADG1209-


⚠ ADG1209-




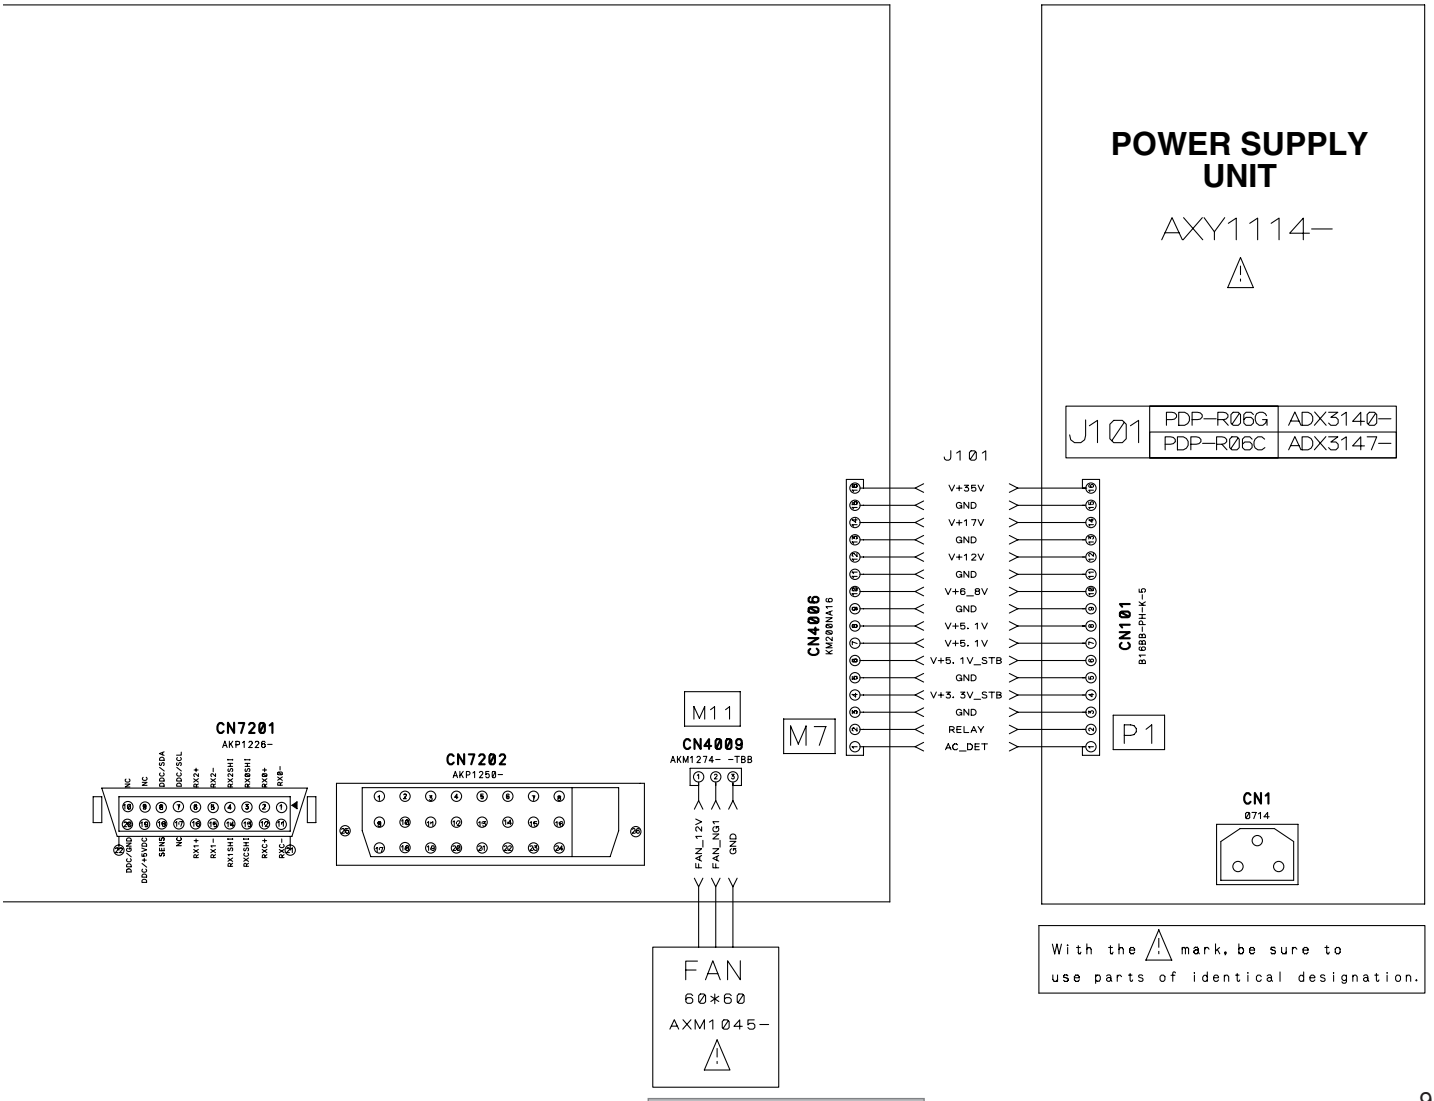

MR MAIN ASSY (1/15)

• BOARDIF BLOCK

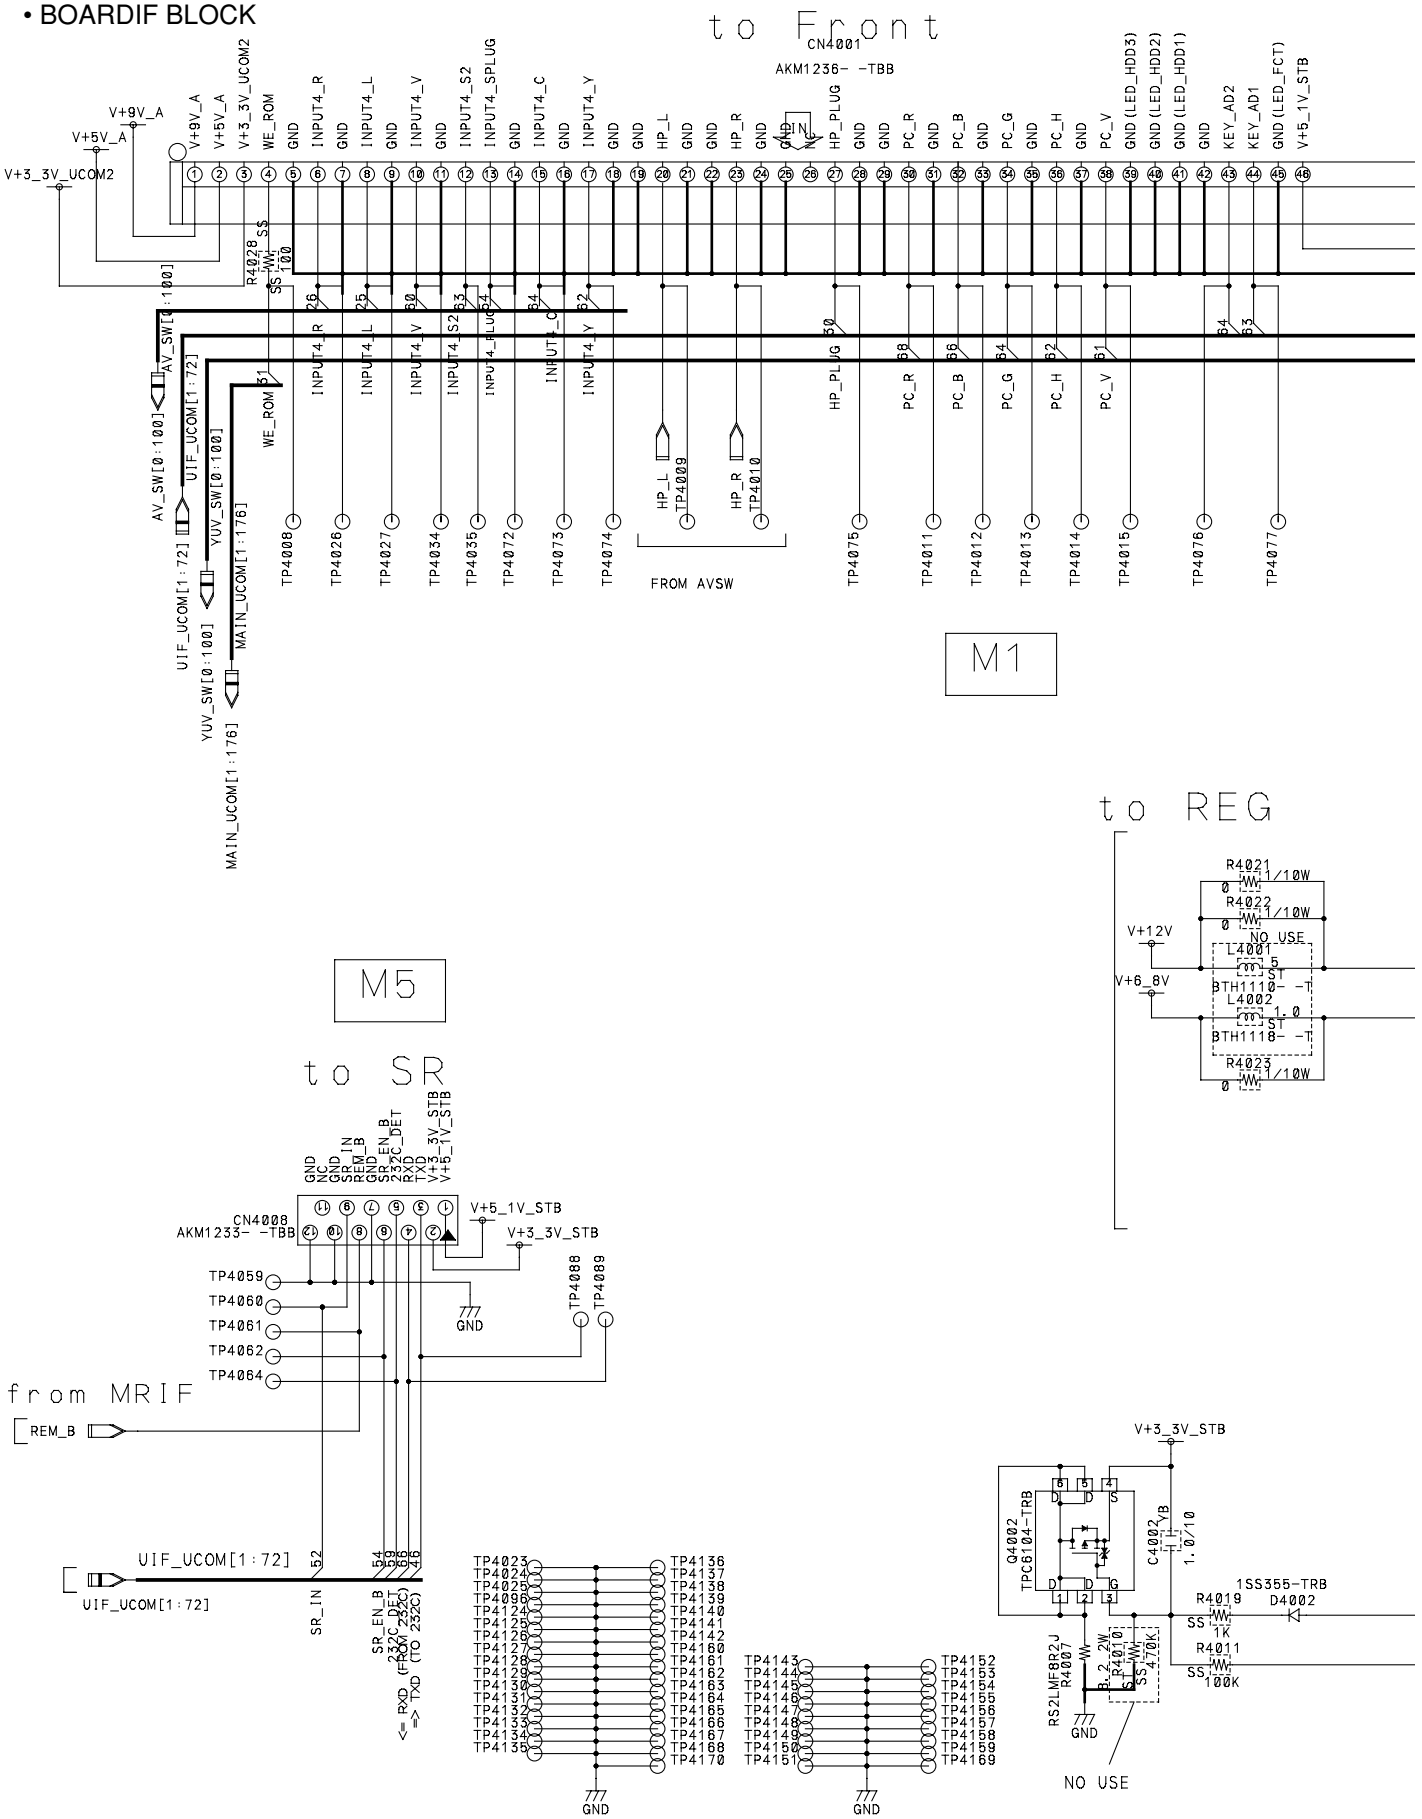

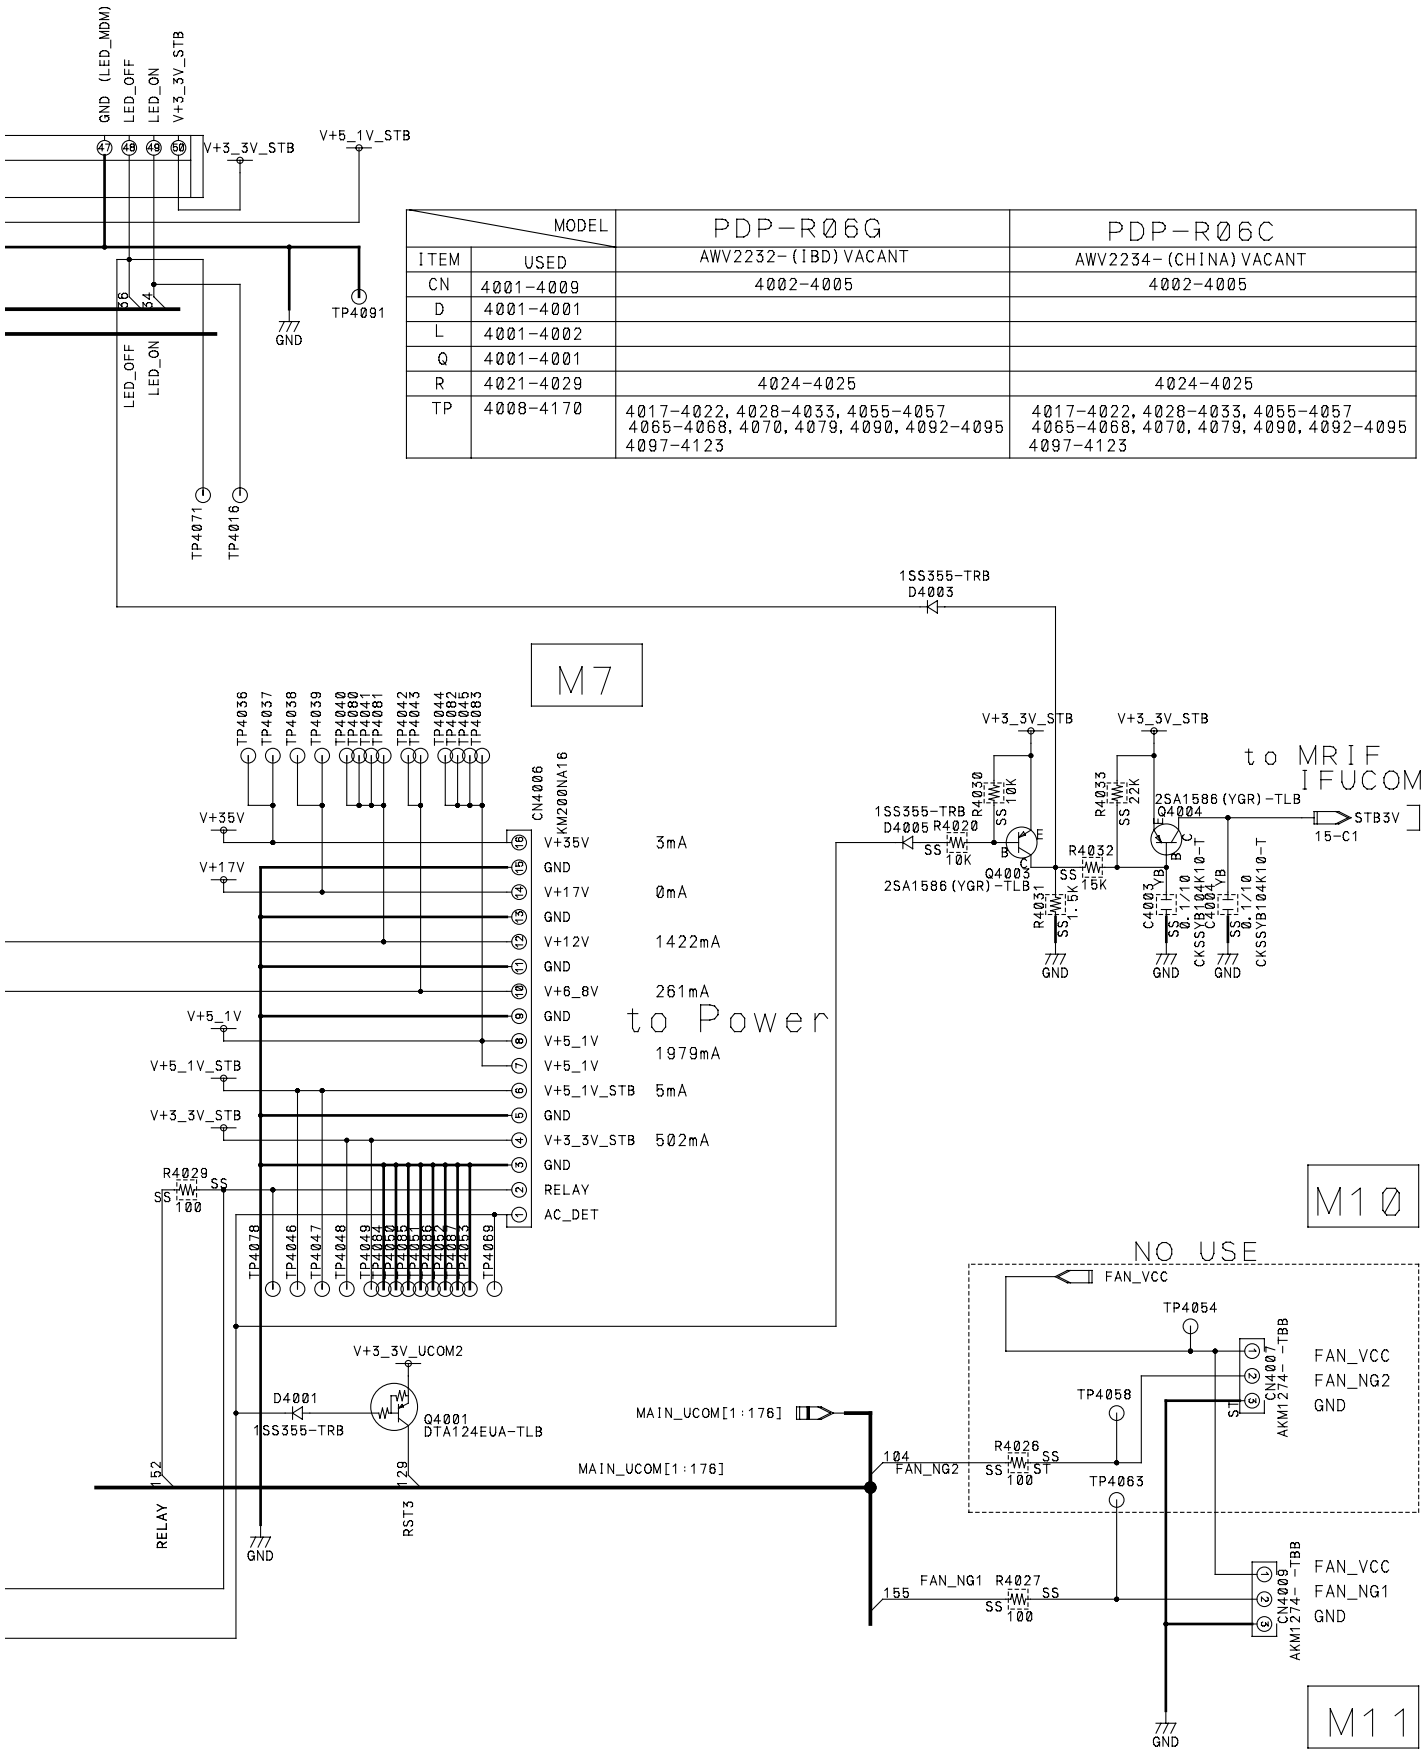


MODEL		PDP-R06G	PDP-R06C
ITEM	USED	AWV2232-(IBD)VACANT	AWV2234-(CHINA)VACANT
CN	4001-4009	4002-4005	4002-4005
D	4001-4001		
L	4001-4002		
Q	4001-4001		
R	4021-4029	4024-4025	4024-4025
TP	4008-4170	4017-4022, 4028-4033, 4055-4057 4065-4068, 4070, 4079, 4090, 4092-4095 4097-4123	4017-4022, 4028-4033, 4055-4057 4065-4068, 4070, 4079, 4090, 4092-4095 4097-4123

3.4 MR MAIN ASSY (2/15)


MR MAIN ASSY (2/15)

• REG BLOCK

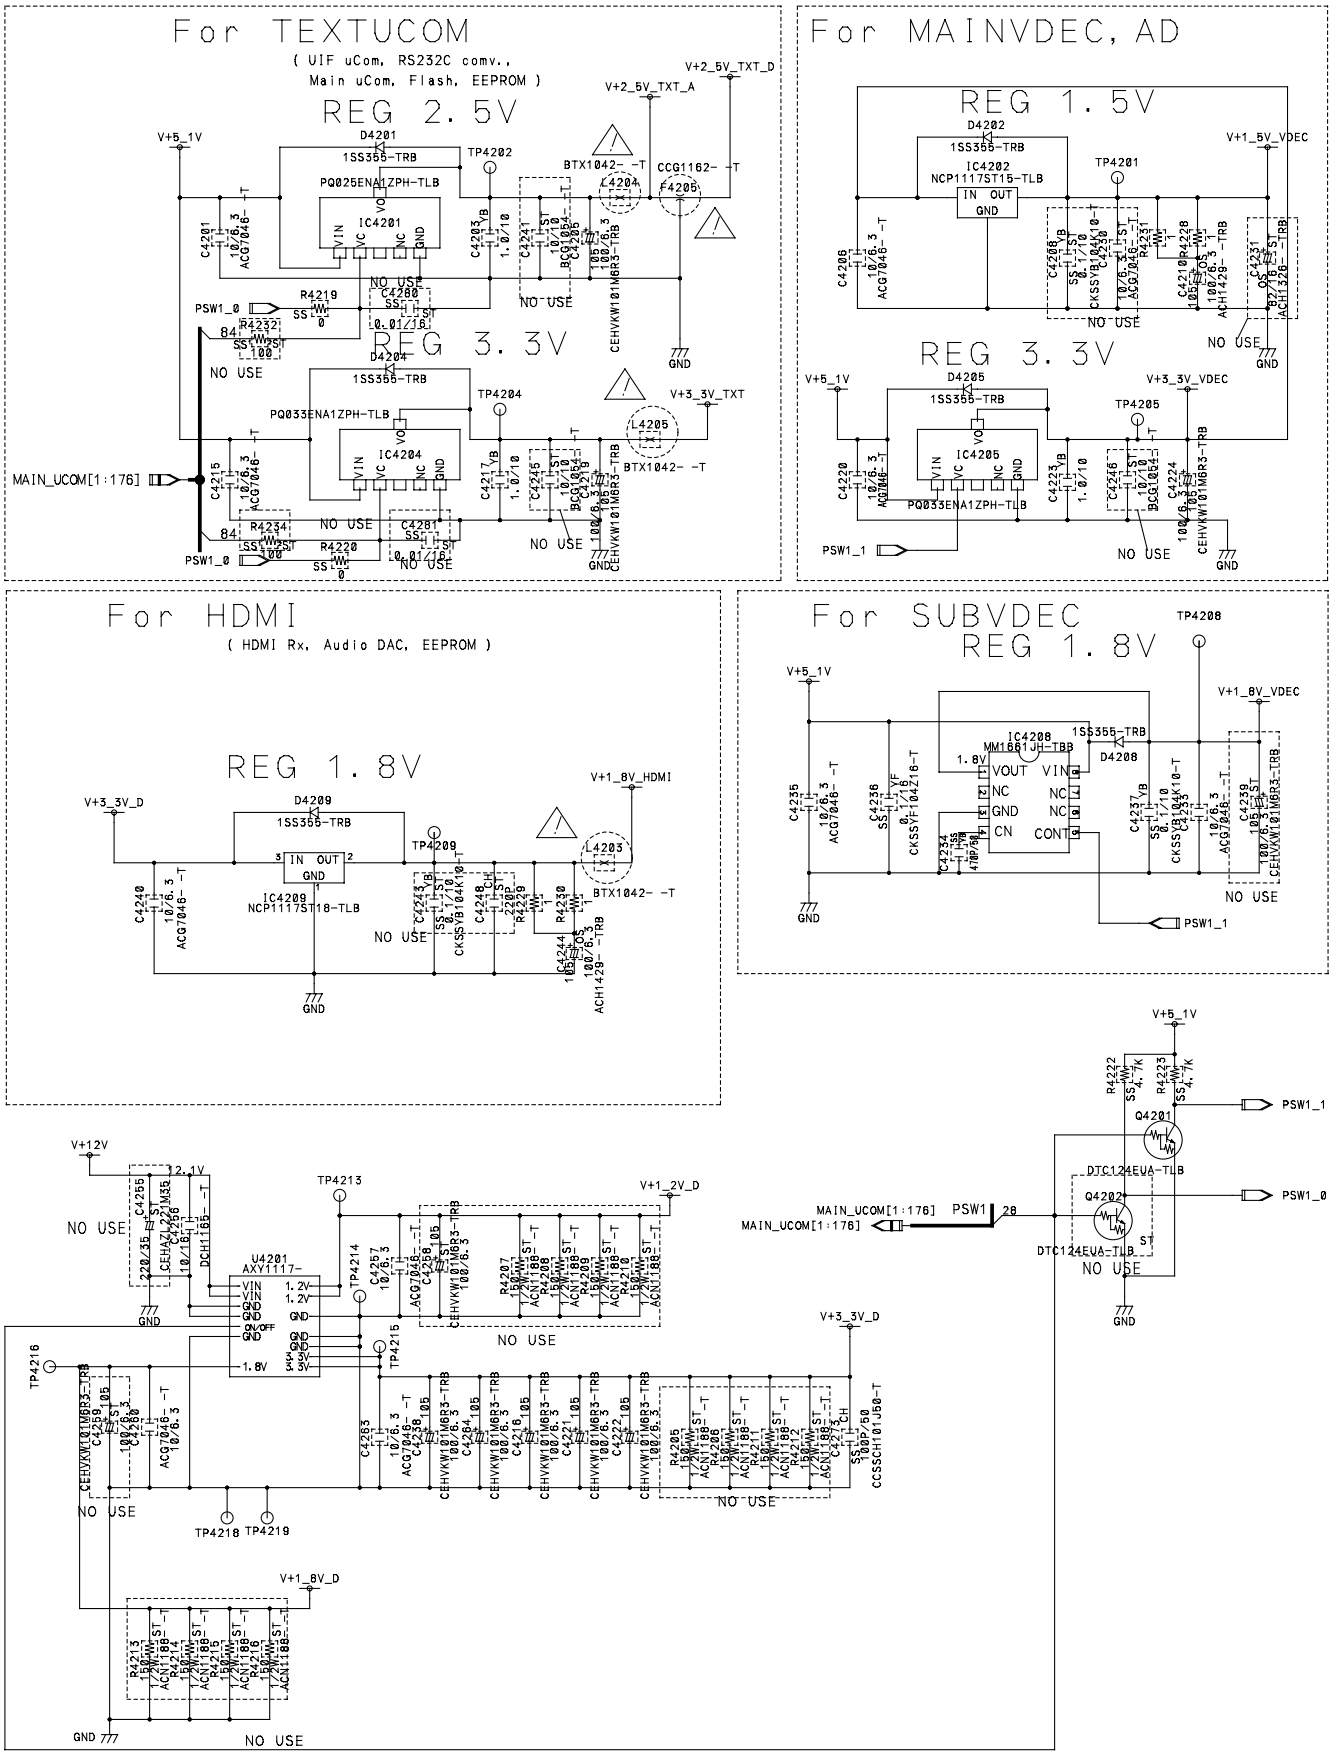


MR MAIN ASSY (2/15)

• REG BLOCK

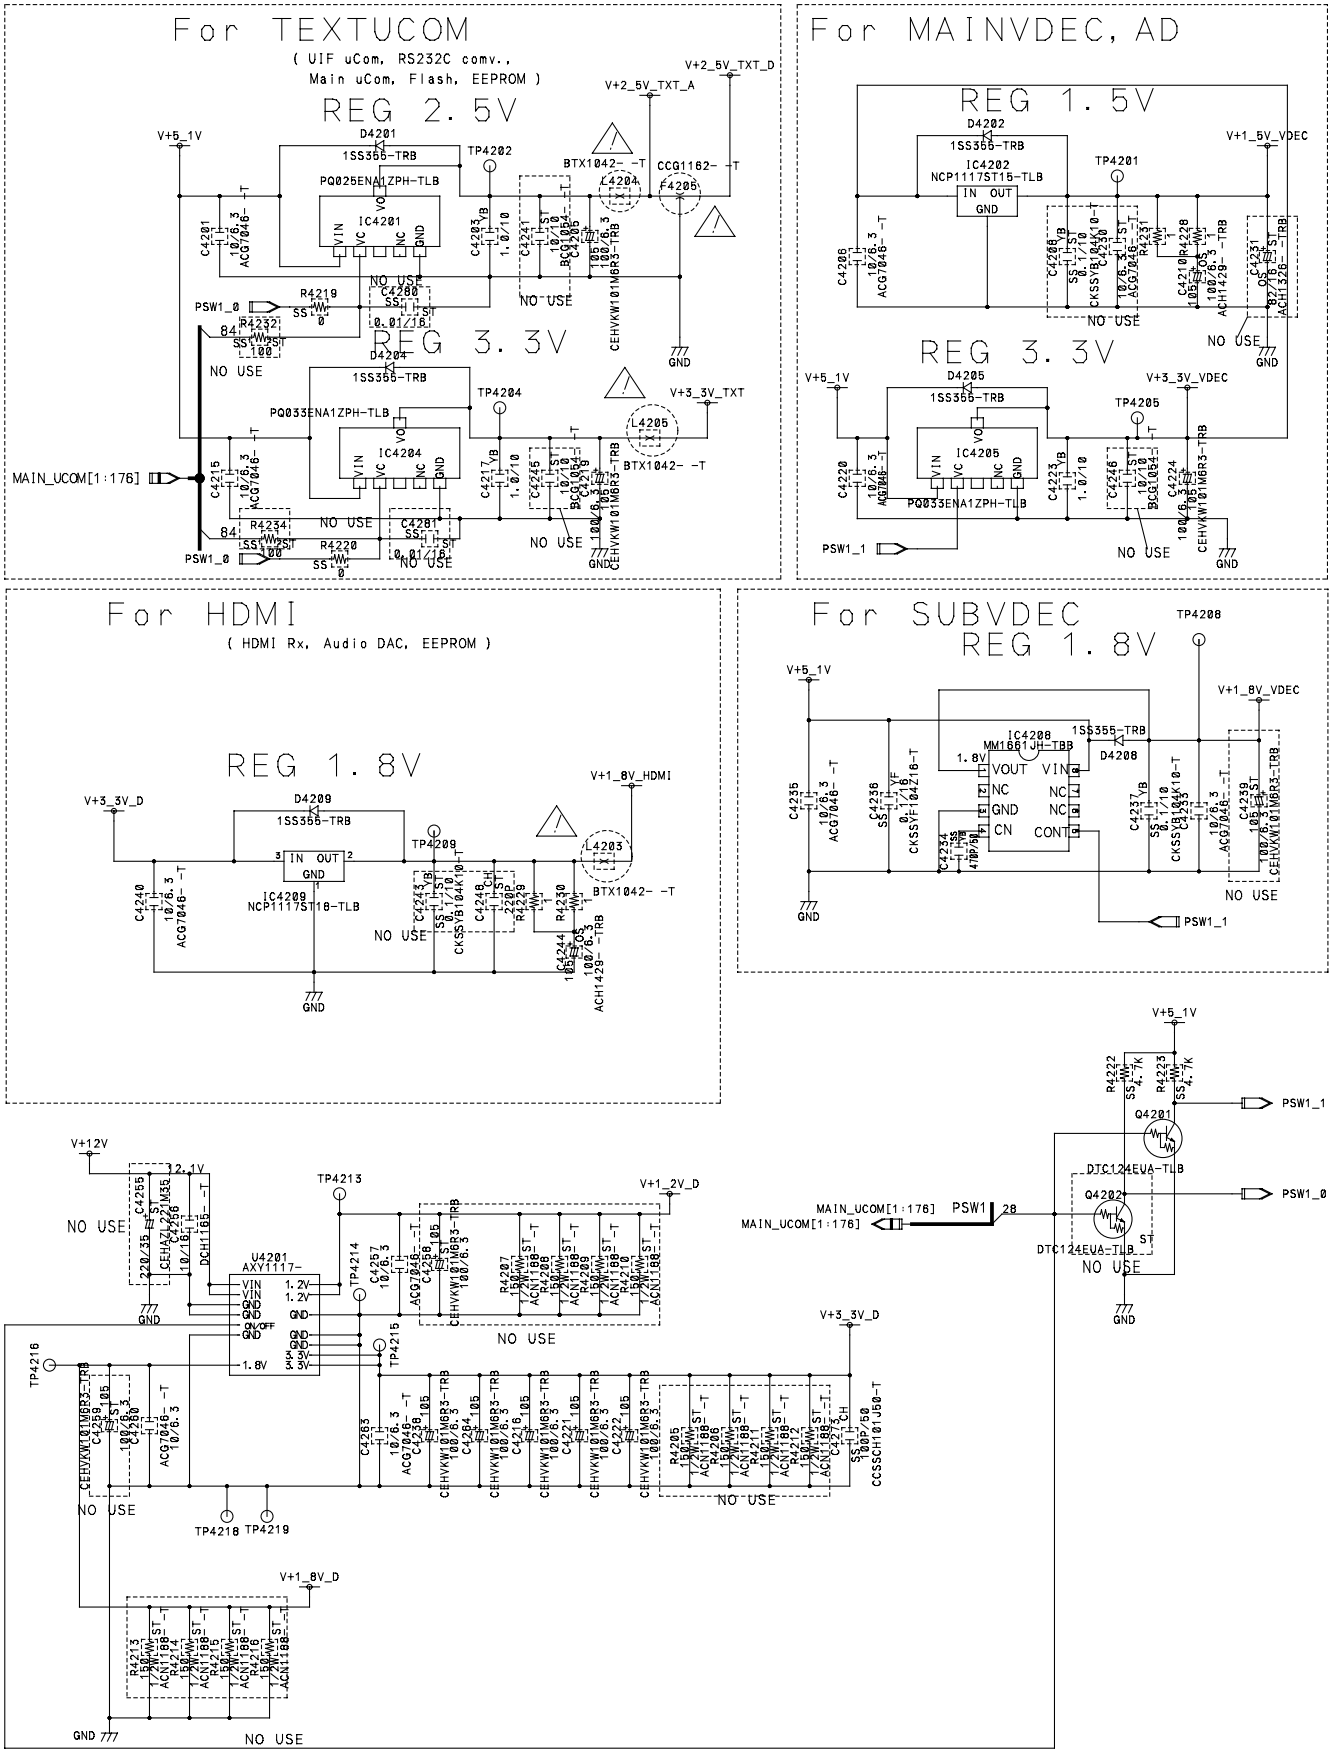


MR MAIN ASSY (3/15)


• TUNER BLOCK

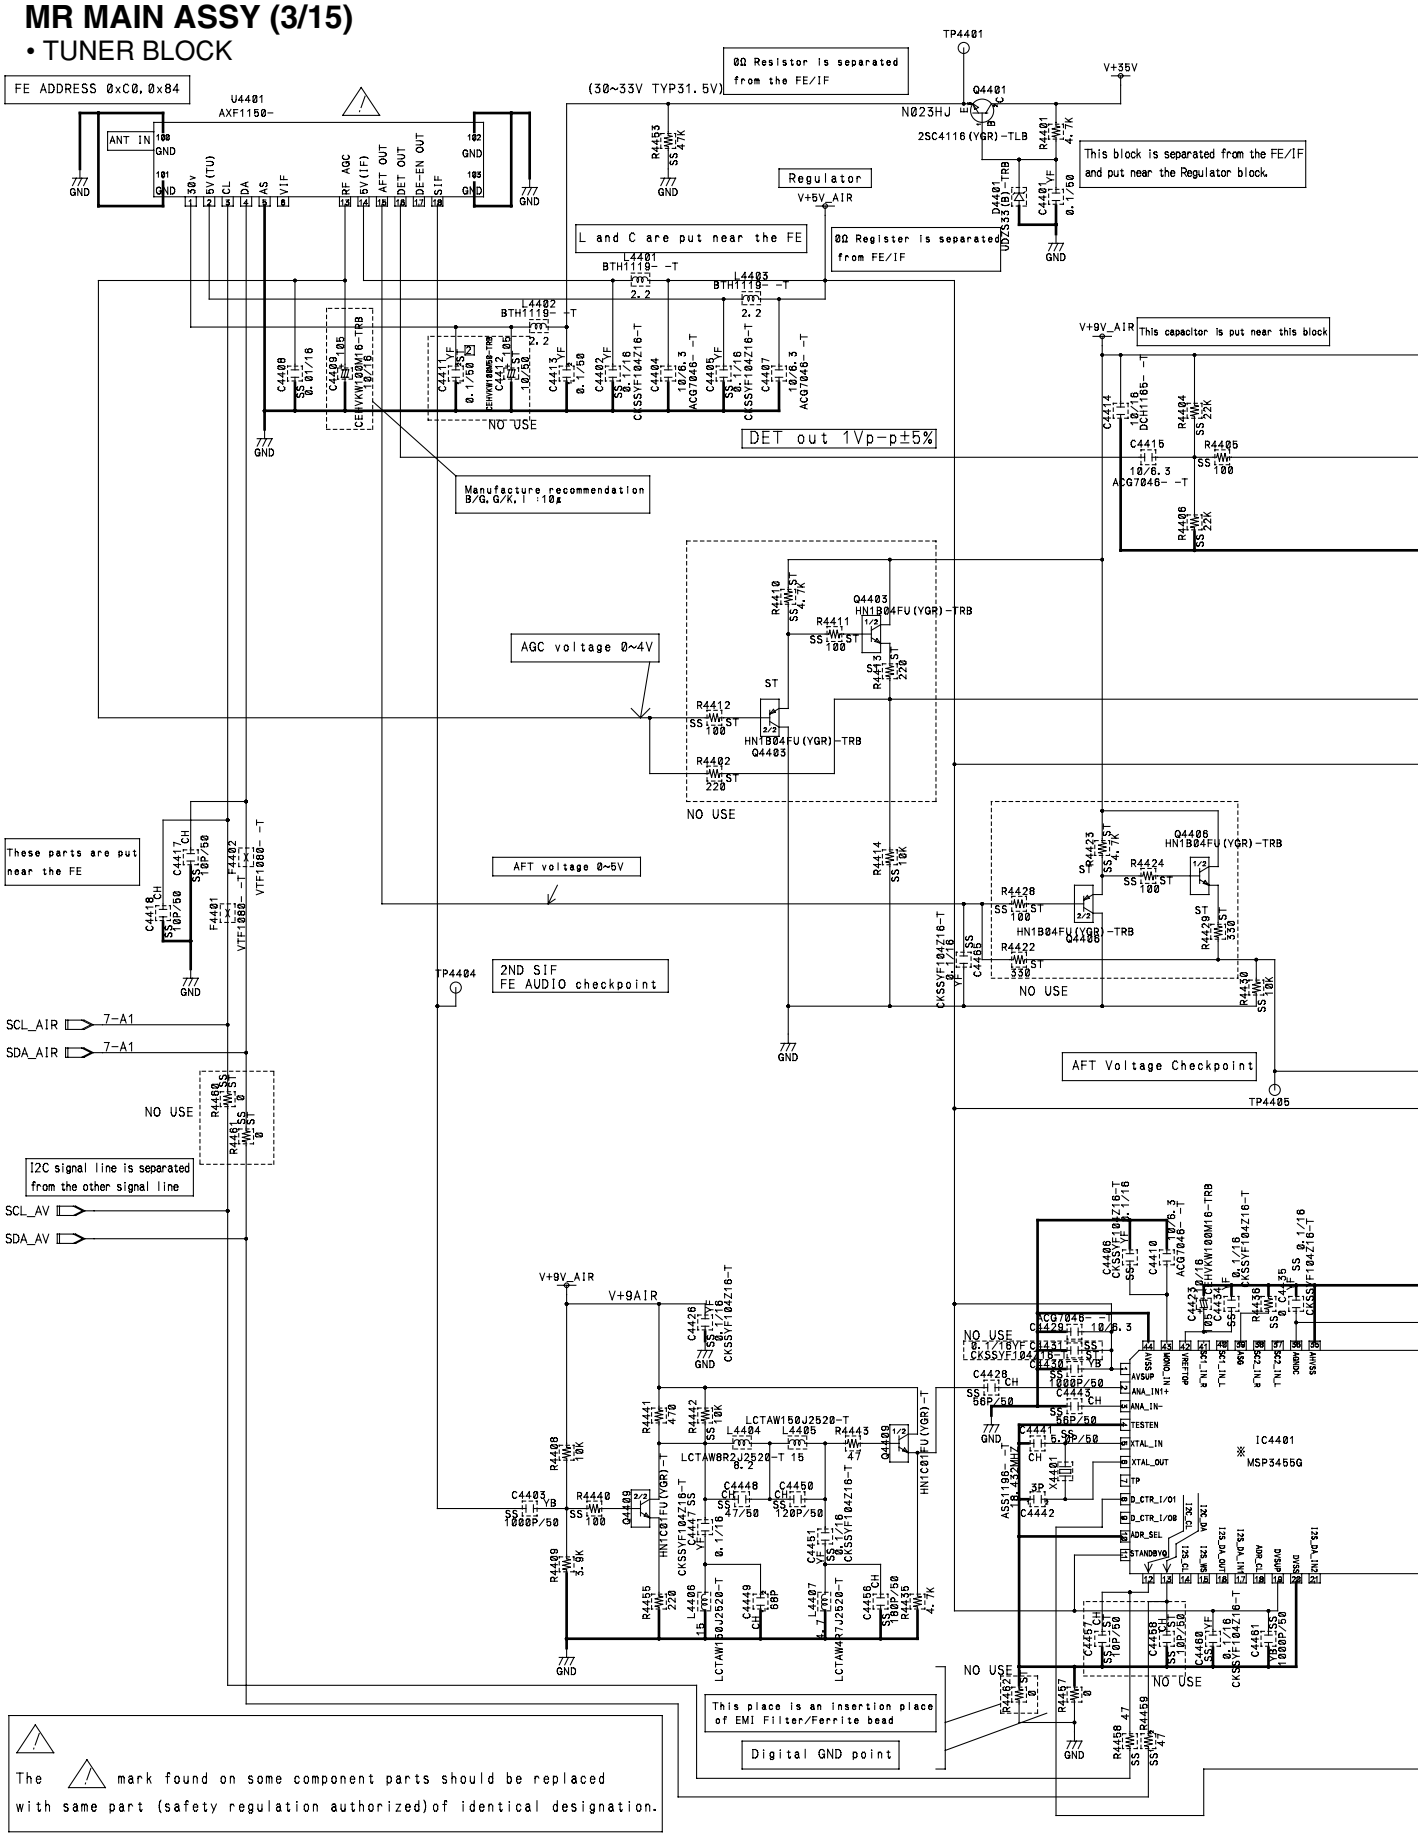

ITEM	USED	MODEL: PDP-R06G	MODEL: PDP-R06C
		AWV2232-(IBD) VACANT	AWV2234-(CHINA) VACANT
C	4401-4465	4432-4433, 4462, 4464	4432-4433, 4462, 4464
D	4401-4403	4402	4402
F	4401-4402		
IC	4401-4401		
L	4401-4407		
Q	4401-4415	4410-4412	4410-4412
R	4401-4459	4403, 4434, 4456	4403, 4434, 4456
TP	4401-4420	4408, 4410, 4413-4419	4408, 4410, 4413-4419
U	4401-4401		
X	4401-4401		

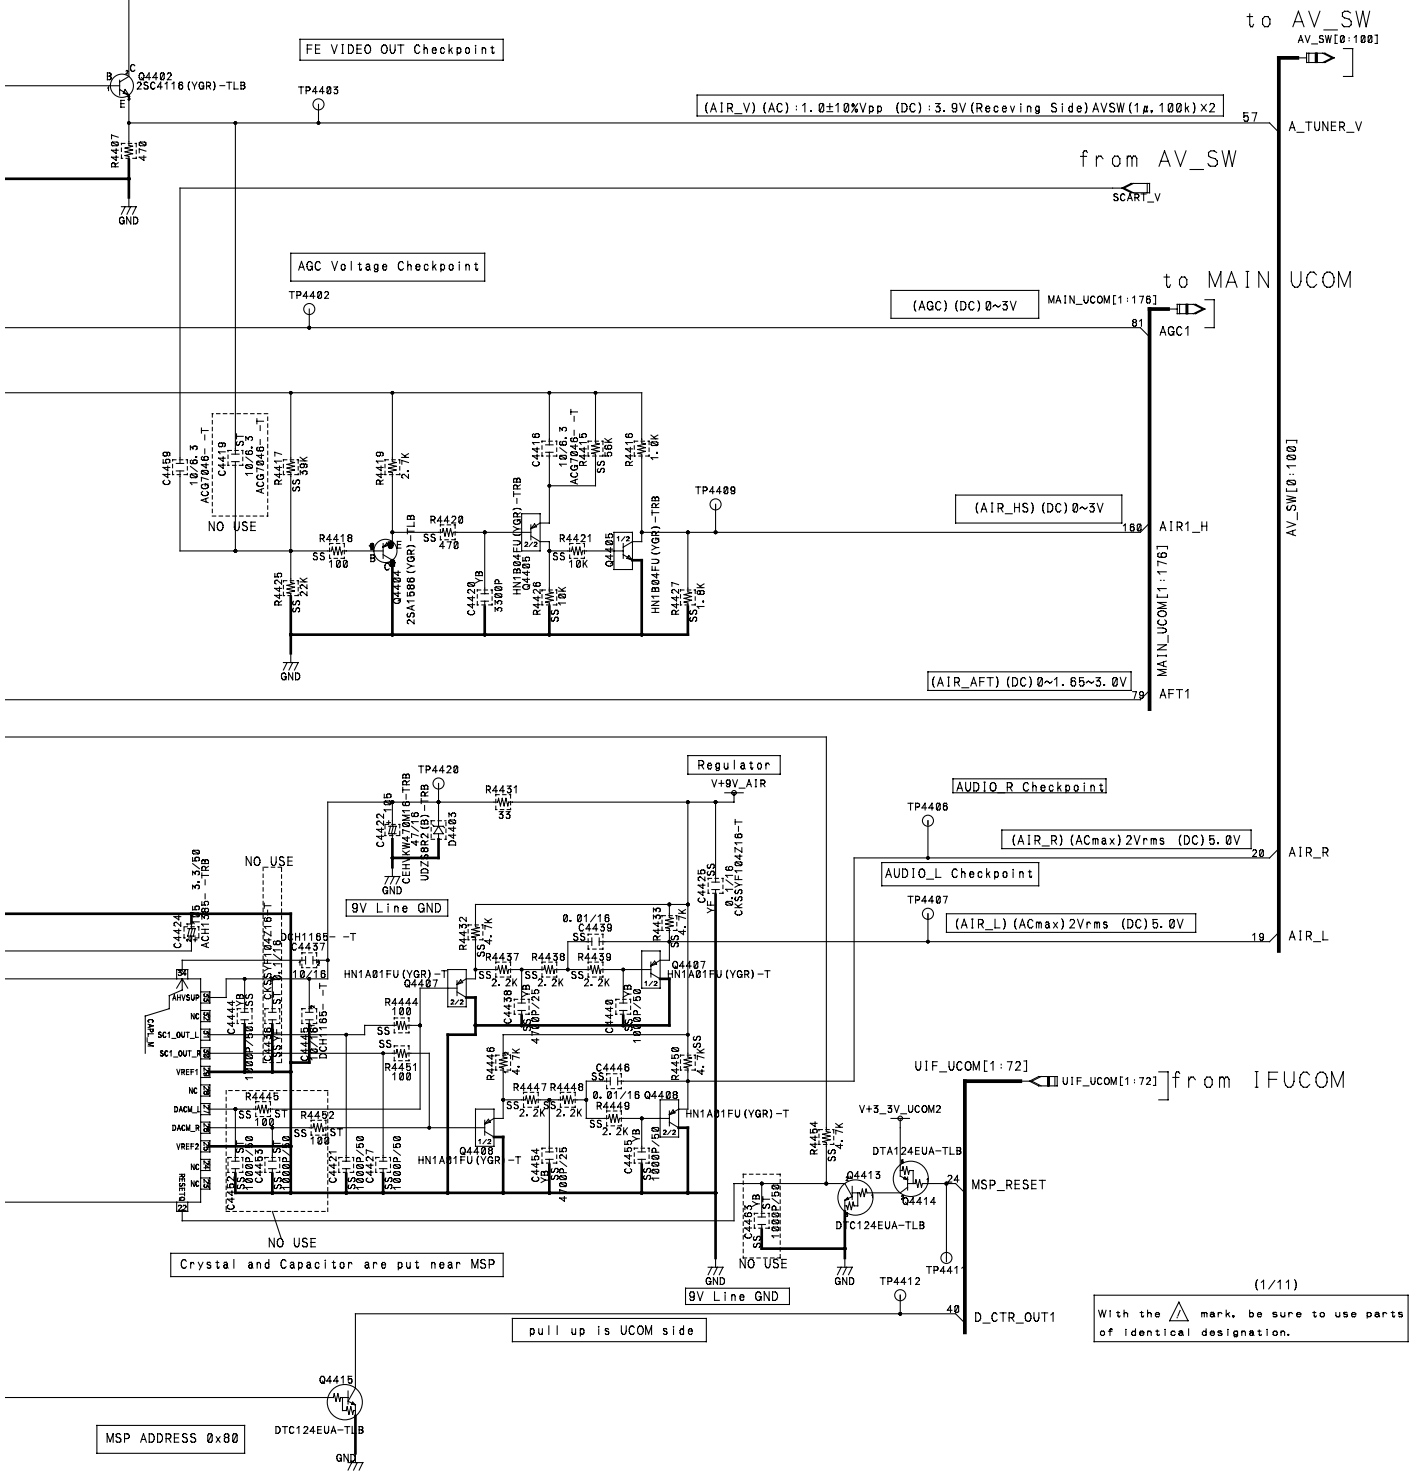


3.6 MR MAIN ASSY (4/15)

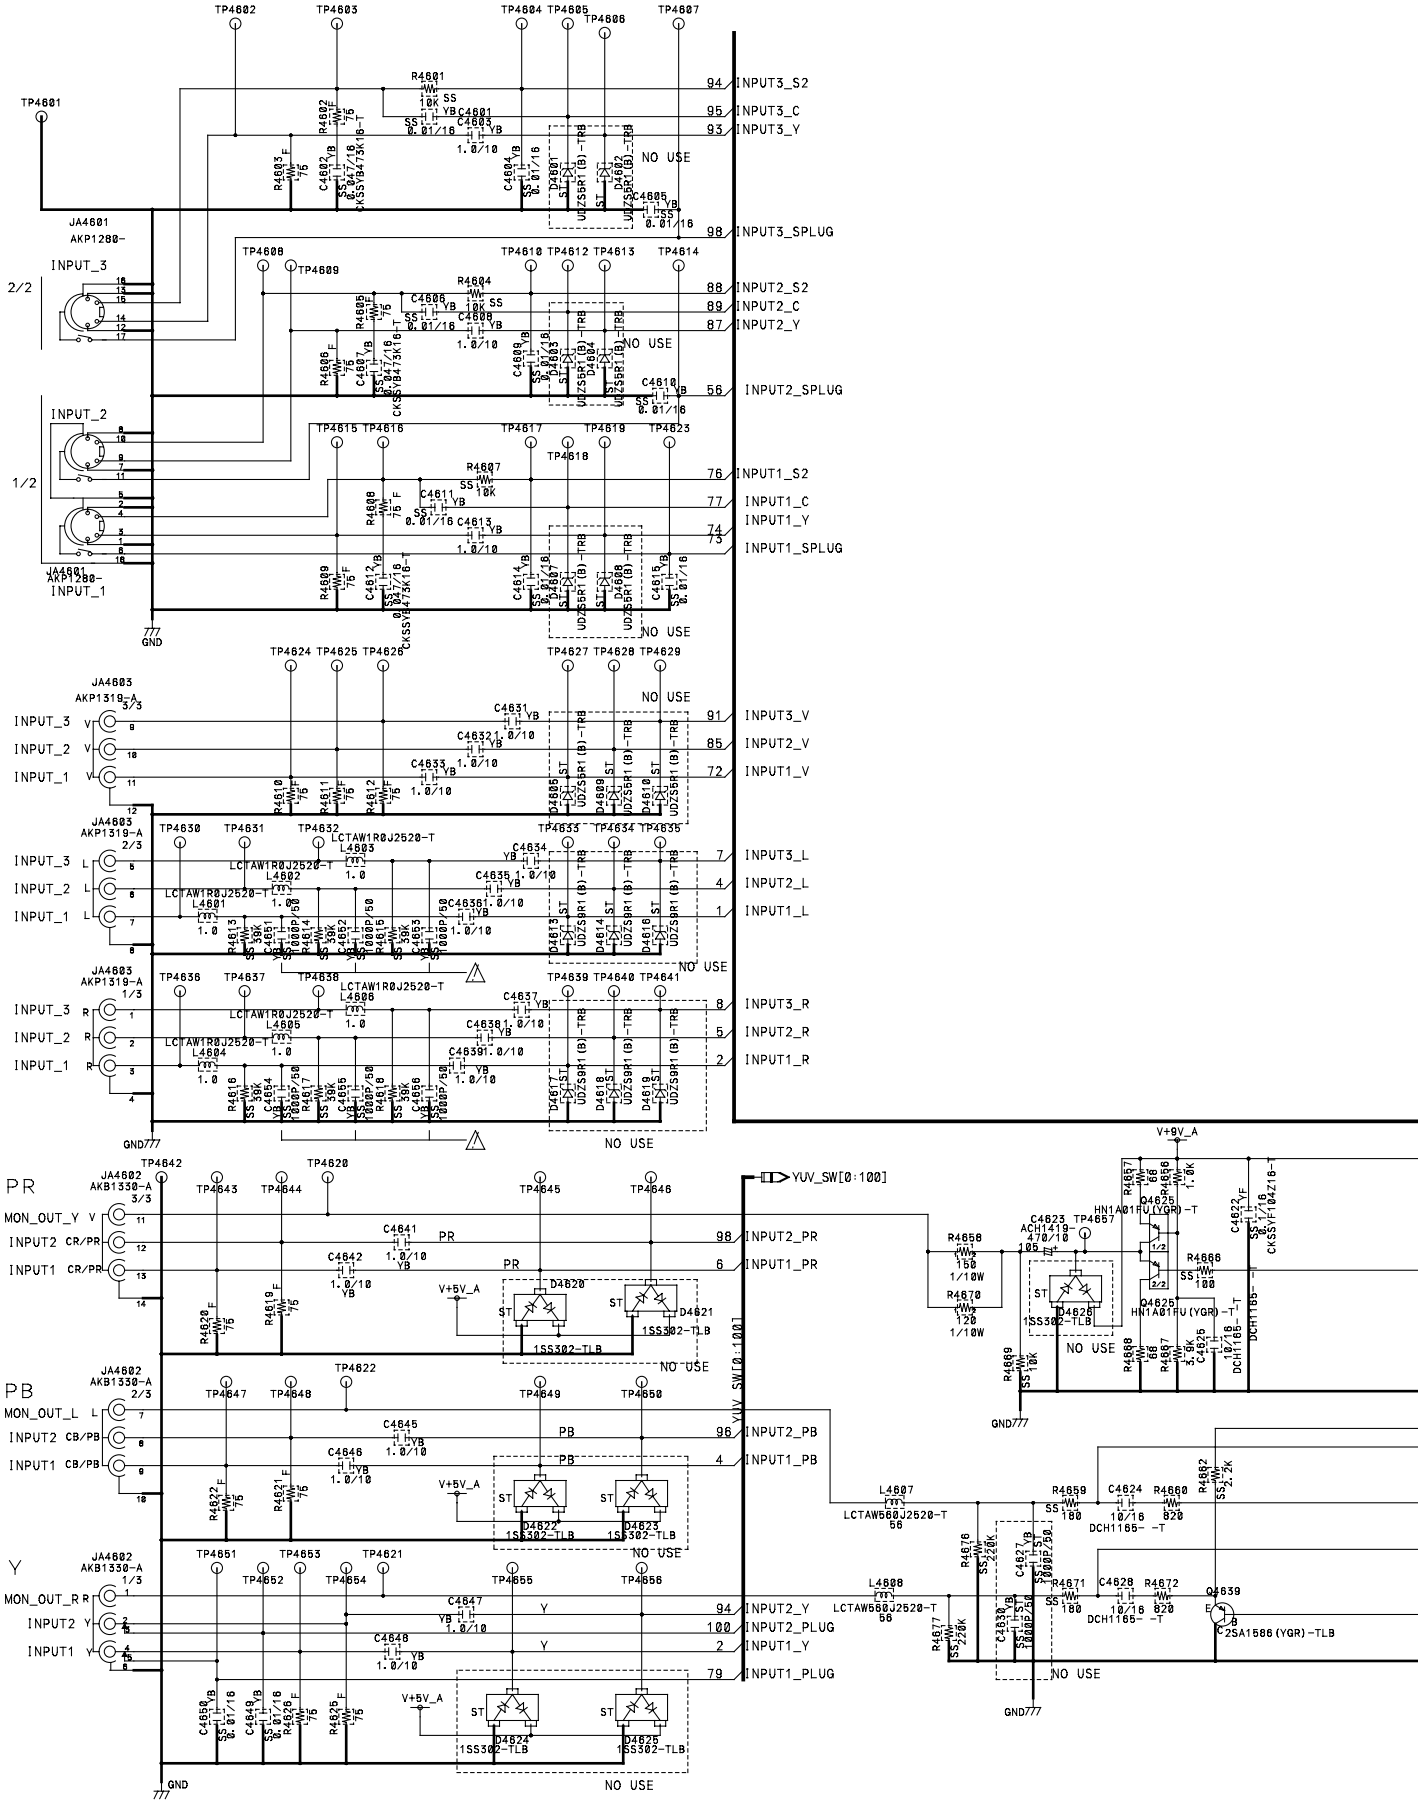

MR MAIN ASSY (4/15)


• AVIO BLOCK

ITEM	USED	MODEL: PDP-R06G	MODEL: PDP-R06C
		AWV2232-(IBD) VACANT	AWV2234-(CHINA) VACANT
C	4601-4650	4616-4617, 4619, 4626, 4629	4616-4617, 4619, 4626, 4629
D	4601-4626		
JA	4601-4604		
L	4601-4608		
Q	4614-4640		
R	4601-4714	4623, 4627-4628, 4630-4647, 4675 4678-4686, 4689-4700, 4708-4711	4623, 4627-4628, 4630-4647, 4675 4678-4686, 4689-4700, 4708-4711
TP	4601-4658		

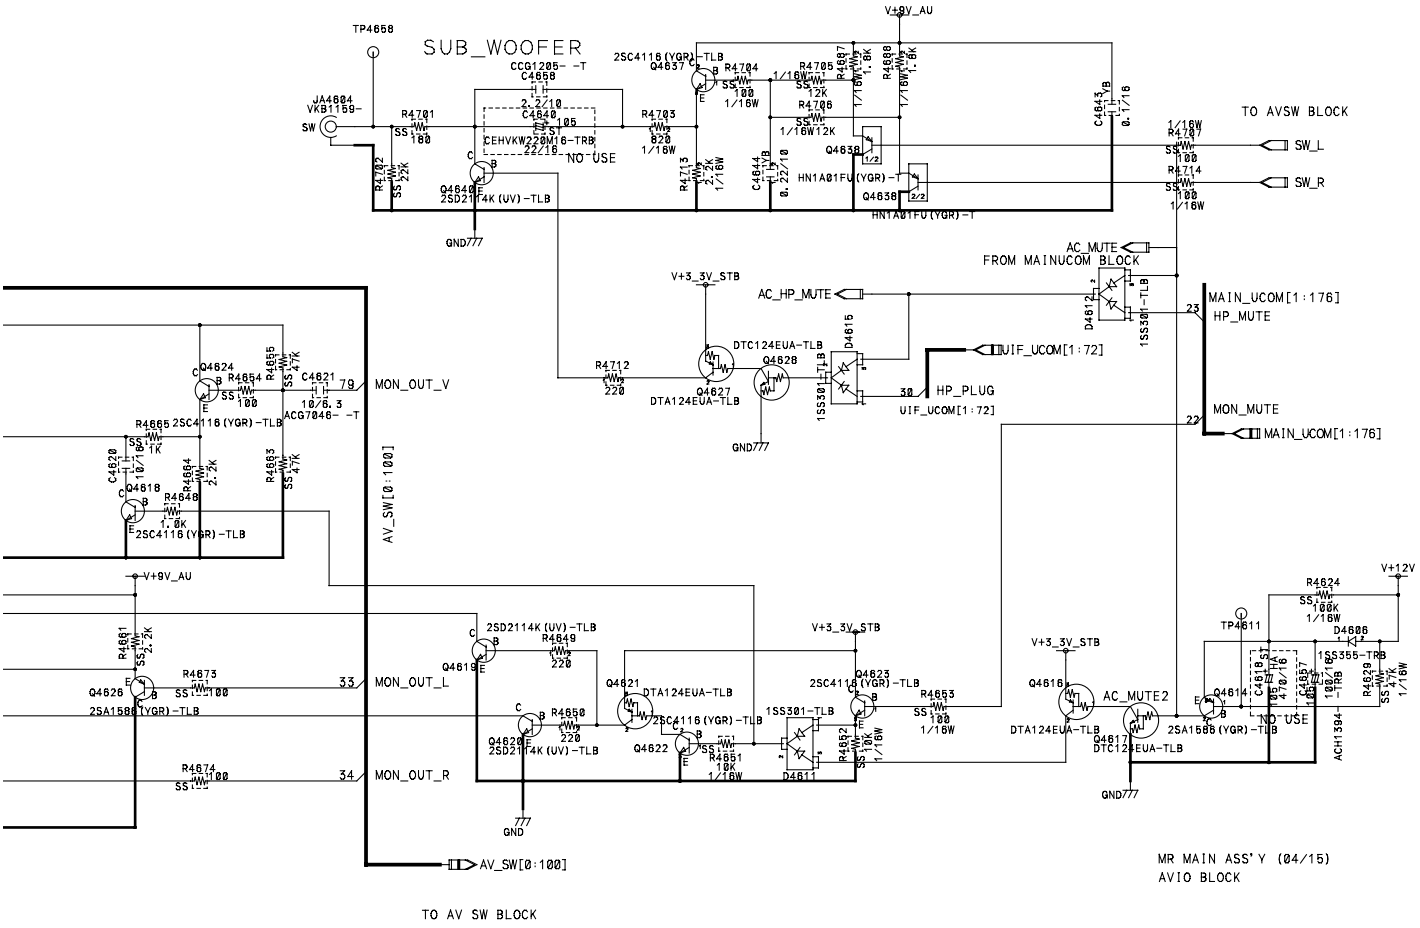


MR MAIN ASSY (5/15)


• AVSW BLOCK

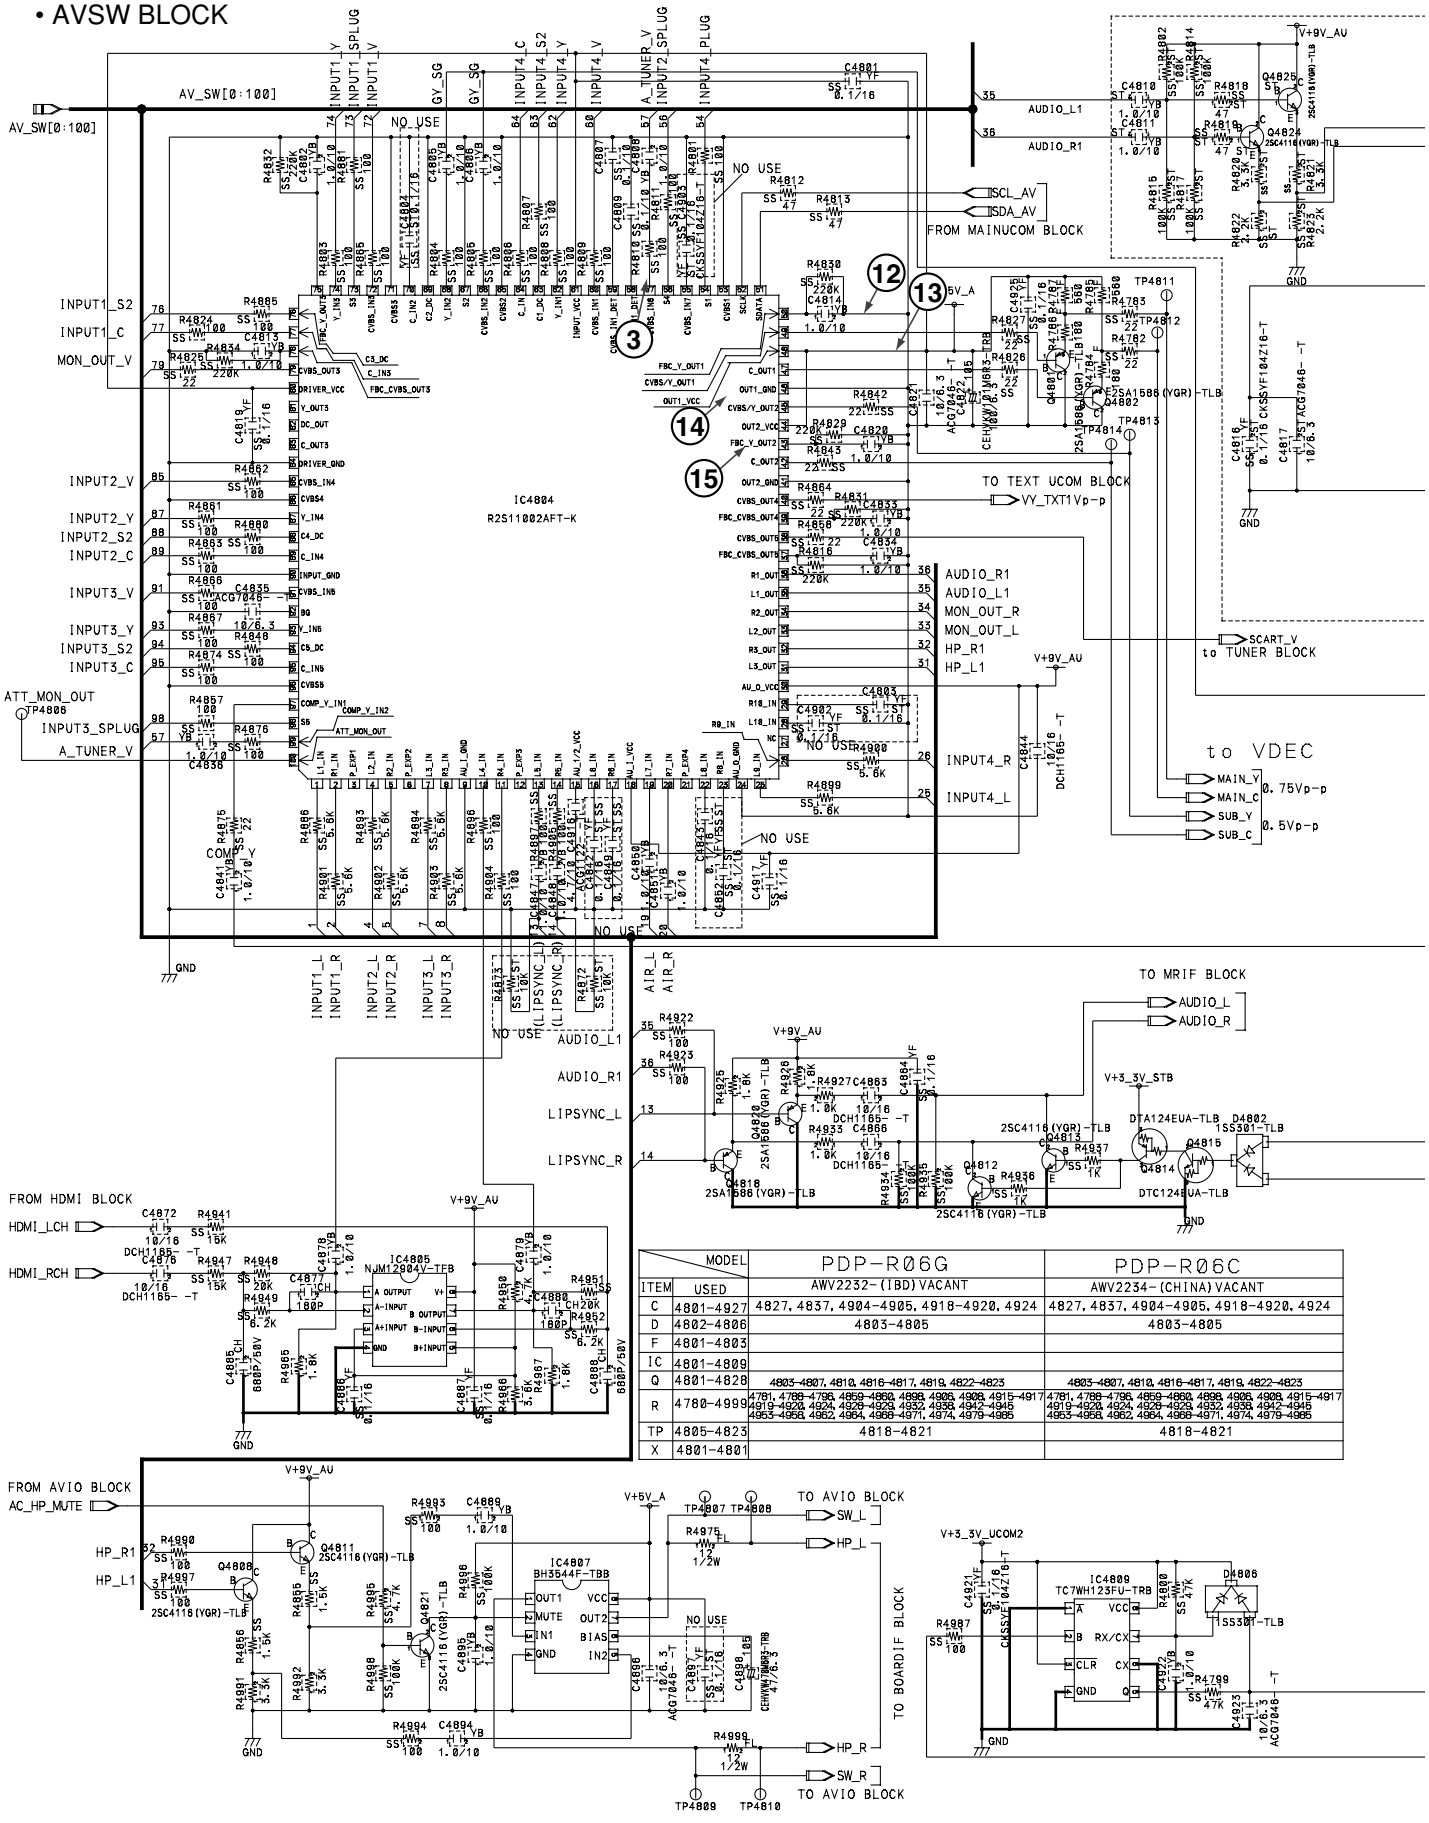

ITEM	USED	MODEL: PDP-R06G	MODEL: PDP-R06C
C	4801-4927	4827, 4837, 4904-4905, 4918-4920, 4924	4827, 4837, 4904-4905, 4918-4920, 4924
D	4802-4806	4803-4805	4803-4805
F	4801-4803		
IC	4801-4809		
Q	4801-4828	4803-4807, 4810, 4816-4817, 4819, 4822-4823	4803-4807, 4810, 4816-4817, 4819, 4822-4823
R	4780-4999	4781, 4788-4796, 4859-4860, 4898, 4905, 4908, 4915-4917 4919-4920, 4924, 4926-4929, 4932, 4936, 4942-4945 4953-4956, 4962, 4964, 4968-4971, 4974, 4979-4995	4781, 4788-4796, 4859-4860, 4898, 4905, 4908, 4915-4917 4919-4920, 4924, 4926-4929, 4932, 4936, 4942-4945 4953-4956, 4962, 4964, 4968-4971, 4974, 4979-4995
TP	4805-4823	4818-4821	4818-4821
X	4801-4801		

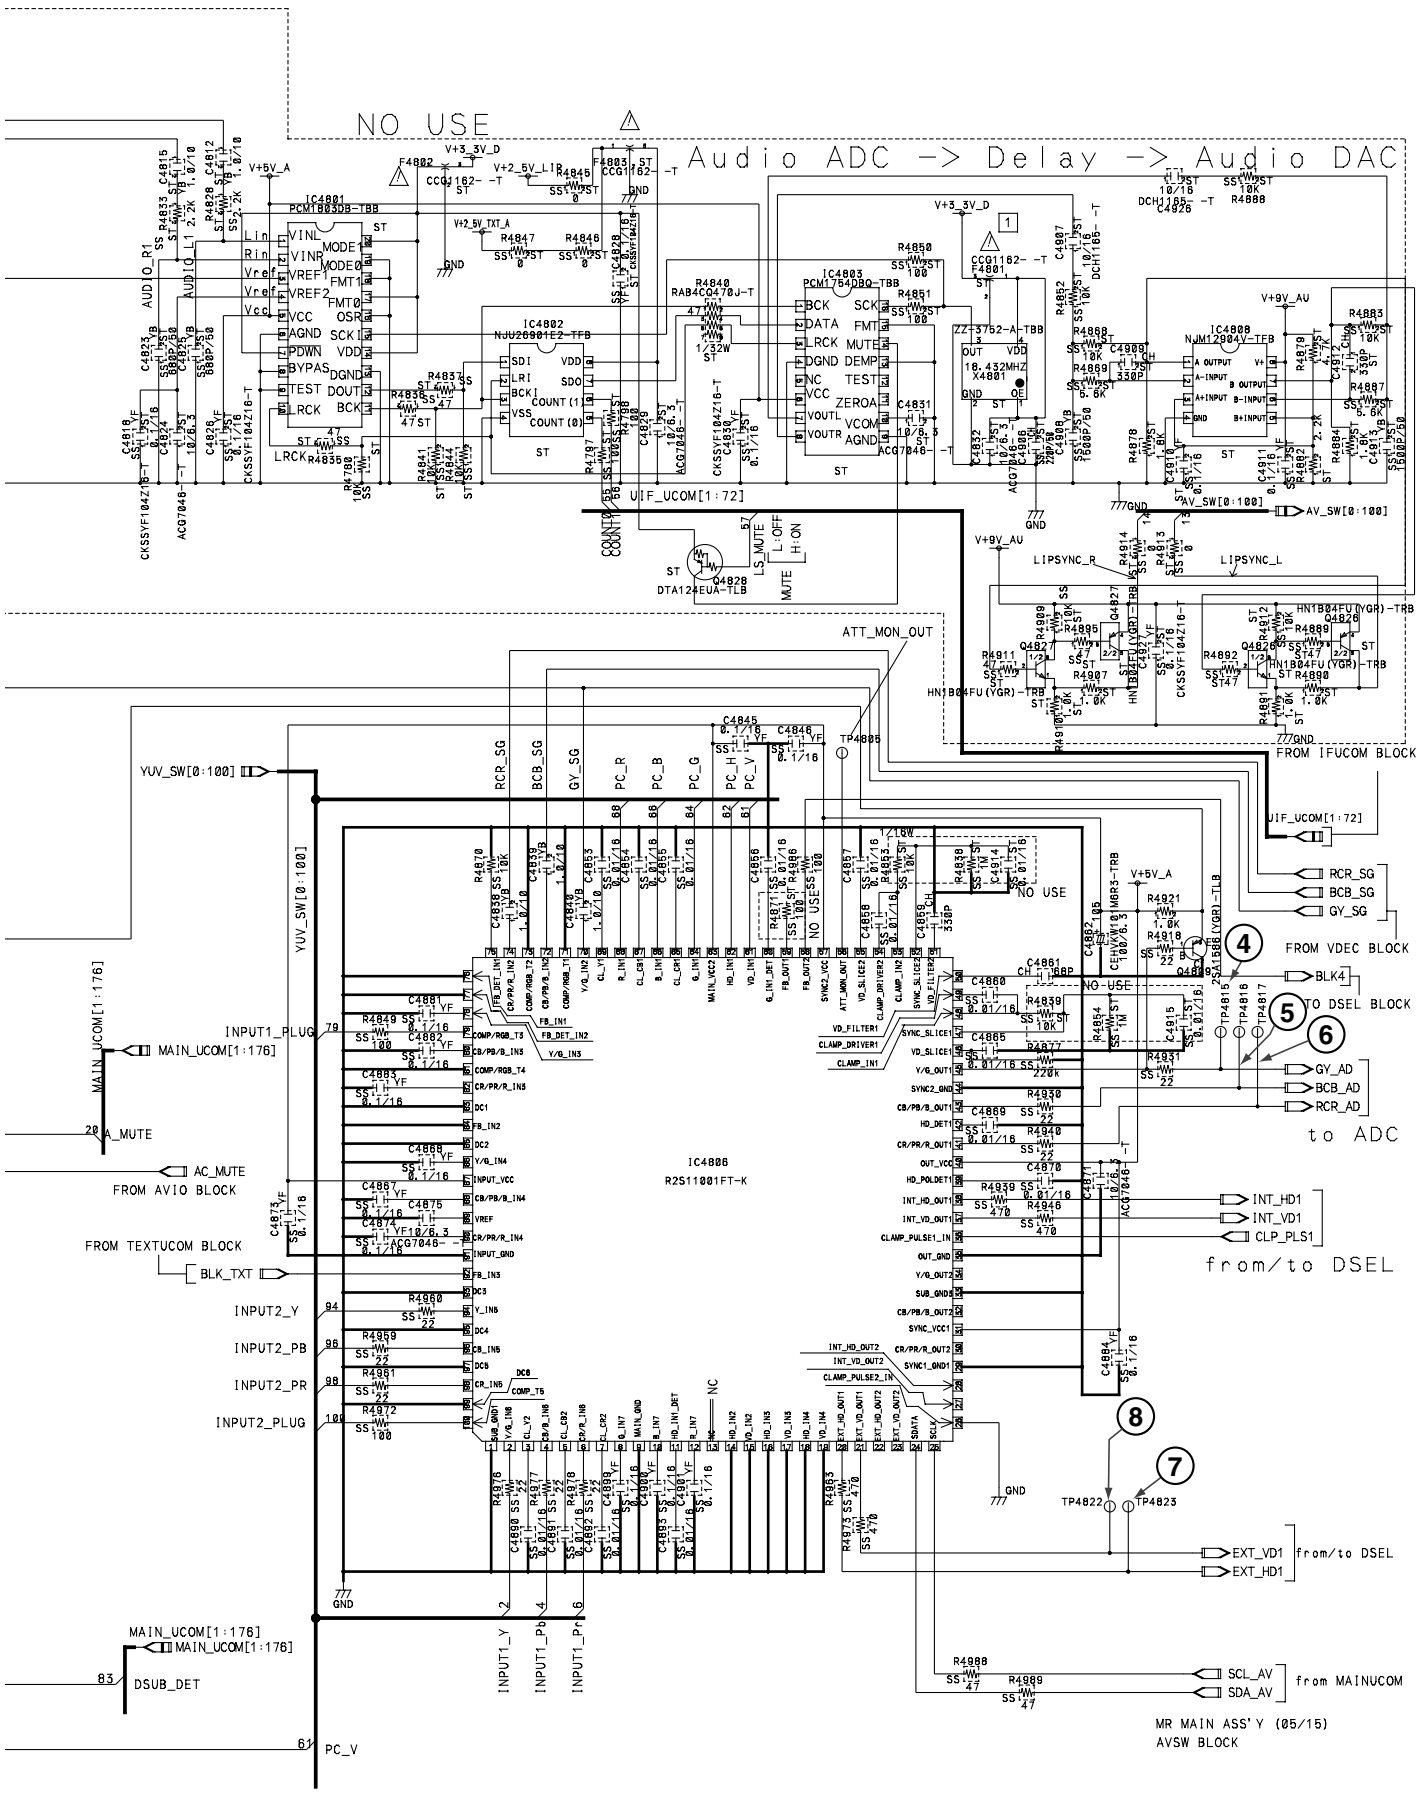
NO USE
Audio ADC -> Delay -> Audio DAC
IC4801
PCM1865DB-TBB
IC4802
NJU26901E2-TFB
IC4803
PCM1754DBQ-TBB
IC4808
NJM12904V-TFB
IC4806
R2S11001FT-K
UIF_UCOM[1:72]
FROM IFUCOM BLOCK
YUV_SW[0:100]
AV_SW[0:100]
ATT_MON_OUT
LIPSYNC_R
LIPSYNC_L
RCR_SG
BCB_SG
GY_SG
FROM VDEC BLOCK
BLK4
TO DSEL BLOCK
GY_AD
BCB_AD
RCR_AD
to ADC
INT_HD1
INT_VD1
CLP_PLS1
from/to DSEL
INPUT1_PLUG
MAIN_UCOM[1:176]
A_MUTE
AC_MUTE
FROM AVIO BLOCK
FROM TEXTUCOM BLOCK
BLK_TXT
INPUT2_Y
INPUT2_PB
INPUT2_PR
INPUT2_PLUG
EXT_VD1
EXT_HD1
from/to DSEL
SCL_AV
SDA_AV
from MAINUCOM
DSUB_DET
PC_V
MR MAIN ASS'Y (05/15)
AVSW BLOCK

3.8 MR MAIN ASSY (6/15)

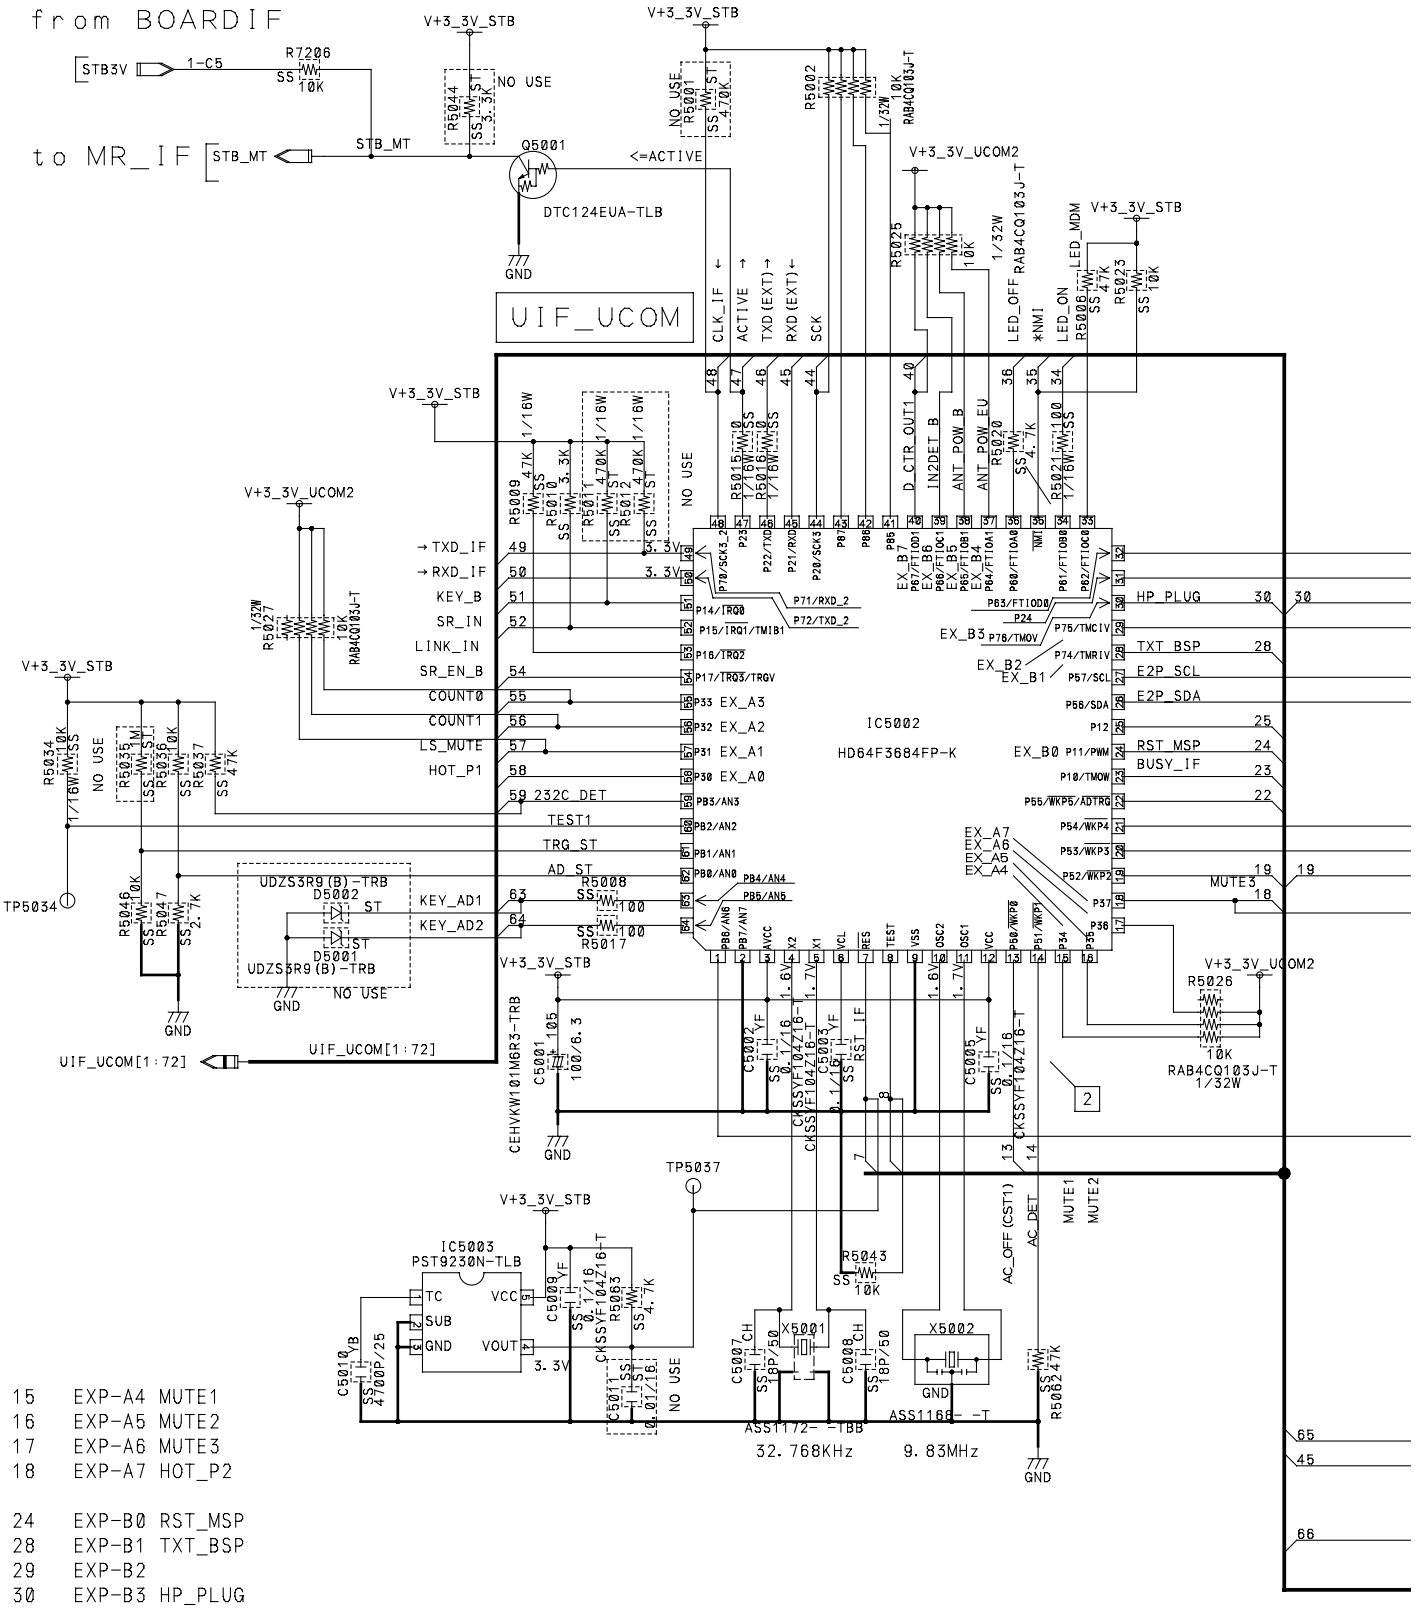

15 EXP-A4 MUTE1
16 EXP-A5 MUTE2
17 EXP-A6 MUTE3
18 EXP-A7 HOT_P2

24 EXP-B0 RST_MSP
28 EXP-B1 TXT_BSP
29 EXP-B2
30 EXP-B3 HP_PLUG


37 EXP-B4 ANT_POW_EU
38 EXP-B5 ANT_POW_B
39 EXP-B6 IN2DET_B
40 EXP-B7 D_CTR_OUT1

55 EXP-A3 COUNT0
56 EXP-A2 COUNT1
57 EXP-A1 LS_MUTE
58 EXP-A0 HOT_P1


MODEL		PDP-R06G	PDP-R06C
ITEM	USED	AWV2232-(IBD) VACANT	AWV2234-(CHINA) VACANT
C	5001-5012	5006	5006
D	5001-5002		
IC	5001-5004		
Q	5001-5004	5002-5003	5002-5003
R	5001-5077	5004, 5024, 5028-5029, 5031, 5033, 5038-5042, 5045 5048-5049, 5054, 5056, 5058-5059, 5061, 5074-5076	5004, 5024, 5028-5029, 5031, 5033, 5038-5042, 5045 5048-5049, 5054, 5056, 5058-5059, 5061, 5074-5076
TP	5034-5037	5035-5036	5035-5036
X	5001-5002		

MR MAIN ASSY (6/15)

• IFUCOM BLOCK

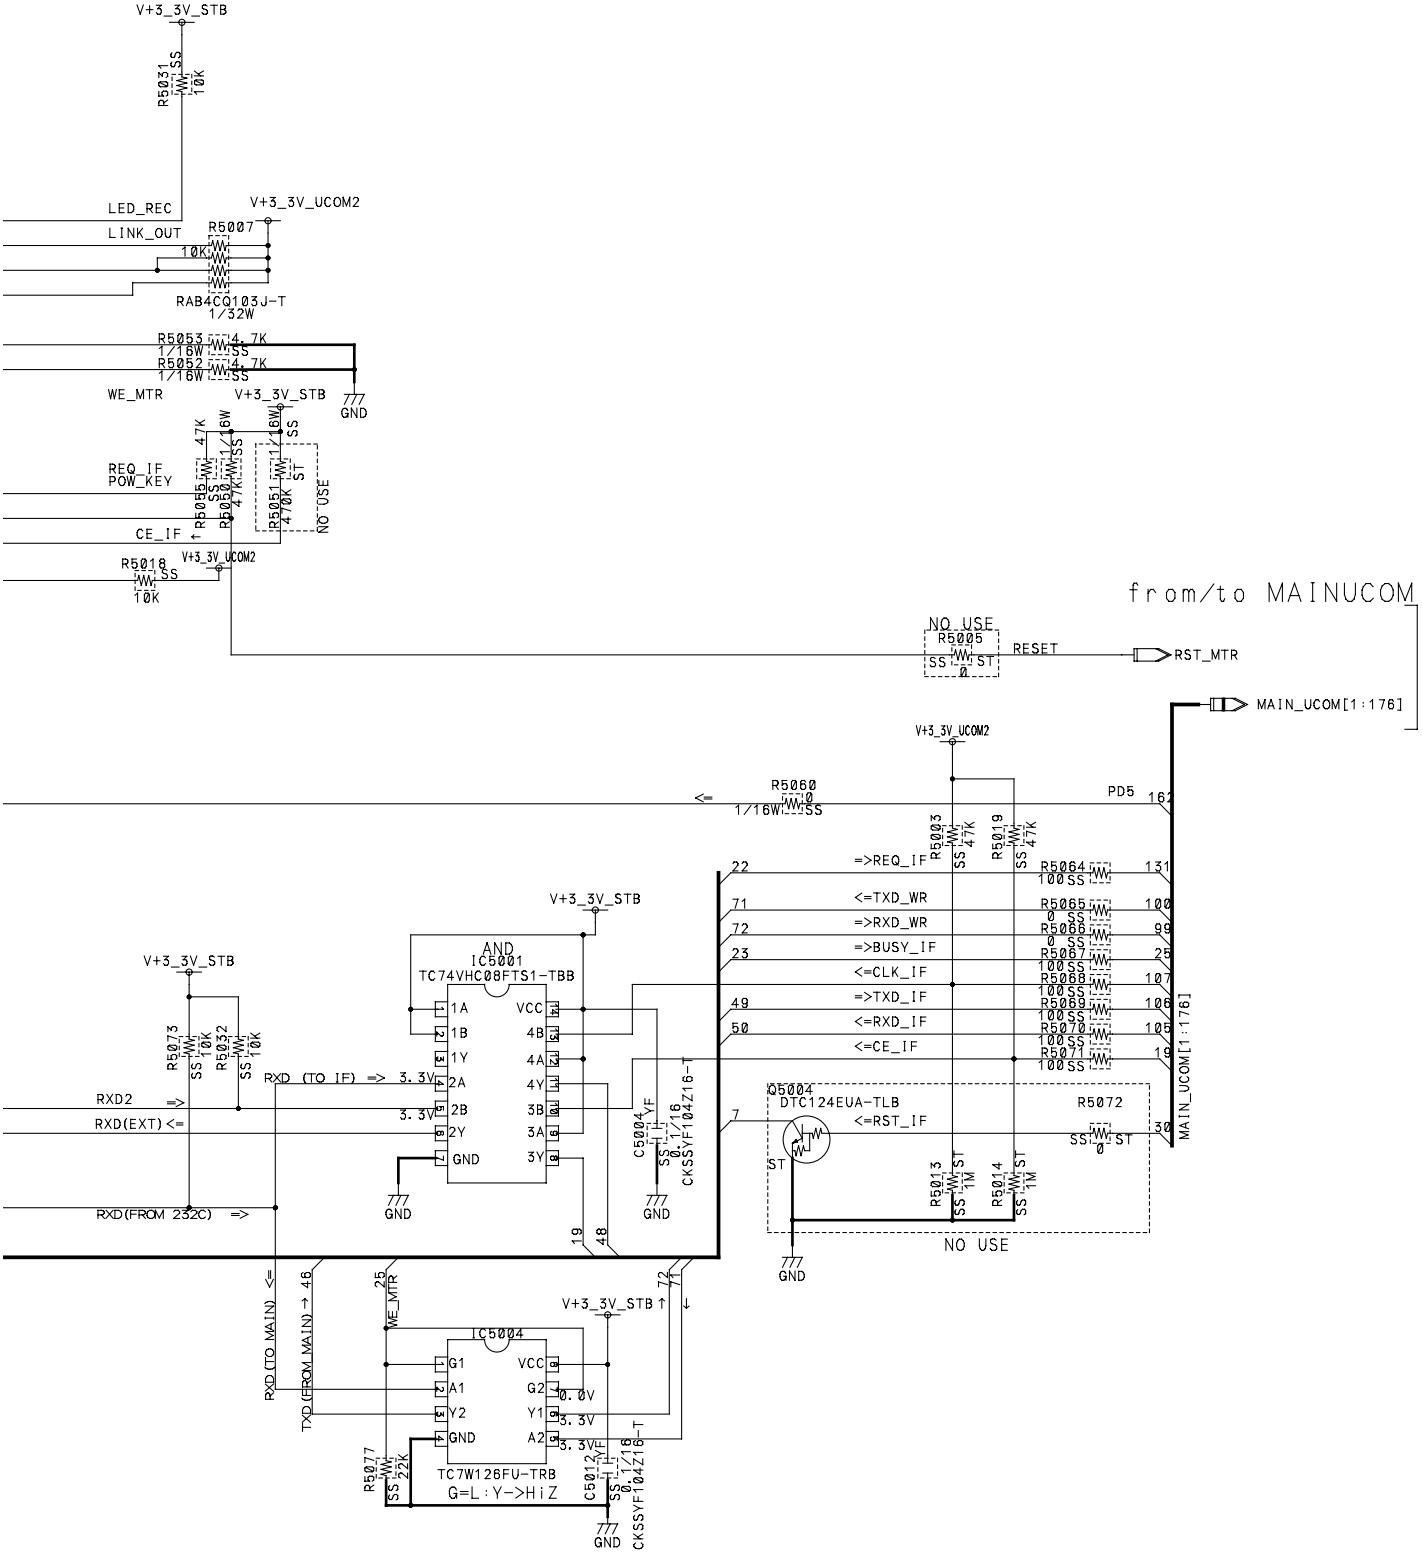

3.9 MR MAIN ASSY (7/15)

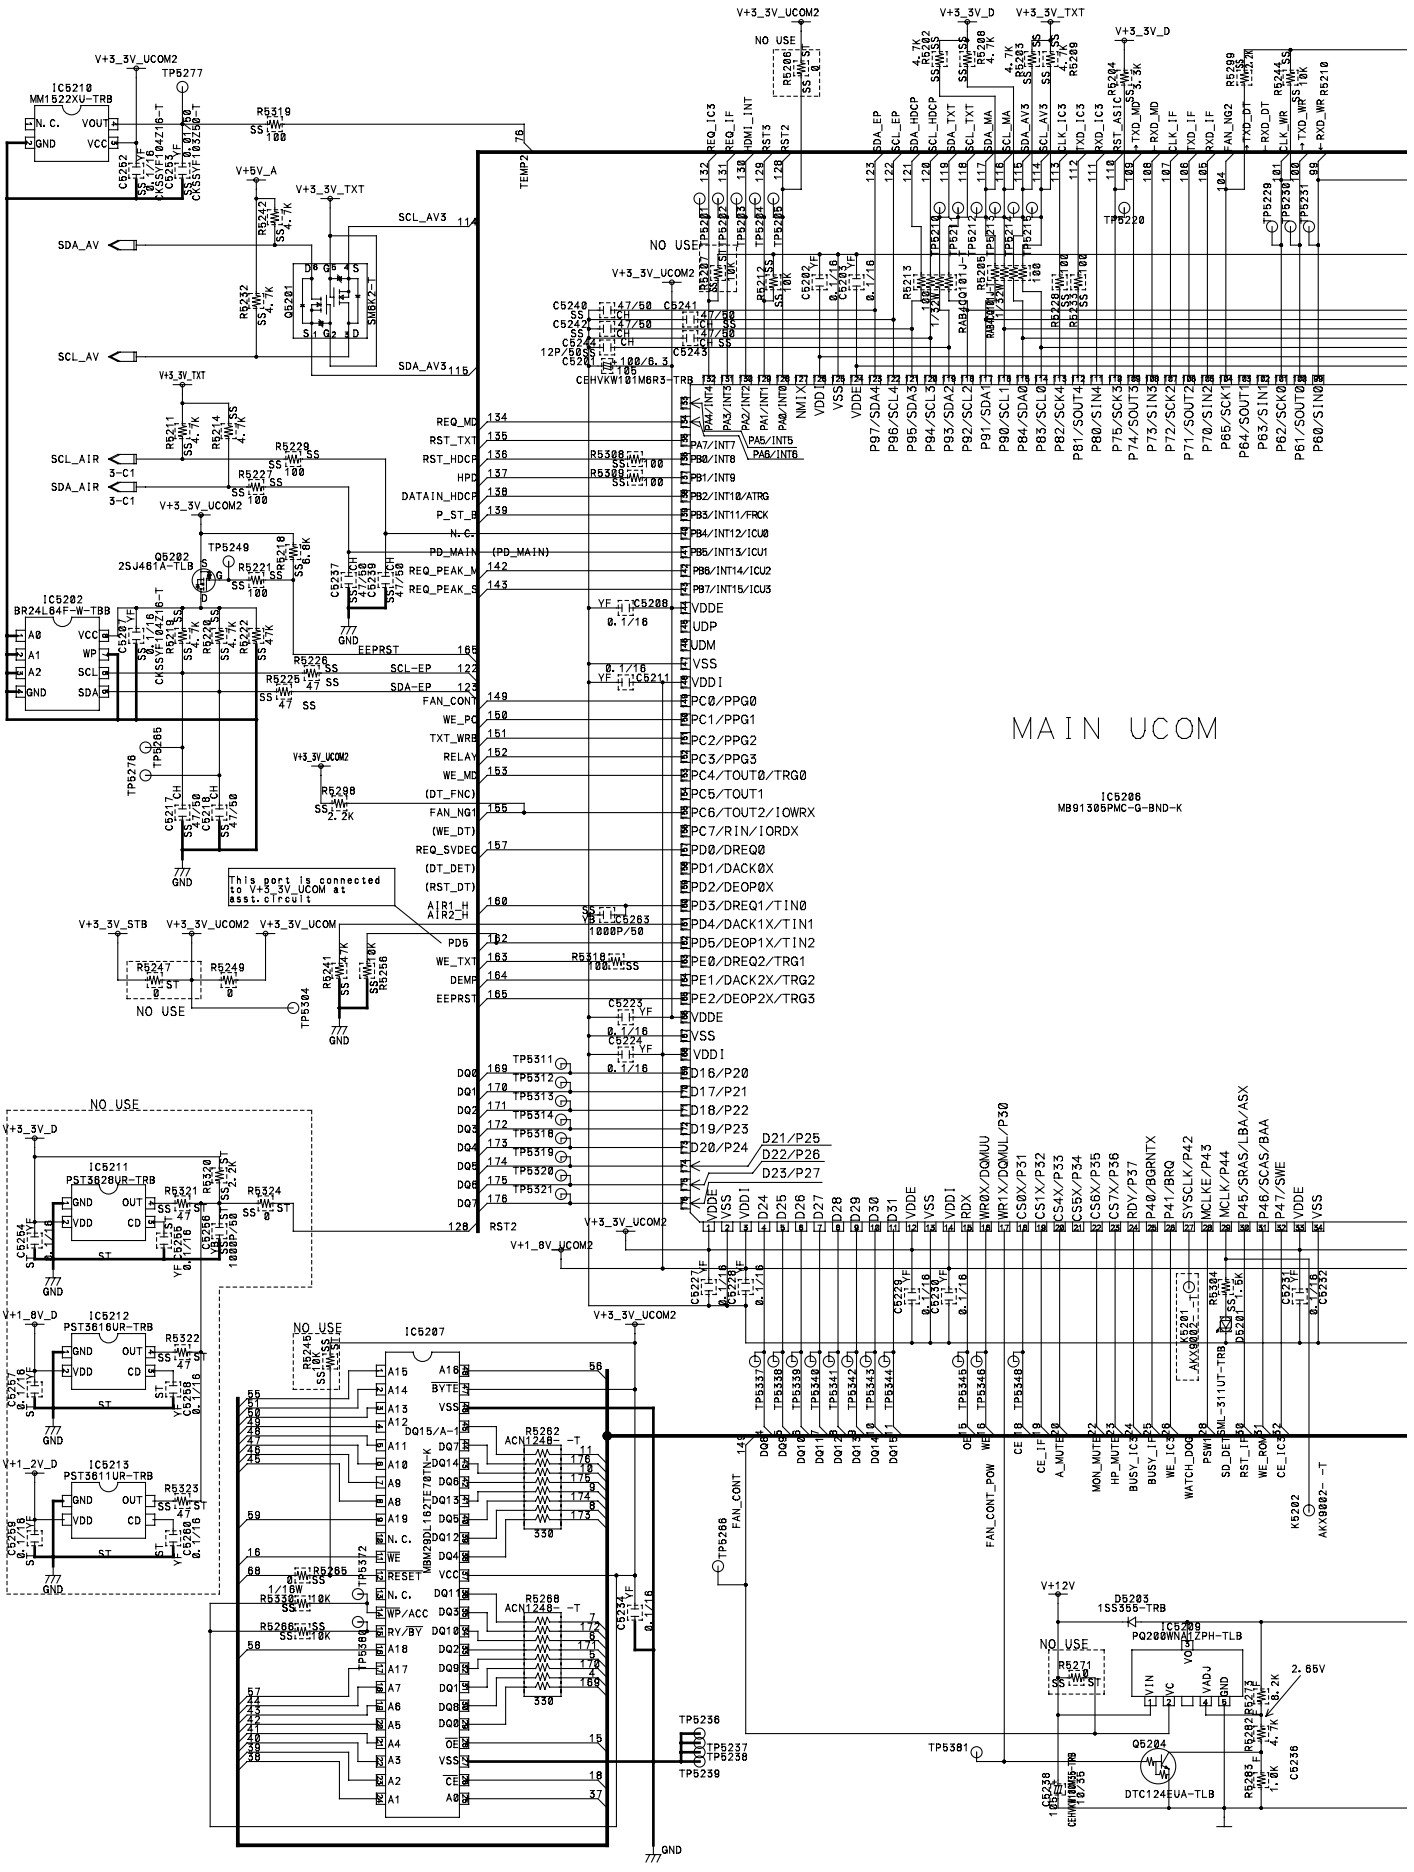



MR MAIN ASSY (7/15)

• MAINUCOM BLOCK

MODEL		PDP-R06G	PDP-R06C
ITEM	USED	AWV2232-(IBD)VACANT	AWV2234-(CHINA)VACANT
C	5201-5263	5210, 5250-5251 [Z]	5210, 5250-5251 [Z]
CN	5202-5202		
D	5201-5203	5202	5202
IC	5201-5213	5204-5205, 5208	5204-5205, 5208
K	5201-5202		
Q	5201-5204	5203	5203
R	5202-5330	5231, 5234, 5238-5240, 5250 [Z] 5258-5261, 5263-5264, 5267, 5269-5270, 5272, 5274-5281 5285-5290, 5294-5297, 5301-5303, 5305-5307, 5310-5314 5317, 5325-5328, 5251, 5252	5231, 5234, 5238-5240, 5250 [Z] 5258-5261, 5263-5264, 5267, 5269-5270, 5272, 5274-5281 5285-5290, 5294-5297, 5301-5303, 5305-5307, 5310-5314 5317, 5325-5328, 5245, 5253
TP	5201-5381	5206, 5208-5209, 5216-5217, 5219, 5223-5225, 5227-5228 5240-5248, 5250-5254, 5256-5261, 5263-5264, 5267-5269 5275, 5278-5290, 5293, 5295-5298, 5303, 5305-5310 5326-5336, 5347, 5349-5363, 5373-5379	5206, 5208-5209, 5216-5217, 5219, 5223-5225, 5227-5228 5240-5248, 5250-5254, 5256-5261, 5263-5264, 5267-5269 5275, 5278-5290, 5293, 5295-5298, 5303, 5305-5310 5326-5336, 5347, 5349-5363, 5373-5379
X	5201-5201		

3.10 MR MAIN ASSY (8/15)

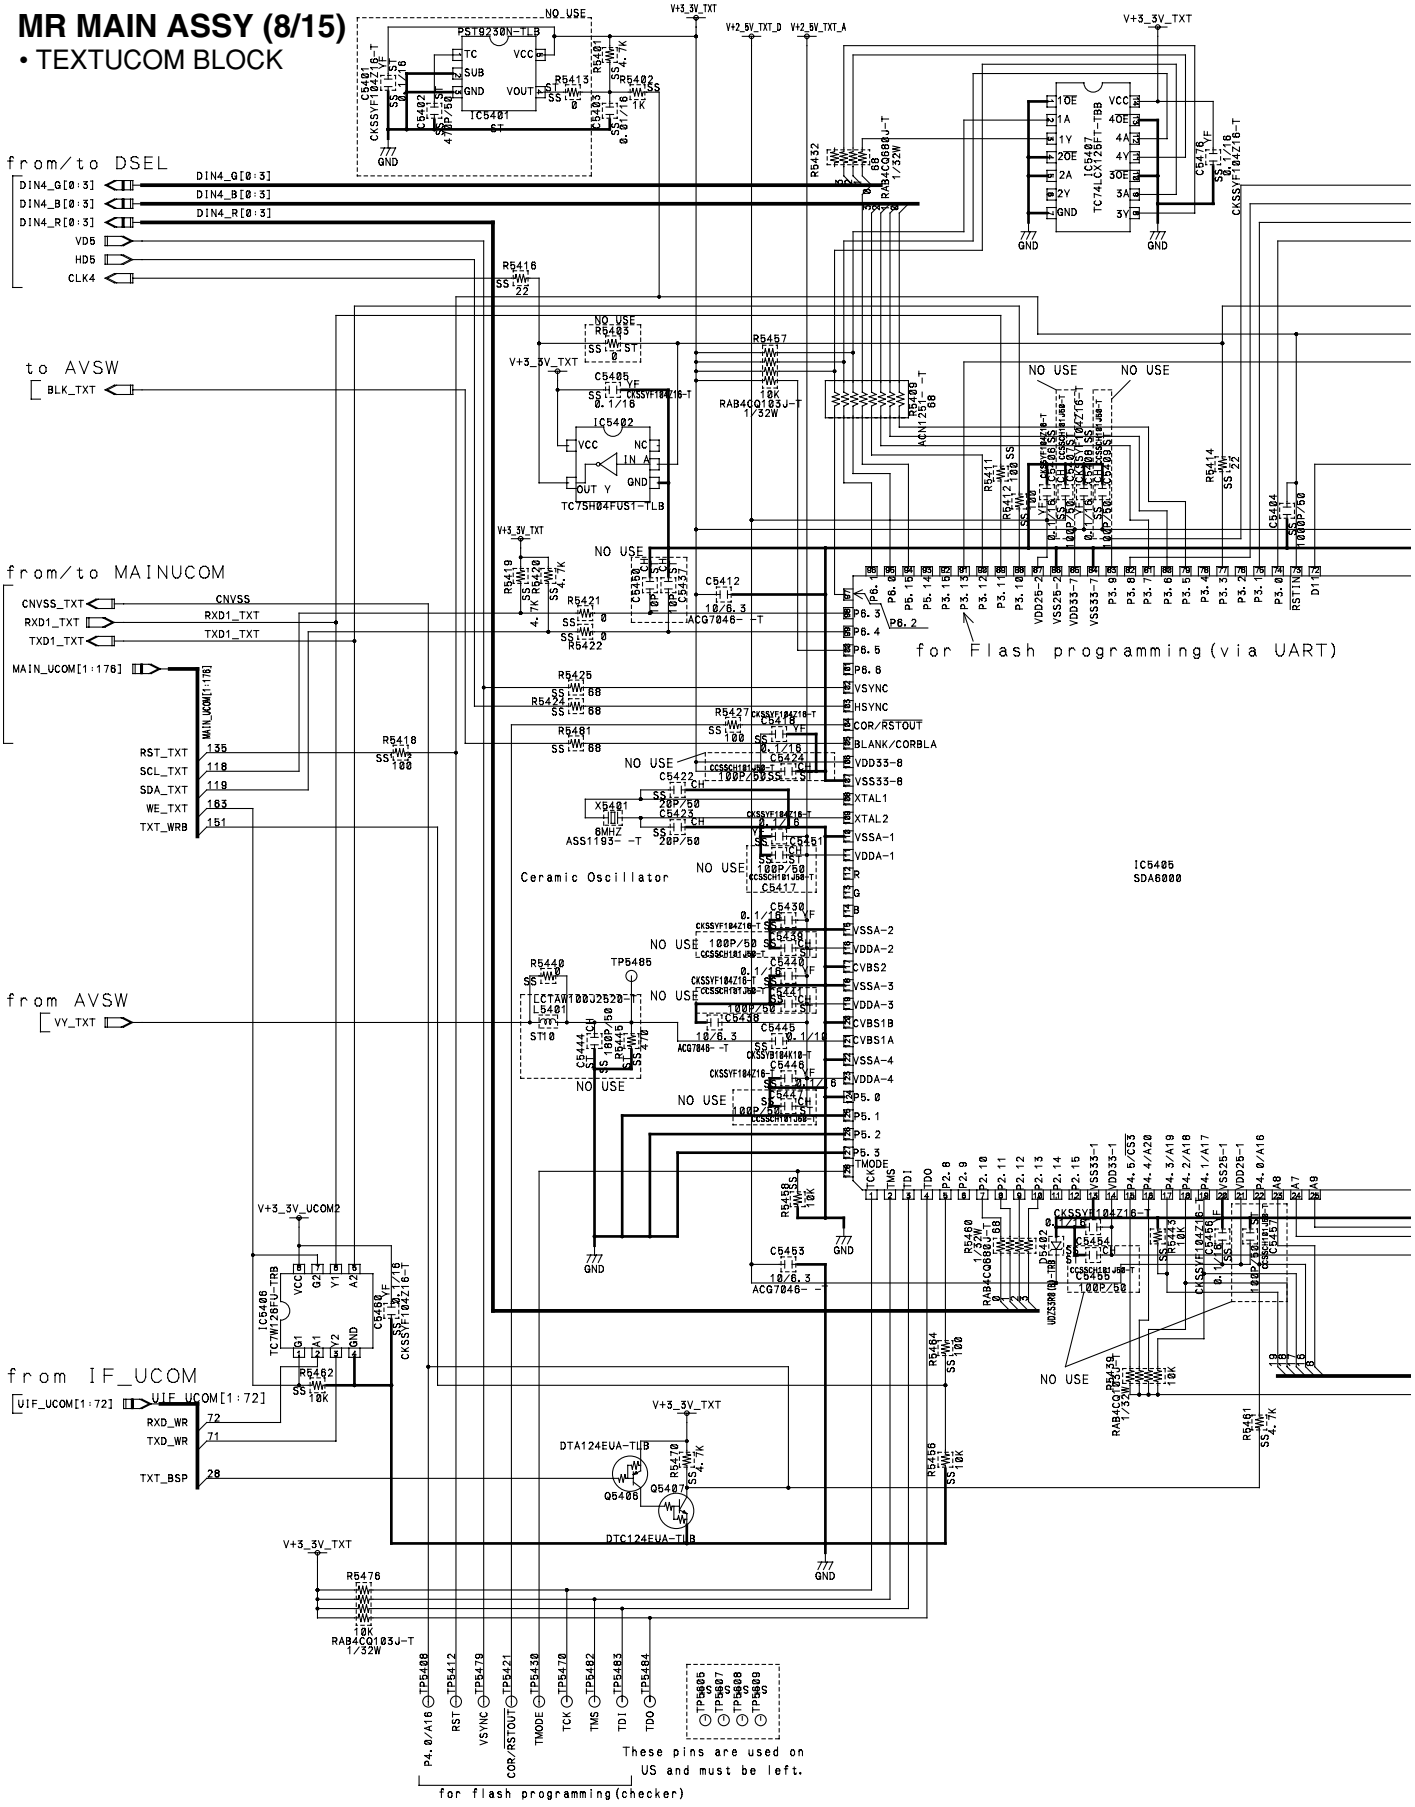

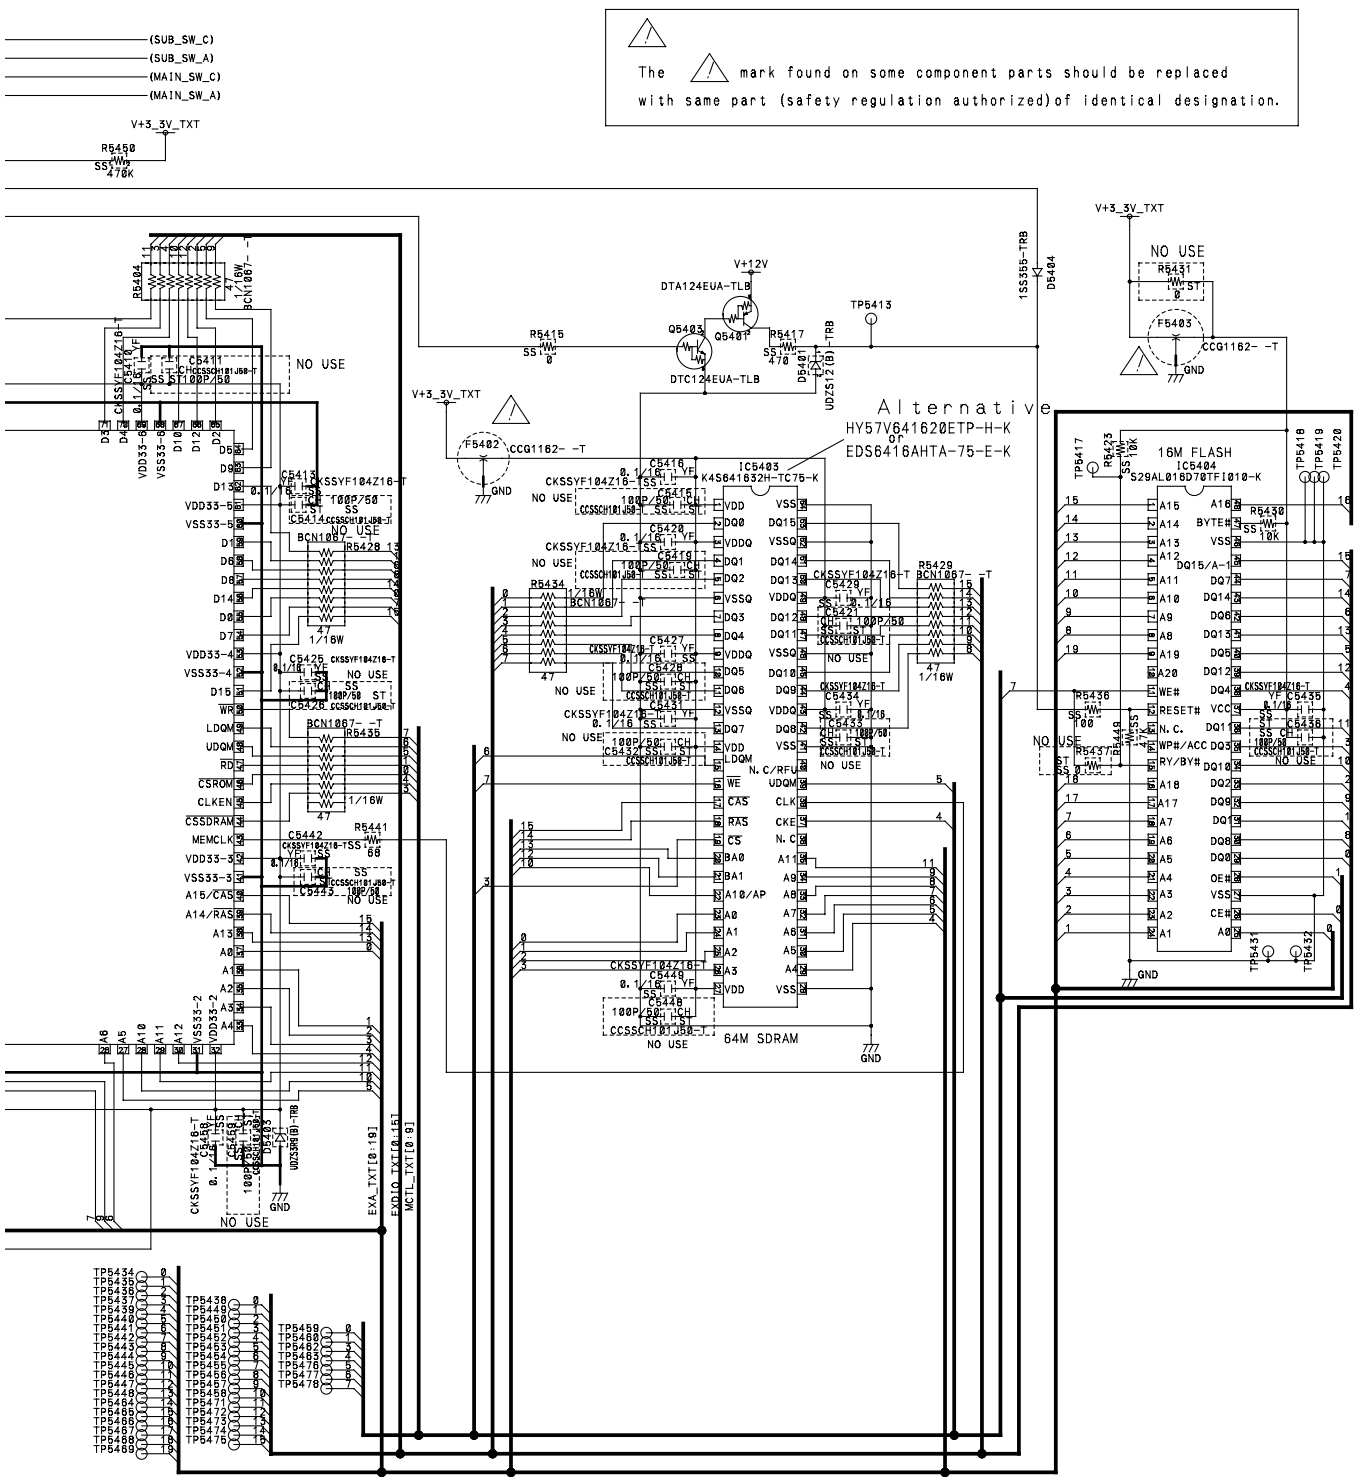



MODEL / ITEM	USED	PDP-R06G	PDP-R06C
		AWV2232-(IBD)VACANT	AWV2234-(CHINA)VACANT
C	5401-5476	5452, 5461-5475	5452, 5461-5475
D	5401-5404		
F	5402-5403		
IC	5401-5407		
L	5401-5401		
Q	5401-5407	5402, 5404-5405	5402, 5404-5405
R	5401-5481	5405-5408, 5410, 5426, 5433, 5438, 5442, 5444, 5446-5448, 5450-5455, 5459, 5463, 5466-5469, 5471-5475, 5477-5480, 5409-5411, 5414-5416, 5422-5429, 5433, 5461, 5480-5481, 5486-5604, 5606	5405-5408, 5410, 5426, 5433, 5438, 5442, 5444, 5446-5448, 5450-5455, 5459, 5463, 5466-5469, 5471-5475, 5477-5480, 5409-5411, 5414-5416, 5422-5429, 5433, 5461, 5480-5481, 5486-5604, 5606
TP	5408-5609		
X	5401-5401		

3.11 MR MAIN ASSY (9/15)

MR MAIN ASSY (9/15)

• VDEC BLOCK

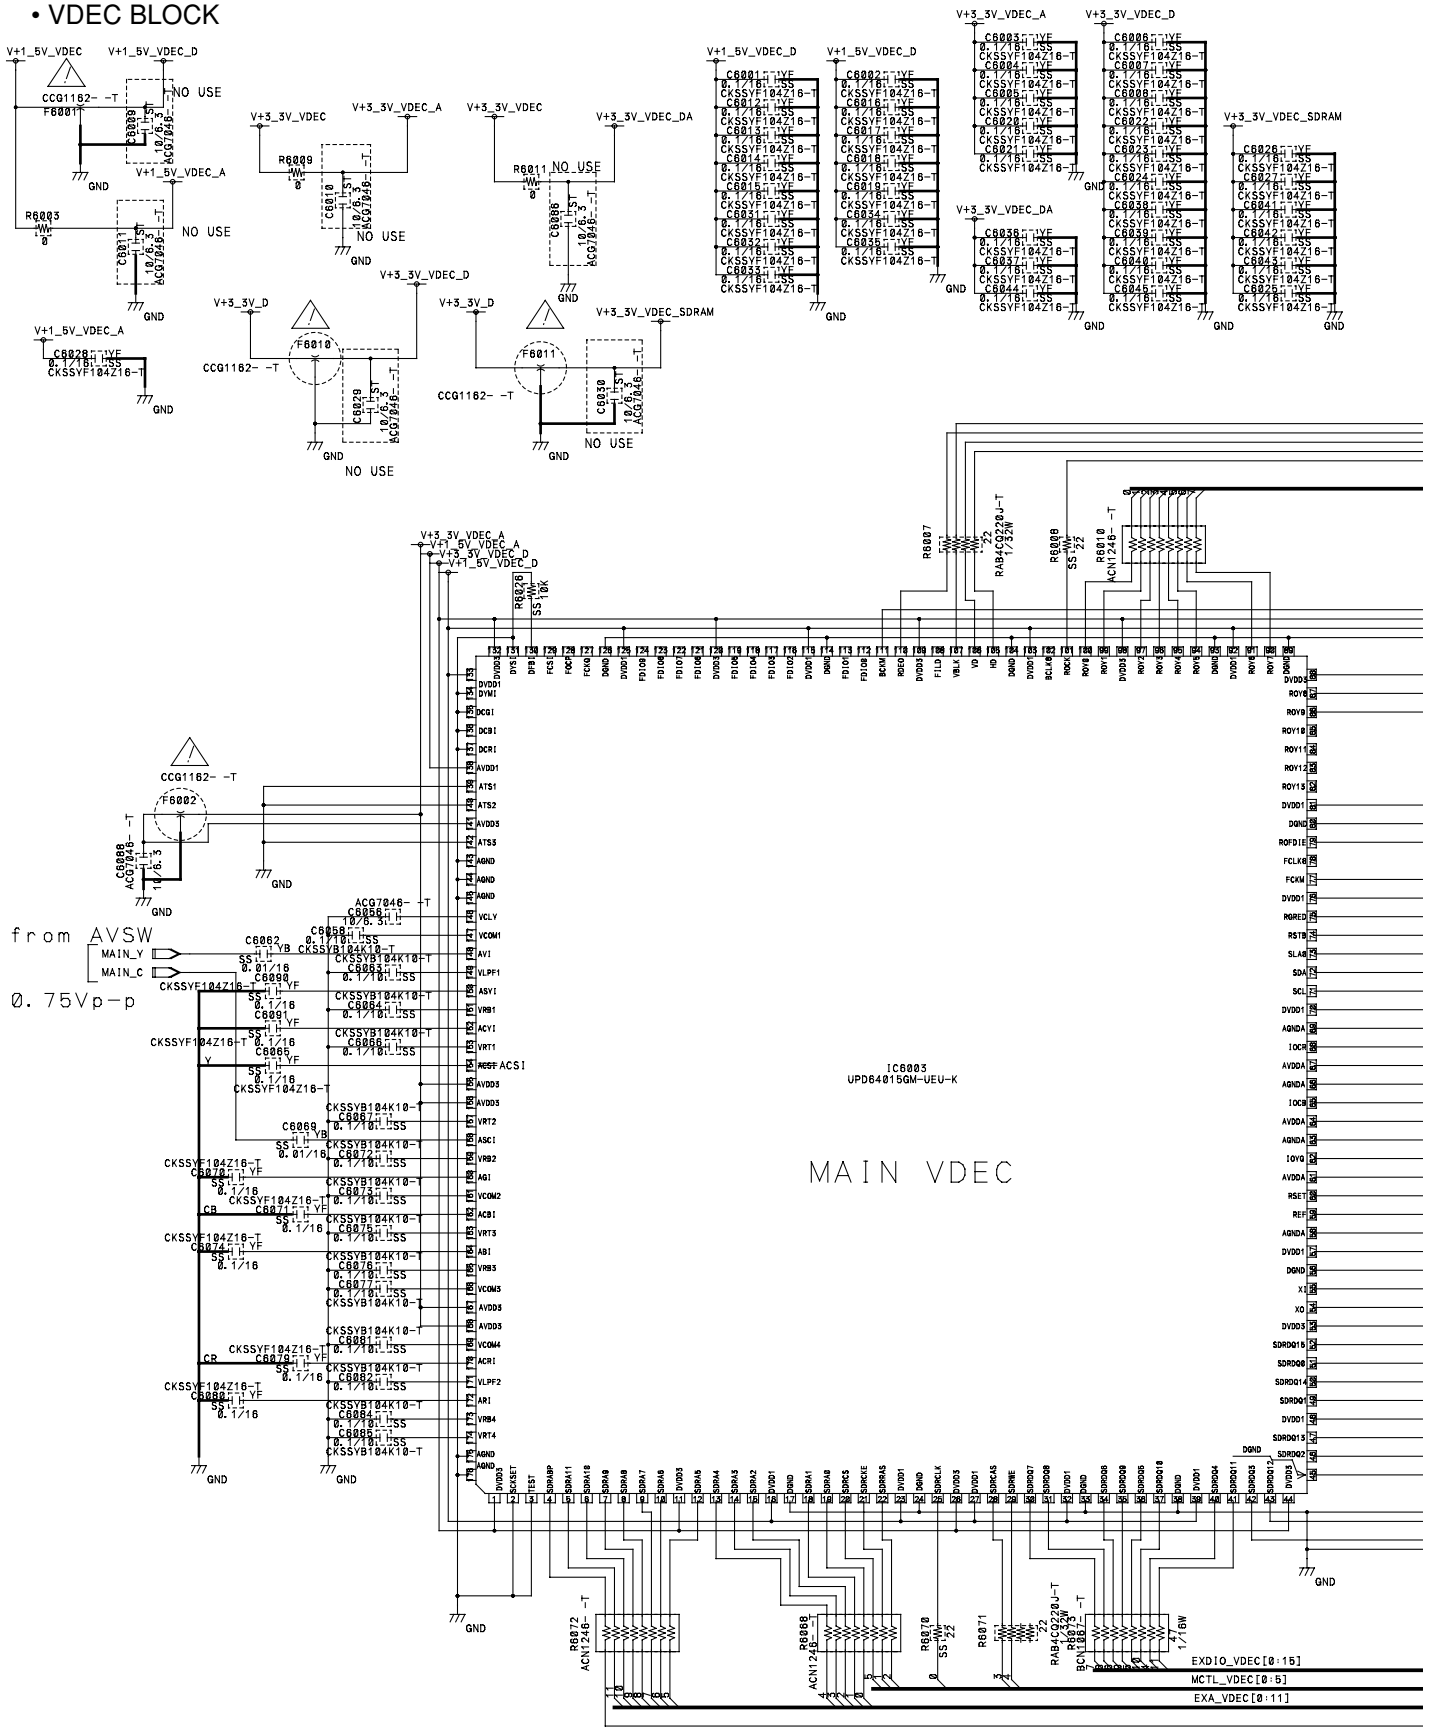


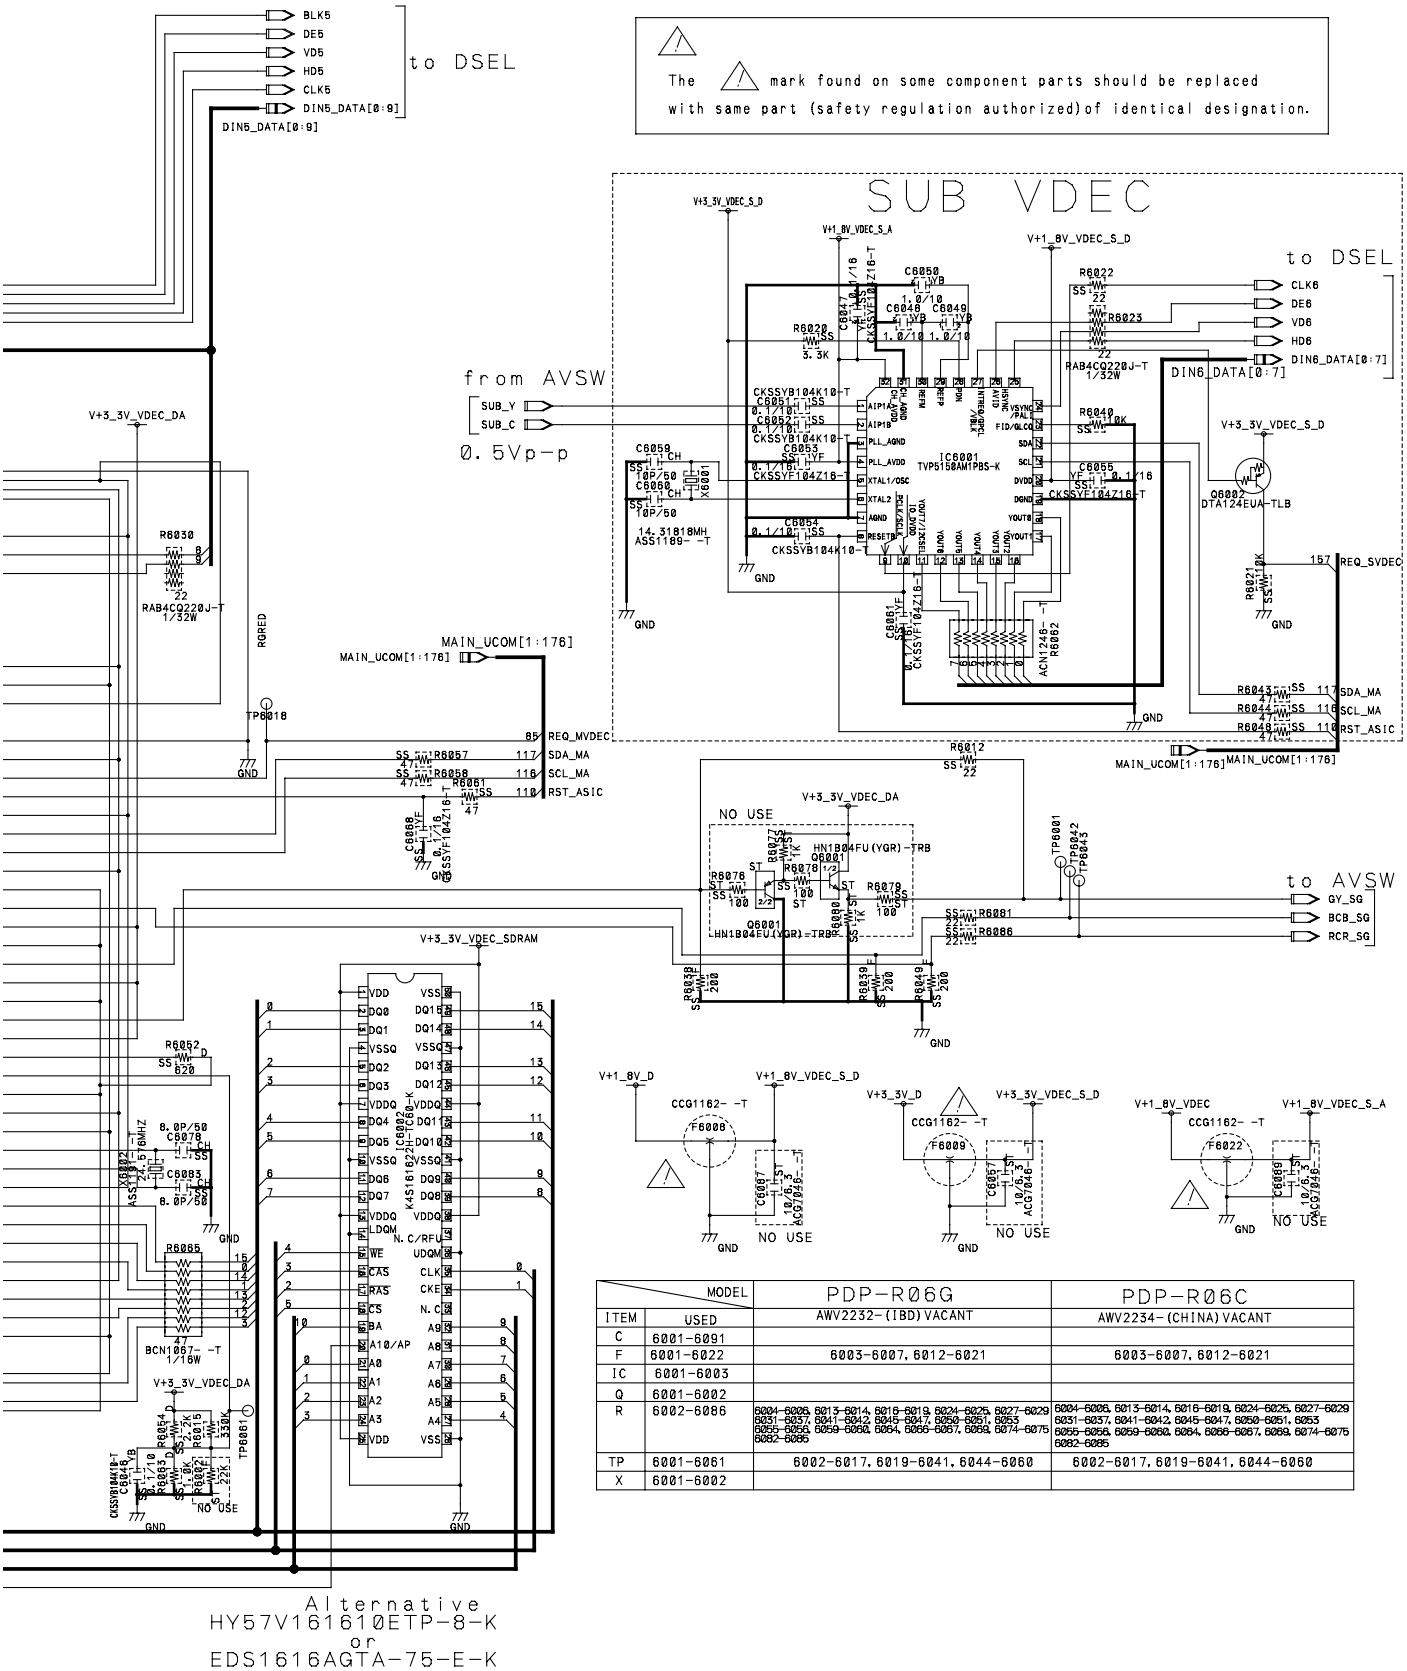


MODEL		PDP-R06G	PDP-R06C
ITEM	USED	AWV2232-(IBD) VACANT	AWV2234-(CHINA) VACANT
C	6001-6091		
F	6001-6022	6003-6007, 6012-6021	6003-6007, 6012-6021
IC	6001-6003		
Q	6001-6002		
R	6002-6086	6024-6026, 6013-6014, 6016-6019, 6024-6025, 6027-6029 6031-6037, 6041-6042, 6045-6047, 6050-6051, 6053 6055-6056, 6059-6062, 6064, 6066-6067, 6069, 6074-6075 6082-6085	6024-6026, 6013-6014, 6016-6019, 6024-6025, 6027-6029 6031-6037, 6041-6042, 6045-6047, 6050-6051, 6053 6055-6056, 6059-6062, 6064, 6066-6067, 6069, 6074-6075 6082-6085
TP	6001-6061	6002-6017, 6019-6041, 6044-6060	6002-6017, 6019-6041, 6044-6060
X	6001-6002		

MR MAIN ASSY (10/15)

• ADC BLOCK

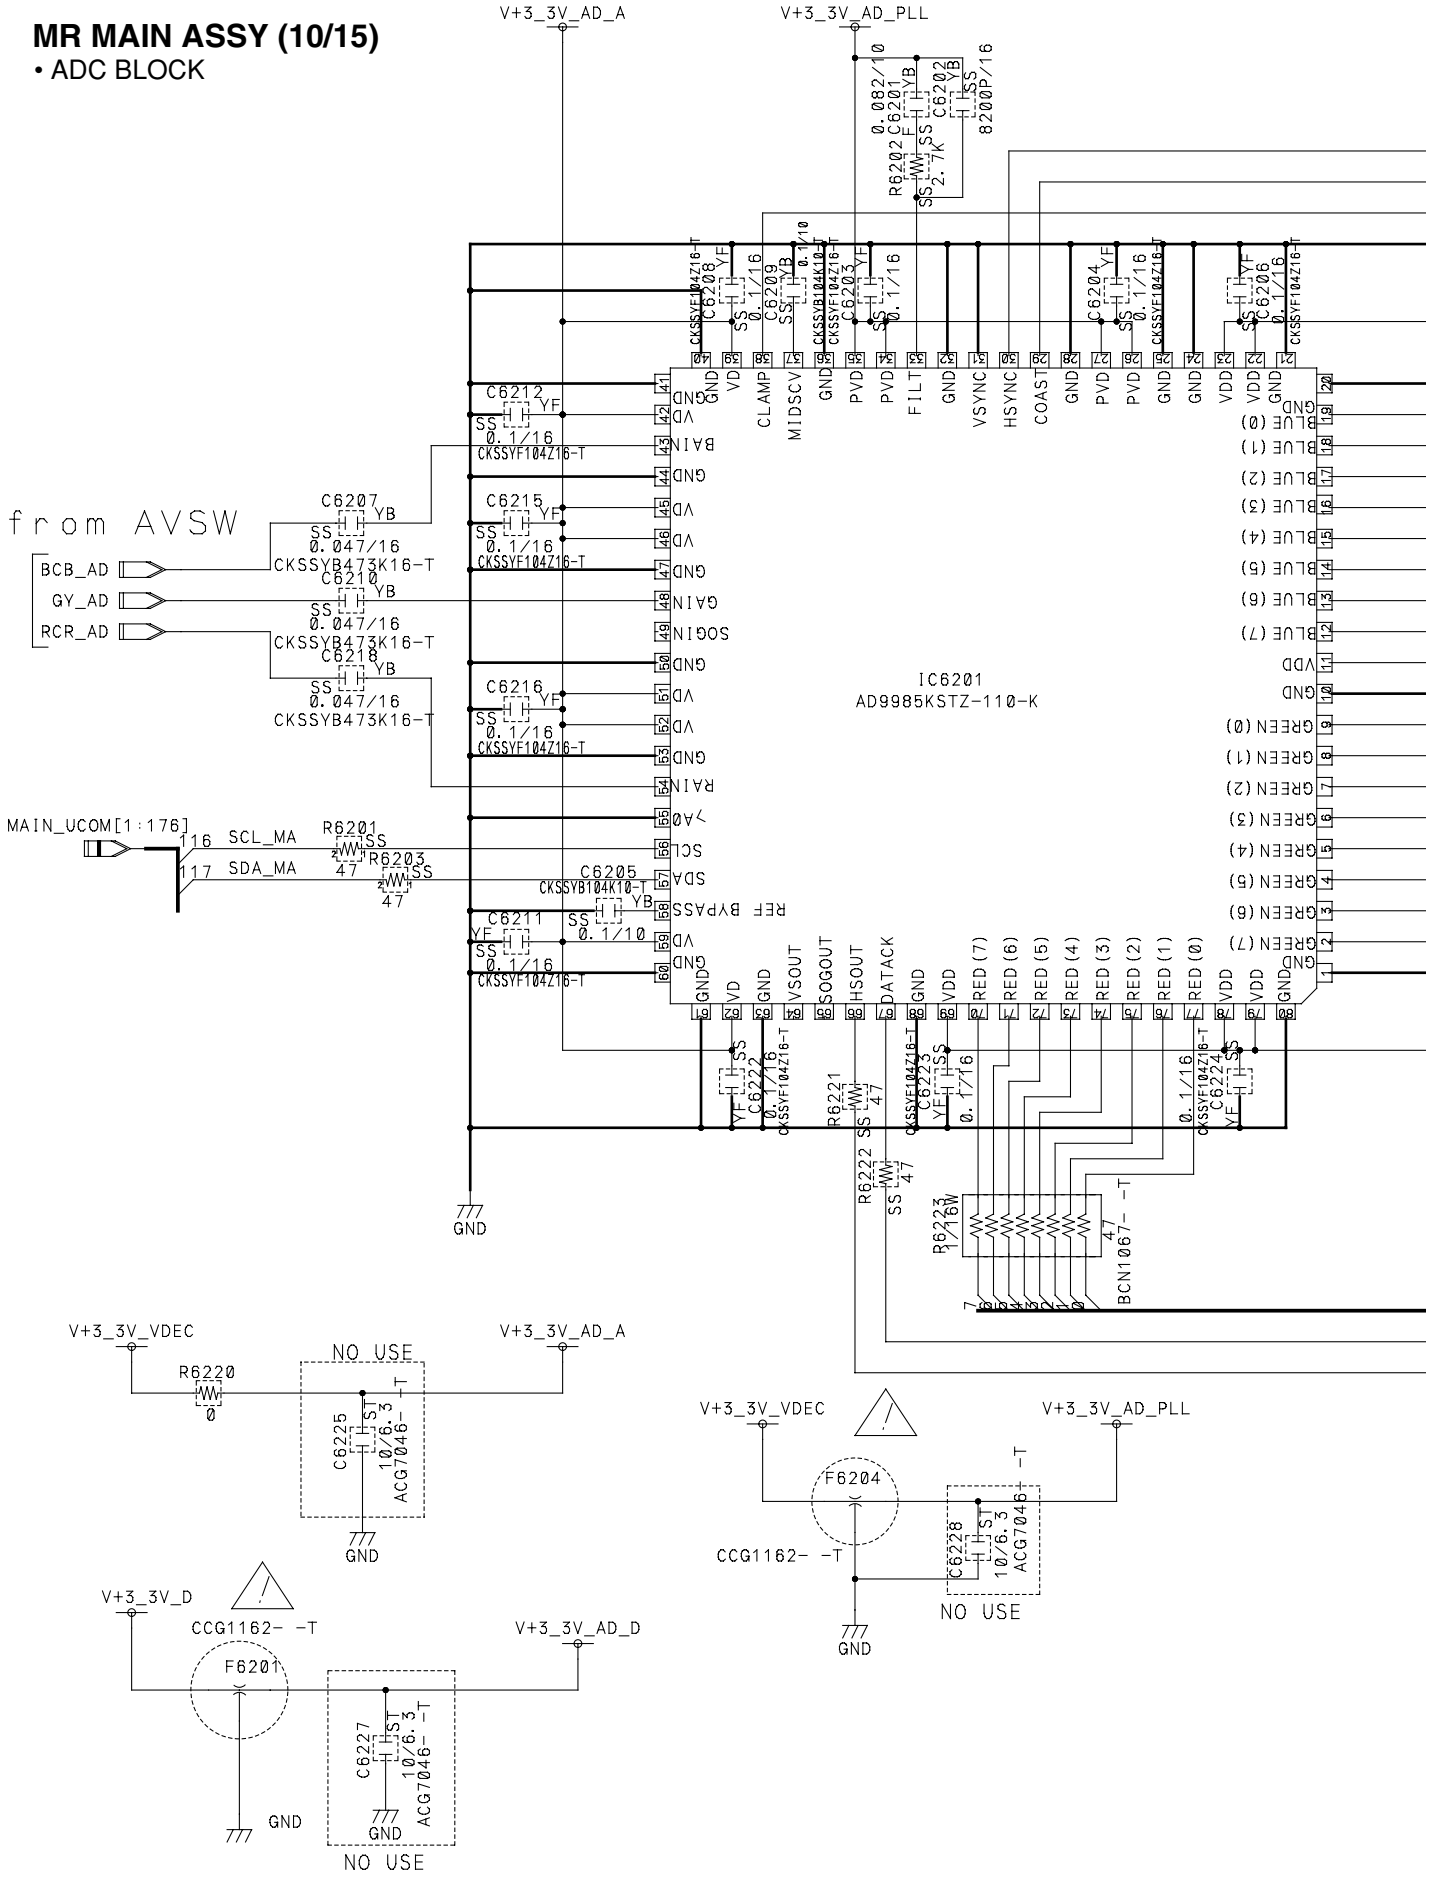

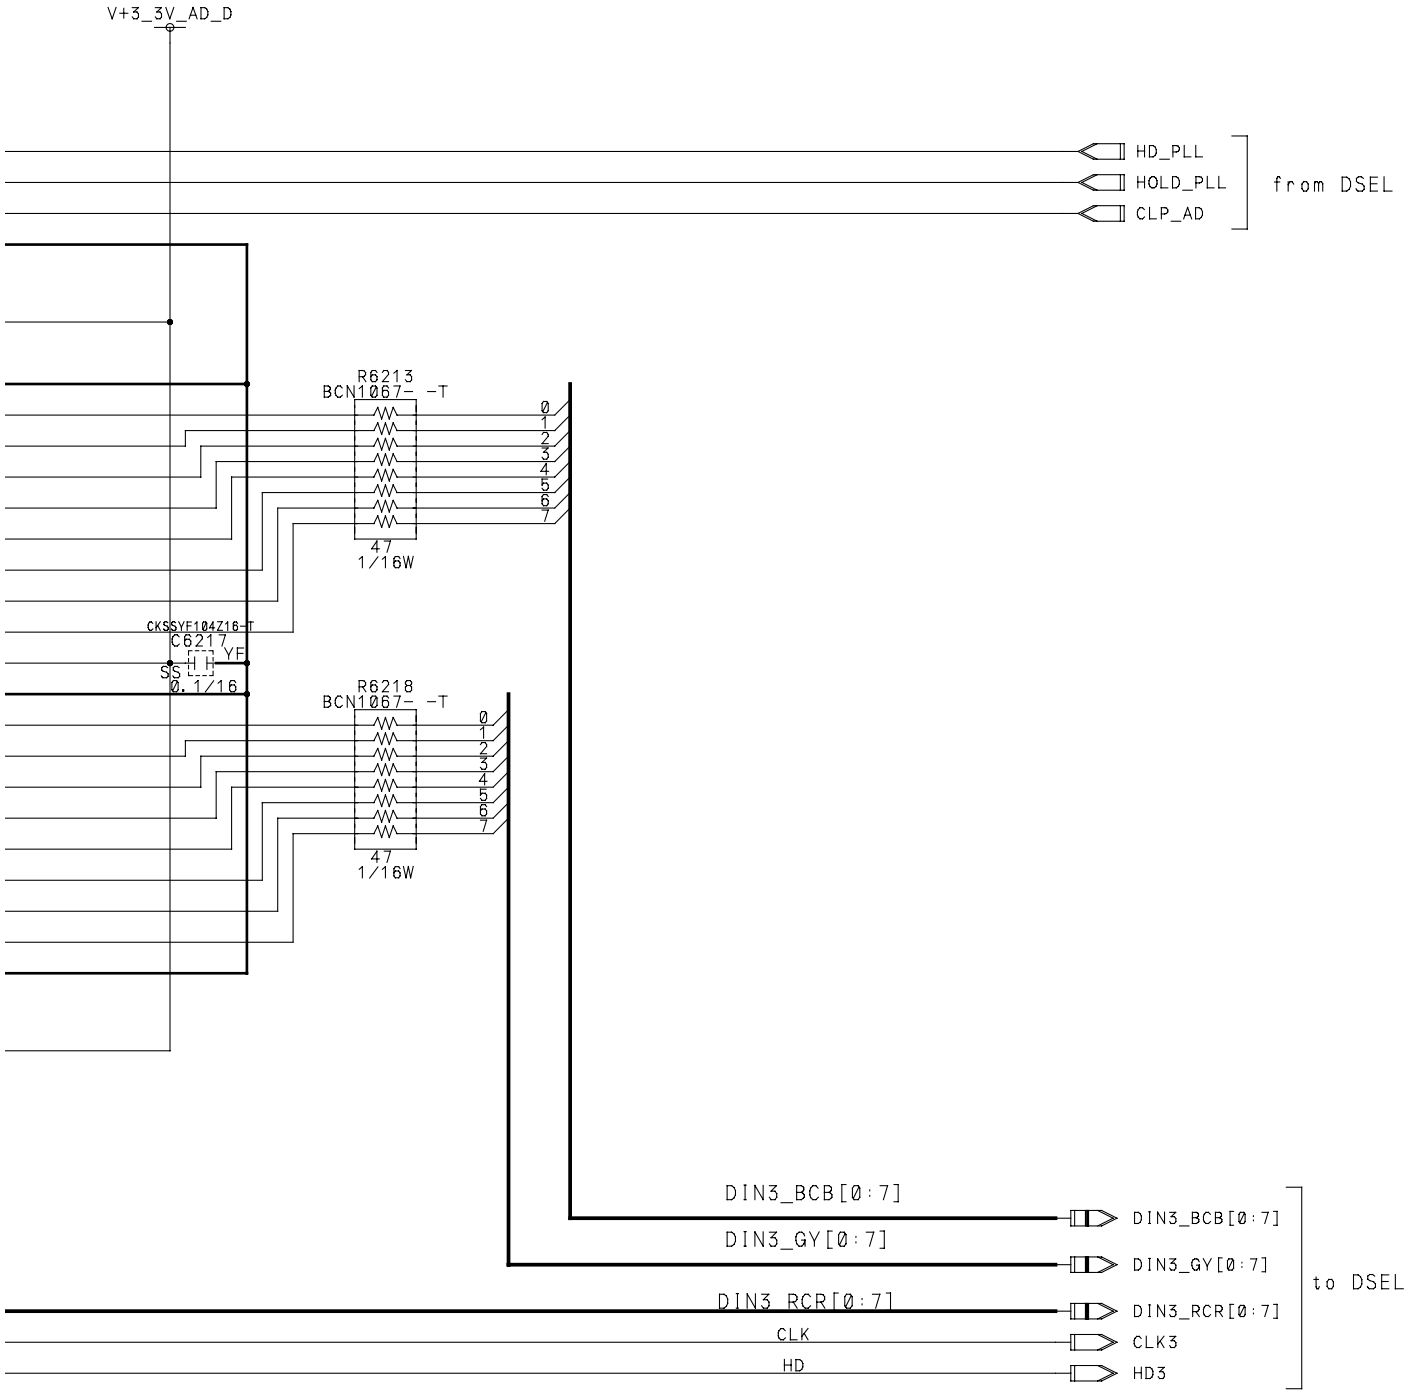



The ⚠ mark found on some component parts should be replaced with same part (safety regulation authorized) of identical designation.

MODEL / ITEM	USED	PDP-R06G	PDP-R06C
		AWV2232-(IBD) VACANT	AWV2234-(CHINA) VACANT
C	6201-6228	6213-6214, 6219-6221, 6226	6213-6214, 6219-6221, 6226
F	6201-6204	6202-6203	6202-6203
IC	6201-6201		
R	6201-6223	6204-6212, 6214-6217, 6219	6204-6212, 6214-6217, 6219

MR MAIN ASSY (11/15)

• HDMI BLOCK

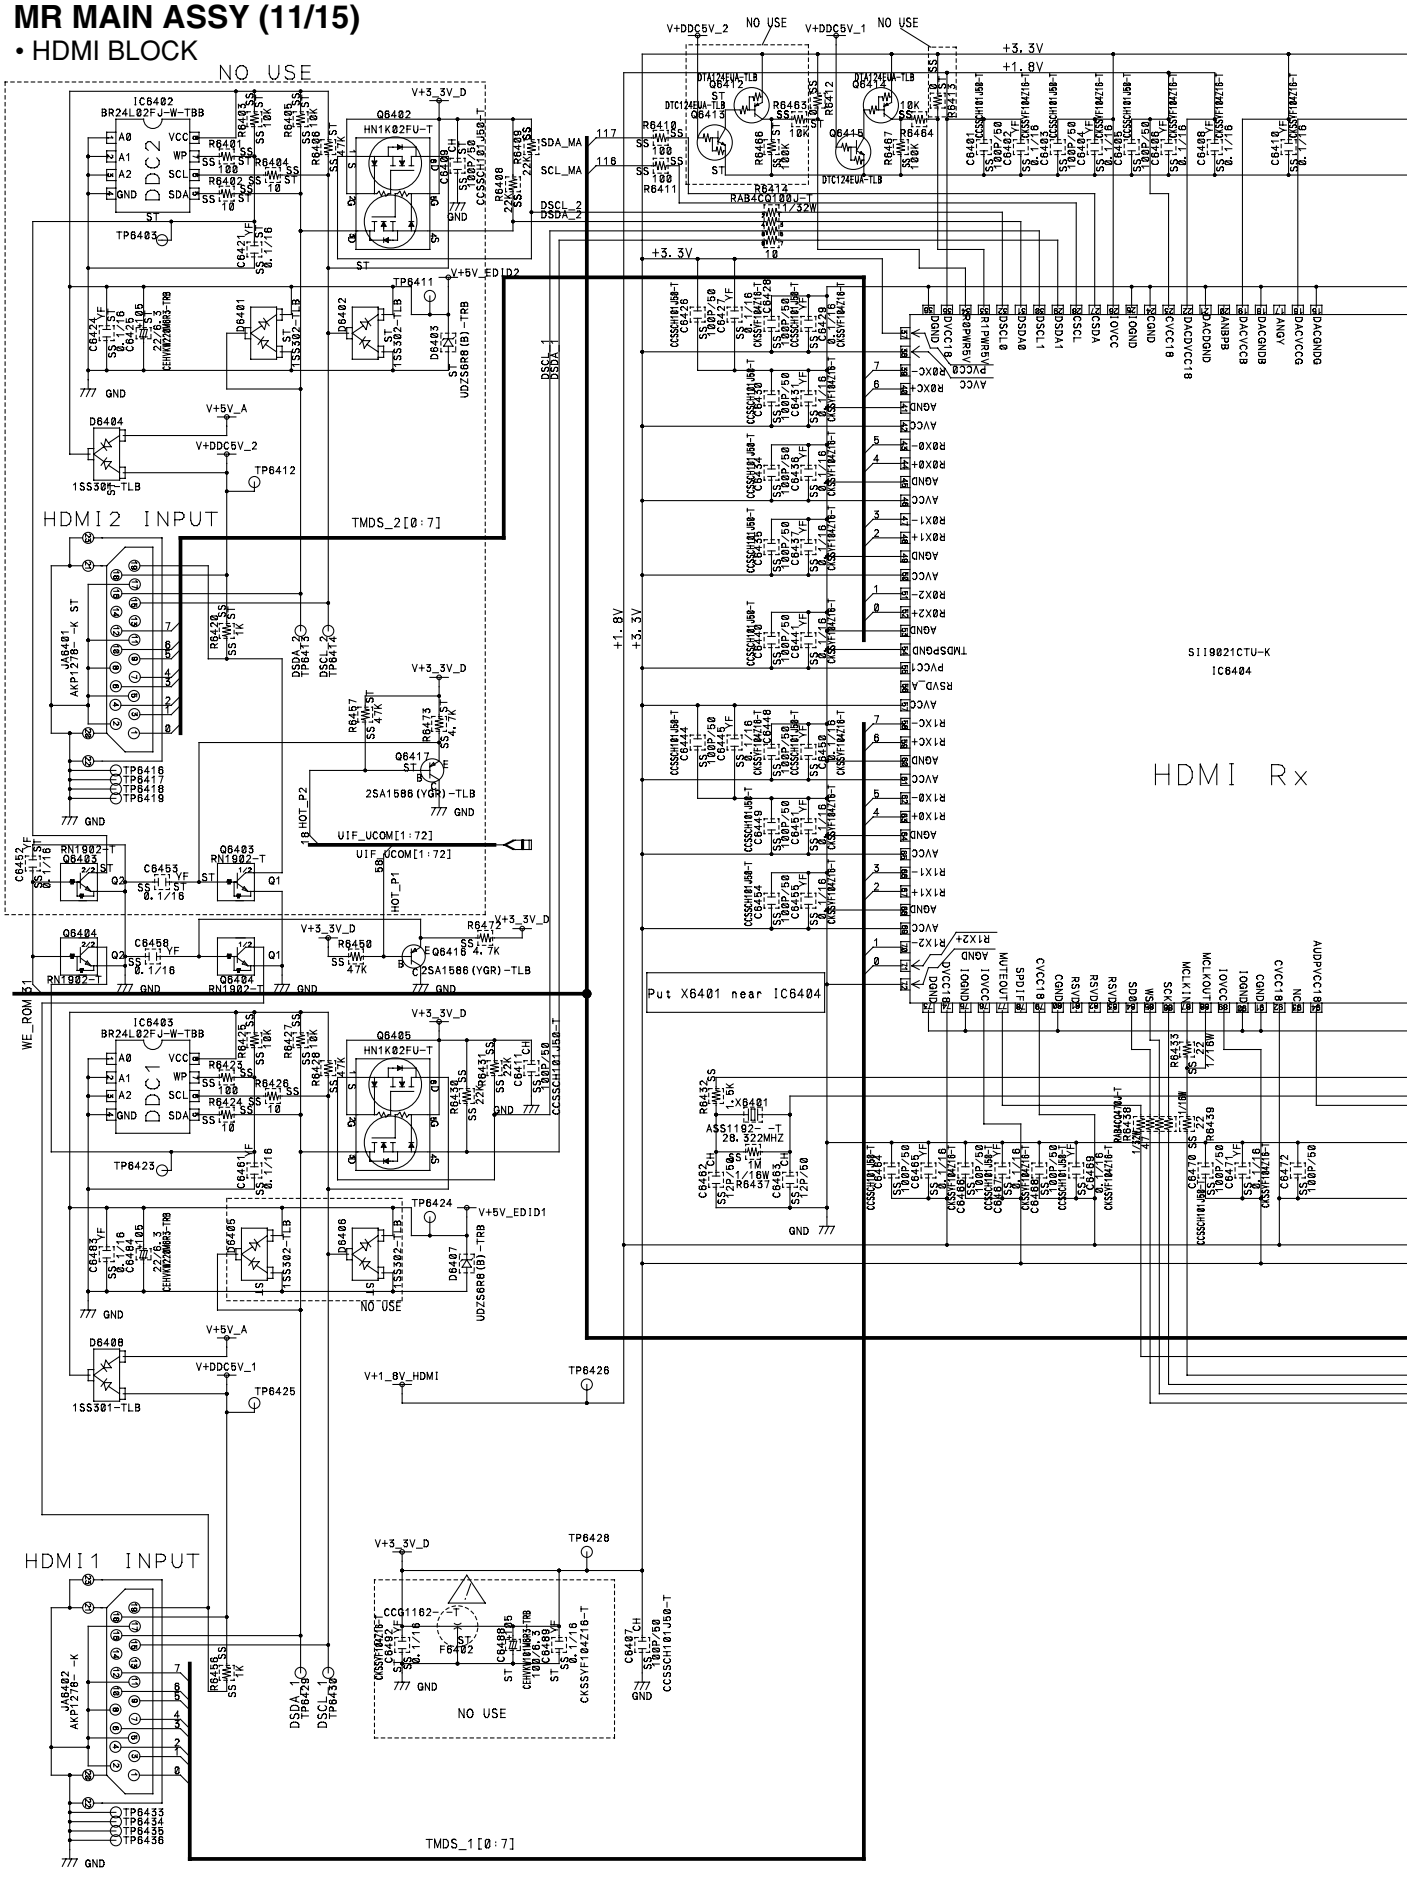

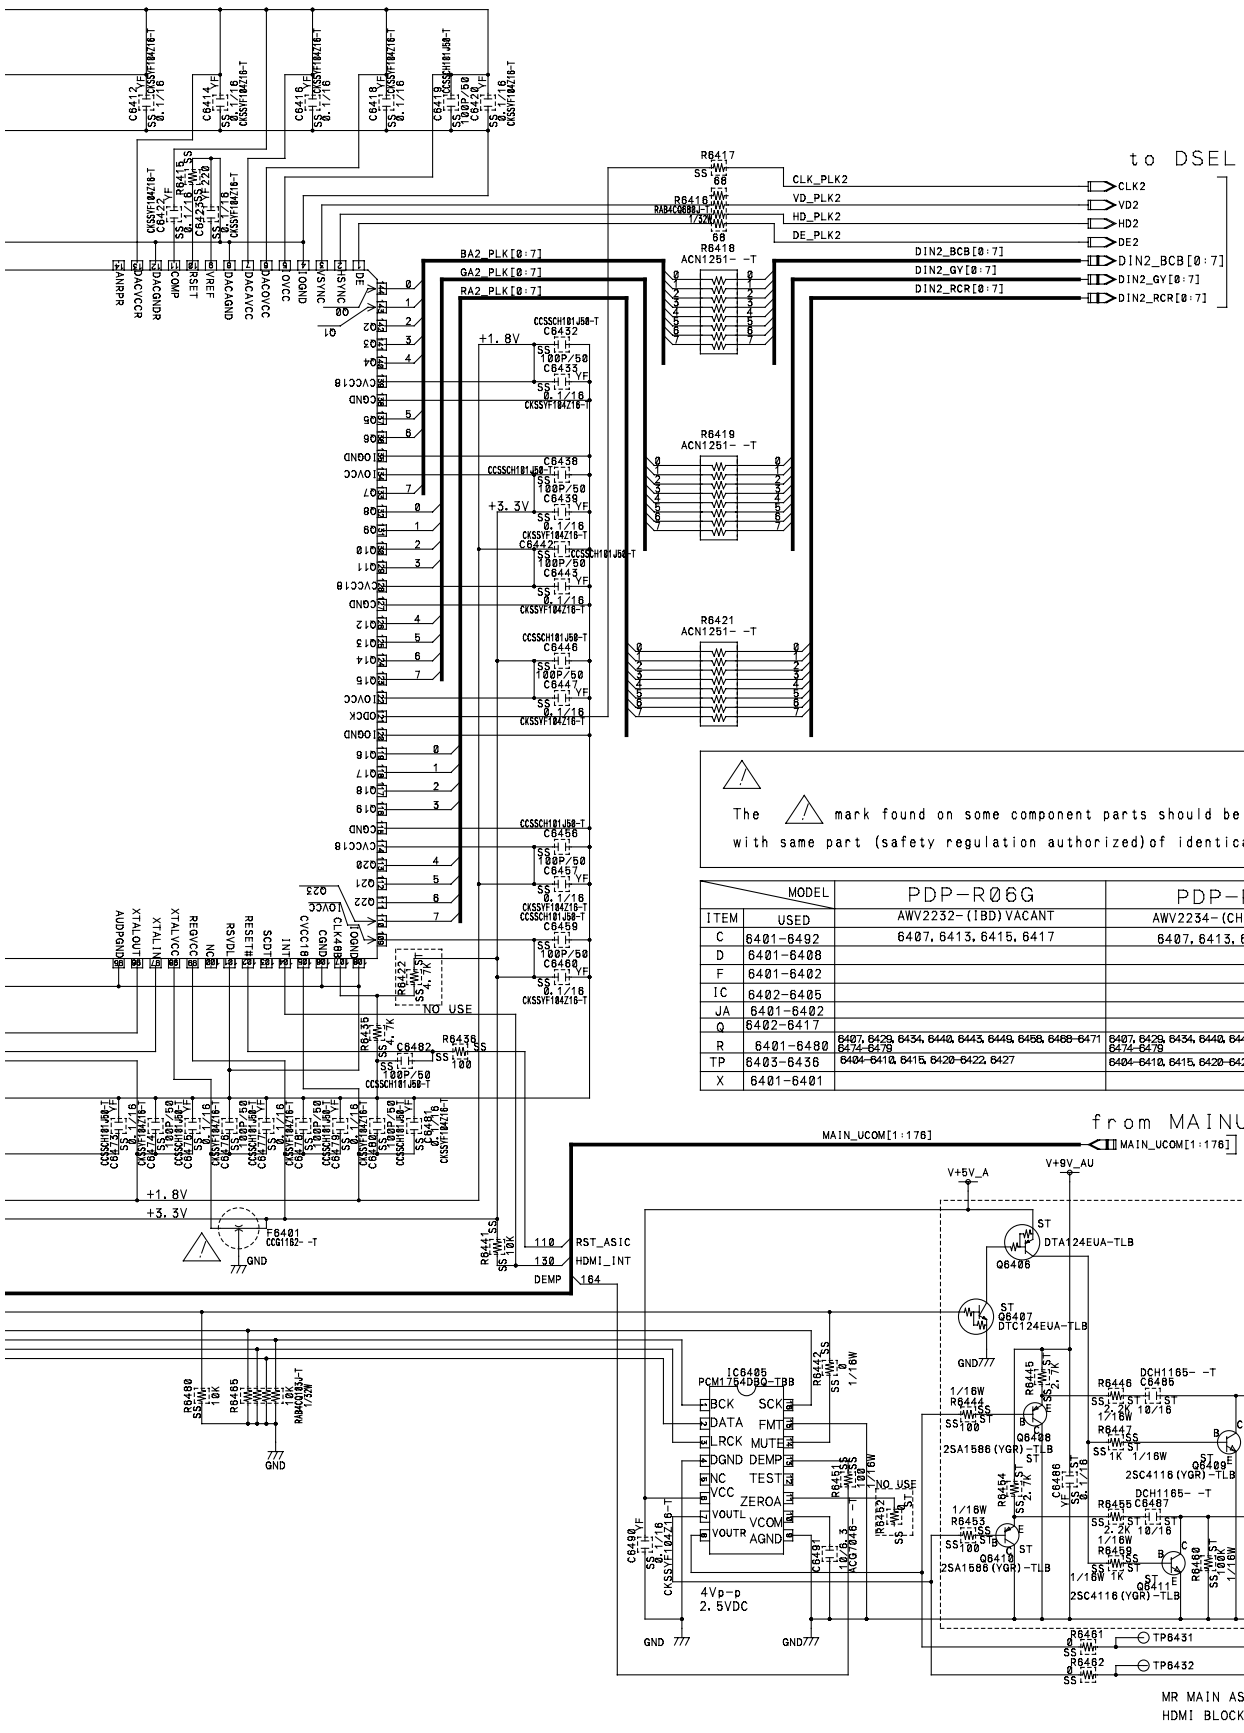


MODEL		PDP-R06G	PDP-R06C
ITEM	USED	AWV2232-(IBD) VACANT	AWV2234-(CHINA) VACANT
C	6401-6492	6407, 6413, 6415, 6417	6407, 6413, 6415, 6417
D	6401-6408		
F	6401-6402		
IC	6402-6405		
JA	6401-6402		
Q	6402-6417		
R	6401-6480	6407, 6429, 6434, 6440, 6443, 6449, 6458, 6468-6471 6474-6479	6407, 6429, 6434, 6440, 6443, 6449, 6458, 6468-6471 6474-6479
TP	6403-6436	6404-6410, 6415, 6420-6422, 6427	6404-6410, 6415, 6420-6422, 6427
X	6401-6401		


3.14 MR MAIN ASSY (12/15)

MR MAIN ASSY (12/15)

• DSEL BLOCK

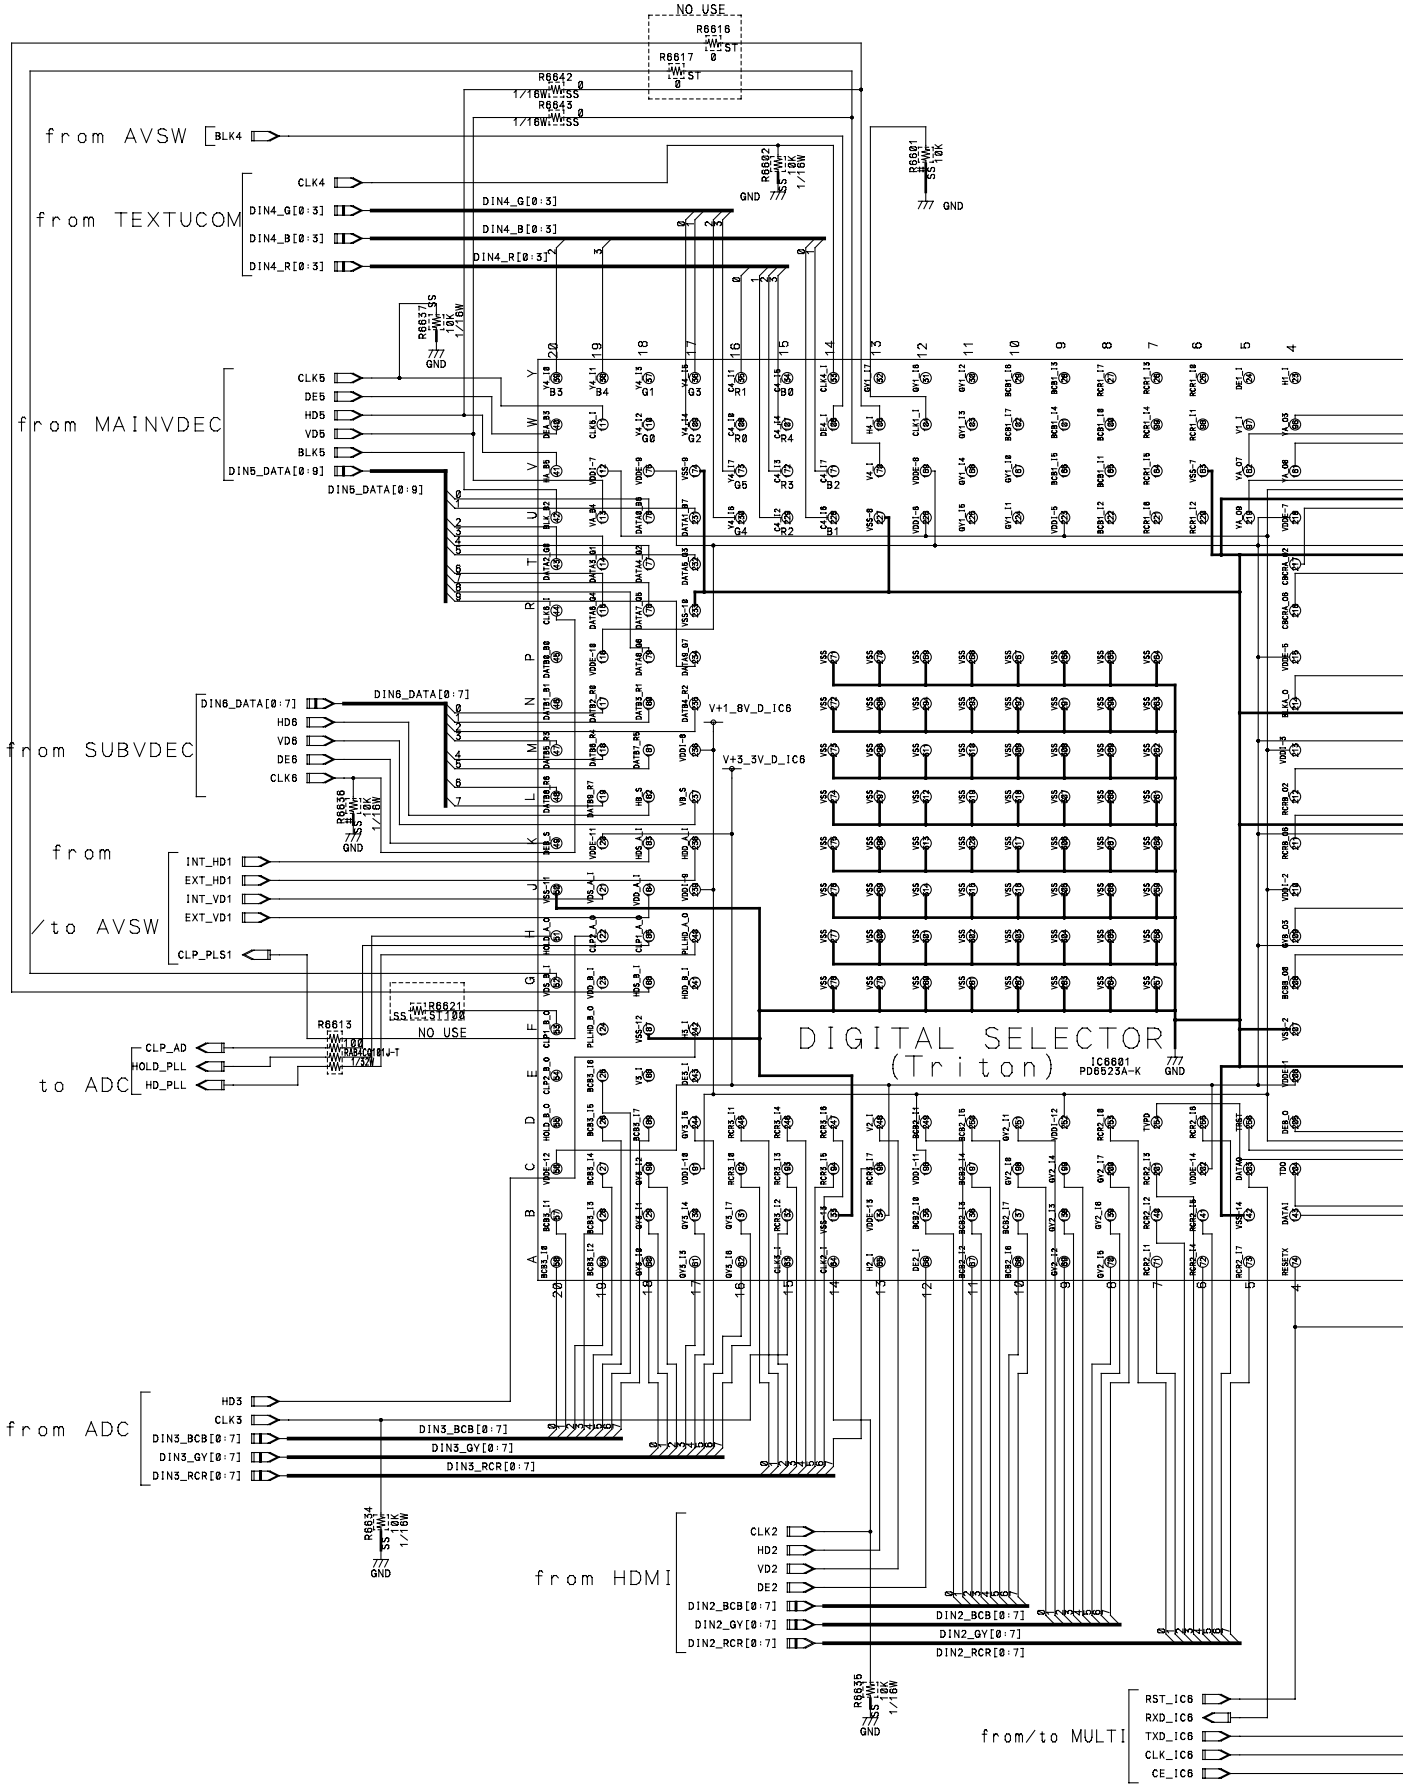

The ⚠ mark found on some component parts should be replaced with same part (safety regulation authorized)of identical designation.

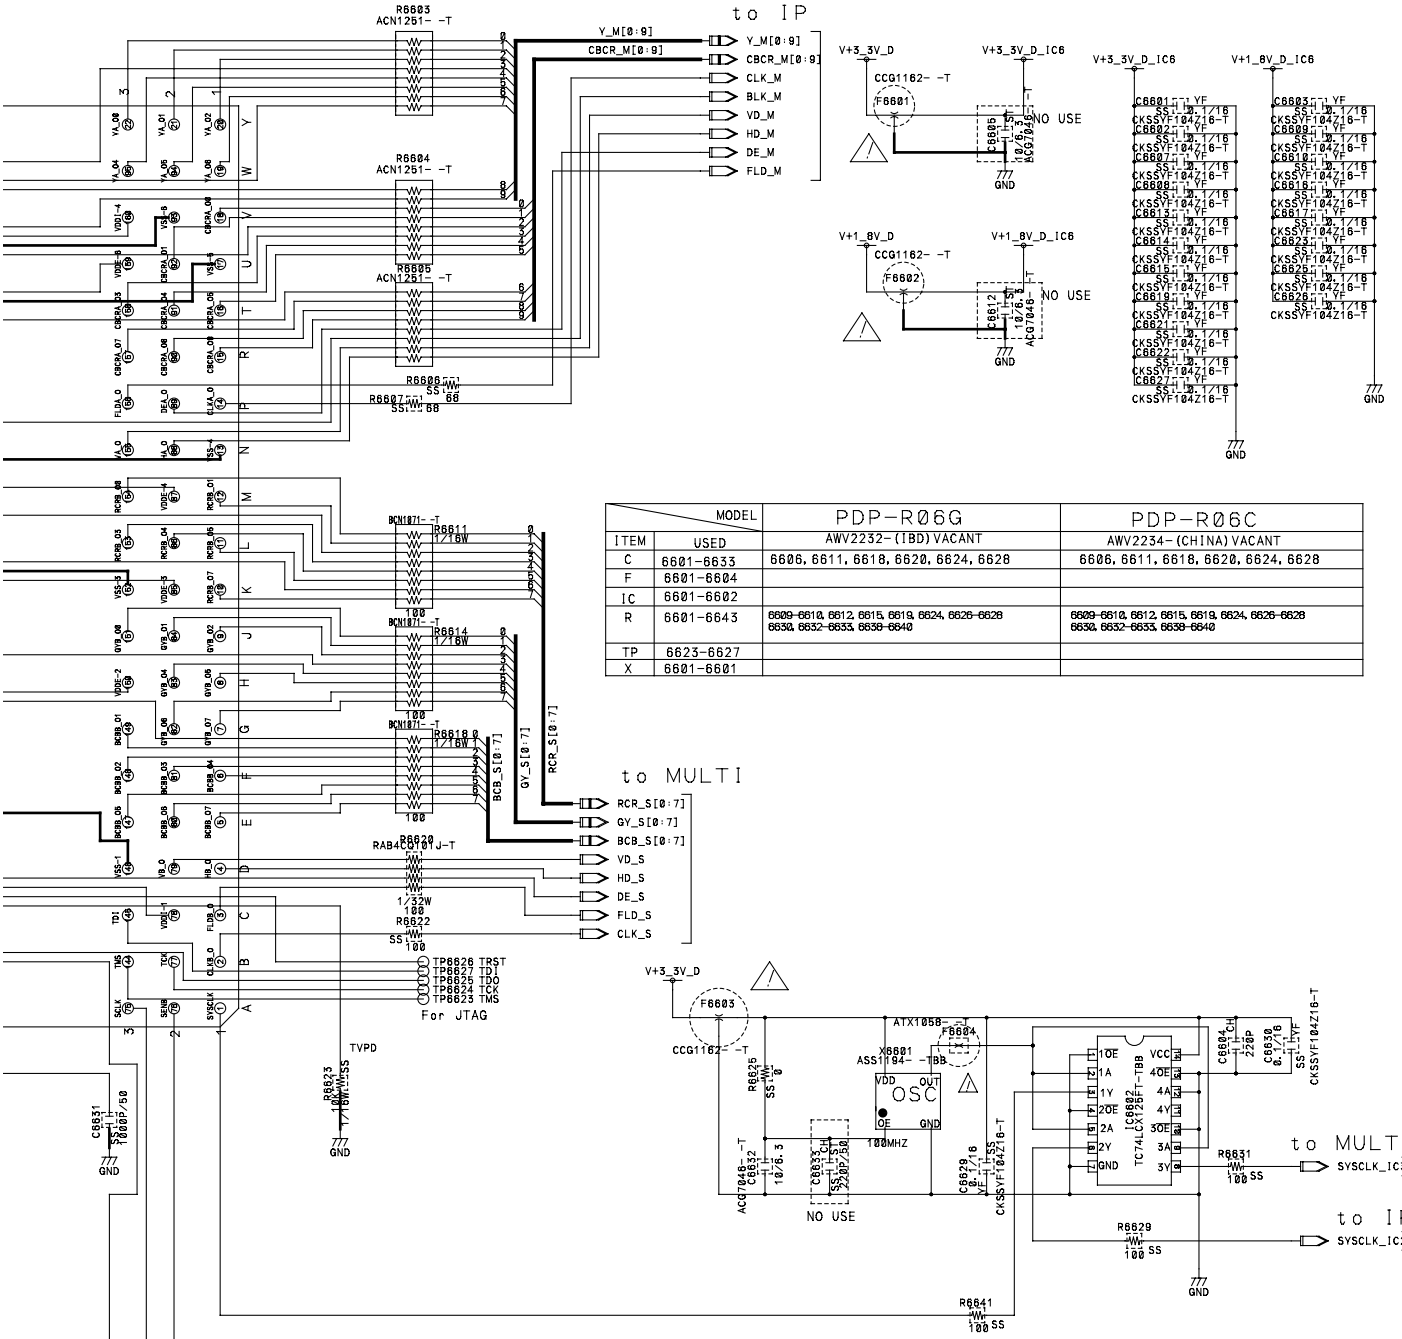



MODEL		PDP-R06G	PDP-R06C
ITEM	USED	AWV2232-(IBD)VACANT	AWV2234-(CHINA)VACANT
C	6601-6633	6606, 6611, 6618, 6620, 6624, 6628	6606, 6611, 6618, 6620, 6624, 6628
F	6601-6604		
IC	6601-6602		
R	6601-6643	6609-6610, 6612, 6615, 6619, 6624, 6626-6628 6630, 6632-6633, 6639-6640	6609-6610, 6612, 6615, 6619, 6624, 6626-6628 6630, 6632-6633, 6639-6640
TP	6623-6627		
X	6601-6601		

3.15 MR MAIN ASSY (13/15)

MR MAIN ASSY (13/15)

• IP BLOCK

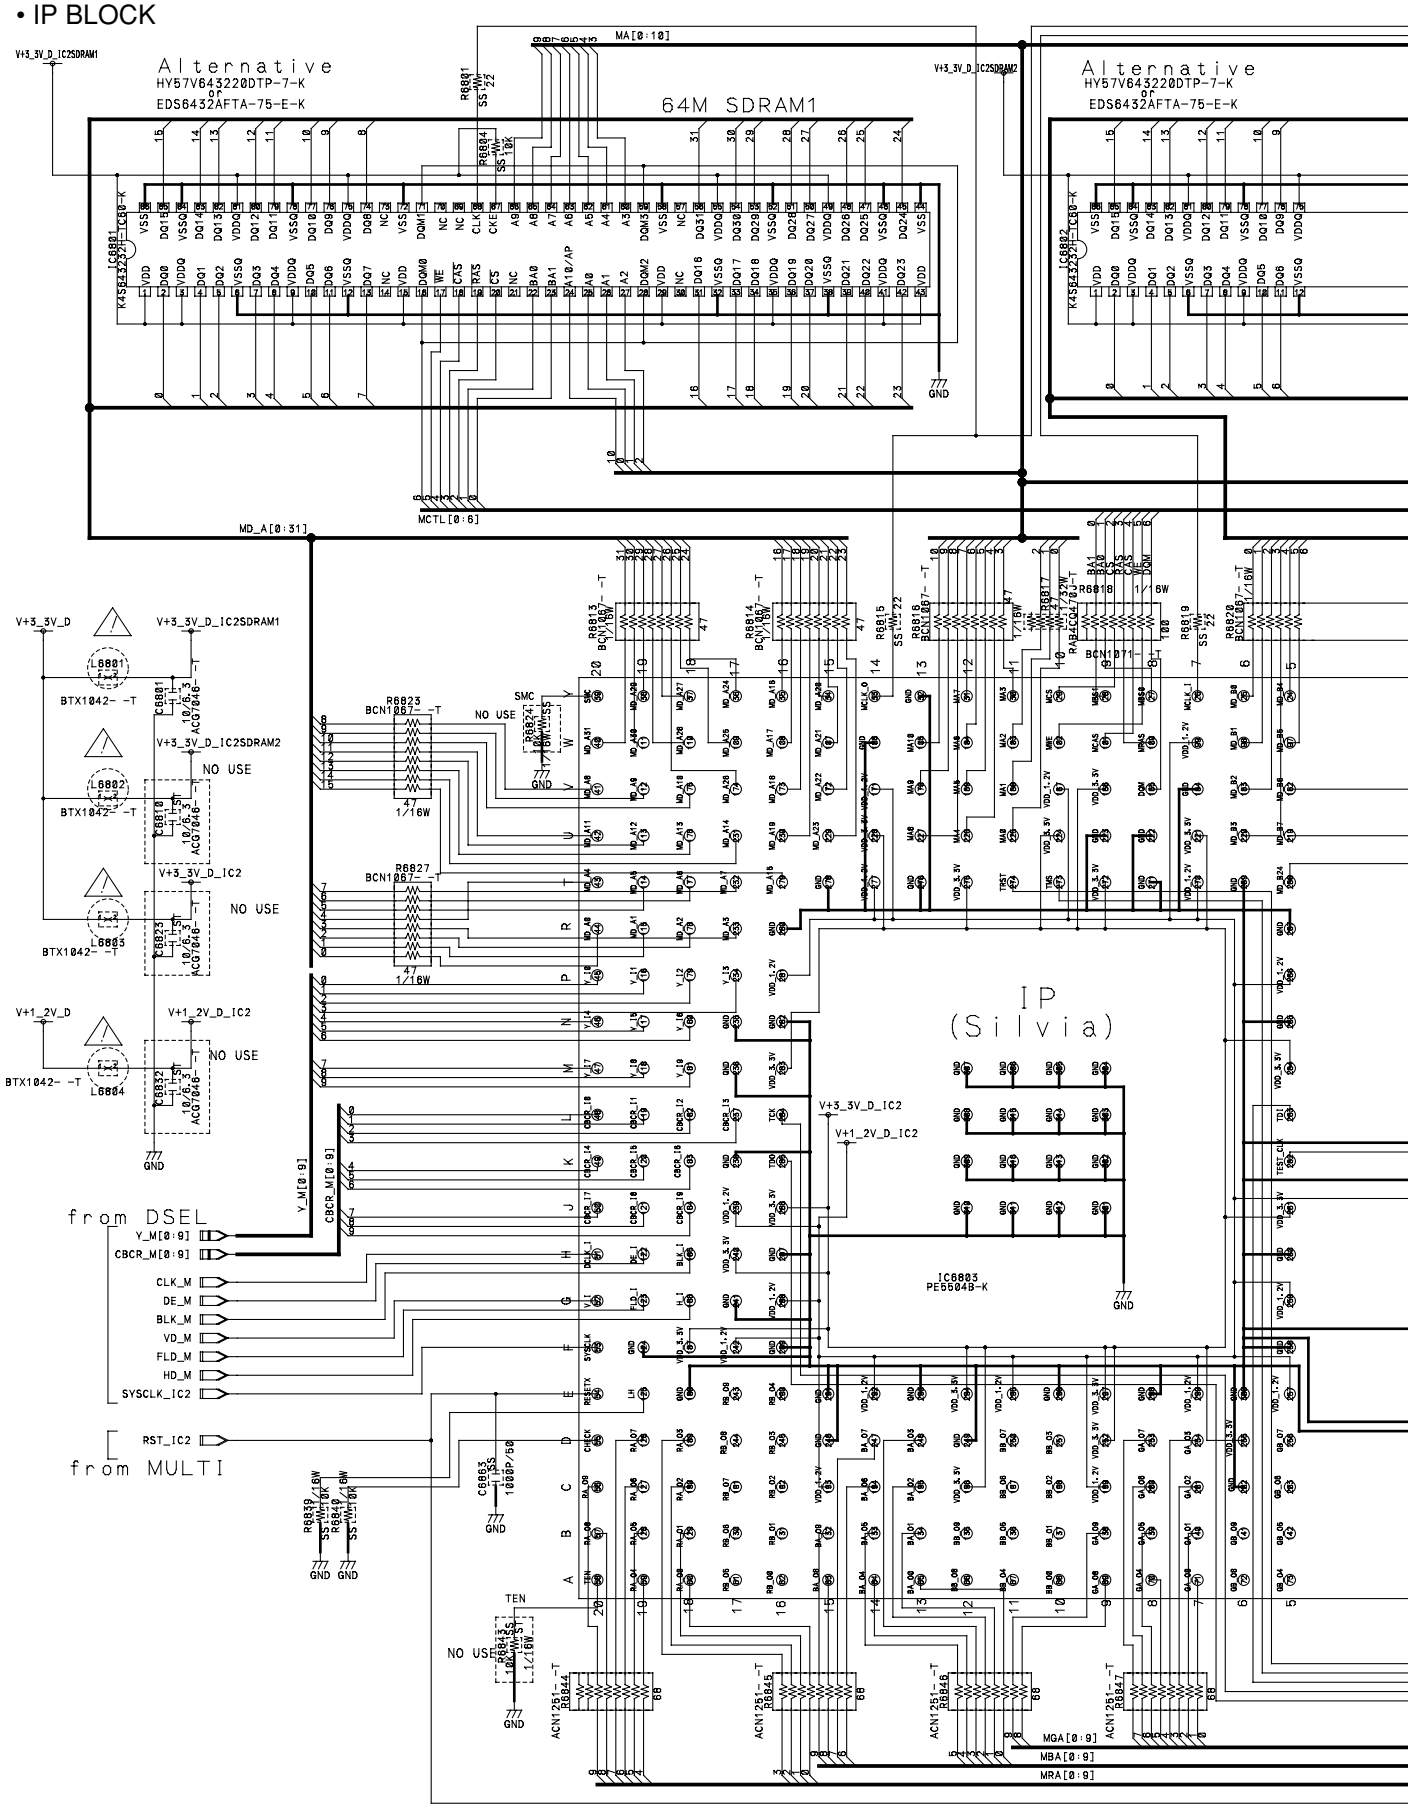


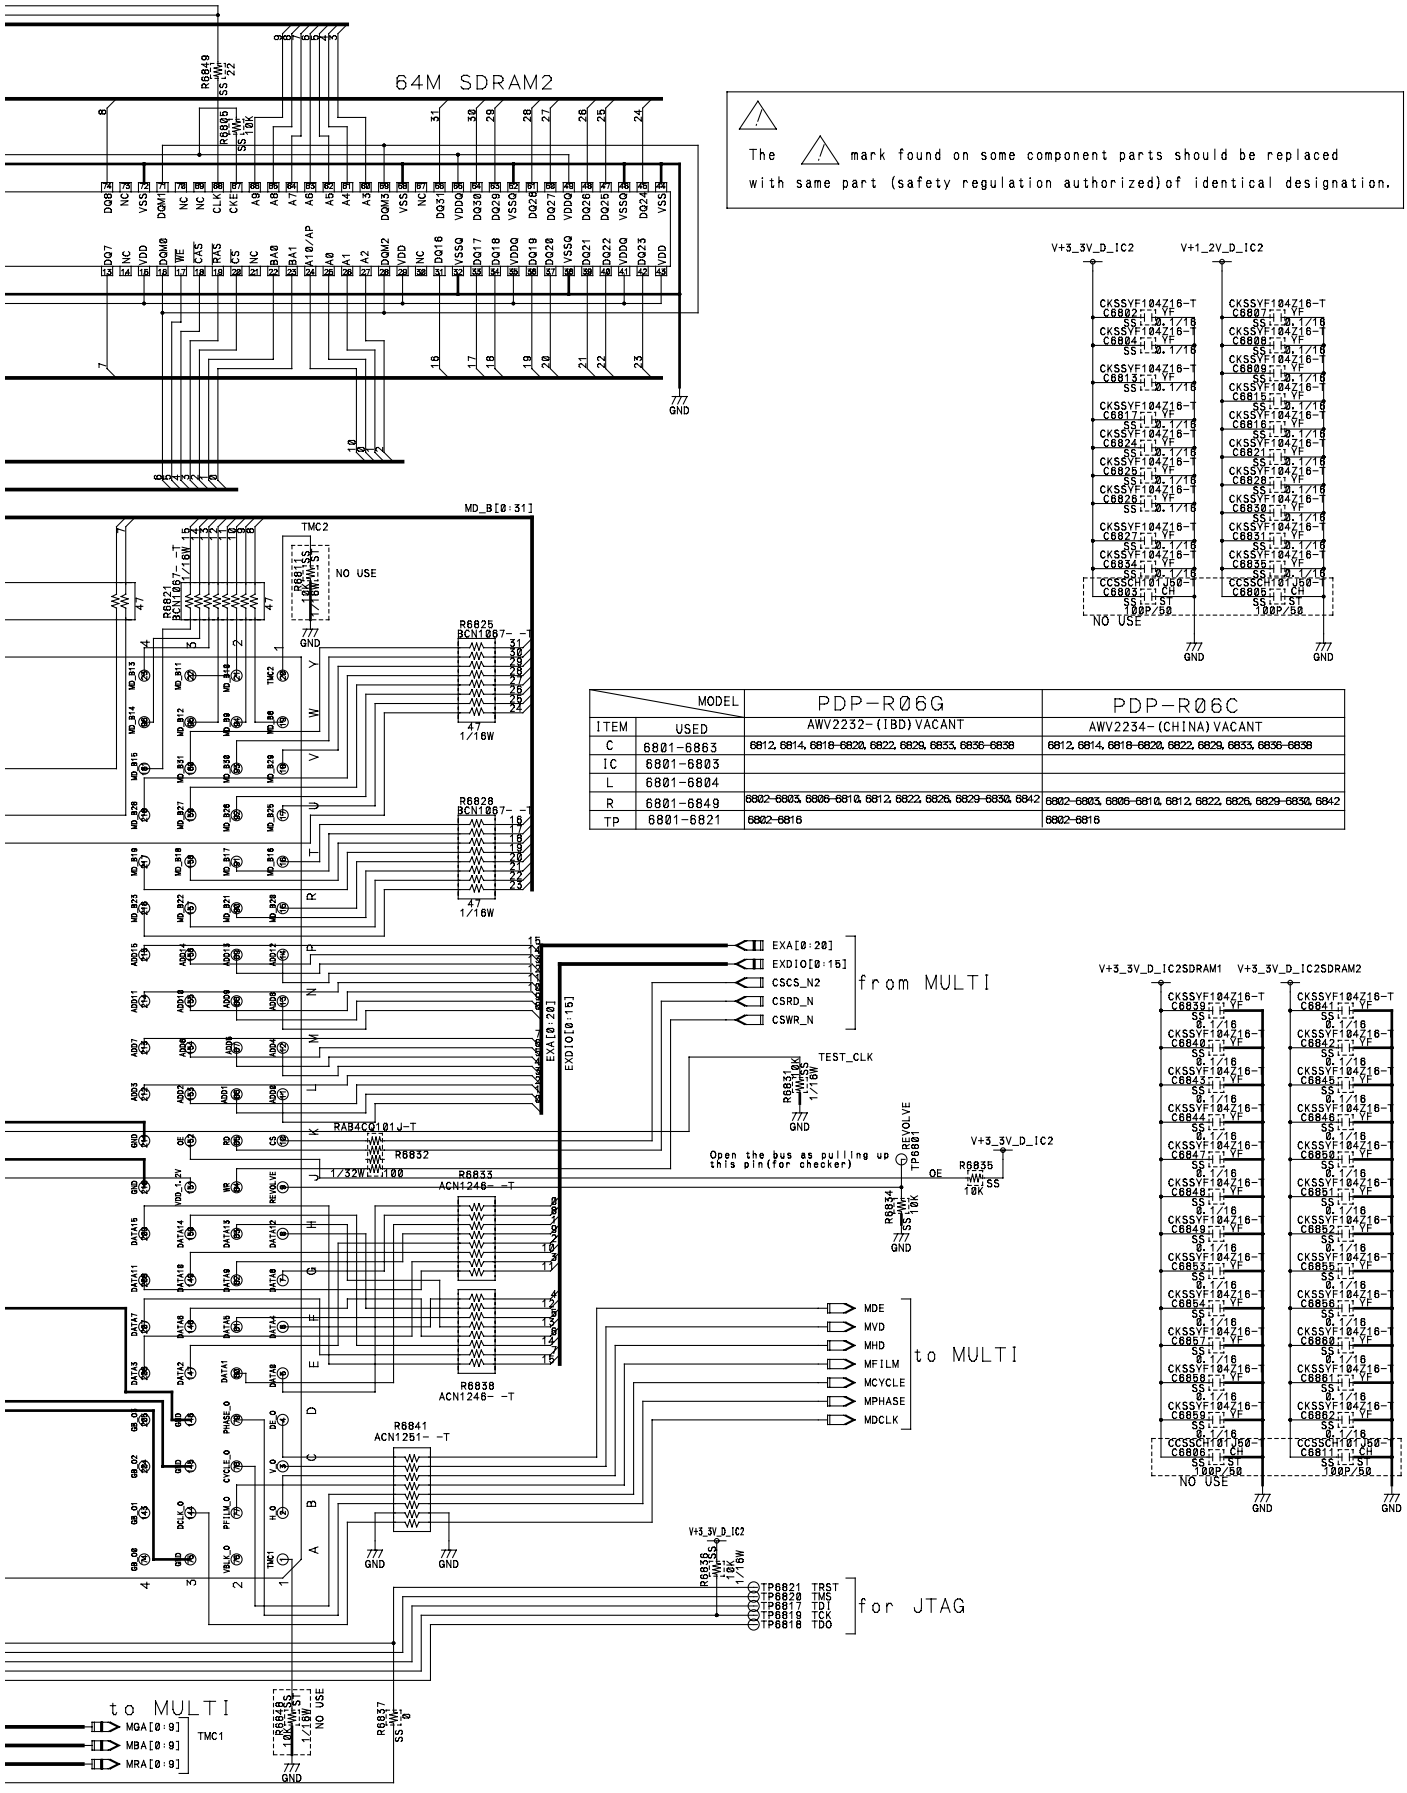


MODEL		PDP-R06G	PDP-R06C
ITEM	USED	AWV2232-(IBD) VACANT	AWV2234-(CHINA) VACANT
C	6801-6863	6812, 6814, 6818-6820, 6822, 6829, 6833, 6836-6838	6812, 6814, 6818-6820, 6822, 6829, 6833, 6836-6838
IC	6801-6803		
L	6801-6804		
R	6801-6849	6802-6803, 6806-6810, 6812, 6822, 6826, 6829-6830, 6842	6802-6803, 6806-6810, 6812, 6822, 6826, 6829-6830, 6842
TP	6801-6821	6802-6816	6802-6816

MR MAIN ASSY (14/15)

• MULTI BLOCK

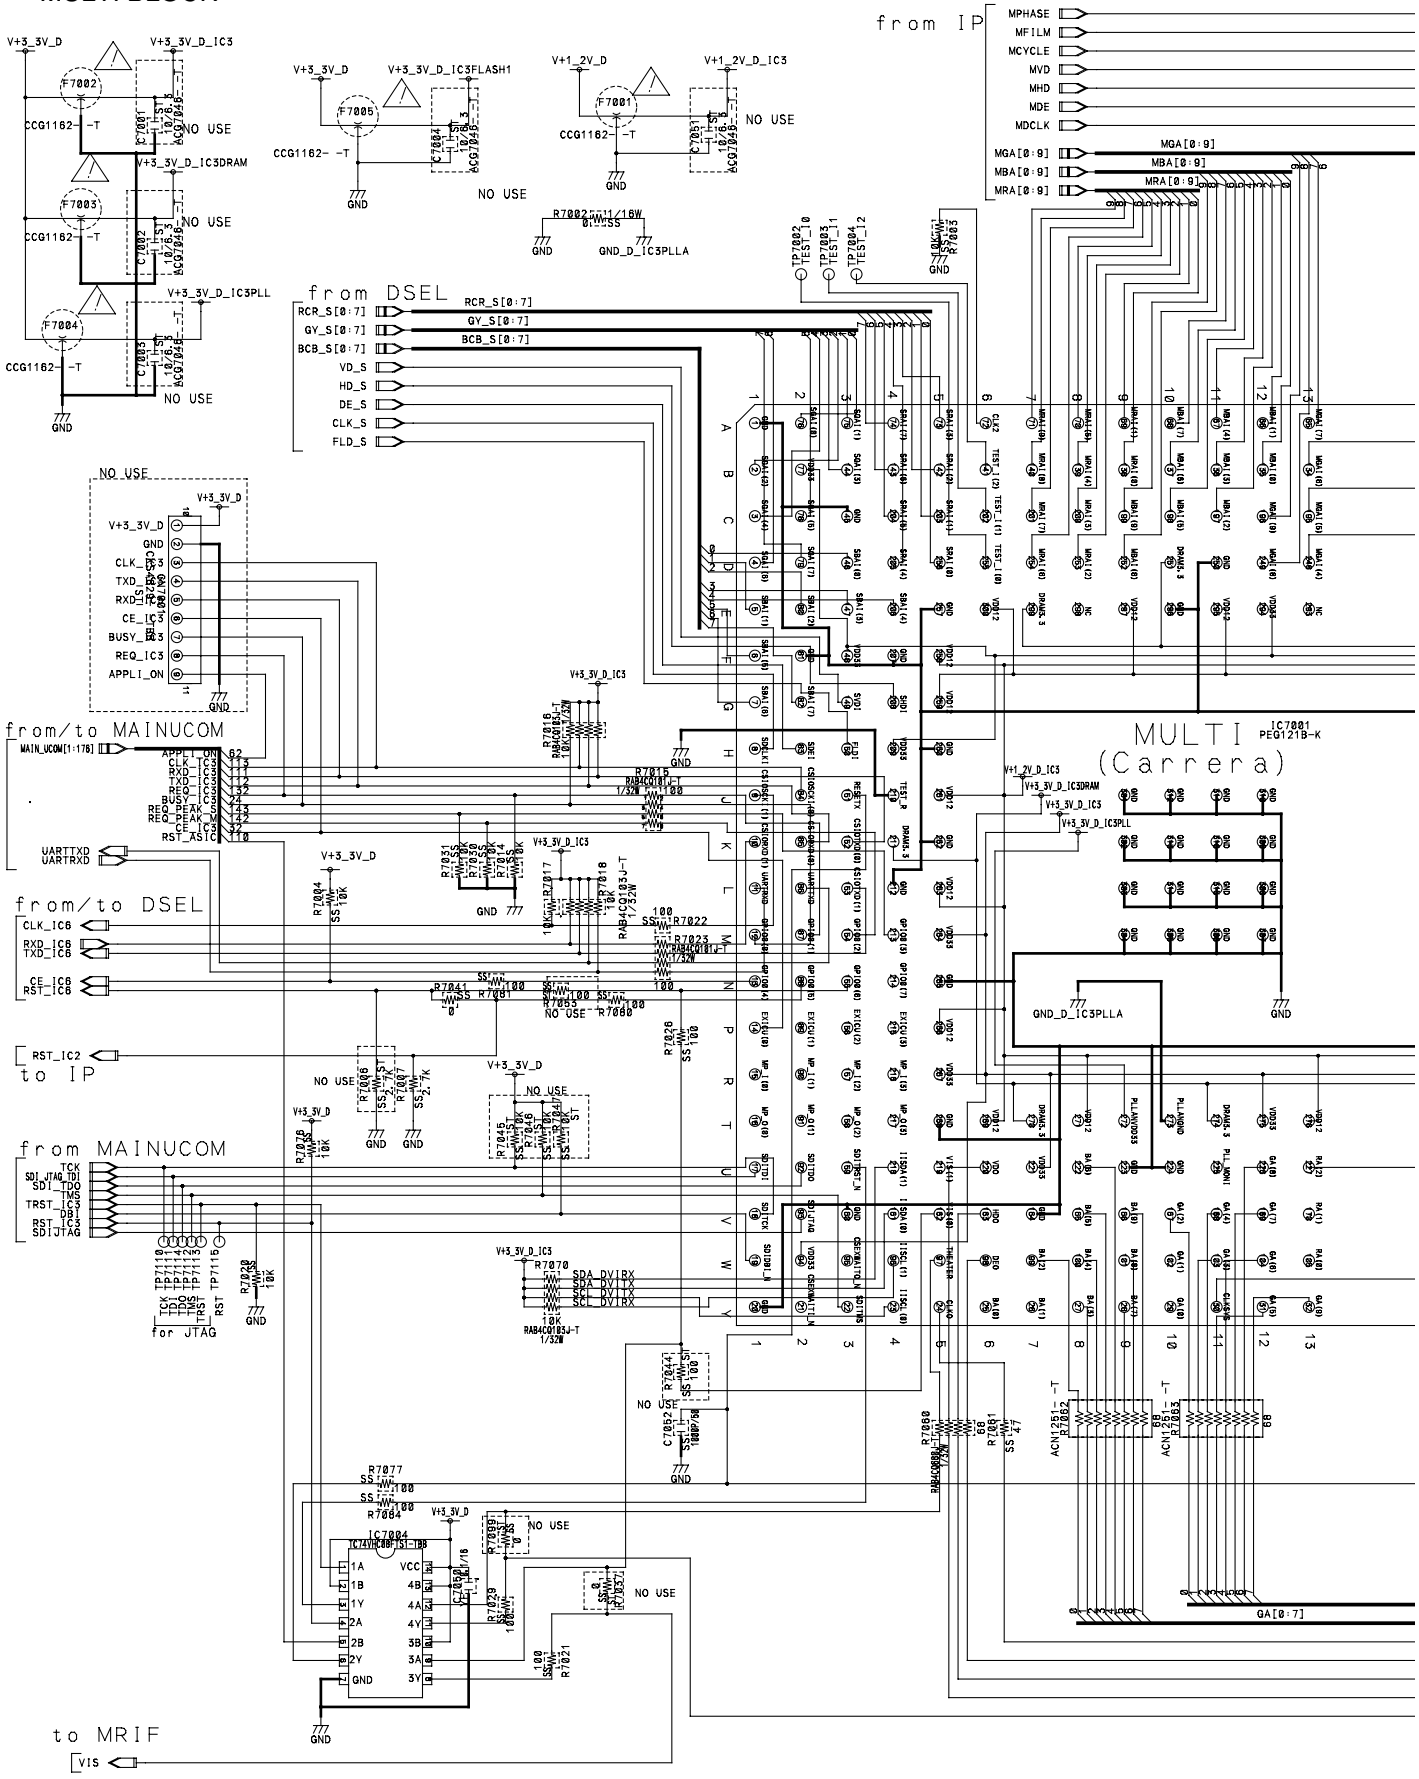

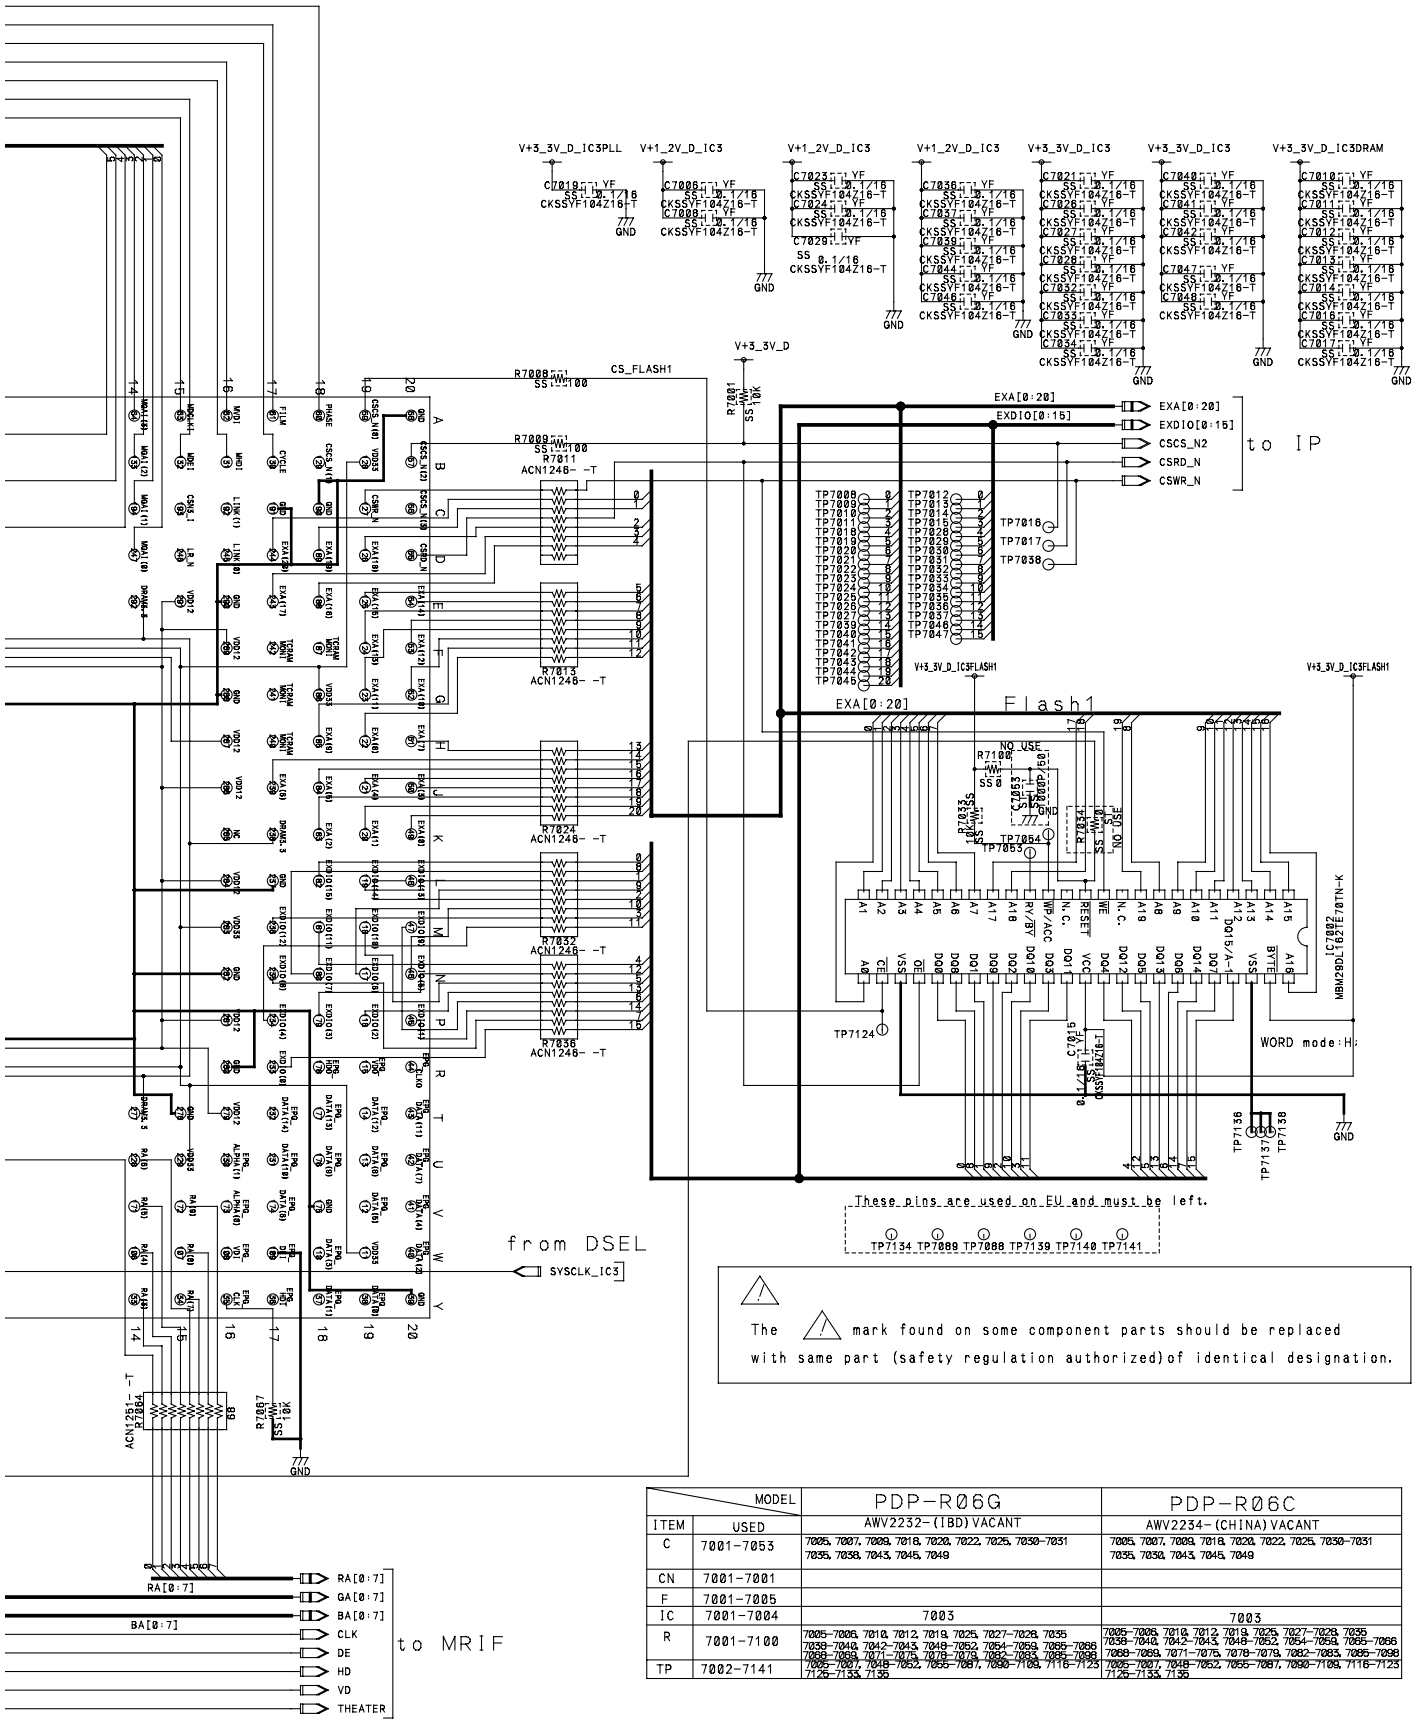


MODEL		PDP-R06G	PDP-R06C
ITEM	USED	AWV2232-(IBD) VACANT	AWV2234-(CHINA) VACANT
C	7001-7053	7005, 7007, 7009, 7018, 7020, 7022, 7025, 7030-7031 7035, 7038, 7043, 7045, 7049	7005, 7007, 7009, 7018, 7020, 7022, 7025, 7030-7031 7035, 7038, 7043, 7045, 7049
CN	7001-7001		
F	7001-7005		
IC	7001-7004	7003	7003
R	7001-7100	7005-7006, 7010, 7012, 7019, 7025, 7027-7028, 7035 7039-7040, 7042-7043, 7048-7052, 7054-7059, 7065-7066 7068-7069, 7071-7075, 7078-7079, 7082-7083, 7085-7088 7095-7097, 7048-7052, 7055-7087, 7090-7103, 7116-7125 7126-7133, 7135	7005-7006, 7010, 7012, 7019, 7025, 7027-7028, 7035 7039-7040, 7042-7043, 7048-7052, 7054-7059, 7065-7066 7068-7069, 7071-7075, 7078-7079, 7082-7083, 7085-7088 7095-7097, 7048-7052, 7055-7087, 7090-7103, 7116-7125 7126-7133, 7135
TP	7002-7141		

3.17 MR MAIN ASSY (15/15)


MR MAIN ASSY (15/15)

• MRIF BLOCK


ITEM	USED	MODEL: PDP-R06G AWV2232-(IBD) VACANT	MODEL: PDP-R06C AWV2234-(CHINA) VACANT
C	7201-7228		
CN	7201-7202		
D	7202-7206		
F	7201-7208		
IC	7201-7203		
L	7201-7201		
Q	7201-7211	7202, 7204-7205, 7208	7202, 7204-7205, 7208
R	7201-7255	7206, 7210, 7233, 7235, 7242-7243, 7250	7206, 7210, 7233, 7235, 7242-7243, 7250
TP	7201-7256	7214-7215, 7218-7220, 7230, 7244-7254	7214-7215, 7218-7220, 7230, 7244-7254

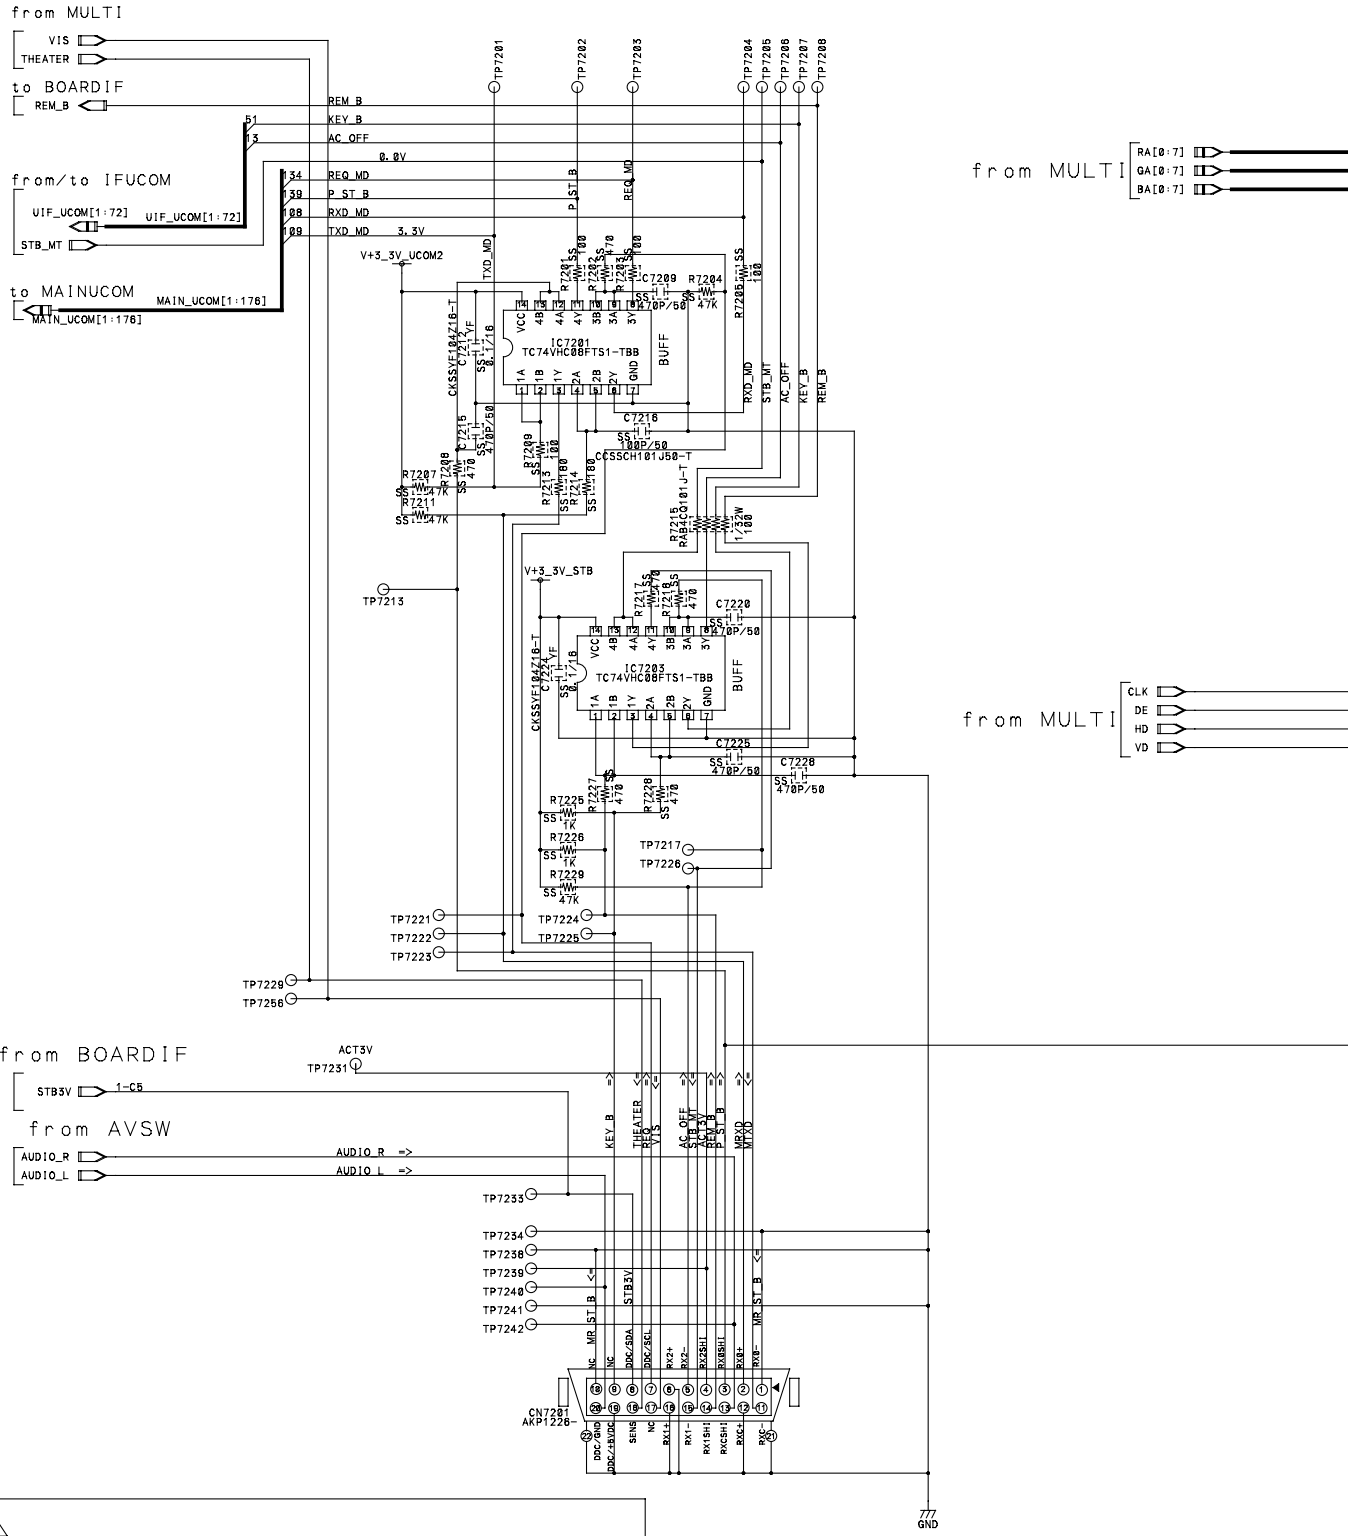


The ⚠ mark found on some component parts should be replaced with same part (safety regulation authorized)of identical designation.

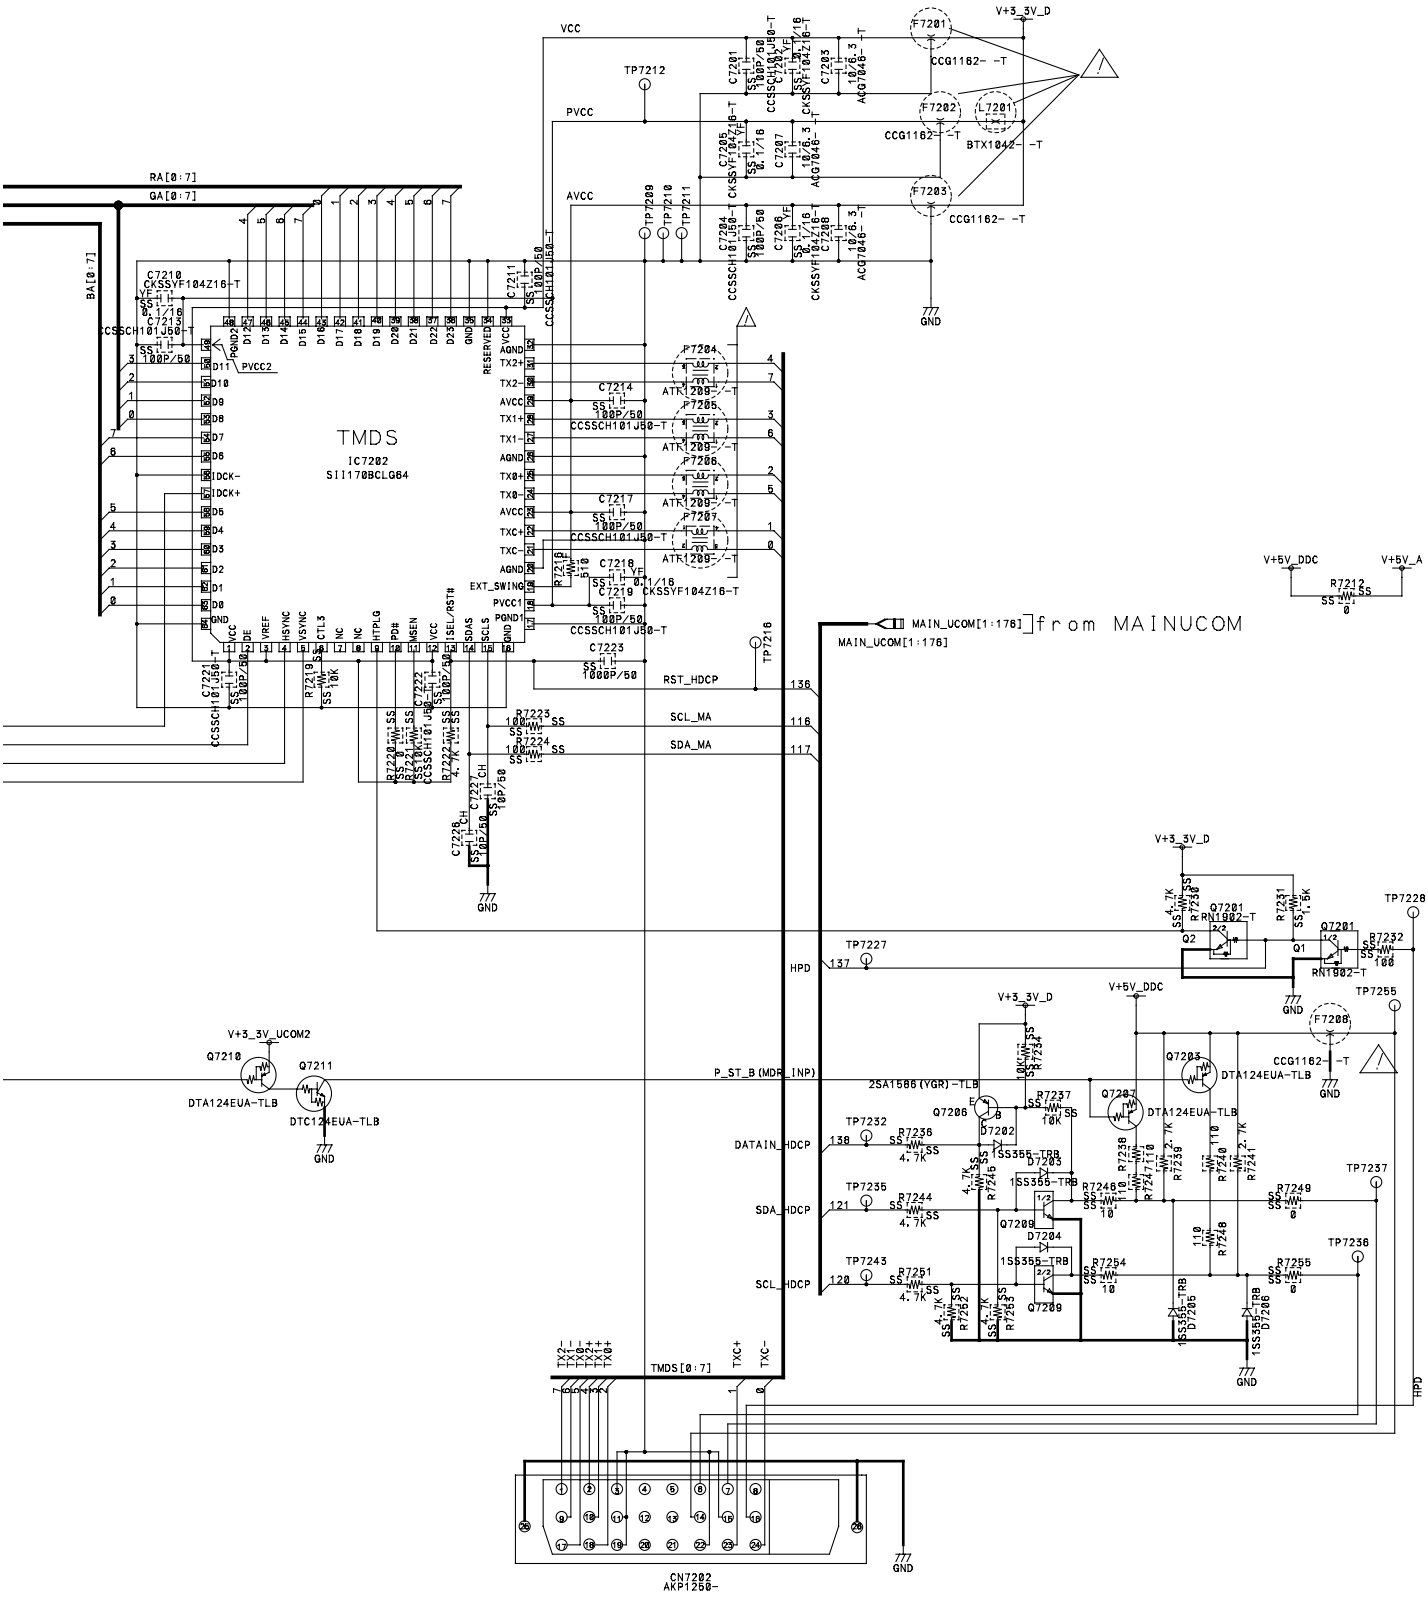
TMDS
IC7202
SII170BCLG64
MAIN_UCOM[1:176] from MAINUCOM
RST_HDCP
SCL_MA
SDA_MA
HPD
P_ST_B(MDR_INP)
DATAIN_HDCP
SDA_HDCP
SCL_HDCP
TMDS[0:7]
CN7202
AKP1250-
DTA124EUA-TLB
DTC124EUA-TLB
2SA1586(YGR)-TLB
1SS355-TRB
CCG1162- -T
BTX1042- -T
GND


SR ASSY

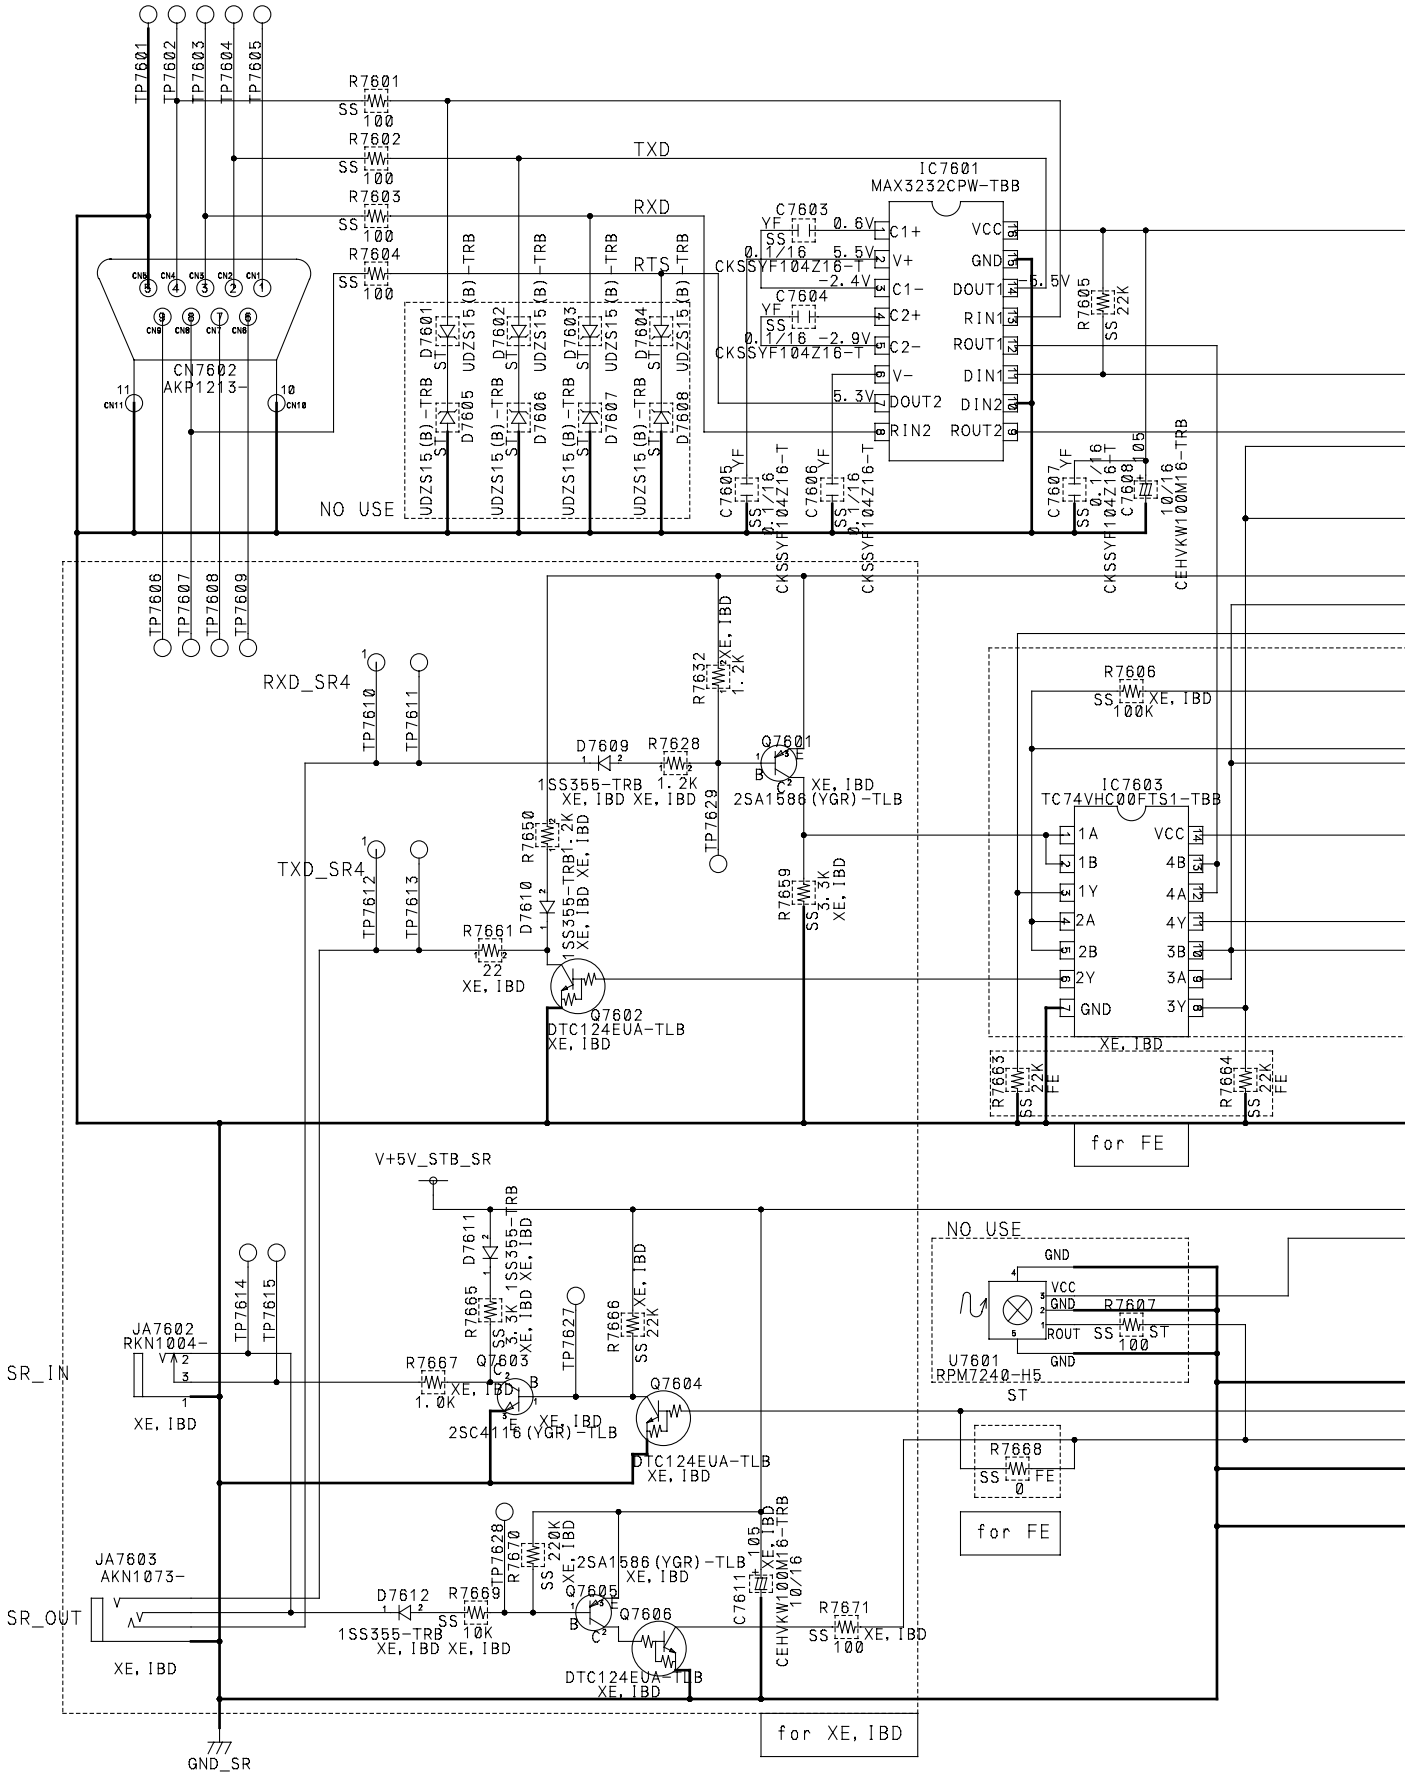
TP7601
TP7602
TP7603
TP7604
TP7605
R7601
R7602
R7603
R7604
TXD
RXD
RTS
IC7601
MAX3232CPW-TBB
C1+
V+
C1-
C2+
C2-
V-
DOUT2
RIN2
VCC
GND
DOUT1
RIN1
ROUT1
DIN1
DIN2
ROUT2
C7603
C7604
CKSSYF104Z16-T
0.6V
5.5V
-2.4V
-5.5V
-2.9V
5.3V
R7605
CN7602
AKP1213-
NO USE
UDZS15(B)-TRB
D7601
D7605
D7606
D7607
D7608
C7605
C7606
C7607
C7608
CEHVKW100M16-TRB
TP7606
TP7607
TP7608
TP7609
RXD_SR4
TXD_SR4
TP7610
TP7611
TP7612
TP7613
D7609
D7610
R7628
R7632
R7650
R7659
R7661
1SS355-TRB
1.2K
3.3K
22
XE, IBD
Q7601
2SA1586(YGR)-TLB
Q7602
DTC124EUA-TLB
TP7629
R7606
100K
IC7603
TC74VHC00FTS1-TBB
1A
1B
1Y
2A
2B
2Y
GND
VCC
4B
4A
4Y
3B
3A
3Y
R7663
R7664
22K
FE
for FE
V+5V_STB_SR
TP7614
TP7615
JA7602
RKN1004-
SR_IN
D7611
R7665
R7666
R7667
TP7627
Q7603
Q7604
2SC4116(YGR)-TLB
1.0K
22K
NO USE
U7601
RPM7240-H5
ST
R7607
ROUT
100
R7668
0
JA7603
AKN1073-
SR_OUT
D7612
R7669
R7670
TP7628
Q7605
Q7606
2SA1586(YGR)-TLB
220K
10K
C7611
R7671
CEHVKW100M16-TRB
for XE, IBD
GND_SR


MODEL		PDP-R06G, PDP-R06C
ITEM	USED	AWV2220- (XE) AWV2233-, AWV2234- (IBD) VACANT
R	7601-7608, 7617, 7618, 7622, 7628, 7632, 7649, 7650 7659-7674	7607, 7663, 7664, 7668, 7673, 7674
C	7603-7611,	
D	7601-7612,	7601-7608,
Q	7601-7606	
JA	7601-7603,	
CN	7601	
IC	7601-7603	
U	7601	7601

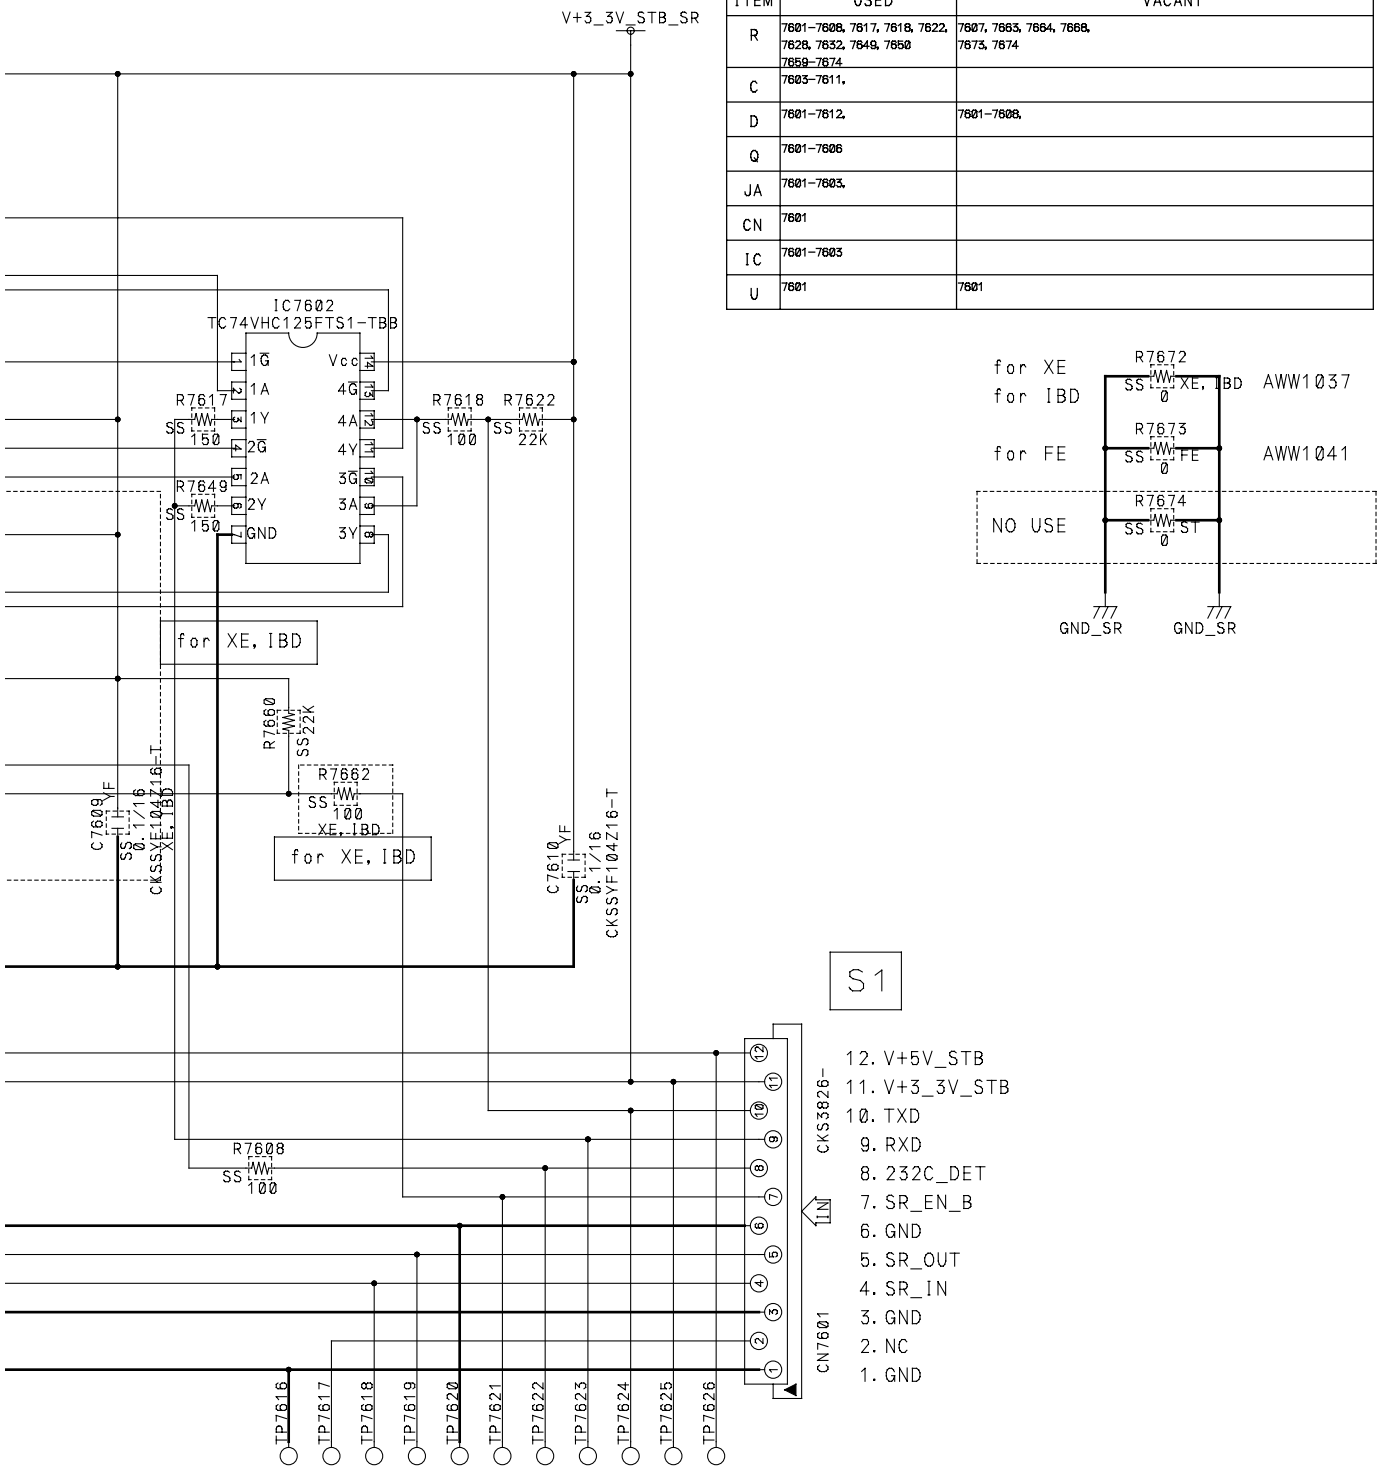

FRONT ASSY

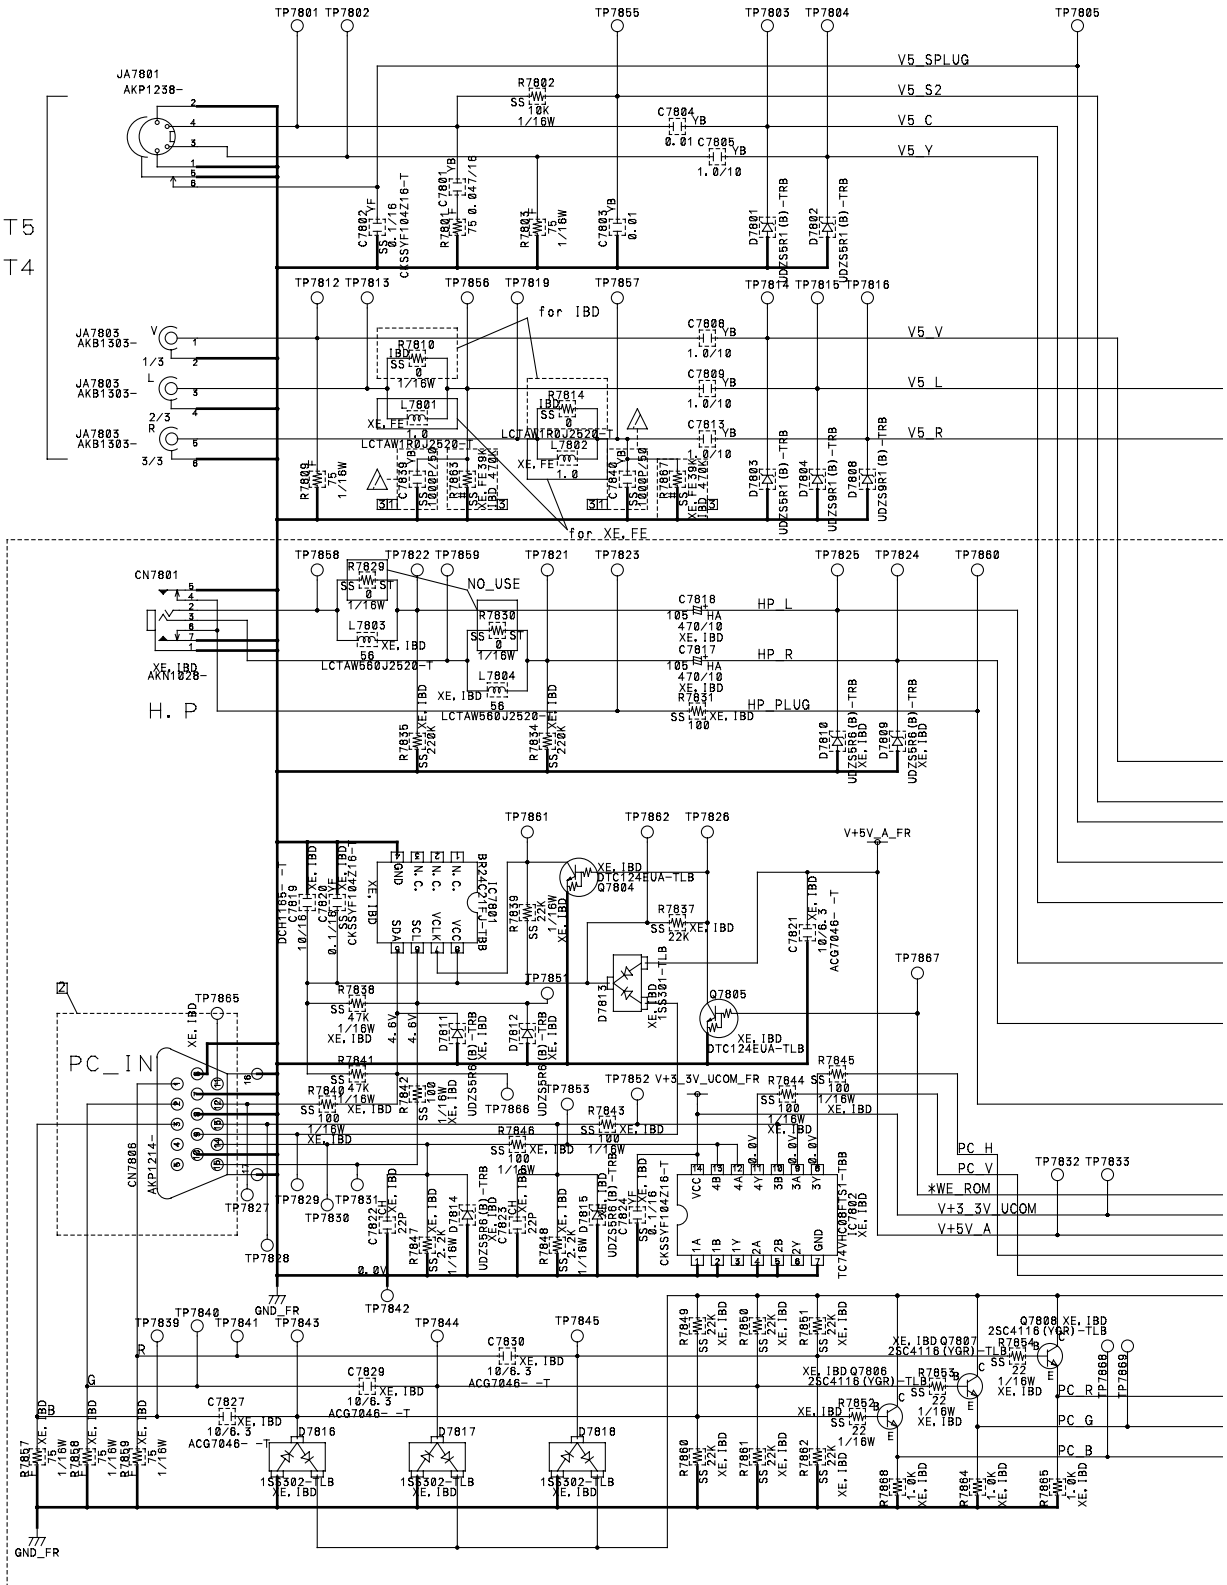

XE : INPUT5
FE · IBD : INPUT4
JA7801
AKP1238-
JA7803
AKB1303-
CN7801
XE, IBD
AKN1028-
H. P
CN7806
AKP1214-
PC_IN
V5_SPLUG
V5_S2
V5_C
V5_Y
V5_V
V5_L
V5_R
for IBD
for XE, FE
NO_USE
HP_L
HP_R
HP_PLUG
V+5V_A_FR
V+3_3V_UCOM_FR
PC_H
PC_V
*WE_ROM
V+3_3V_UCOM
V+5V_A
PC_R
PC_G
PC_B
GND_FR

MODEL		PDP-R06G, PDP-R06C
ITEM	USED	AWV2233- AWV2234- (IBD) VACANT
R	7801-7803, 7809, 7810, 7814 7827-7832, 7834, 7835, 7837-7870	7827-7830, 7869, 7870
C	7801-7805, 7808, 7809, 7813, 7817-7824, 7827, 7829-7832, 7834-7848	7830-7838
D	7801-7804, 7808-7810	
Q	7804-7808	
JA	7801, 7803, 7804	
CN	7801, 7803-7805	7805
IC	7801, 7802	
L	7801-7804	7801, 7802

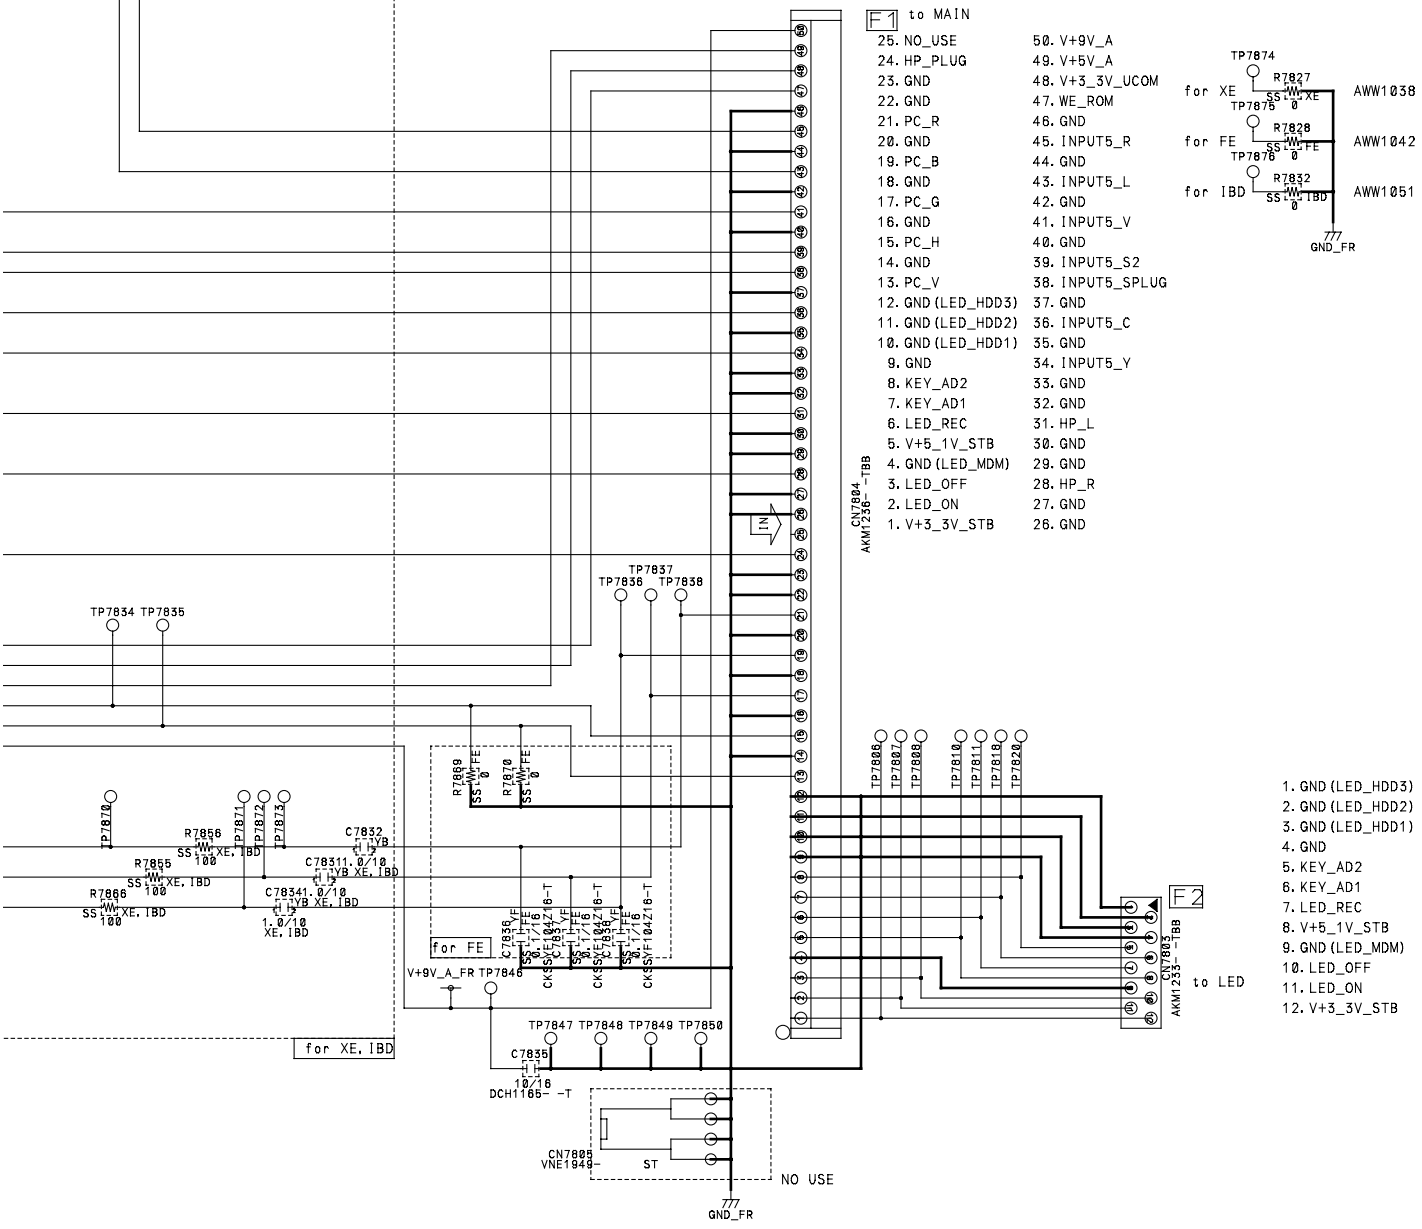

3.20 LED ASSY

LED ASSY

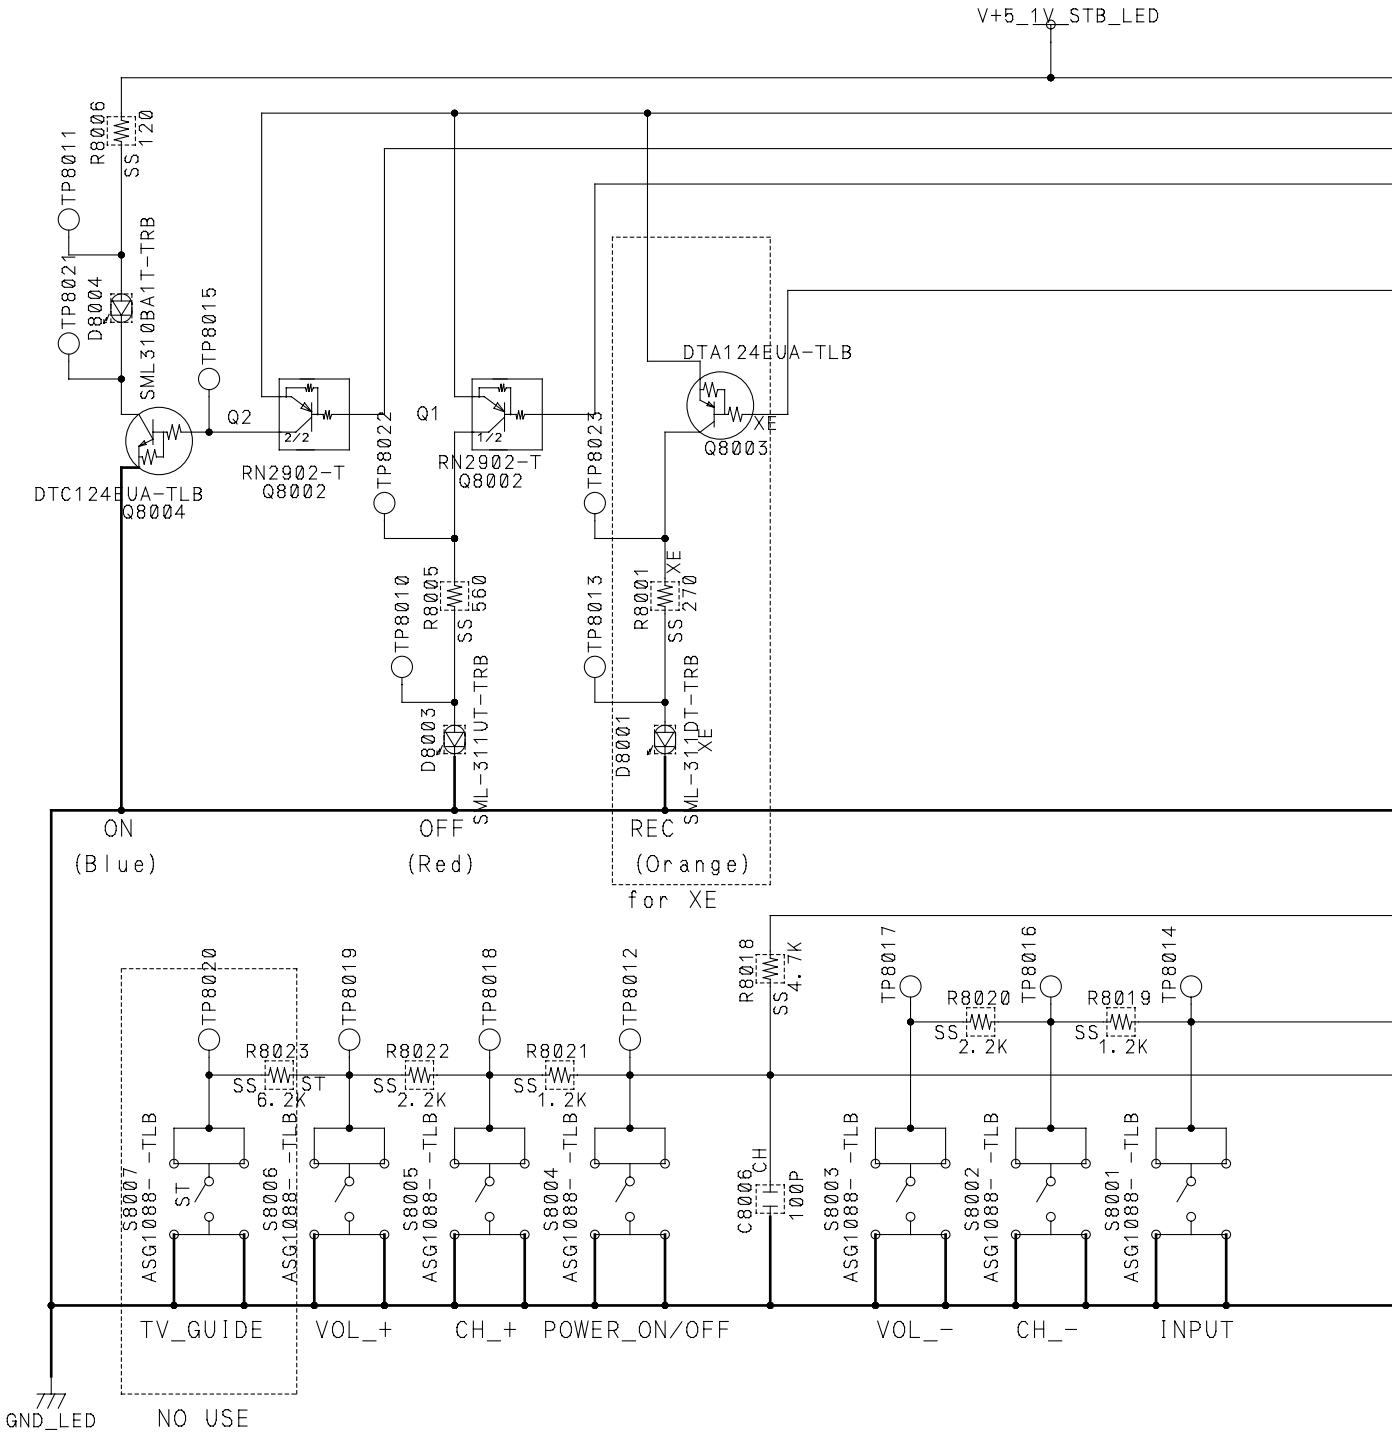

KEY_AD1 voltage


Pushed KEY	Typ.	Thr.
NO USE	3.30	
----	----	2.51
VOL_-	1.39	1.70
CH_-	0.67	0.99
INPUT	0	0.38

[V]


KEY_AD2 voltage

Pushed KEY	Typ.	Thr.
NO USE	3.30	
TV_GUIDE	2.21	2.51
VOL_+	1.39	1.70
CH_+	0.67	0.99
POWER_ON/OFF	0	0.38


[V]

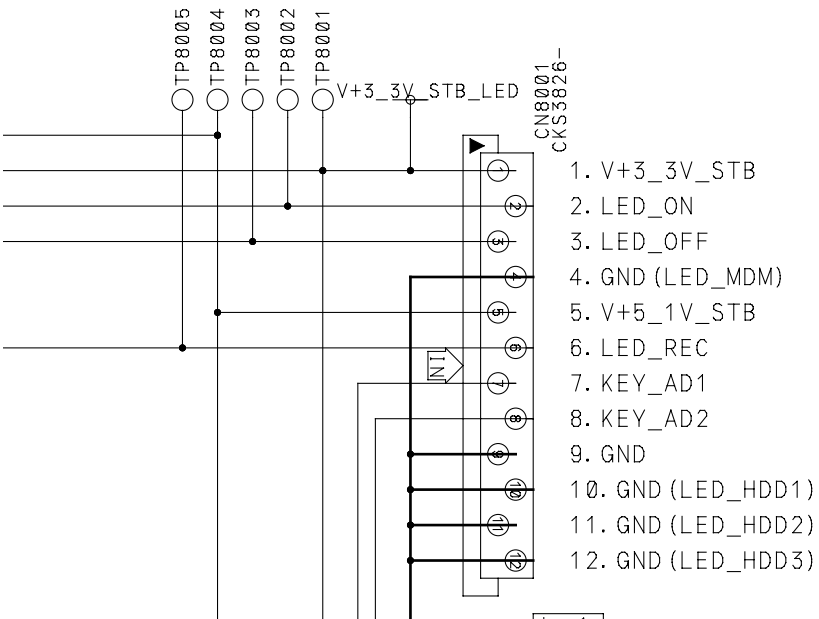

TO FRONT ASS'Y

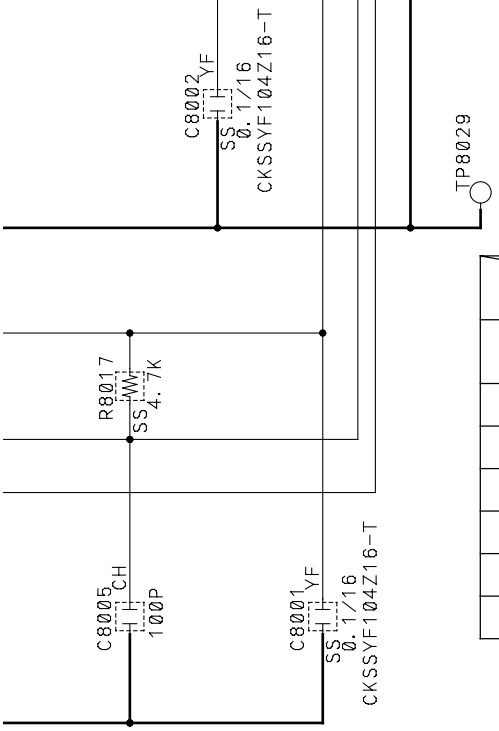



MODEL		PDP-R06G, PDP-R06C
ITEM	USED	AWV2222- (FE) AWV2233- AWV2234- (IBD) VACANT
R	8001, 8005, 8006, 8011-8013 8017-8023	8001, 8011, 8013, 8023
C	8001, 8002	
D	8001, 8003, 8004	8001
Q	8002-8004	8003
CN	8001	
S	8001-8007	8007

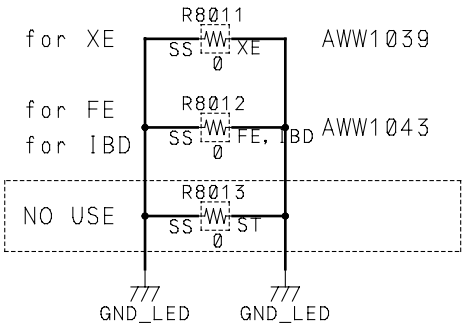

3.21 POWER SUPPLY UNIT

POWER SUPPLY UNIT

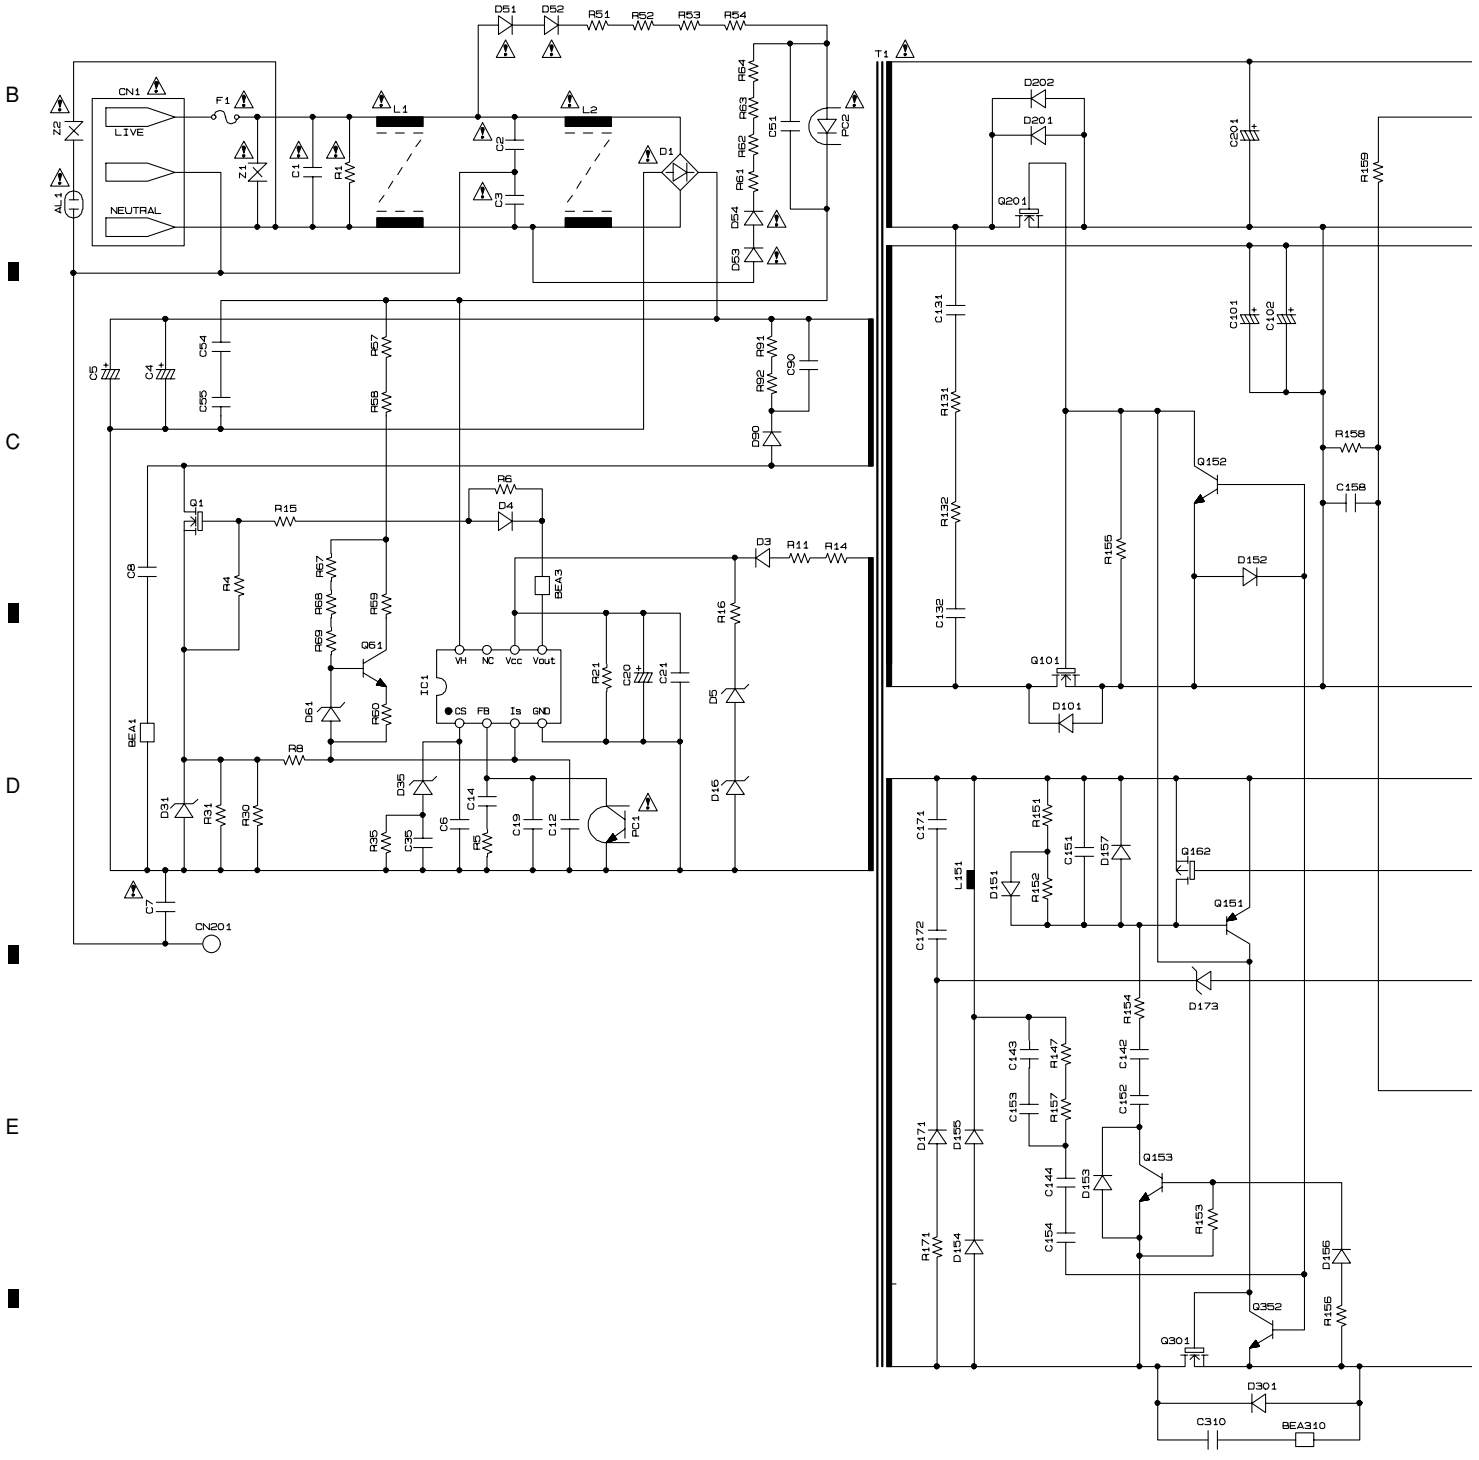


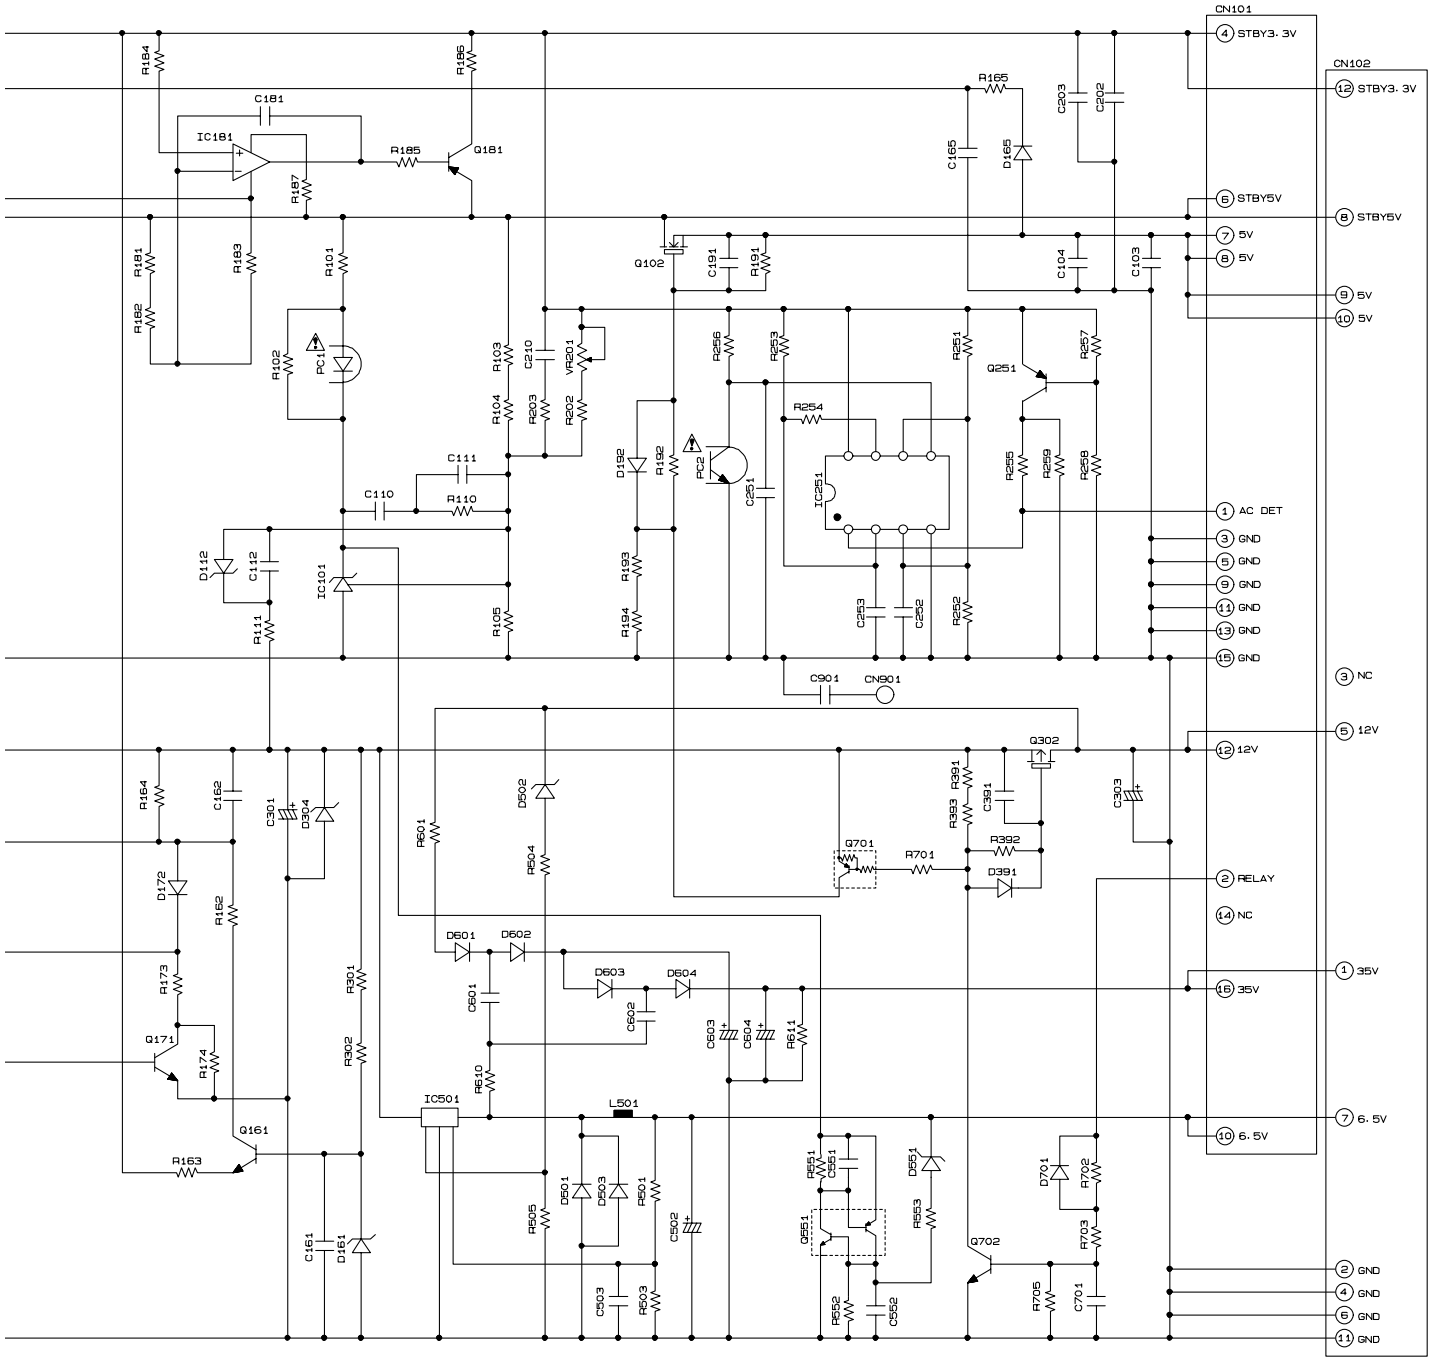
CN101
CN102
STBY3. 3V
STBY5V
5V
AC DET
GND
NC
12V
RELAY
35V
6. 5V
R184
R186
C181
IC181
R185
Q181
R187
R165
C203
C202
C165
D165
R181
R183
R101
R182
R102
PC1
R103
C210
VR201
R104
R203
R202
Q102
C191
R191
C104
C103
R256
R253
R251
Q251
R257
R254
D192
R192
PC2
C251
IC251
R255
R259
R258
C111
C110
R110
D112
C112
IC101
R111
R193
R194
R105
C253
C252
R252
C901
CN901
R164
C162
C301
D304
D172
R162
R173
Q171
R174
R301
R302
Q161
R163
C161
D161
D502
R501
R504
Q302
R391
R393
C391
C303
R392
Q701
R701
D391
D601
D602
D603
D604
C501
C602
C603
C604
R611
R610
IC501
L501
R505
D501
D503
R601
C502
C503
R503
R551
C551
D551
Q551
R553
D552
C552
D701
R702
R703
Q702
R705
C701

4. PCB CONNECTION DIAGRAM
4.1 MR MAIN ASSY

SIDE A

MR MAIN ASSY

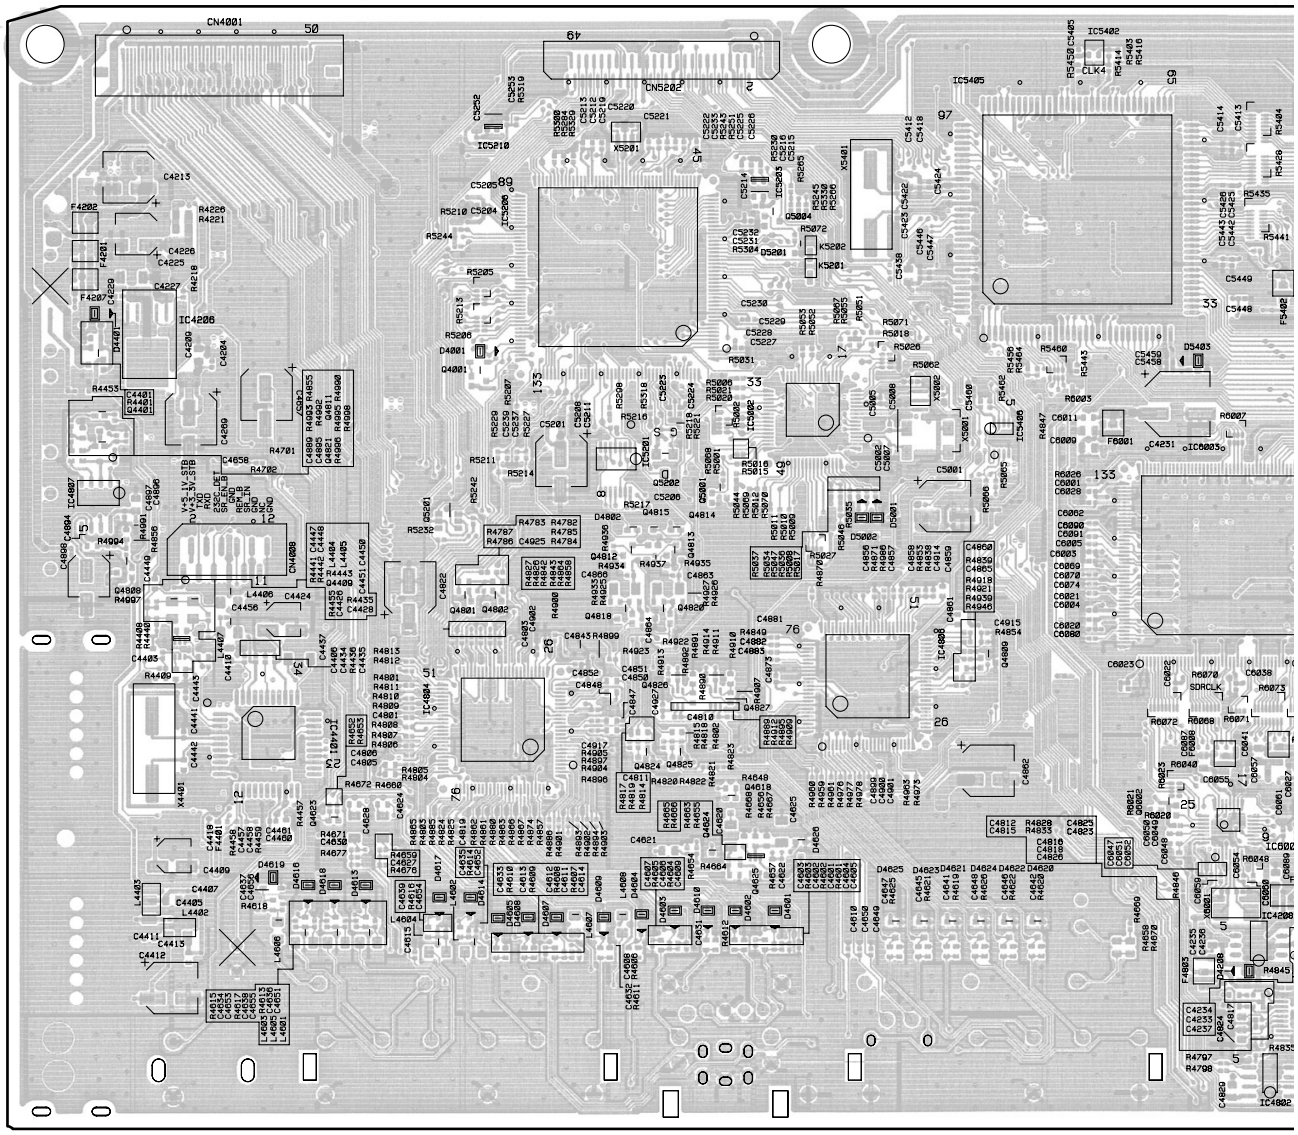


SIDE A


NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
B C E	B C E B C E	Transistor
B C E	B C E B C E	Transistor with resistor
D G S	D G S D G S	Field effect transistor
		Resistor array
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destinations.
   For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

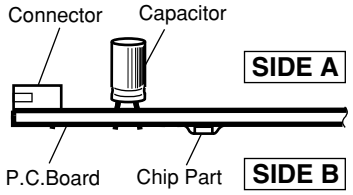


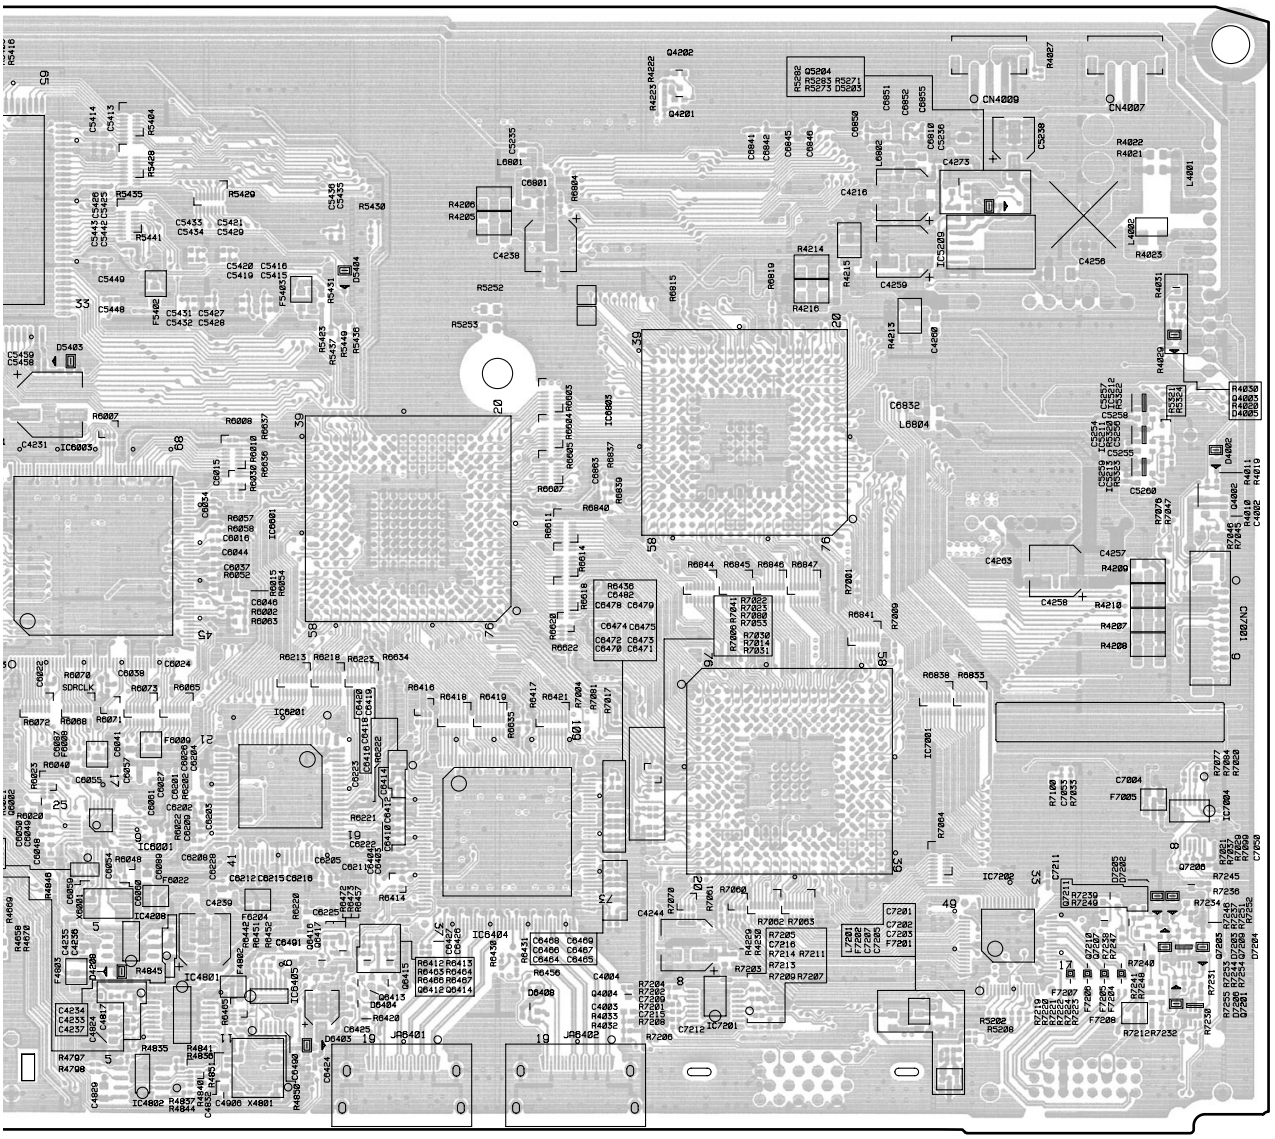


(ANP2111-B)

SIDE B

MR MAIN ASSY

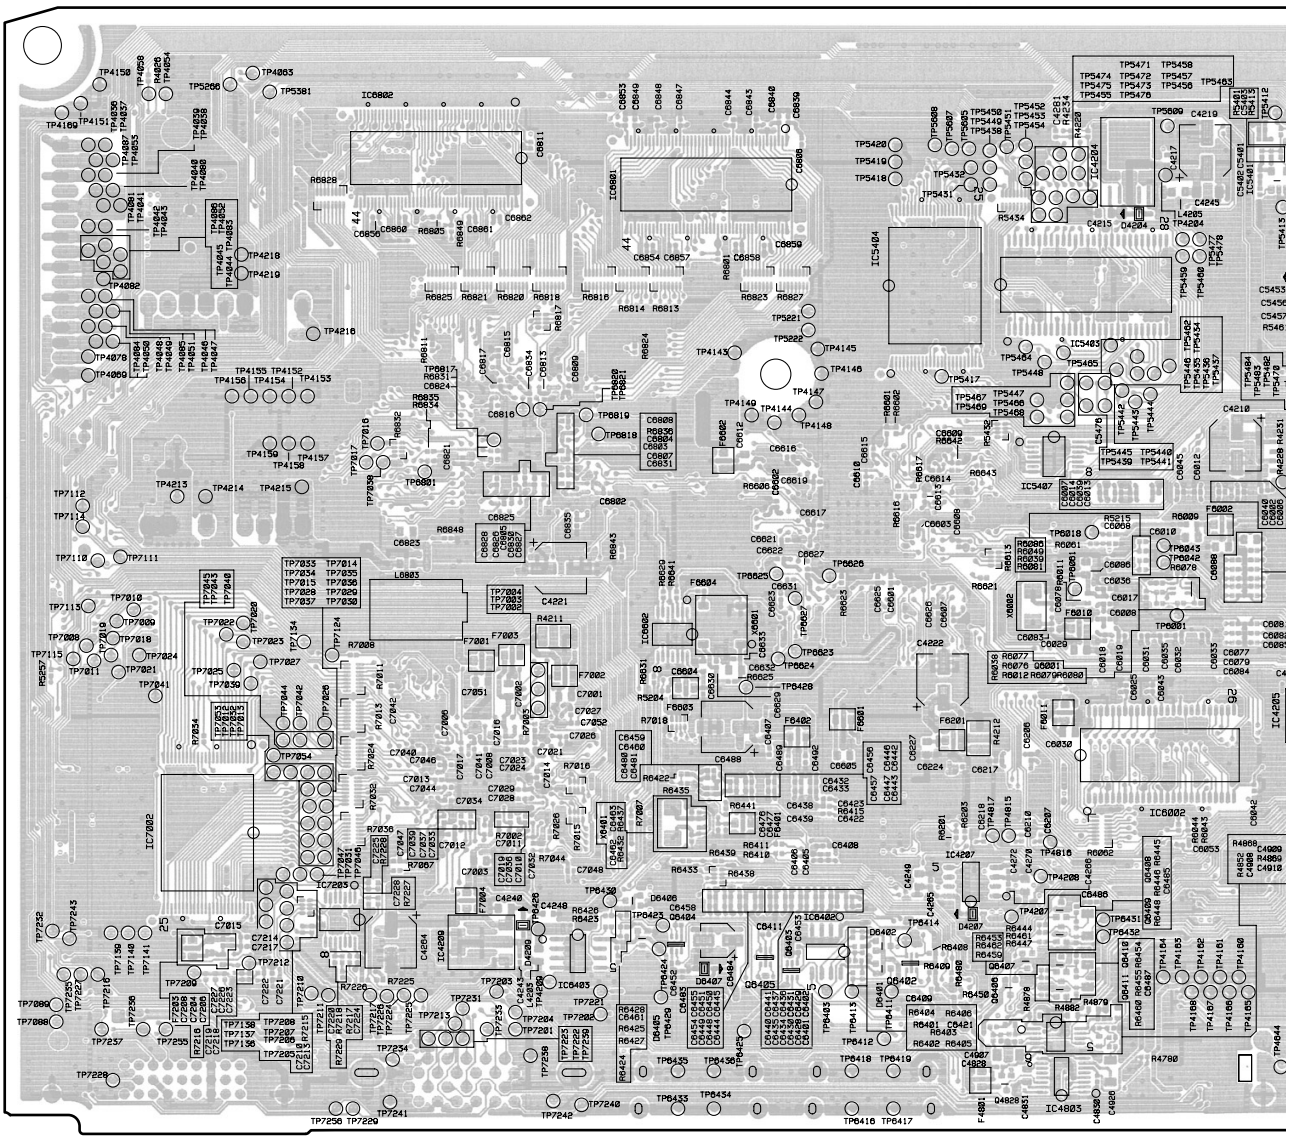

SIDE B

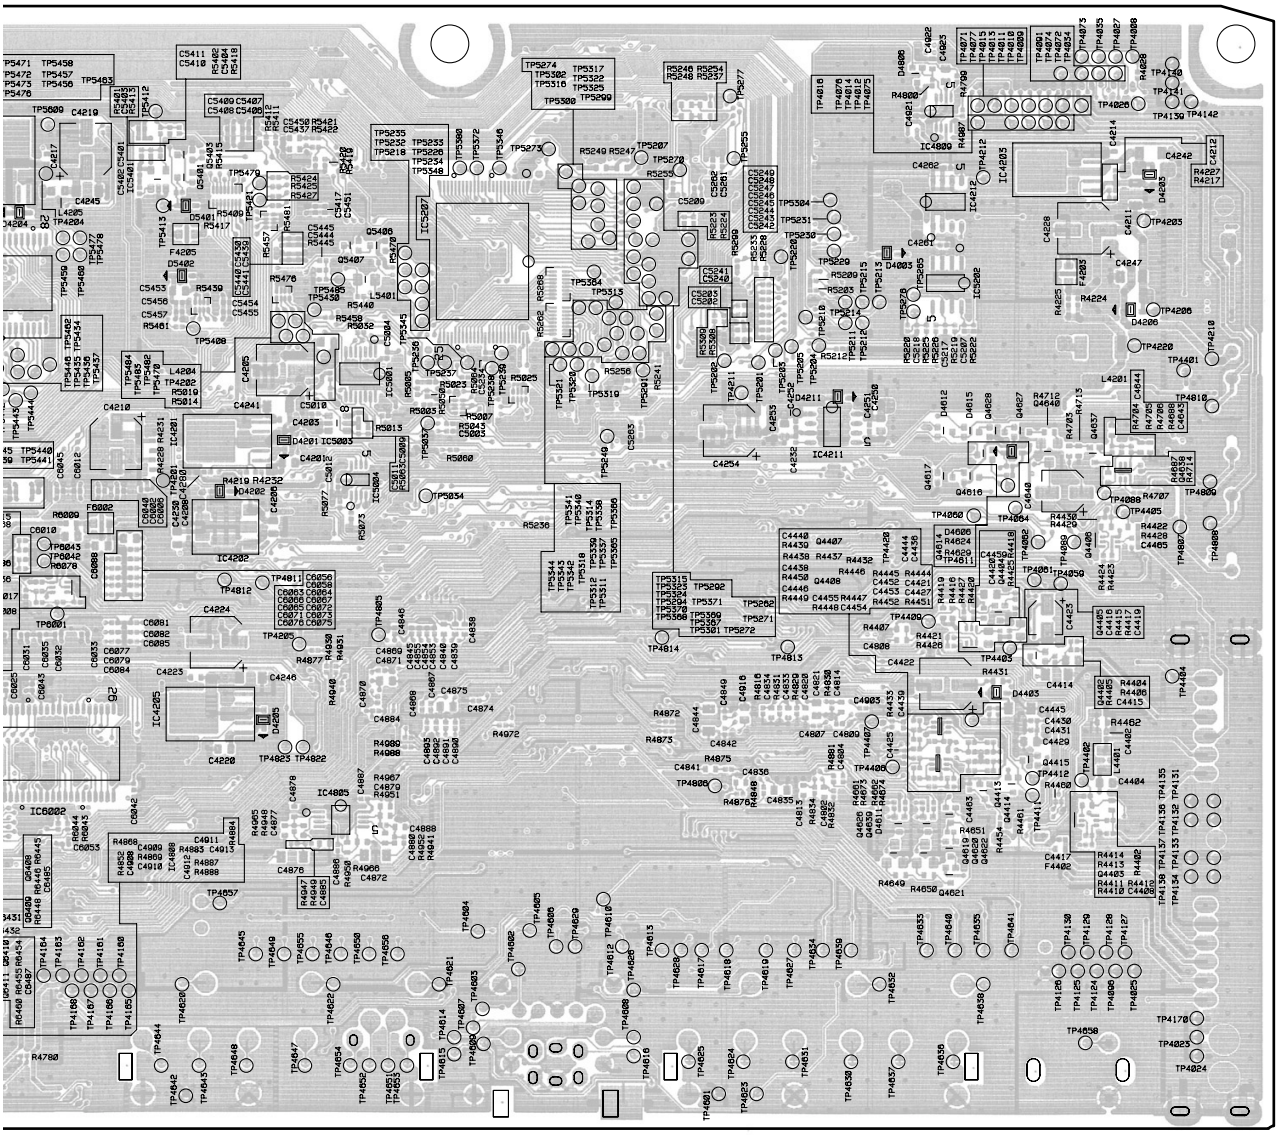


(ANP2111-B)

4.2 FRONT and LED ASSYS

SIDE A


SIDE A

LED ASSY

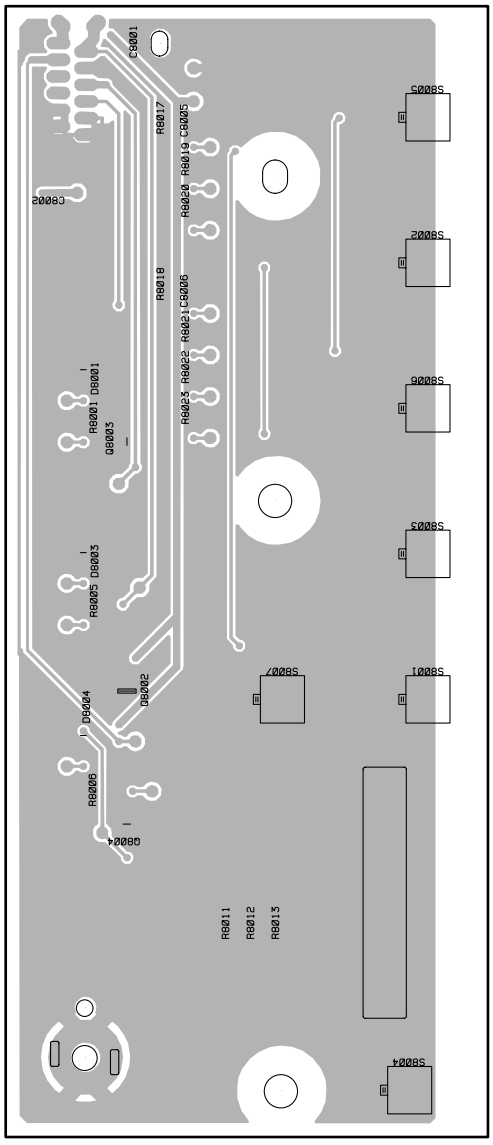

(ANP2107-B)


FRONT ASSY

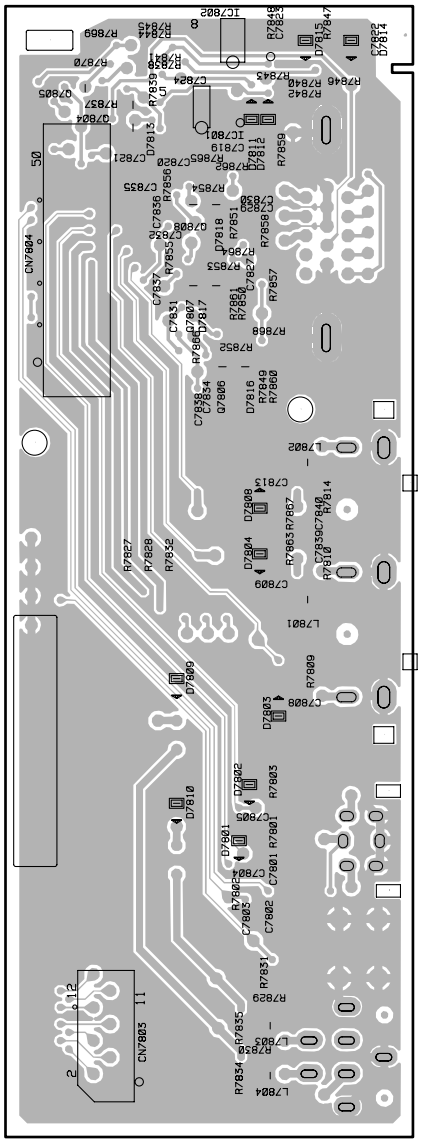

(ANP2107-B)

SIDE B


LED ASSY

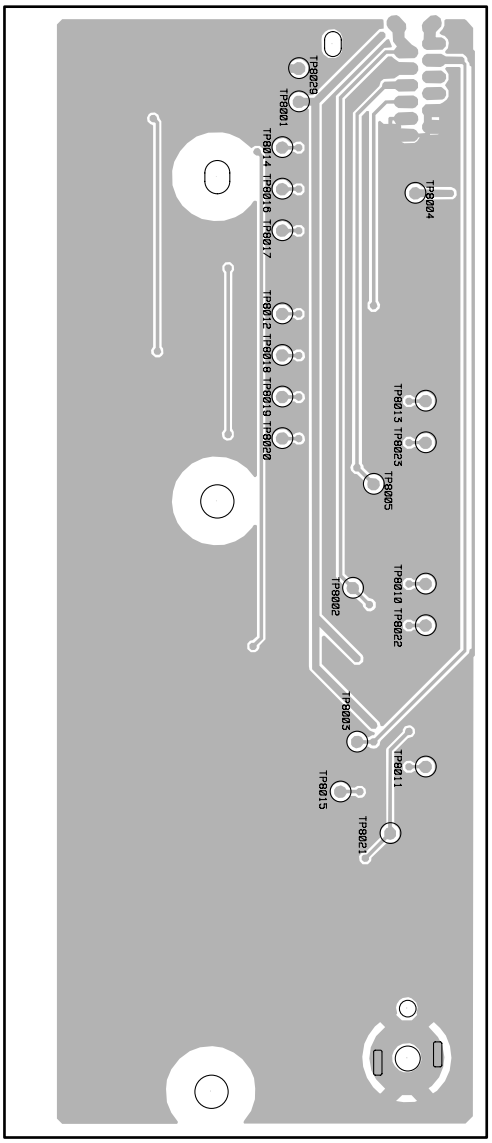

(ANP2107-B)

SIDE B

FRONT ASSY

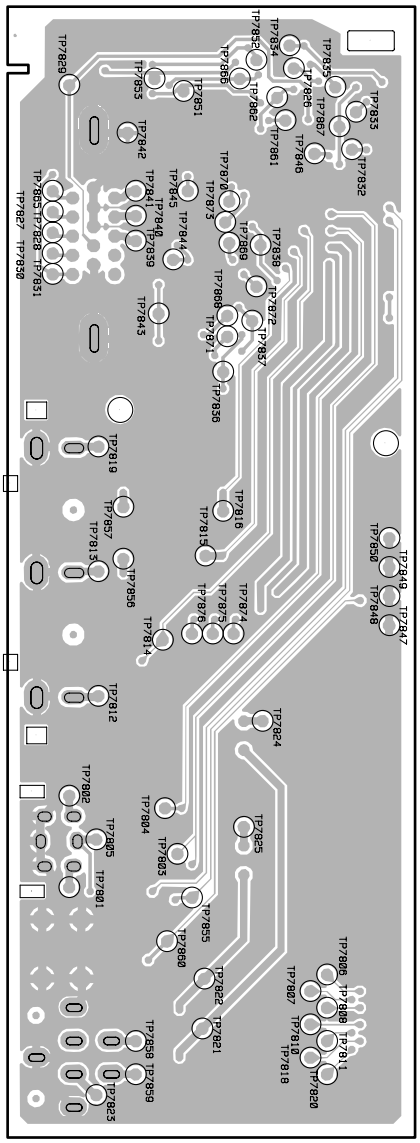

(ANP2107-B)

4.3 REAR IO and SR ASSYS


A

SIDE A

SIDE A

B

SR ASSY

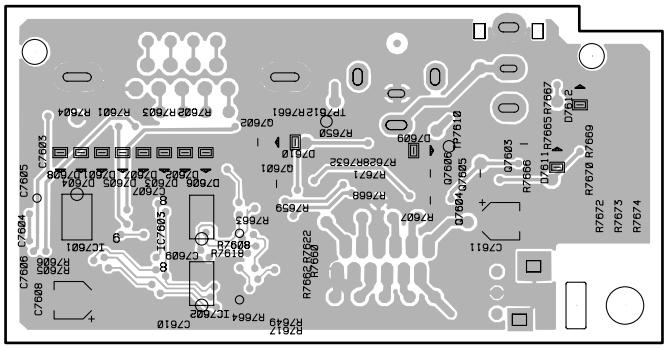


(ANP2107-B)

C

D

REAR IO ASSY

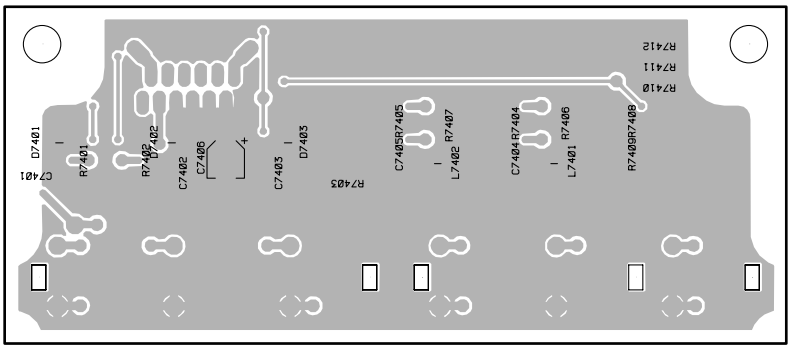

(ANP2107-B)


E

F

SIDE B


SIDE B

SR ASSY

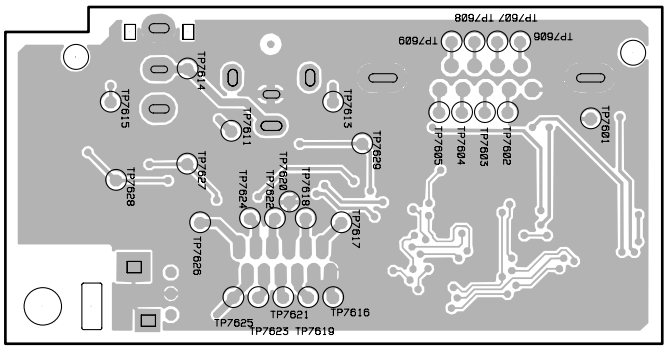

(ANP2107-B)

REAR IO ASSY

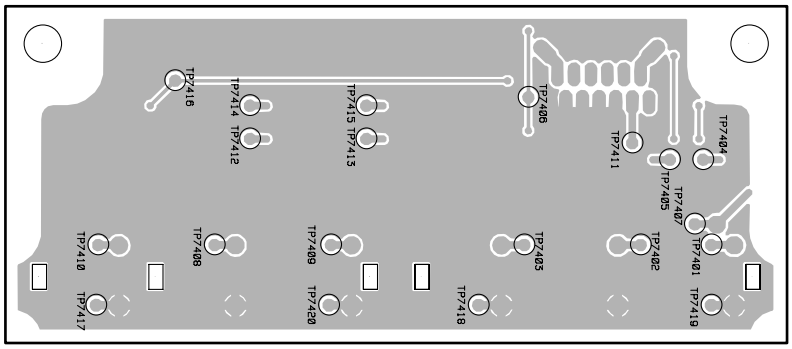

(ANP2107-B)

Pioneer sound.vision.soul

Service Manual



PDP-S37

ORDER NO.
RRV3231

SPEAKER SYSTEM

PDP-S37 XTW/E5

PDP-S37 XTW/CN5

65S

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65


PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
©PIONEER CORPORATION 2005

T-ZZK AUG. 2005 Printed in Japan


FOR PRECAUTION OF REASSEMBLY AND DISASSEMBLY

- The grille is attached to the baffle using double-sided self-adhesive tape. To avoid damaging the cabinet, work with the speaker on top of a blanket or similar, face the grille upward.
  There is slot in the lower part of the speaker. Insert a screwdriver(-) into slot and push up detach the lower part.
  Taking care not to damage the grille and baffle, lift the grille a little bit at a time with hand.
  When reattaching the grille, use double-sided self-adhesive tape in the locations shown in the diagram and press the grille assy into place.
- The grille is fixed using boss and double-sided self-adhesive tape(The tape is in the locations indicated in the diagram below). Do not use a dryer to heat the self-adhesive tape when removing the grille.
- The woofer is attached to the baffle by 4 internal screws. To detach it, first remove the baffle from cabinet. Then unfasten those screws. When attaching it, face its plus terminal downward.
- The tweeter is attached to the baffle by 2 internal screws. To detach it, first remove the baffle from cabinet. Then unfasten those screws. When attaching it, face its plus terminal rightward.

GRILLE

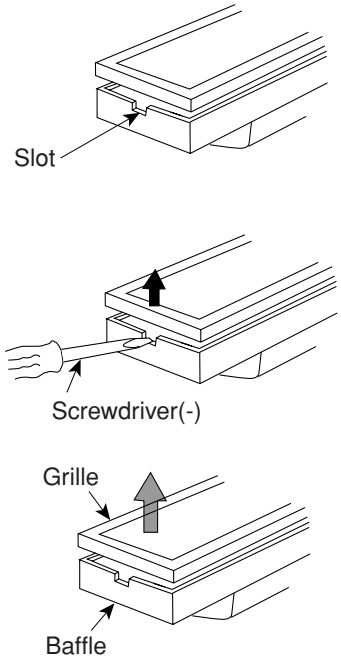

LOCATIONS TO FIX DOUBLE-SIDED SELF-ADHESIVE TAPE

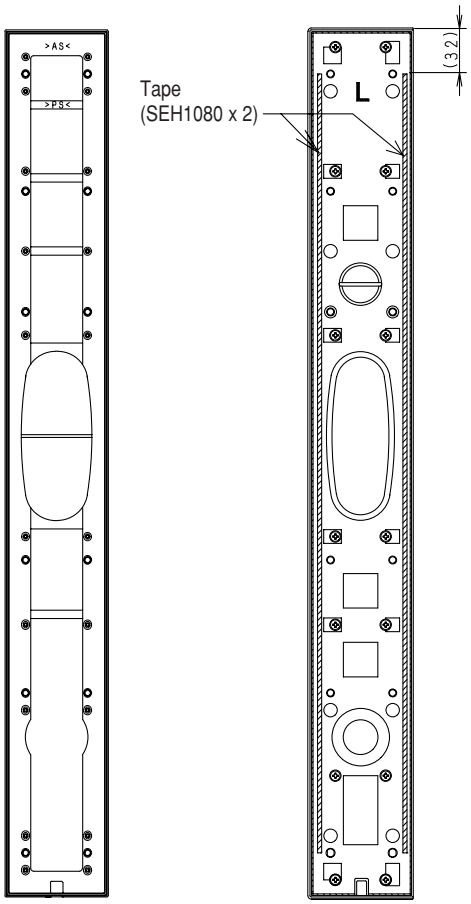

Grille ASSY
(Back Side)

PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

Mark	No.	Description	Part No.
NSP		Cabinet Assy	SXG1102
NSP		├ Insert Nut M5	SBN1062
NSP		└ Cabinet	SNK2907
NSP		Baffle R	SNK2905
NSP		Baffle L	SNK2906
		Grille Ass'y	SMG1855
NSP		├ Grille Cloth	SAS1599
NSP		├ Felt	SED1128
NSP		├ Felt	SED1129
NSP		├ Grille Frame	SMH1112
NSP		└ Cosmetic Frame	SNK2908
		Network Ass'y	SWN1756
for XIN/E5 type			
NSP		Model Label (L)	SAN3728
NSP		Model Label (R)	SAN3729
for XIN/CN type			
NSP		Model Label (L)	SAN3746
NSP		Model Label (R)	SAN3747
NSP		Gasket	SEC1984
NSP		Gasket	SEC1985
NSP		Gasket	SEC1986
		Gasket	SEC1987
		Gasket	SEC1988
NSP		Gasket	SEC1989
		Gasket	SEC1990
NSP		Gasket	SEC1997
NSP		Gasket	SEC1998
		Gasket	SEC1999
NSP		Gasket	SEC2000
NSP		Gasket	SEC2001
NSP		Gasket	SEC2002
NSP		Gasket	SEC2005
NSP		Gasket	SEC2010
NSP		Felt	SED1126
NSP		Felt	SED1127
NSP		Felt	SED1130
		Tape	SEH1080
		Tape	SEH1081
		Input Terminal	SKX1098
NSP		MDF Bar	SLX1163
NSP		Port Tube Ring 26	SMR1393
NSP		Paper Tube 26	SMR1397
NSP		Acoustic Absorbent	SMT1303
NSP		Acoustic Absorbent	SMT1304
NSP		Acoustic Absorbent	SMT1305
NSP		Acoustic Absorbent	SMT1306
NSP		Acoustic Absorbent	SMT1308
NSP		Label Serial (Model Label L,R)	SRW1111
		Speaker (Woofer)	H132DC65-51F
		Speaker (Tweeter)	FK26AP32-51L

For Packing


Mark	No.	Description	Part No.
		Gasket Set	SME3685
NSP		├ Gasket	SEC1994
		└ Polyethylene Bag S2	SHL1437
NSP		Bracket Assy Set	SME3686
		├ Case	SHA2516
		├ Case	SHA2517
		├ Protection Sheet S1	SHC1832
		├ Spacer	SHB1173
NSP		├ Accessory Set	SME3684
		├ Speaker Wire	SDS1190
		└ Polyethylene Bag S1	SHL1439
NSP		├ Screws Set	SME3687
		├ Screw	BMZ50P100FTB
		└ Polyethylene Bag S0	SHL1438
		├ Bracket (L-TOP) Assy	SXG1094
NSP		├ Label (L-TOP)	SAK1020
		├ Gasket	SEC1995
		├ Gasket	SEC2003
NSP		├ Tape	SEH1079
NSP		├ Bracket (L-TOP)	SNA1455
NSP		└ Cover L-T	SNN1054
		├ Bracket (L- BTM) Assy	SXG1095
NSP		├ Label (L-BOTTOM)	SAK1021
		├ Gasket	SEC1996
		├ Gasket	SEC2003
NSP		├ Tape	SEH1079
NSP		├ Bracket (L-BOTTOM)	SNA1456
NSP		├ Cover L-B	SNN1055
		└ Spacer	SEP1353
		├ Bracket (R-TOP) Assy	SXG1096
NSP		├ Label (R-TOP)	SAK1022
		├ Gasket	SEC1995
		├ Gasket	SEC2003
NSP		├ Tape	SEH1079
NSP		├ Bracket (R-TOP)	SNA1457
NSP		└ Cover R-T	SNN1056
		└ Bracket (R-BTM) Assy	SXG1097
NSP		├ Label (R-BOTTOM)	SAK1023
		├ Gasket	SEC1996
		├ Gasket	SEC2003
NSP		├ Tape	SEH1079
NSP		├ Bracket (R-BOTTOM)	SNA1458
		├ Spacer	SEP1353
NSP		└ Cover R-B	SNN1057
for XIN/E5 type			
NSP		Instruction Manual Set	SME3683
		├ Polyethylene Bag S2	SHL1437
		└ Owner's Manual (English, French, German, Italian Duch, Spanish, Chinese)	SRD1293
for XIN/CN5 type			
NSP		Instruction Manual Set	SME3690
		├ Polyethylene Bag S2	SHL1437
		└ Owner's Manual (Chinese)	SRD1302

Mark	No.	Description	Part No.
for XIN/E5 type			
		Packing Case	SHG2679
for XIN/CN5 type			
		Packing Case	SHG2687
NSP		Packing Bag S2	SHL1444
		Foam Pad (*)	SHA2515
		Protector (*)	SHB1170
NSP		Label Serial	SRW1112
		Screw (for Tweeter)	BPZ30P080FTC
		Screw (for Woofer)	BPZ35P080FTC
		Screw (for Terminal)	BPZ35P120FTC
		Screw (for CAB-BAFFLE)	BPZ40P100FTB
		Screw (for NW: L)	BPZ40P350FTC


* : Refer to PACKING

SCHEMATIC DIAGRAM

Network Ass'y (SWN1756)

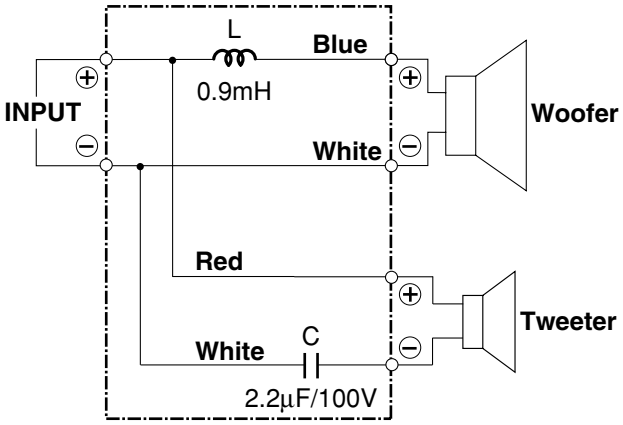


PACKING

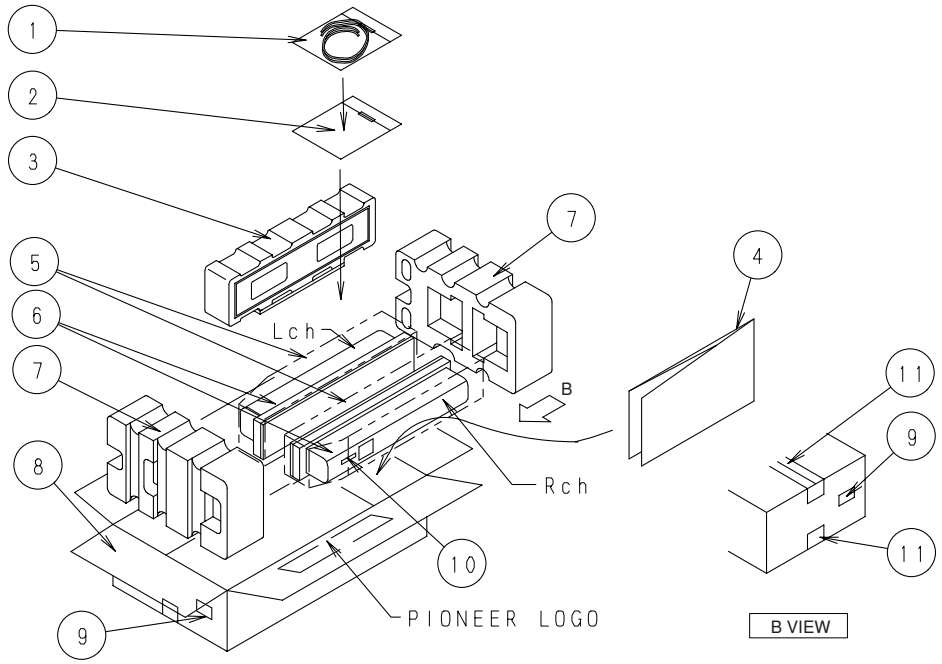

No.	PART NAME	NUM.	PART NO.
1	GASKET SET	1	SME3685
2	INSTRUCTION MANUAL SET	1	SME3683(/XTW/E5), SME3690(/XTW/CN5)
3	BRACKET ASSY SET	1	SME3686
4	PROTECTOR	1	SHB1170
5	PACKING BAG S2	2	SHL1444
6	SPEAKER SYSTEM L,R	1set	
7	FOAM PAD	2	SHA2515
8	PACKING CASE	1	SHG2679(/XTW/E5), SHG2687(/XTW/CN5)
9	SEREAL BARCORD LABEL	2	SRW1112
10	CLEAR TAPE 18mm	8cm	
11	DANPRON-TAPE CLEARNESS 50mm	180cm	


BRACKET ASSY SET
(SME3686)

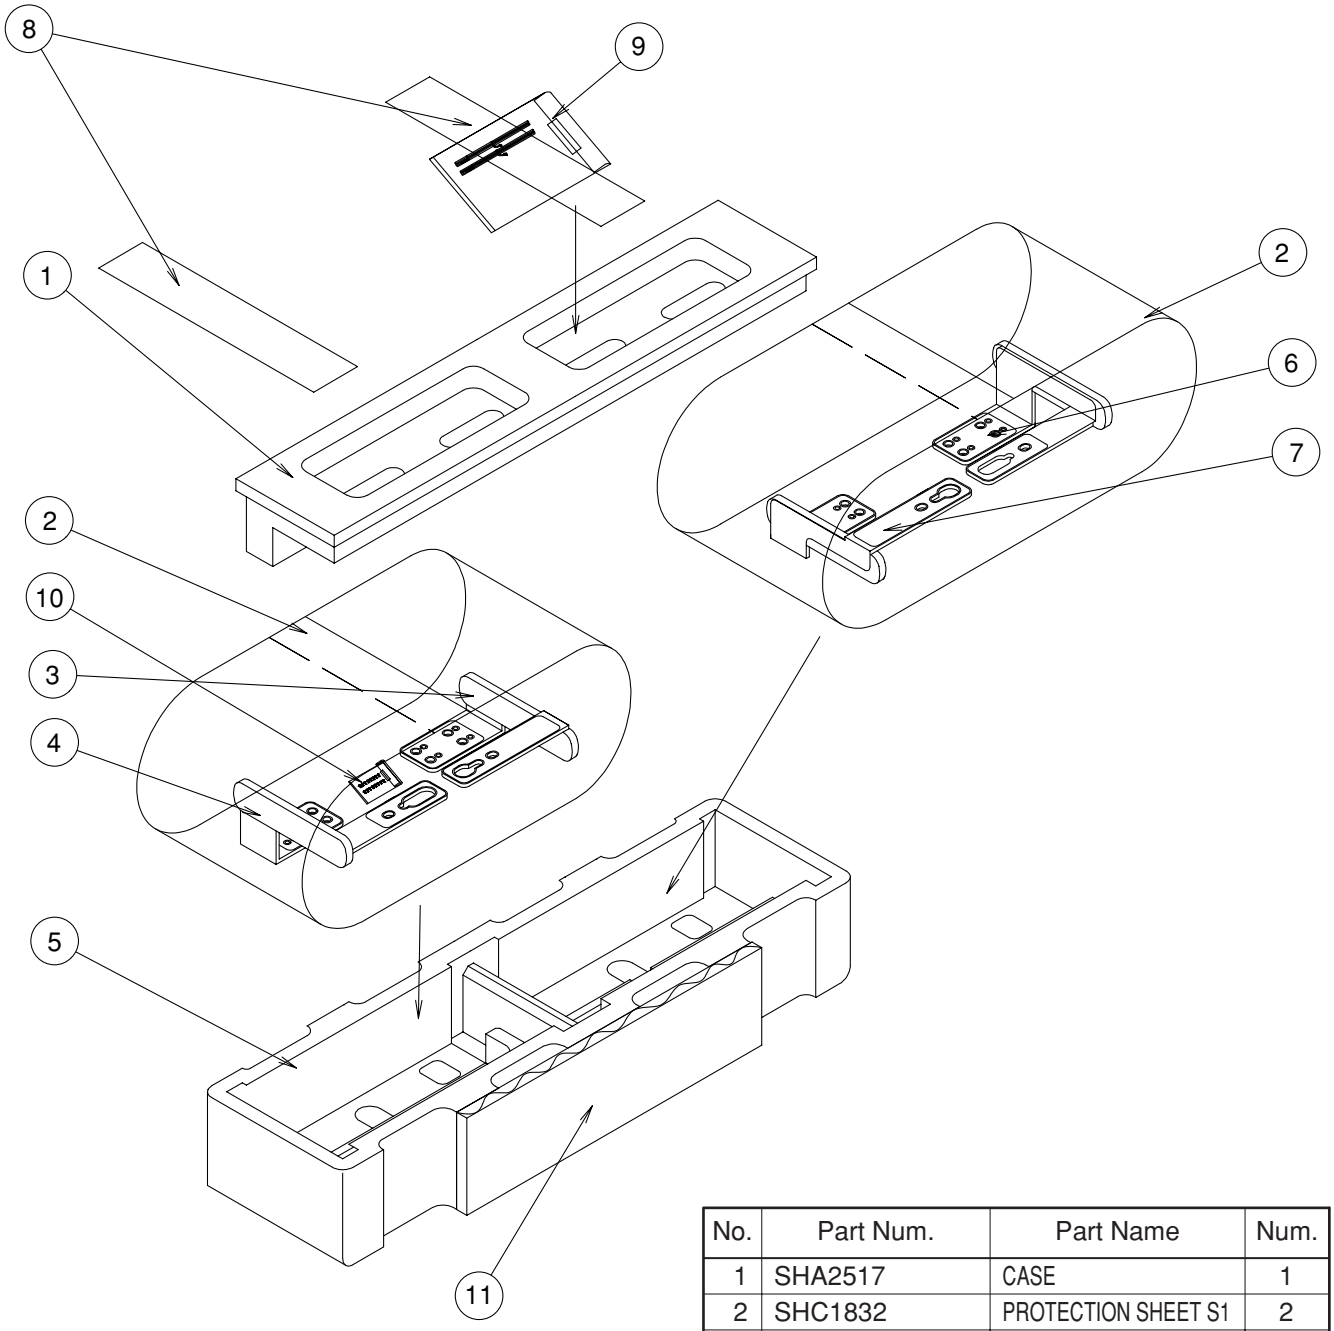

No.	Part Num.	Part Name	Num.
1	SHA2517	CASE	1
2	SHC1832	PROTECTION SHEET S1	2
3	SXG1097	BRACKET(R-BTM)ASS'Y	1
4	SXG1096	BRACKET(R-TOP)ASS'Y	1
5	SHA2516	CASE	1
6	SXG1094	BRACKET(L-TOP)ASS'Y	1
7	SXG1095	BRACKET(L-BTM)ASS'Y	1
8	ZTA-DANPRON-50CL	DANPRON TAPE	35cm
9	SME3684	ACCESSORY SET	1
10	SME3687	SCREW SET	1
11	SHB1173	SPACER	1

BRACKET (L-TOP) ASSY


(SXG1094)

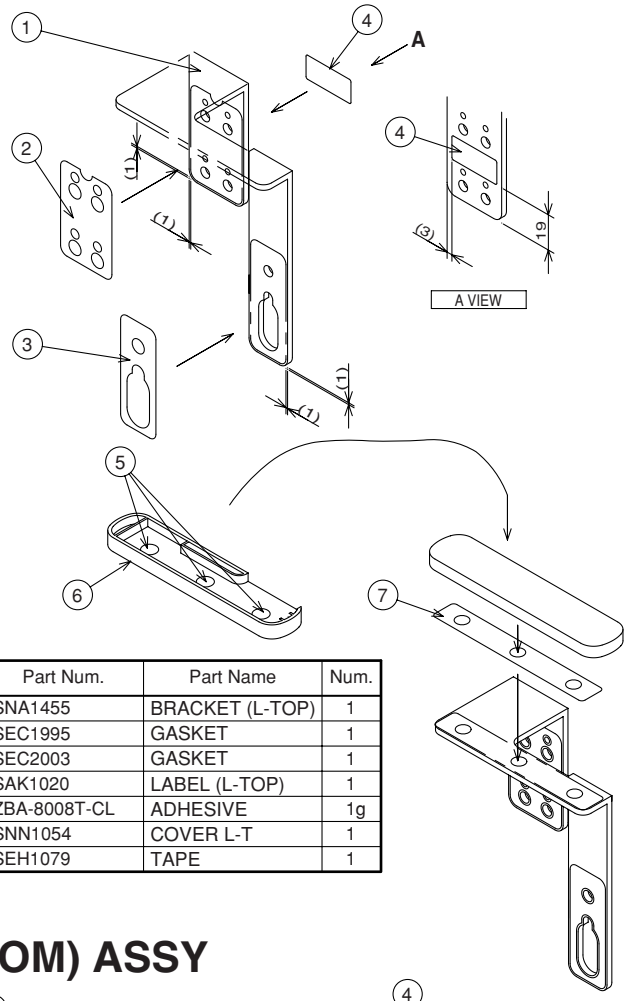

No.	Part Num.	Part Name	Num.
1	SNA1455	BRACKET (L-TOP)	1
2	SEC1995	GASKET	1
3	SEC2003	GASKET	1
4	SAK1020	LABEL (L-TOP)	1
5	ZBA-8008T-CL	ADHESIVE	1g
6	SNN1054	COVER L-T	1
7	SEH1079	TAPE	1

BRACKET (L-BOTTOM) ASSY


(SXG1095)

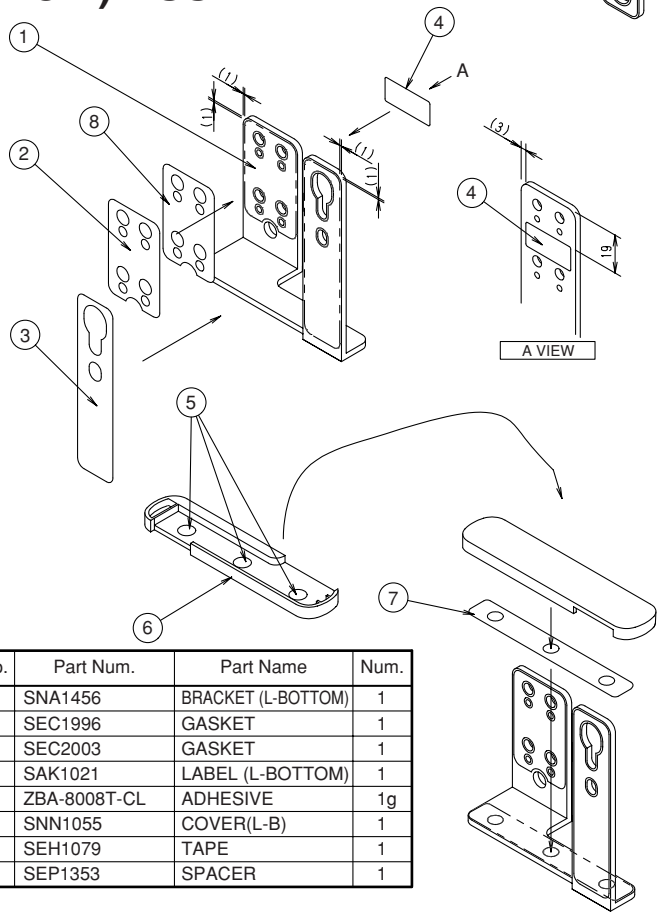

No.	Part Num.	Part Name	Num.
1	SNA1456	BRACKET (L-BOTTOM)	1
2	SEC1996	GASKET	1
3	SEC2003	GASKET	1
4	SAK1021	LABEL (L-BOTTOM)	1
5	ZBA-8008T-CL	ADHESIVE	1g
6	SNN1055	COVER(L-B)	1
7	SEH1079	TAPE	1
8	SEP1353	SPACER	1

BRACKET (R-TOP) ASSY


(SXG1096)

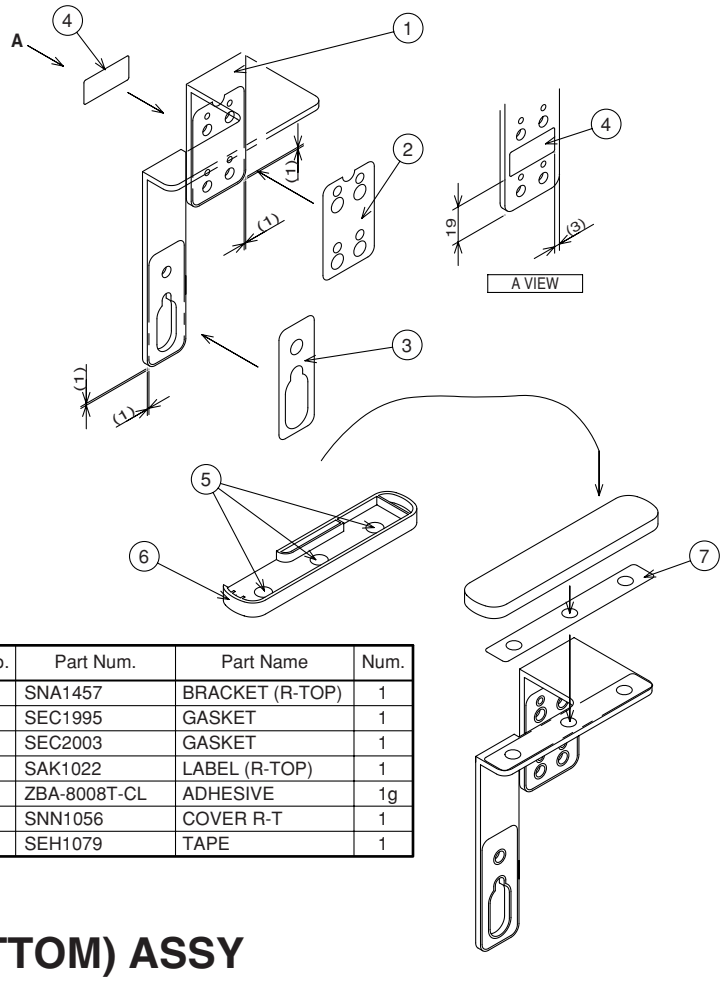

No.	Part Num.	Part Name	Num.
1	SNA1457	BRACKET (R-TOP)	1
2	SEC1995	GASKET	1
3	SEC2003	GASKET	1
4	SAK1022	LABEL (R-TOP)	1
5	ZBA-8008T-CL	ADHESIVE	1g
6	SNN1056	COVER R-T	1
7	SEH1079	TAPE	1


BRACKET (R-BOTTOM) ASSY

(SXG1097)

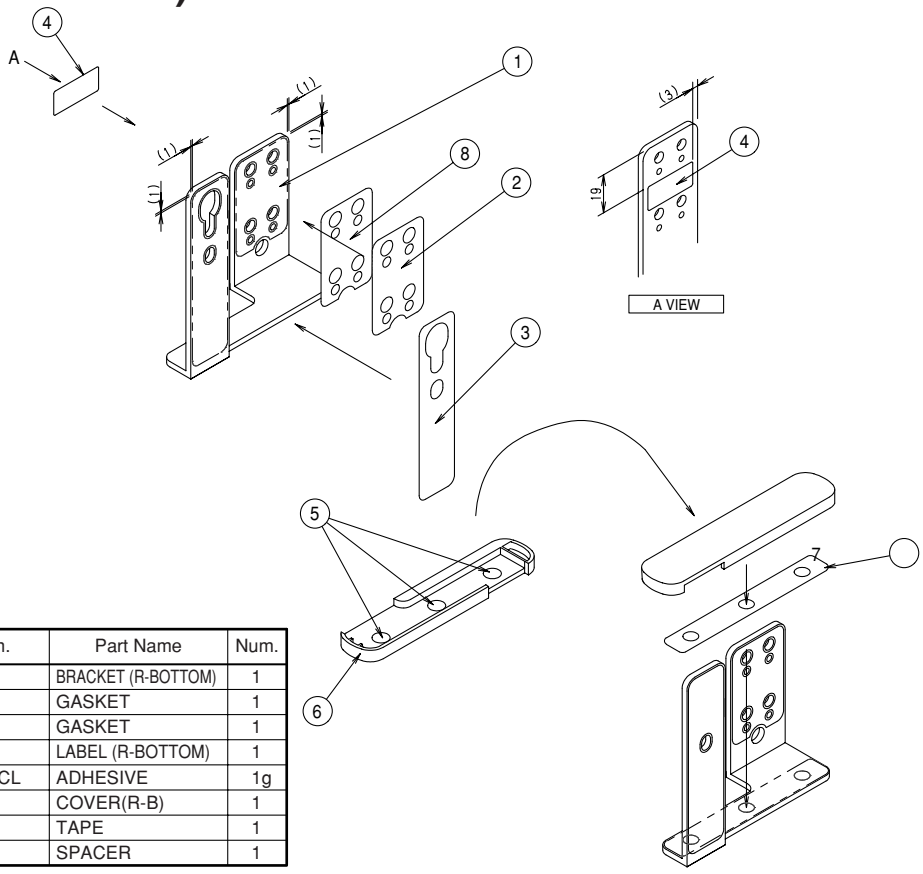

No.	Part Num.	Part Name	Num.
1	SNA1458	BRACKET (R-BOTTOM)	1
2	SEC1996	GASKET	1
3	SEC2003	GASKET	1
4	SAK1023	LABEL (R-BOTTOM)	1
5	ZBA-8008T-CL	ADHESIVE	1g
6	SNN1057	COVER(R-B)	1
7	SEH1079	TAPE	1
8	SEP1353	SPACER	1

PRODUCT APPEARANCE

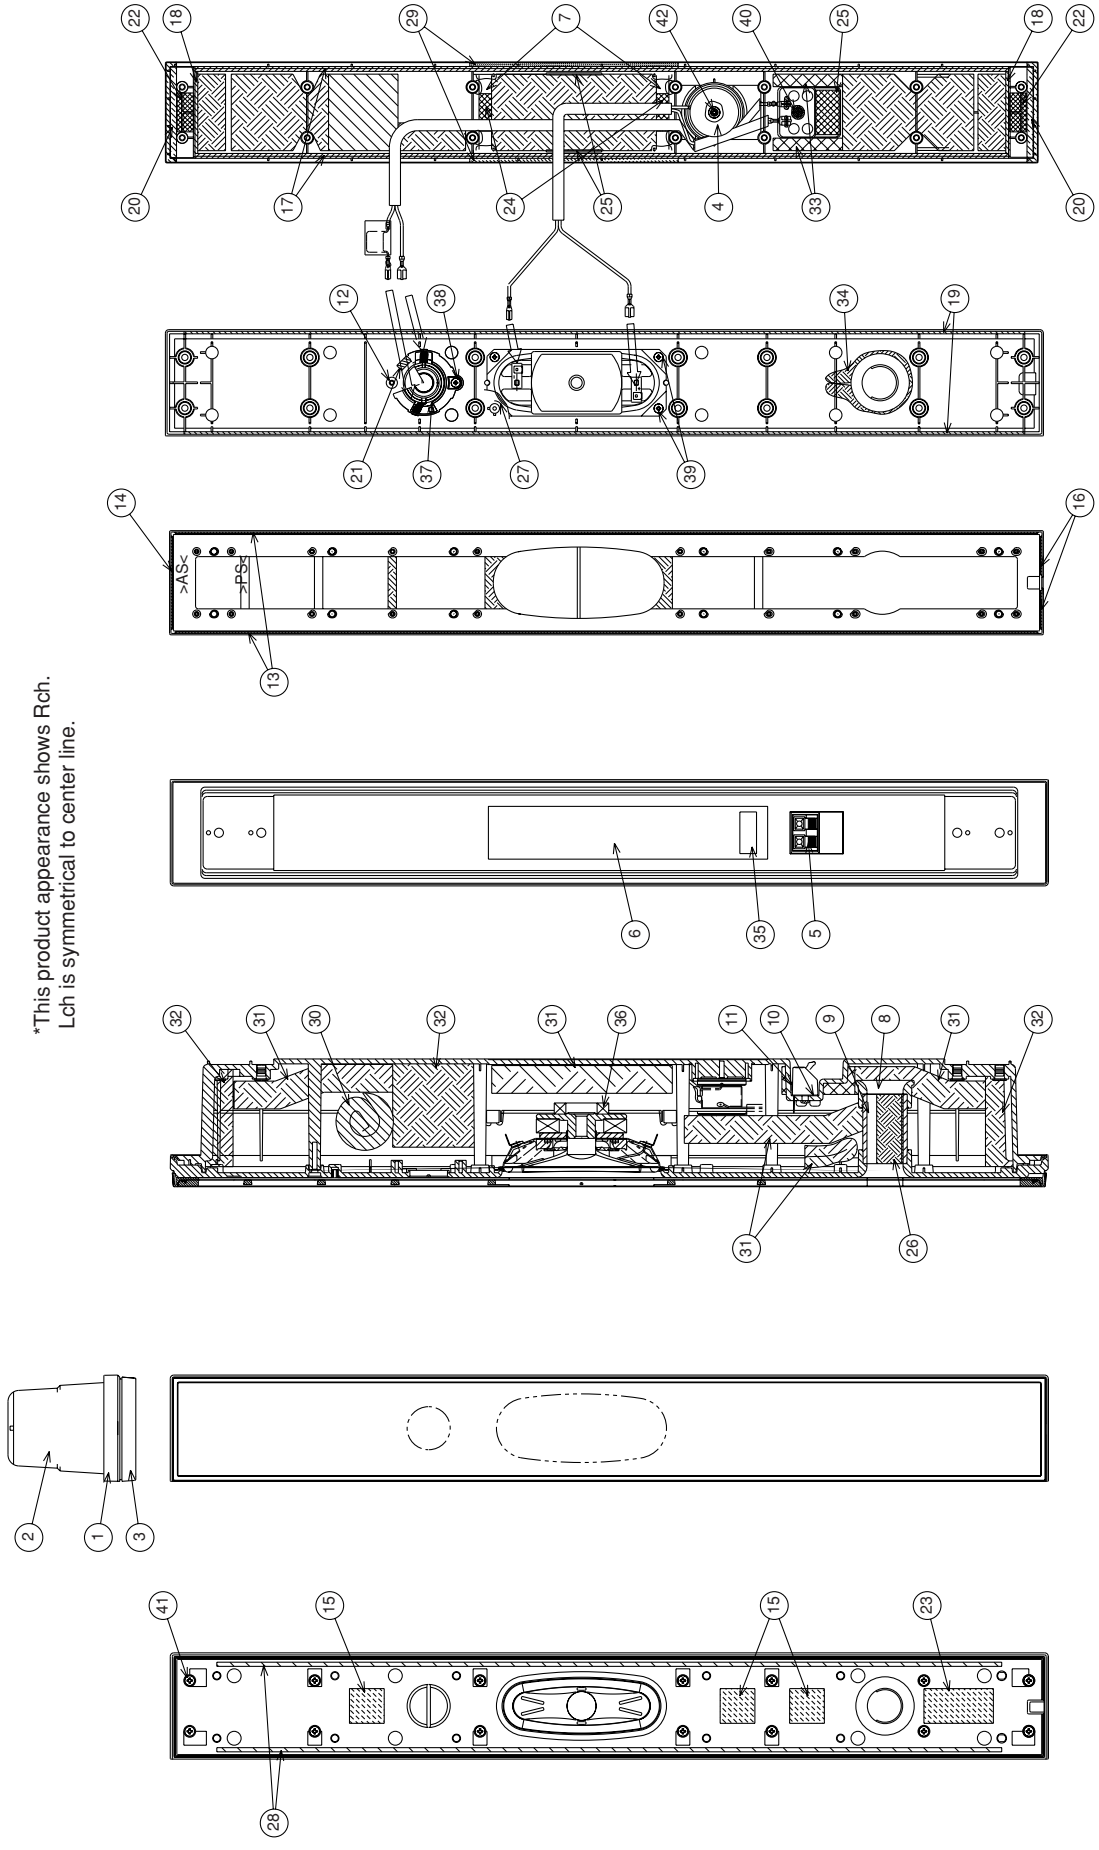

*This product appearance shows Rch.
Lch is symmetrical to center line.

No.	Part No.	Part Name	Num.	Remarks
1	SNK2905	BAFFLE(R)	1	
(1)	SNK2906	BAFFLE(L)	(1)	
2	SXG1102	CABINET ASSY	1	
3	SMG1855	GRILLE ASSY	1	
4	SWN1756	NETWORK ASSY	1	
5	SKX1098	INPUT TERMINAL	1	
6	SAN3729	MODEL LABEL(R)	1	CNS:SAN3747
(6)	(SAN3728)	MODEL LABEL(L)	(1)	CNS:SAN3746
7	SLX1163	MDF BAR	2	
8	SMR1393	PORT TUBE RIN 26	1	
9	SMR1397	PORT TUBE 26	1	

No.	Part No.	Part Name	Num.	Remarks
10	SEC1984	GASKET	1	INPUT TERMINAL
11	SEC1985	GASKET	1	INPUT TERMINAL
12	SEC1986	GASKET	6	BAFFLE(BOSS)
13	SEC1987	GASKET	2	GRILLE ASY
14	SEC1988	GASKET	1	GRILLE ASSY
15	SEC1989	GASKET	3	BAFFLE
16	SEC1990	GASKET	2	GRILLE ASSY
17	SEC1997	GASKET	2	CABINET
18	SEC1998	GASKET	2	CABINET
19	SEC1999	GASKET	2	BAFFLE
20	SEC2000	GASKET	2	CABINET

No.	Part No.	Part Name	Num.	Remarks
21	SEC2001	GASKET	4	BAFFLE(TW)
22	SEC2002	GASKET	2	CABINET
23	SEC2005	GASKET	1	BAFFLE
24	SEC2010	GASKET	2	MDF BAR
25	SED1126	FELT	3	CABINET
26	SED1127	FELT	1	PORT TUBE
27	SED1130	FELT	4	WF-BOSS
28	SEH1080	TAPE	2	GRILLE ASSY
29	SEH1081	TAPE	2	CABINET
30	SMT1303	ACOUSTIC ABSORBENT	1	CABINET
31	SMT1304	ACOUSTIC ABSORBENT	5	CABINET

No.	Part No.	Part Name	Num.	Remarks
32	SMT1305	ACOUSTIC ABSORBENT	3	CABINET
33	SMT1306	ACOUSTIC ABSORBENT	2	CABINET
34	SMT1308	ACOUSTIC ABSORBENT	1	BAFFLE
35	SRW1111	LABEL SERIAL	1	MODEL LABEL L,R
36	H132DC65-51F	WOOFER	1	
37	FK26AP32-51L	TWEETER	1	
38	BPZ30P080FTC	SCREW	2	TWEETER
39	BPZ35P080FTC	SCREW	4	WOOFER
40	BPZ35P120FTC	SCREW	1	INPUT TERMINAL
41	BPZ40P100FTB	SCREW	14	BAFFLE-CABINET
42	BPZ40P350FTC	SCREW	1	NW COIL